




# Stamper Pro

## Instructions Manual

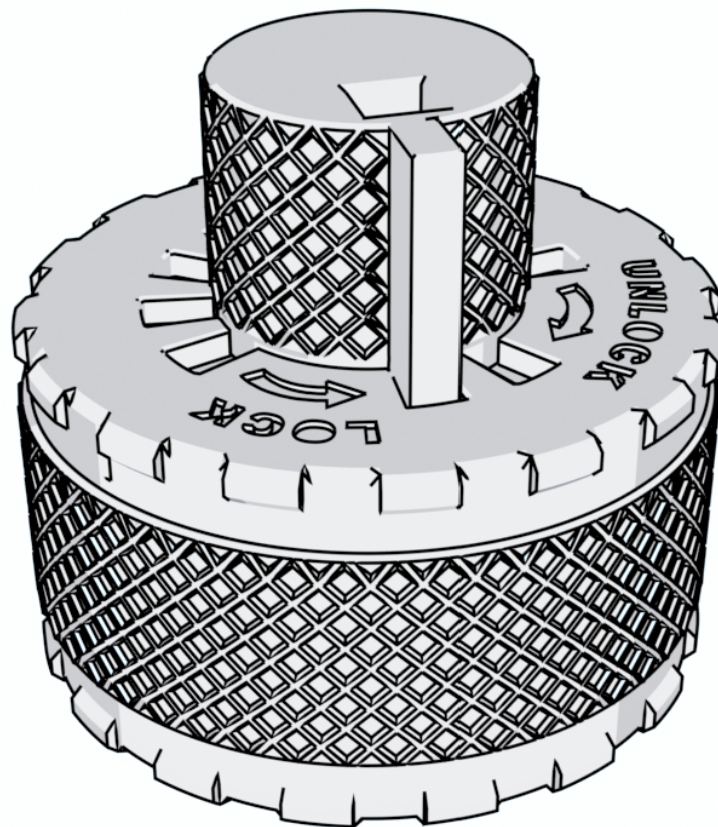



Thank you for choosing our Stamper Pro, designed to engrave seed words onto metal washers for Bitcoin and/or cryptocurrency wallets. Please follow the instructions below to ensure safe and accurate usage of the stamper.

## **Important Safety Precautions:**

Always use the stamper on a flat and sturdy surface, such as a rubber or fabric-covered table, to absorb the impact of hammering.

Take caution while using the stamper to prevent injury. Wear protective gloves and safety goggles if necessary.

Keep the stamper out of the reach of children and store it in a secure location when not in use.

## **Components:**

Stamper Pro comprises two main parts:


Base with a rotatable central locking mechanism with two positions: lock and unlock. The base contains the washer holder, also known as the "grabber," which moves up or down depending on the rotation of the central element.

Central part which holds the stamps during the stamping process. This element can be placed in the different base slots, in order to stamp the characters appropriately onto the washers.



## How to use:


1. Place the stamper on a flat and cushioned surface, such as a rubber or fabric-covered table, to absorb the impact of hammering.
2. The stamper has two positions: lock and unlock. Rotate the base central element to the unlock position. In this position, the washer holder inside the base moves up.

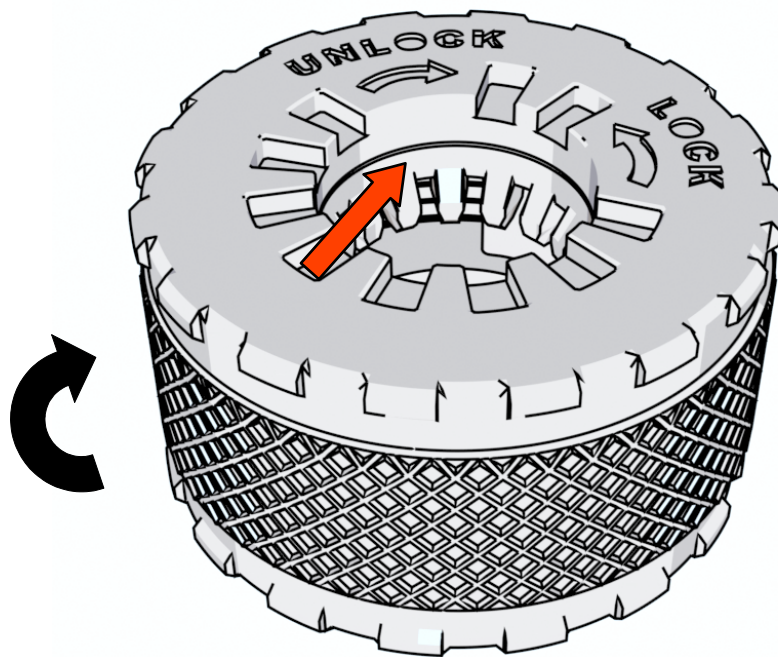

**NOTE:** The washer holder shall be at the upper part of the base at the fully unlocked position.




3. Insert a nut into the designated hole in the base to absorb some of the impact from hammering, preventing damage to the bottom of the base. Note that the base is reinforced for impact absorption, but using the nut is recommended.

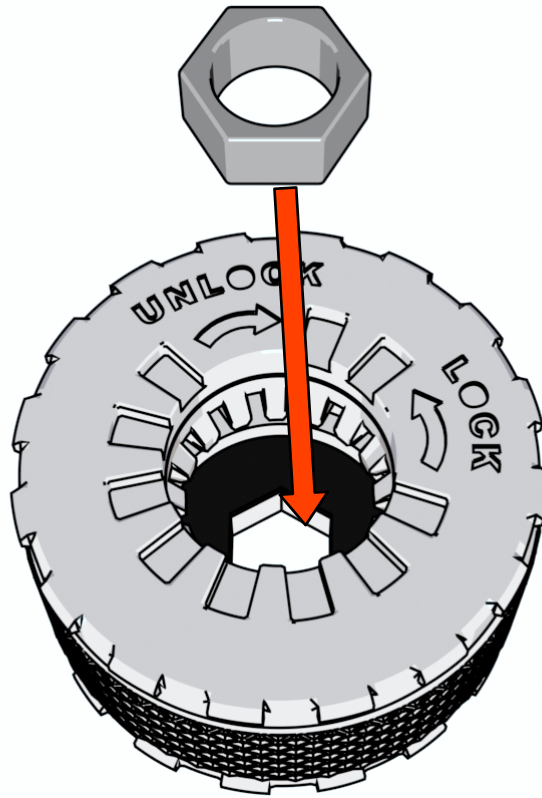




4. With the stamper in the unlock position, easily insert the washer you wish to engrave into the washer holder (as it is raised). The washer has two sides, one polished and one unpolished. Engraving usually looks better on the unpolished side, but both sides can be used.

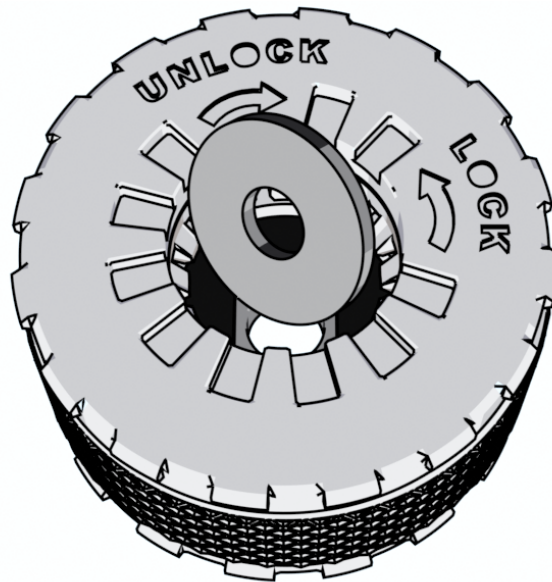


5. Once the washer is inserted, rotate the stamper to the lock position, securing it firmly, note that the washer holder inside the base moves down. It is recommended to rotate and flip the stamper to ensure the washer is securely held.

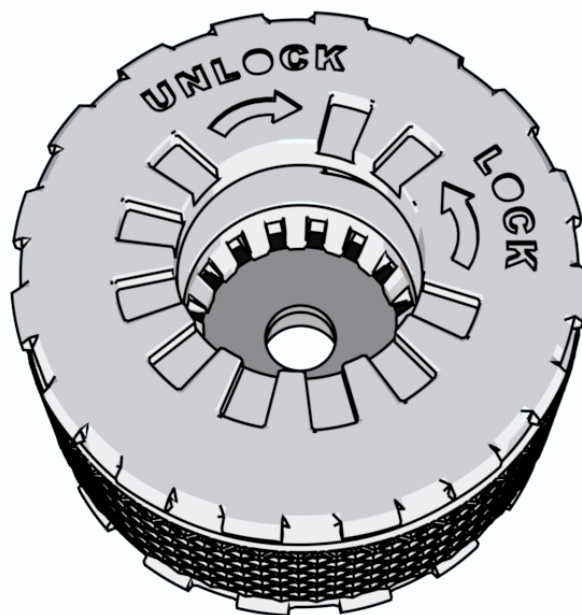



6. Next, insert the desired letter or number into the central part of the stamper, aligning it with the cavity for the stamp. Note that it is easier to insert the stamps from the bottom.

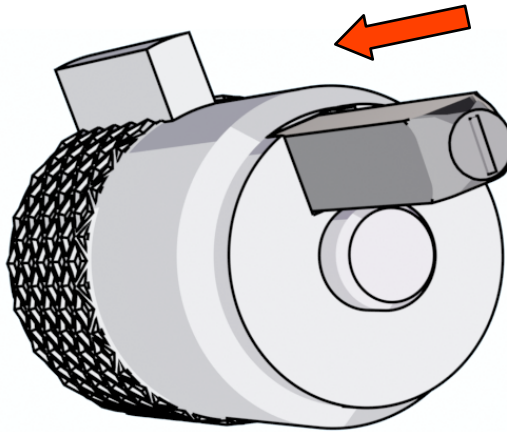


**NOTE:** Pay special attention to the orientation of the letters or numbers, considering how they will appear when stamped on the washer. The central part can be purchased in two sizes, the small hole size is adequate for stamps brands such as Benecreat (or the ones available at Hide Your Key). The large hole size is compatible with Amazon Basics stamps.






7. Place the central part of the stamper into the base and press it down, ensuring it is properly aligned. The textured part of the central piece should reach the top of the base.

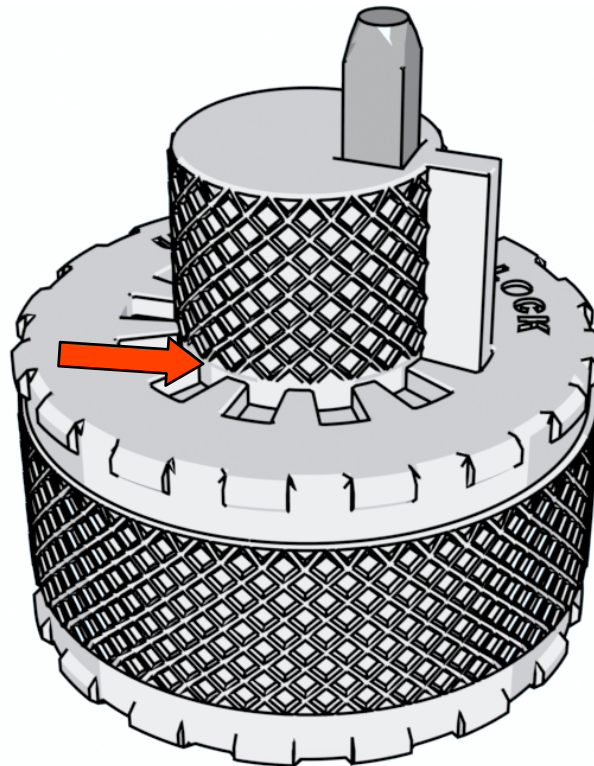

**NOTE:** There are slots designed for letters and slots designed for numbers. The central part should be oriented according to the desired letter or number, taking into account the position and rotation of the stamp.



8. Use a hammer or a stamp to engrave the corresponding number or letter by striking the stamp. The imprint will be marked on the washer.

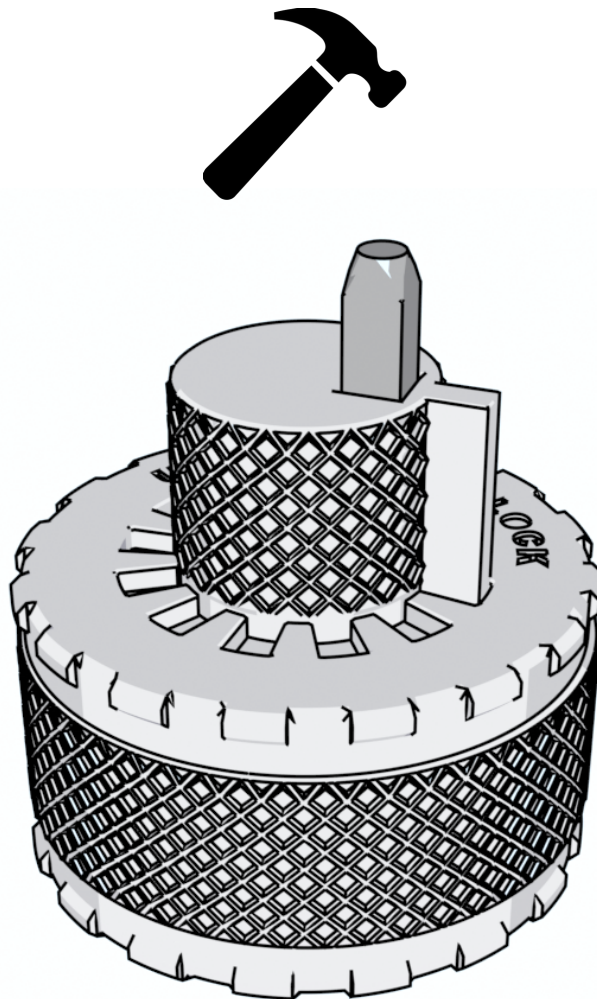


**NOTE:** It is recommended to grab the stamper base while striking the stamp.






9. Once the desired letter or number is stamped, remove the central part of the stamper and place the next stamp in the desired position. Repeat this process until the washer is complete, ensuring all required positions are stamped.

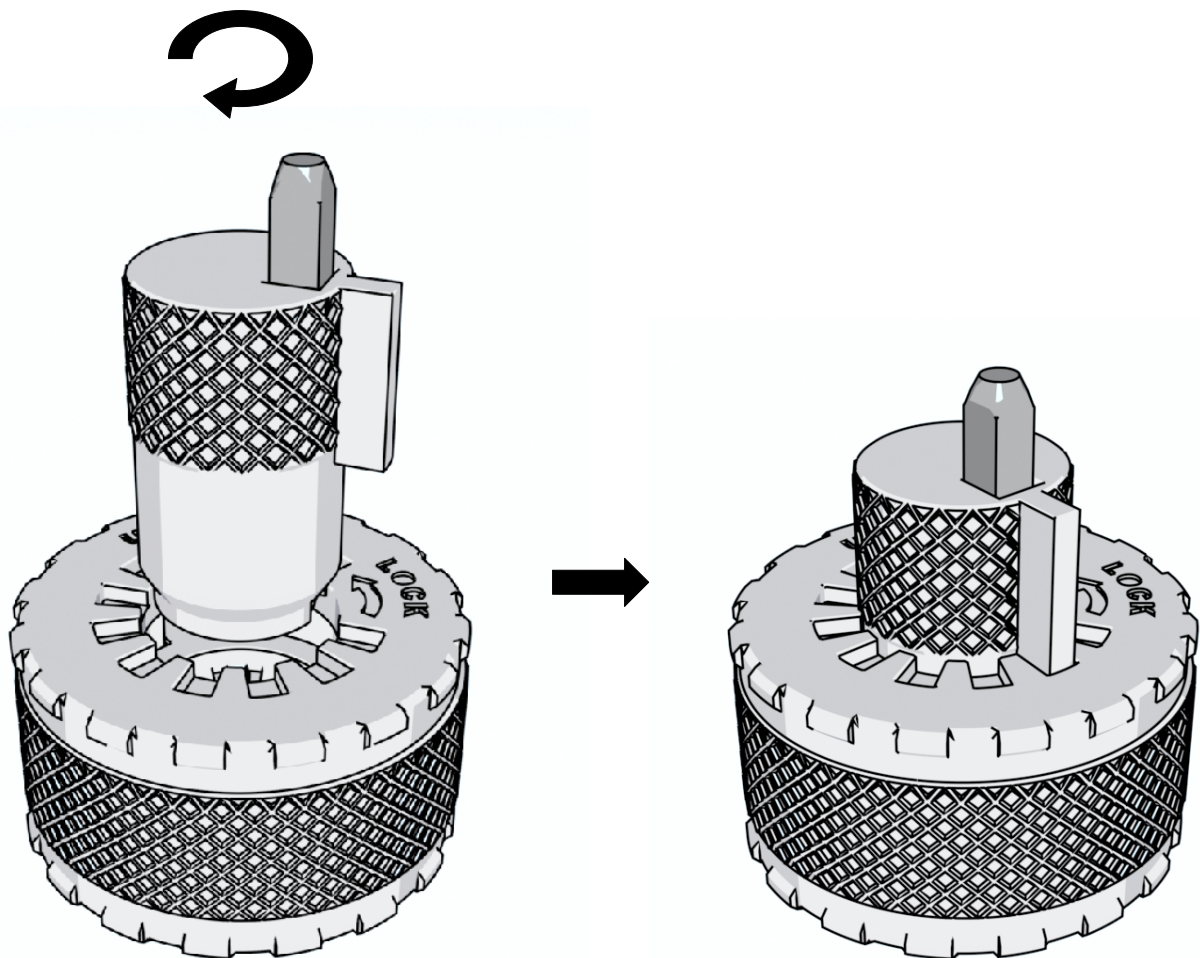



10. Once all the desired letters or numbers are stamped, remove the central part, rotate the base to the fully unlocked position and gently remove the washer (it should come out when the stamper base is flipped).

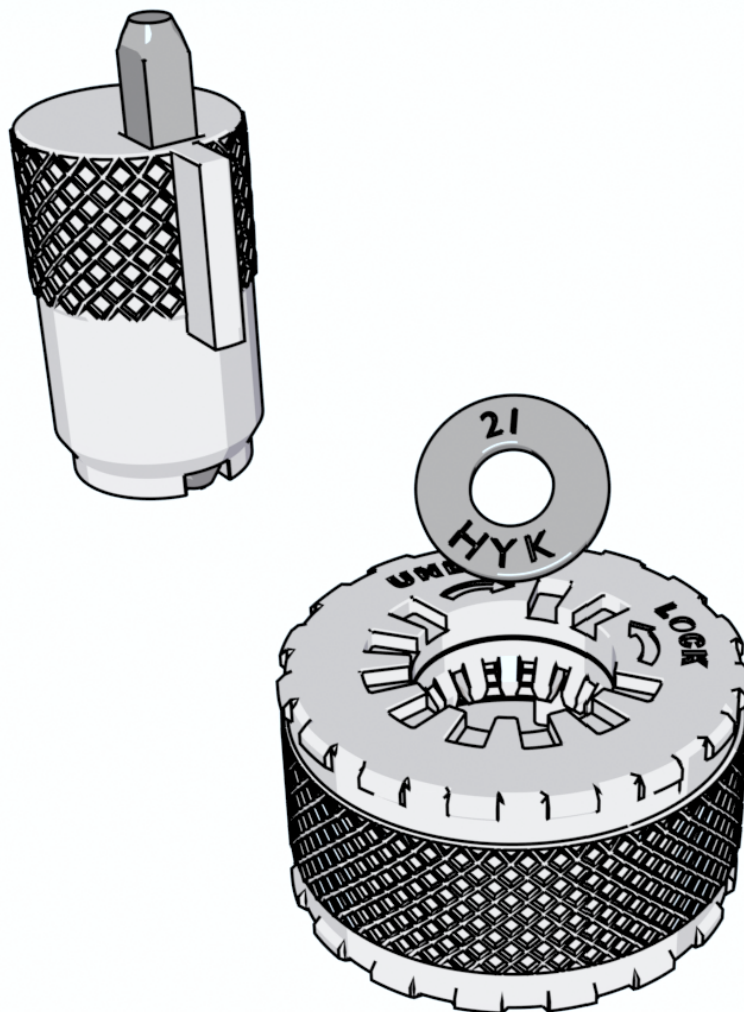

**NOTE:** Grab the edge grips from the base to easily free the washer when rotating the central element to the unlock position.



11. Once all seed word washers are completed, insert them onto a screw and secure them with the corresponding nut, which was located on the bottom of the stamper base.



12. After completing the seed phrase, you can conceal it in any of our products designed for this purpose.

For any further assistance or troubleshooting, please refer to the user manual or contact our customer support.