


Lab - Build a Switch and Router Network

Topology

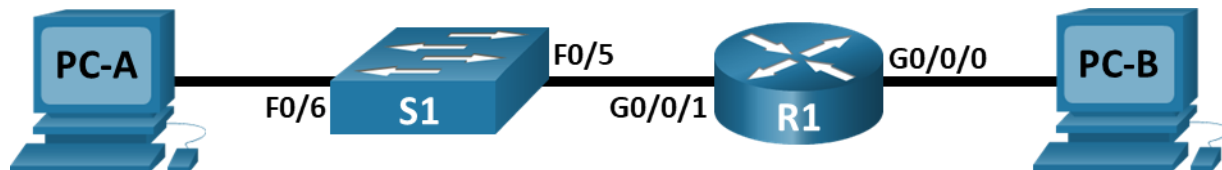

Addressing Table

Device	Interface	IP Address / Prefix	Default Gateway
R1	G0/0/0	192.168.0.1 /24	N/A
		2001:db8:acad::1/64	
		fe80::1	
	G0/0/1	192.168.1.1 /24	N/A
		2001:db8:acad:1::1/64	
		2001:db8:acad:1::1/64	
		fe80::1	
S1	VLAN 1	192.168.1.2 /24	192.168.1.1
PC-A	NIC	192.168.1.3 /24	192.168.1.1
		2001:db8:acad:1::3/64	fe80::1
PC-B	NIC	192.168.0.3 /24	192.168.0.1
		2001:db8:acad::3/64	fe80::1

Objectives

Part 1: Set Up the Topology and Initialize Devices

Part 2: Configure Devices and Verify Connectivity

Background / Scenario

This is a comprehensive lab to review previously covered IOS commands. In this lab, you will cable the equipment as shown in the topology diagram. You will then configure the devices to match the addressing table. After the configurations have been saved, you will verify your configurations by testing for network connectivity.

After the devices have been configured and network connectivity has been verified, you will use IOS commands to retrieve information from the devices to answer questions about your network equipment.

This lab provides minimal assistance with the actual commands necessary to configure the router. Test your knowledge by trying to configure the devices without referring to the content or previous activities.

Note: The routers used with CCNA hands-on labs are Cisco 4221 with Cisco IOS XE Release 16.9.4 (universalk9 image). The switches used in the labs are Cisco Catalyst 2960s with Cisco IOS Release 15.2(2)

(lanbasek9 image). Other routers, switches, and Cisco IOS versions can be used. Depending on the model and Cisco IOS version, the commands available and the output produced might vary from what is shown in the labs. Refer to the Router Interface Summary Table at the end of the lab for the correct interface identifiers.

Note: Ensure that the routers and switches have been erased and have no startup configurations. Consult with your instructor for the procedure to initialize and reload a router and switch.

The **default bias** template used by the Switch Database Manager (SDM) does not provide IPv6 address capabilities. Verify that SDM is using either the **dual-ipv4-and-ipv6** template or the **lanbase-routing** template. The new template will be used after reboot even if the configuration is not saved.

```
S1# show sdm prefer
```

Use the following commands to assign the **dual-ipv4-and-ipv6** template as the default SDM template.

```
S1# configure terminal
S1(config)# sdm prefer dual-ipv4-and-ipv6 default
S1(config)# end
S1# reload
```

Required Resources

- 1 Router (Cisco 4221 with Cisco IOS XE Release 16.9.4 universal image or comparable)
- 1 Switch (Cisco 2960 with Cisco IOS Release 15.2(2) lanbasek9 image or comparable)
- 2 PCs (Windows with a terminal emulation program, such as Tera Term)
- Console cables to configure the Cisco IOS devices via the console ports
- Ethernet cables as shown in the topology

Note: The Gigabit Ethernet interfaces on Cisco 4221 routers are autosensing and an Ethernet straight-through cable may be used between the router and PC-B. If using another model Cisco router, it may be necessary to use an Ethernet crossover cable.

Instructions

Part 1: Set Up Topology and Initialize Devices

Step 1: Cable the network as shown in the topology.

- Attach the devices shown in the topology diagram, and cable, as necessary.
- Power on all the devices in the topology.

Step 2: Initialize and reload the router and switch.

If configuration files were previously saved on the router and switch, initialize and reload these devices back to their default configurations.

Part 2: Configure Devices and Verify Connectivity

In Part 2, you will set up the network topology and configure basic settings, such as the interface IP addresses, device access, and passwords. Refer to the **Error! Reference source not found.** and **Error! Reference source not found.** at the beginning of this lab for device names and address information.

Step 1: Assign static IP information to the PC interfaces.

- Configure the IP address, subnet mask, and default gateway settings on PC-A.
- Configure the IP address, subnet mask, and default gateway settings on PC-B.
- Ping PC-B from a command prompt window on PC-A.

Note: If pings are not successful, the Windows Firewall may need to be turned off.

Why were the pings not successful?

The router interfaces (default gateways) have not been configured yet so Layer 3 traffic is not being routed between subnets.

Step 2: Configure the router.

- a. Console into the router and enable privileged EXEC mode.

```
Router> enable
```

- b. Enter configuration mode.

```
Router# config terminal
```

- c. Assign a device name to the router.

```
Router(config)# hostname R1
```

- d. Disable DNS lookup to prevent the router from attempting to translate incorrectly entered commands as though they were host names.

```
R1(config)# no ip domain lookup
```

- e. Assign **class** as the privileged EXEC encrypted password.

```
R1(config)# enable secret class
```

- f. Assign **cisco** as the console password and enable login.

```
R1(config)# line console 0
```

```
R1(config-line)# password cisco
```

```
R1(config-line)# login
```

- g. Assign **cisco** as the VTY password and enable login.

```
R1(config)# line vty 0 4
```

```
R1(config-line)# password cisco
```

```
R1(config-line)# login
```

- h. Encrypt the plaintext passwords.

```
R1(config)# service password-encryption
```

- i. Create a banner that warns anyone accessing the device that unauthorized access is prohibited.

```
R1(config)# banner motd $ Authorized Users Only! $
```

- j. Configure and activate both interfaces on the router.

```
R1(config)# interface g0/0/0
```

```
R1(config-if)# ip address 192.168.0.1 255.255.255.0
```

```
R1(config-if)# ipv6 address 2001:db8:acad::1/64
```

```
R1(config-if)# ipv6 address FE80::1 link-local
```

```
R1(config-if)# no shutdown
```

```
R1(config-if)# exit
```

```
R1(config)# interface g0/0/1
```

```
R1(config-if)# ip address 192.168.1.1 255.255.255.0
```

```
R1(config-if)# ipv6 address 2001:db8:acad:1::1/64
```

```
R1(config-if)# ipv6 address fe80::1 link-local
```

```
R1(config-if)# no shutdown
R1(config-if)# exit
```

- k. Configure an interface description for each interface indicating which device is connected to it.

```
R1(config)# interface g0/0/1
R1(config-if)# description Connected to F0/5 on S1
R1(config-if)# exit
R1(config)# interface g0/0/0
R1(config-if)# description Connected to Host PC-B
R1(config-if)# exit
```

- l. To enable IPv6 routing, enter the command `ipv6 unicast-routing`.

```
R1(config)# ipv6 unicast-routing
```

- m. Save the running configuration to the startup configuration file.

```
R1(config)# exit
R1# copy running-config startup-config
```

- n. Set the clock on the router.

```
R1# clock set 15:30:00 27 Aug 2019
```

Note: Use the question mark (?) to help with the correct sequence of parameters needed to execute this command.

- o. Ping PC-B from a command prompt window on PC-A.

Note: If pings are not successful, the Windows Firewall may need to be turned off.

Were the pings successful? Explain.

Yes. The router is routing the ping traffic across the two subnets. The default settings for the 2960 switch will automatically turn up the interfaces that are connected to devices.

Step 3: Configure the switch.

In this step, you will configure the hostname, the VLAN 1 interface and its default gateway.

- a. Console into the switch and enable privileged EXEC mode.

```
Switch> enable
```

- b. Enter configuration mode.

```
Switch# config terminal
```

- c. Assign a device name to the switch.

```
Switch(config)# hostname S1
```

- d. Disable DNS lookup to prevent the router from attempting to translate incorrectly entered commands as though they were host names.

```
S1(config)# no ip domain-lookup
```

- e. Configure and activate the VLAN interface on the switch S1.

```
S1(config)# interface vlan 1
S1(config-if)# ip address 192.168.1.2 255.255.255.0
S1(config-if)# no shutdown
```

```
S1(config-if)# exit
```

- f. Configure the default gateway for the switch S1.

```
S1(config)# ip default-gateway 192.168.1.1
```

```
S1(config-if)# exit
```

- g. Save the running configuration to the startup configuration file.

Step 4: Verify connectivity end-to-end connectivity.

- a. From PC-A, ping PC-B.

- b. From S1, ping PC-B.

All the pings should be successful.

Part 3: Display Device Information

In Part 3, you will use **show** commands to retrieve interface and routing information from the router and switch.

Step 1: Display the routing table on the router.

- a. Use the **show ip route** command on the router R1 to answer the following questions.

```
R1# show ip route
```

```
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP  
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area  
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2  
E1 - OSPF external type 1, E2 - OSPF external type 2  
i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2  
ia - IS-IS inter area, * - candidate default, U - per-user static route  
o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP  
+ - replicated route, % - next hop override
```

```
Gateway of last resort is not set
```

```
192.168.0.0/24 is variably subnetted, 2 subnets, 2 masks  
C      192.168.0.0/24 is directly connected, GigabitEthernet0/0/0  
L      192.168.0.1/32 is directly connected, GigabitEthernet0/0/0  
192.168.1.0/24 is variably subnetted, 2 subnets, 2 masks  
C      192.168.1.0/24 is directly connected, GigabitEthernet0/0/1  
L      192.168.1.1/32 is directly connected, GigabitEthernet0/0/1
```

What code is used in the routing table to indicate a directly connected network?

The C designates a directly connected subnet. An L designates a local interface. Both answers are correct.

How many route entries are coded with a C code in the routing table?

2

What interface types are associated to the C coded routes?

Answers may vary depending on router type, but on the 4221 the correct answer is G0/0/0 and G0/0/1.

- b. Use the **show ipv6 route** command on router R1 to display the IPv6 routes.

```
R1# show ipv6 route
IPv6 Routing Table - default - 5 entries
Codes: C - Connected, L - Local, S - Static, U - Per-user Static route
        B - BGP, R - RIP, H - NHRP, I1 - ISIS L1
        I2 - ISIS L2, IA - ISIS interarea, IS - ISIS summary, D - EIGRP
        EX - EIGRP external, ND - ND Default, NDp - ND Prefix, DCE - Destination
        NDr - Redirect, RL - RPL, O - OSPF Intra, OI - OSPF Inter
        OE1 - OSPF ext 1, OE2 - OSPF ext 2, ON1 - OSPF NSSA ext 1
        ON2 - OSPF NSSA ext 2, la - LISP alt, lr - LISP site-registrations
        ld - LISP dyn-eid, la - LISP away, le - LISP extranet-policy
        a - Application
C    2001:DB8:ACAD::/64 [0/0]
    via GigabitEthernet0/0/0, directly connected
L    2001:DB8:ACAD::1/128 [0/0]
    via GigabitEthernet0/0/0, receive
C    2001:DB8:ACAD:1::/64 [0/0]
    via GigabitEthernet0/0/1, directly connected
L    2001:DB8:ACAD:1::1/128 [0/0]
    via GigabitEthernet0/0/1, receive
L    FF00::/8 [0/0]
    via Null0, receive
```

Step 2: Display interface information on the router R1.

- a. Use the **show ip interface g0/0/1** to answer the following questions.

```
R1# show ip interfaces g0/0/1
GigabitEthernet0/0/1 is up, line protocol is up
  Hardware is ISR4321-2x1GE, address is a0e0.af0d.e141 (bia a0e0.af0d.e141)
  Description: Connectd to F0/5 on S1
  Internet address is 192.168.1.1/24
  MTU 1500 bytes, BW 100000 Kbit/sec, DLY 100 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive not supported
  Full Duplex, 100Mbps, link type is auto, media type is RJ45
  output flow-control is off, input flow-control is off
  ARP type: ARPA, ARP Timeout 04:00:00
  Last input 00:00:00, output 00:00:19, output hang never
  Last clearing of "show interface" counters never
  Input queue: 0/375/0/0 (size/max/drops/flushes); Total output drops: 0
  Queueing strategy: fifo
  Output queue: 0/40 (size/max)
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
    4579 packets input, 637737 bytes, 0 no buffer
```

```
Received 1092 broadcasts (0 IP multicasts)
0 runs, 0 giants, 0 throttles
0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
0 watchdog, 2863 multicast, 0 pause input
700 packets output, 115187 bytes, 0 underruns
0 output errors, 0 collisions, 1 interface resets
0 unknown protocol drops
0 babbles, 0 late collision, 0 deferred
0 lost carrier, 0 no carrier, 0 pause output
0 output buffer failures, 0 output buffers swapped out
```

What is the operational status of the G0/0/1 interface?

GigabitEthernet0/0/1 is up, line protocol is up

What is the Media Access Control (MAC) address of the G0/1 interface?

Answers will vary but will appear in the form of: xxxx.xxxx.xxxx, where each x will be replaced with a hexadecimal number.

How is the Internet address displayed in this command?

Internet address is 192.168.1.1/24.

- b. For the IPv6 information, enter the **show ipv6 interface *interface*** command.

```
R1# show ipv6 interface g0/0/1
GigabitEthernet0/0/1 is up, line protocol is up
  IPv6 is enabled, link-local address is FE80::1
  No Virtual link-local address(es):
  Description: Connectd to F0/5 on S1
  Global unicast address(es):
    2001:DB8:ACAD:1::1, subnet is 2001:DB8:ACAD:1::/64
  Joined group address(es):
    FF02::1
    FF02::2
    FF02::1:FF00:1
  MTU is 1500 bytes
  ICMP error messages limited to one every 100 milliseconds
  ICMP redirects are enabled
  ICMP unreachables are sent
  ND DAD is enabled, number of DAD attempts: 1
  ND reachable time is 30000 milliseconds (using 30000)
  ND advertised reachable time is 0 (unspecified)
  ND advertised retransmit interval is 0 (unspecified)
  ND router advertisements are sent every 200 seconds
  ND router advertisements live for 1800 seconds
  ND advertised default router preference is Medium
  Hosts use stateless autoconfig for addresses.
```

Step 3: Display a summary list of the interfaces on the router and switch.

There are several commands that can be used to verify an interface configuration. One of the most useful of these is the **show ip interface brief** command. The command output displays a summary list of the interfaces on the device and provides immediate feedback to the status of each interface.

- a. Enter the **show ip interface brief** command on the router R1.

```
R1# show ip interface brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
GigabitEthernet0/0/0	192.168.0.1	YES	manual	up	up
GigabitEthernet0/0/1	192.168.1.1	YES	manual	up	up
Serial0/1/0	unassigned	YES	unset	up	up
Serial0/1/1	unassigned	YES	unset	up	up

- b. To see the IPv6 interface information, enter the **show ipv6 interface brief** command on R1.

```
R1# show ipv6 interface brief
```

GigabitEthernet0/0/0	[up/up]
FE80::1	
2001:DB8:ACAD::1	
GigabitEthernet0/0/1	[up/up]
FE80::1	
2001:DB8:ACAD:1::1	
Serial0/1/0	[up/up]
unassigned	
Serial0/1/1	[up/up]
unassigned	
GigabitEthernet0	[down/down]
Unassigned	

- c. Enter the **show ip interface brief** command on the switch S1.

```
S1# show ip interface brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	192.168.1.2	YES	NVRAM	up	up
FastEthernet0/1	unassigned	YES	unset	down	down
FastEthernet0/2	unassigned	YES	unset	down	down
FastEthernet0/3	unassigned	YES	unset	down	down
FastEthernet0/4	unassigned	YES	unset	down	down
FastEthernet0/5	unassigned	YES	unset	up	up
FastEthernet0/6	unassigned	YES	unset	up	up
FastEthernet0/7	unassigned	YES	unset	down	down
FastEthernet0/8	unassigned	YES	unset	down	down
FastEthernet0/9	unassigned	YES	unset	down	down
FastEthernet0/10	unassigned	YES	unset	down	down
FastEthernet0/11	unassigned	YES	unset	down	down
FastEthernet0/12	unassigned	YES	unset	down	down
FastEthernet0/13	unassigned	YES	unset	down	down
FastEthernet0/14	unassigned	YES	unset	down	down
FastEthernet0/15	unassigned	YES	unset	down	down
FastEthernet0/16	unassigned	YES	unset	down	down
FastEthernet0/17	unassigned	YES	unset	down	down
FastEthernet0/18	unassigned	YES	unset	down	down

FastEthernet0/19	unassigned	YES	unset	down	down
FastEthernet0/20	unassigned	YES	unset	down	down
FastEthernet0/21	unassigned	YES	unset	down	down
FastEthernet0/22	unassigned	YES	unset	down	down
FastEthernet0/23	unassigned	YES	unset	down	down
FastEthernet0/24	unassigned	YES	unset	down	down
GigabitEthernet0/1	unassigned	YES	unset	down	down
GigabitEthernet0/2	unassigned	YES	unset	down	down

Reflection Questions

1. If the G0/0/1 interface showed that it was administratively down, what interface configuration command would you use to turn the interface up?

```
R1(config-if)# no shutdown
```

2. What would happen if you had incorrectly configured interface G0/0/1 on the router with an IP address of 192.168.1.2?

PC-A would not be able to ping PC-B. This is because PC-B is on a different network than PC-A which requires the default-gateway router to route these packets. PC-A is configured to use the IP address of 192.168.1.1 for the default-gateway router, but this address is not assigned to any device on the LAN. Any packets that need to be sent to the default-gateway for routing will never reach their destination.