

MQTT User Guide

MQTT

This guide walks through the MQTT usage.

V2.00


Table of Contents

1. Overview.....	1
2. EasyBuilder Pro Settings	3
Server Settings	3
Default Messages.....	5
Topic Publisher Settings	5
Subscriber Settings (cMT Series).....	7
Project and Application.....	9
3. Choosing a Broker	10
Using Built-in Broker in HMI	10
Using External Broker.....	10
Using Self-build Broker.....	10
4. Getting MQTT Data.....	11
MQTT Client Program	11
5. References	12

1. Overview


Designed to be light weight, open, and simple, MQTT is a subscriber/publisher messaging transport protocol that is considered a great solution for applications where small code footprint is required and/or network bandwidth is scarce. It is particularly suitable for continuous monitoring of sensory data such as temperature, pressure, water level, energy monitoring...etc.

Publisher, Subscriber, and Broker are three important roles in MQTT protocol. As shown in the following figure, when the Publisher publishes a message to the Broker, the Broker will deliver the message to the subscriber.

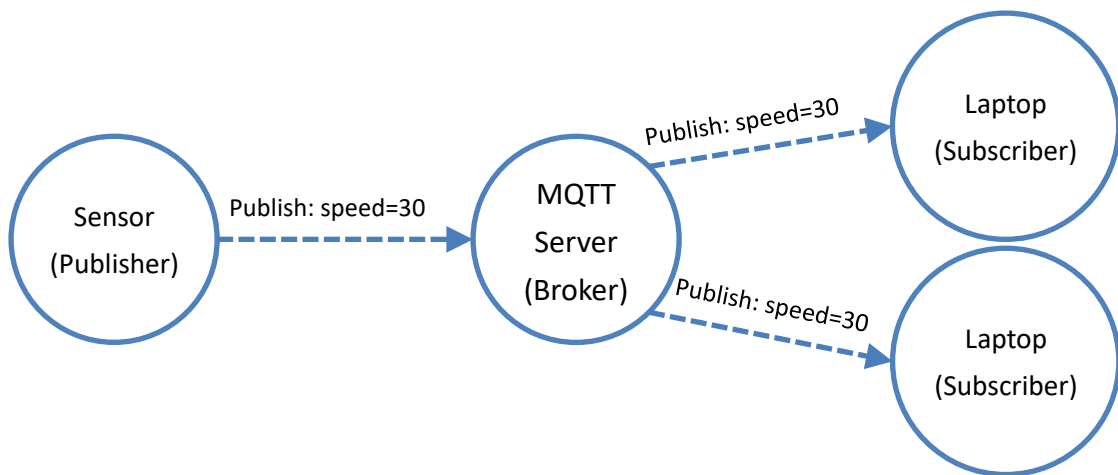


Weintek HMI and MQTT

HMI processes data from PLC and publishes messages to an MQTT broker, which will handle message delivery to the subscribers. In this manner, message publishing is possible even when the HMI is positioned behind firewalls and access to HMI is difficult.

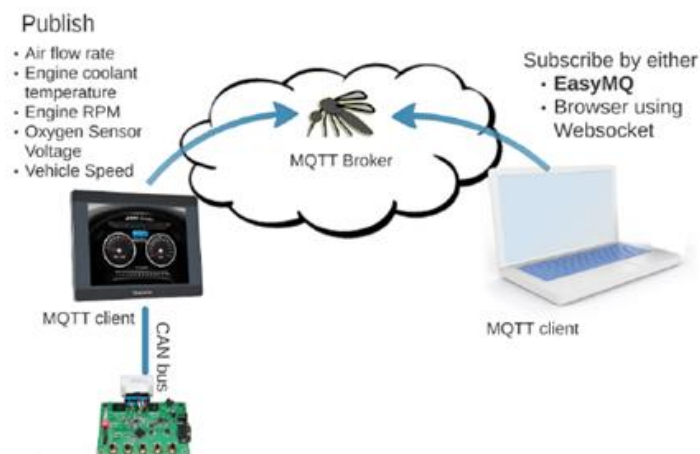

Alternatively, MQTT messages can be published internally to a built-in MQTT broker. That is, an external broker is not necessary; one can use an MQTT client to subscribe directly to the MQTT broker inside the HMI and receive message updates! This scheme can be realized even remotely as long as the MQTT client can connect directly to HMI, such as with VPN or EasyAccess 2.0.

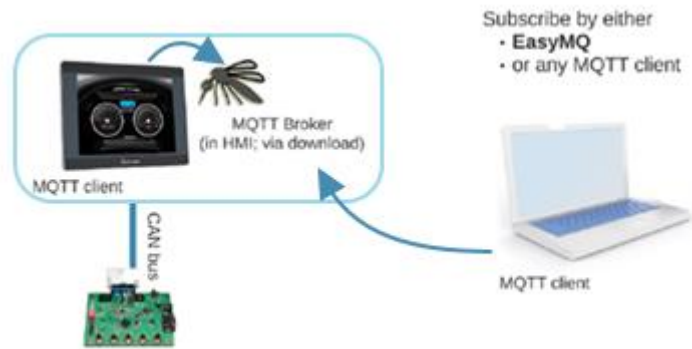


2. EasyBuilder Pro Settings


In EasyBuilder Pro, click [Objects] » [MQTT] to setup MQTT in the project.

Server Settings

Firstly and most importantly, MQTT server information must be entered. The IP address or domain name of the server is the IP address or domain name of the broker. When the local address (127.0.0.1) is used, the messages will be published to the built-in broker in HMI. To designate a broker by a domain name, please select [Use domain name] and then enter the domain name in IP field. To prevent unauthorized subscriber from connecting to the server, select [Authentication] checkbox. With this checkbox selected, connecting MQTT server will require Username and Password. In [Auto-connection] mode, the connection will be automatically terminated if there's no data update for a specified period of time. Topic list shows the topics that can be subscribed on current HMI. To avoid publishing topic list every time when connecting the server, select [Publish topic list only at the first time].

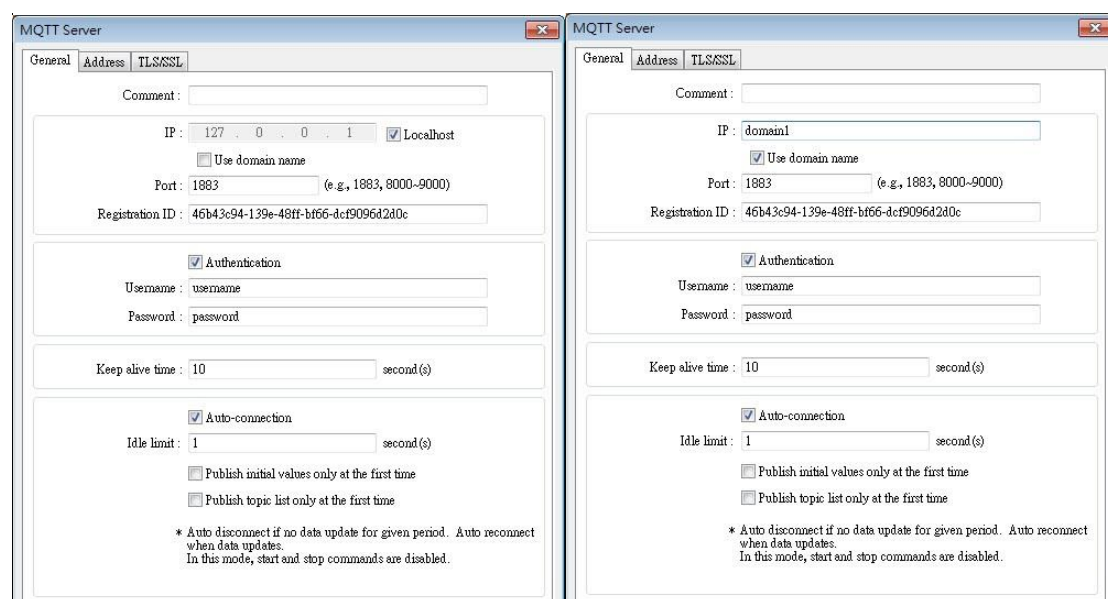

LW addresses can be designated to dynamically control MQTT or display MQTT status during HMI run time. After designating an address, its relative addresses (+1, +2, +3...etc.) will correspond to different attributes or parameters, as shown in the following EasyBuilder Pro settings dialog box. For instance, if MQTT_STATUS is set to LW-110, then LW-110 shows the status and LW-111 shows the error code. Messages that have not been sent are stored in the buffer. The maximum buffer capacity is 10000 messages. When the buffer is full, the earliest message will be deleted.

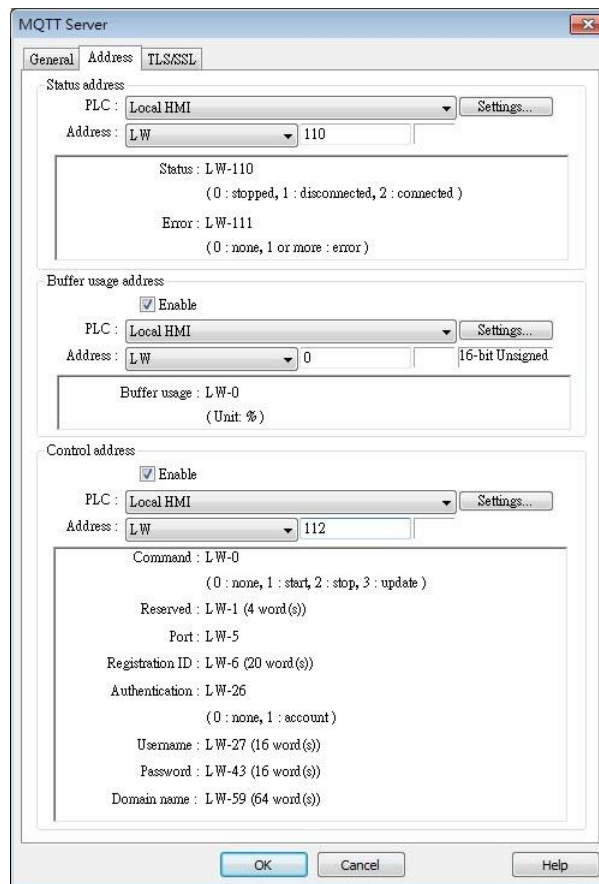

MQTT Server

General Address TLS/SSL

Status address

PLC : Local HMI Settings...

Address : LW 110

Status : LW-110
(0 : stopped, 1 : disconnected, 2 : connected)

Error : LW-111
(0 : none, 1 or more : error)

Buffer usage address

☒ Enable

PLC : Local HMI Settings...

Address : LW 0 16-bit Unsigned

Buffer usage : LW-0
(Unit: %)

Control address

☒ Enable

PLC : Local HMI Settings...

Address : LW 112

Command : LW-0
(0 : none, 1 : start, 2 : stop, 3 : update)

Reserved : LW-1 (4 word(s))

Port : LW-5

Registration ID : LW-6 (20 word(s))

Authentication : LW-26
(0 : none, 1 : account)

Username : LW-27 (16 word(s))

Password : LW-43 (16 word(s))


Domain name : LW-59 (64 word(s))

OK Cancel Help

Enabling TLS/SSL authentication opens two verification methods:

[Server verification]: Verify whether the server certificate is signed by CA (certificate authority) certificate.

[Client verification]: By providing a private key and certificate, the server can verify the client faster, skipping login by username or password.

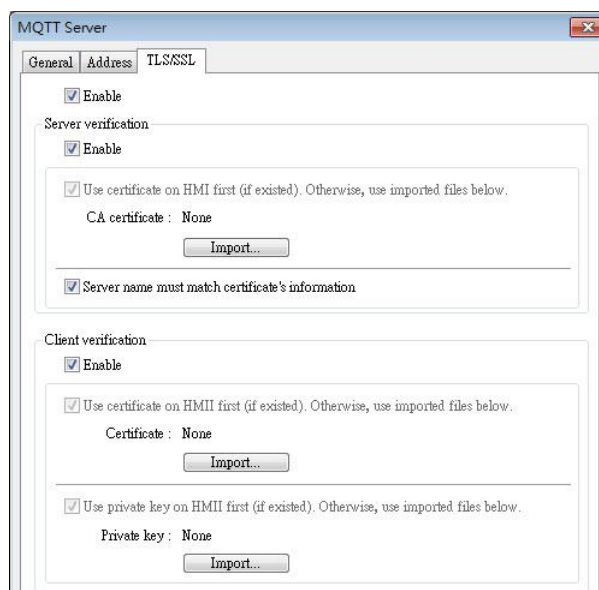

MQTT Server

General Address TLS/SSL

☒ Enable

Server verification

☒ Enable

☒ Use certificate on HMI first (if existed). Otherwise, use imported files below.

CA certificate : None

Import...

☒ Server name must match certificate's information

Client verification

☒ Enable

☒ Use certificate on HMI first (if existed). Otherwise, use imported files below.

Certificate : None

Import...

☒ Use private key on HMI first (if existed). Otherwise, use imported files below.

Private key : None

Import...

Default Messages

When HMI is the publisher and is connected to the broker for the first time, two default topics published at QoS2 will be sent from HMI.

1. `iot-2/type/mt/id/<Registration ID>/evt/topics_update/fmt/json`
This topic contains the messages sent from the HMI, and shows whether the messages are compressed.
2. `iot-2/type/mt/id/<Registration ID>/evt/status/fmt/json`
This topic shows the connection status between HMI and broker.

Topic Publisher Settings

After setting MQTT Server, open MQTT Topic settings. Each topic contains a number of messages to be sent.


The name of the Topic can be user-defined, and by using the character % followed by certain codes, HMI name/Server setting can be used in Topic name as well.

For example: `iot-2/type/cMT-SVR/id/%0/evt/topic 1/fmt/json`


%0 stands for HMI name. To find out HMI name, open System Settings on HMI, or use system register LW-10884. If the HMI name is "Default HMI", then the topic should be written as: `iot-2/type/cMT-SVR/id/Default HMI/evt/topic 1/fmt/json`

Sending Mode: If Trigger-based is selected, MQTT message is sent when any value in the Topic changes. If Time-based is selected, data is published at a fixed time interval.

Apart from Address sending mode, when an Event Log is created, [Event Log] option can be found in the MQTT Topic Publisher settings dialog.

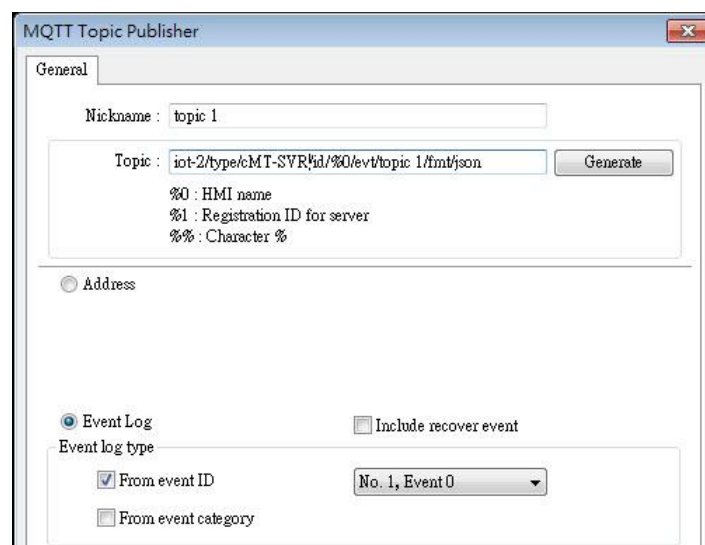

When the sending mode is [Address], in Address tab, set the data composition that will be contained in the topic. The addresses can be consecutive or nonconsecutive, and of different data types and lengths.

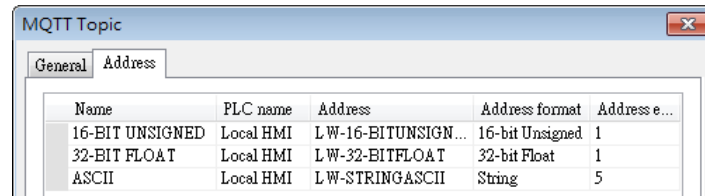

MQTT provides three levels of reliability, which are known as qualities of service (QoS). The reliability of the message determines the persistence of the message.

0: At most once, messages are not persistent.


1: At least once.

2: Exactly once.

For more information on QoS, click [here](#).


[Compressed transmission]: The message will be compressed before being sent, and decompression is needed before reading the message. Messages in MQTT are compressed / decompressed with DEFLATE algorithm.

[Content format]: The supported formats are: JSON and Raw Data.

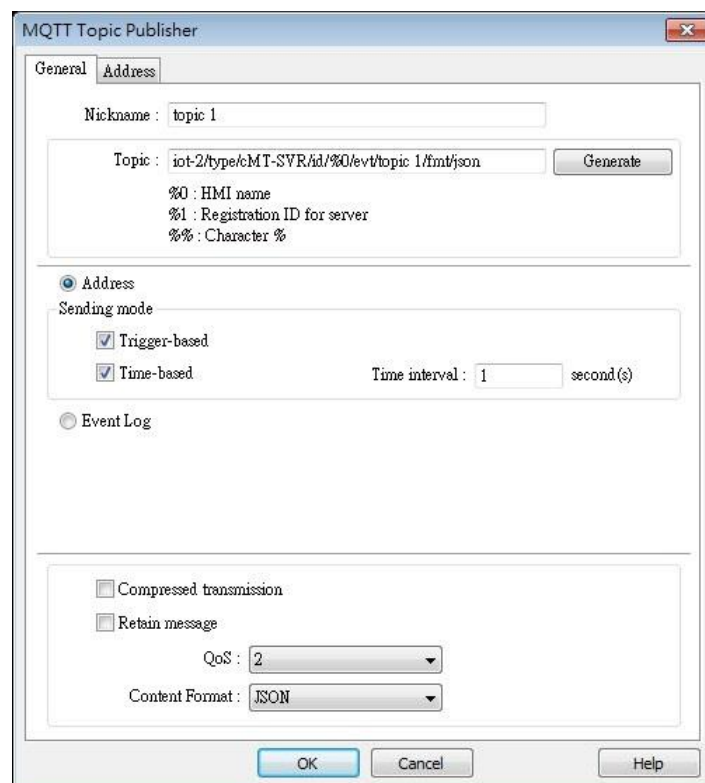

Below is an example that shows the difference between JSON and Raw Data.

When publishing four values in the following address formats:

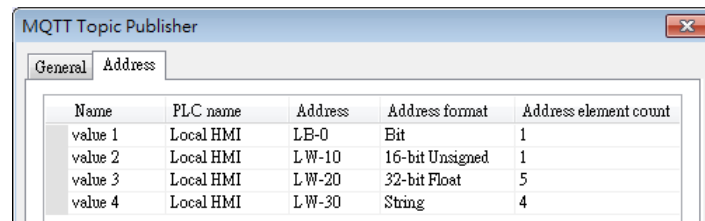

Name	PLC name	Address	Address format	Address element count
value 1	Local HMI	LB-0	Bit	1
value 2	Local HMI	LW-10	16-bit Unsigned	1
value 3	Local HMI	LW-20	32-bit Float	5
value 4	Local HMI	LW-30	String	4

JSON:


```
{
  "d": {
    "value 1" : [ false ],
    "value 2" : [ 2 ],
    "value 3" : [ 1.20000005, 0, 0, 0, 0 ],
    "value 4" : [ "ABCD" ]
  },
  "ts" : "2017-04-18T17:36:52.501856"
}
```

Raw data:

```
0002 009A 9999 3F00 0000 0000 0000 0000
0000 0000 0000 0041 4243 4400 0000 00
```

Subscriber Settings (cMT Series)

cMT Series can subscribe topics from other MQTT servers. The settings are similar to Publisher settings demonstrated in the preceding chapters. Subscribing Event Logs is not supported.

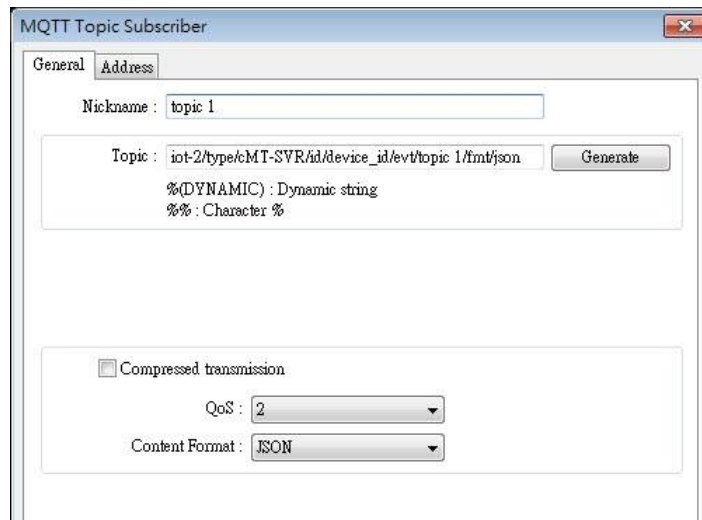

The dialog box 'MQTT Topic Subscriber' has two tabs: 'General' and 'Address'. The 'Address' tab is active. It contains a 'Nickname' field with 'topic 1'. Below it is a 'Topic' field with the text 'iot-2/type/cMT-SVR/id/device_id/evt/topic 1/fmt/json' and a 'Generate' button. Under the topic field, there are two placeholders: '%(DYNAMIC) : Dynamic string' and '%% : Character %'. At the bottom, there is a 'Compressed transmission' checkbox (unchecked), a 'QoS' dropdown menu set to '2', and a 'Content Format' dropdown menu set to 'JSON'.

Content Format can be JSON or Raw Data, please select a format that is supported by the publisher.

JSON:


```
{
    "d" : {
        "value 1" : [ false ],
    },
    "ts" : "2017-04-18T17:36:52.501856"
}
```

Please note that "ts" (time stamp) should be in ascending order.

Raw Data :

The address format should be specified according to the subscribed topic.

For example, if the topic contains the following address formats: Bit, 16bit-unsigned, String (length 4). The address settings should be:

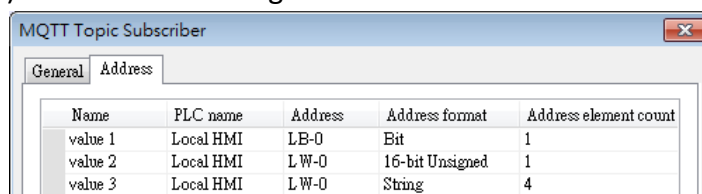

Name	PLC name	Address	Address format	Address element count
value 1	Local HMI	LB-0	Bit	1
value 2	Local HMI	LW-0	16-bit Unsigned	1
value 3	Local HMI	LW-0	String	4

In this example, the order from value 1 to 3 should be: Bit, 16bit-unsigned, String.

The order cannot be changed, and the address element count should be identical.

Project and Application

Two types of addresses can be found in the MQTT Server settings mentioned above:

MQTT_COMMAND (control address) and MQTT_STATUS (status address)

The control addresses can be designated to set control parameters, and the corresponding addresses include MQTT_COMMAND+1 ~ MQTT_COMMAND+43...etc.

The status addresses can show connection status, and the corresponding addresses include MQTT_STATUS and MQTT_STATUS+1.

The information of the addresses can be found in EasyBuilder Pro settings dialog box.

During HMI run time:

Setting MQTT_COMMAND to 1 connects HMI with the broker.

Setting MQTT_COMMAND to 2 disconnects HMI with the broker.

Setting MQTT_COMMAND to 3 after updating the control parameters will connect HMI with the broker using the new parameters.

The MQTT settings can be changed dynamically during HMI run time by using the control addresses mentioned above.

3. Choosing a Broker

Using Built-in Broker in HMI

To use the built-in broker in HMI, select Localhost check box in MQTT Server settings dialog box (Default IP address: 127.0.0.1), or alternatively set the IP address to 127.0.0.1 on HMI. MQTT will use the built-in broker in HMI, and the client program can connect to the broker using the IP address of the HMI.

HMI's MQTT Broker should be downloaded to HMI from EasyBuilder Pro. Please select [Runtime] when downloading MQTT Broker.

Using External Broker

To use an external broker, enter the IP address of the external broker when configuring MQTT server information.

For example, when using a public broker HiveMQ, the data of the broker is:

Host: **broker.hivemq.com (212.72.74.21)**

Port: **1883**

Websocket Port: **8000**

(<http://www.hivemq.com/try-out/>)

From EasyBuilder Pro V5.07.01, domain name is supported. Please enter the actual IP address or domain name (broker.hivemq.com) of the broker.

Using Self-build Broker

The user can host an MQTT broker server. The following are some verified choices:

1. Mosquitto (<http://mosquitto.org/download/>)
2. HiveMQ (<http://www.hivemq.com/downloads/>) (test version provided)
3. EMQ (<http://emqt.io/>)

Please visit their respective official websites for details on installation and restrictions.

4. Getting MQTT Data

Getting MQTT data updates requires an MQTT client program. The client program connects to the broker and register to receive data updates from HMI. Many free client programs can be found on the web. This chapter introduces one of the free programs for PC: MQTT.fx.

MQTT Client Program

Many free MQTT client programs for PC and portable can be found on the web. The following briefly walks through the steps to use MQTT.fx on PC to connect to the broker in order to get message updates from HMI. For other programs, configuration steps may be similar.

1. Suppose an HMI is running MQTT Demo project. It's been configured to connect to MQTT server at 212.72.74.21/port 1883. It has an MQTT topic called Data_Bit.
2. In MQTT.fx » Edit Connection Profiles window, the connection profile should be set as follows.


Broker Address: 212.72.74.21

Broker Port: 1883


Profile Name: *user defined*

Client ID: *user defined*

The rest of the settings can remain in default. The connection with broker will start after clicking [Connect].

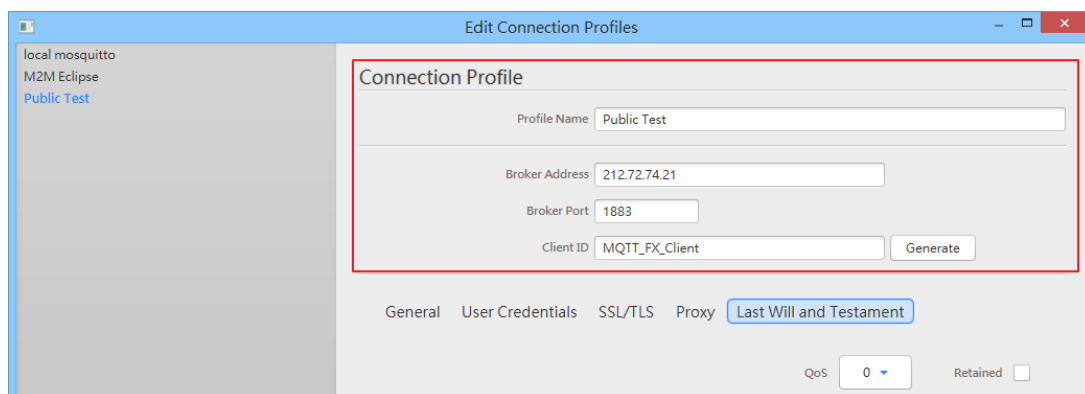

3. Open Subscribe tab » enter Data_Bit in the field shown below » click [Subscribe] button. Once successfully subscribed, when there are MQTT message updates, they will be received and displayed on the main screen.

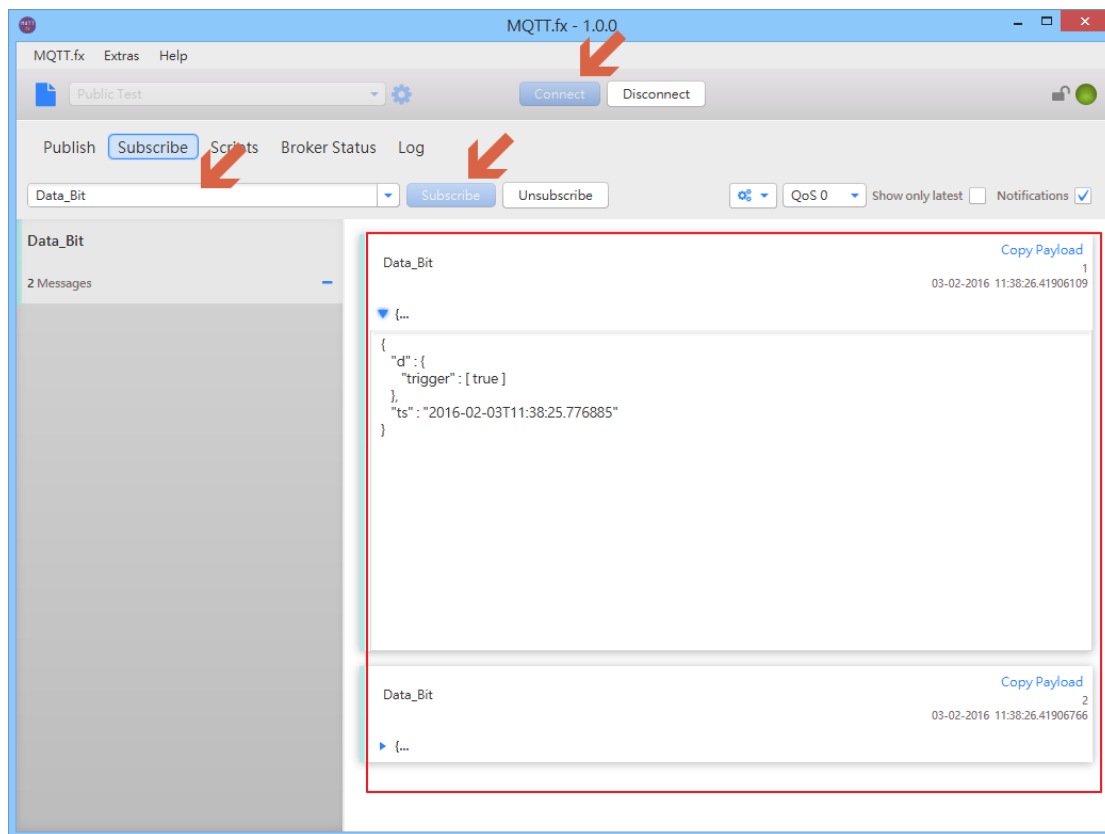

5. References

The Seven Best MQTT Client Tools

<http://www.hivemq.com/blog/seven-best-mqtt-client-tools>