

1019 Frequency Calibrator Serial API									
PC User config Set or Get commands									
Description	Send	Set/Get	Data [8..]	Data					User config is sent by the PC configuration software
Dat Name	[DNM]	S/G	Text 40		Not implemented				
Dat Generator Freq	[DGF]	S/G	Text 12 (000000000000 to 999999999999)Centi Hertz						
PC Factory config Set or Get commands									
Factory Product model Number	[FPN]	G	Text 5 0-65534						Factory data is sent by the PC Factory configuration software
Factory Hardware Version	[FHV]	G	Text 3 0-255						1011=WSPR-TX_LP1, 1012=WSPR Desktop, 1017=WSPR Mini, 1019=Frequency calibrator
Factory Hardware Revision	[FHR]	G	Text 3 0-255						
Factory Software Version	[FSV]	G	Text 3 0-255						
Factory Software Revision	[FSR]	G	Text 3 0-255						
Cmd FactoryConfig Store in EEPROM	[FSE]	S							
Arduino replies for Get commands									
Description	Return	Set/Get	Data	Data					Replies from the Arduino in respons to a User config or Factory config Get query
Dat Name	{DNM}	S/G	Text 40		Not implemented				
Dat Generator Freq	{DGF}	S/G	Text 12 (000000000000 to 999999999999)chZ						
Arduino Status update messages (Can be sent at anytime, they are not in respons to a get command query)									
Description	Send		Data [8..]	Data					These messages are sent whenever the Arduino thinks it's appropriate
GPS Time	{GTM}		Text 8 HH:MM:SS						
GPS Lock	{GLC}		Text 1 T=True F=False						
GPS SatInfo	{GSI}		Text 2+3+2+2 ID Az El SNR. Space between each data field						
Transmitter Frequency	{TFQ}		Text 5-12 0-terminated deciHz						
Transmitter On (RF Out active)	{TON}		Text 1 T=True F=False						
Microcontroller Information	{MIN}		Text						