

SIQ - LED String Project

We would love to hear your thoughts or feedback on how we can improve your experience!

Which one of the two modes specified will be the default mode during the "Welcome" phase? *

Modes will be handled according to mode switch connected as input signal to the controller, if it's LOW enter mode one and if it's HIGH enter mode 2.

Could you please elaborate more on the tail function? How do you intend it to work? *

Tail function LEDs shall be ON when the Tail signal is HIGH level and shall be OFF when Tail signal level is LOW, activation and deactivation shall be done without any animation so simply ON all Tail LEDs when Tail signal is HIGH and OFF them when it's LOW.

NOTE:

Tail signal is provided by a switch connected as an input to the controller

Which switch will be used? where is their location

You have 3 switches:

- 1- Tail switch to activate / deactivate Tail LEDs
- 2- Right TI switch to activate / deactivate right TI LEDs
- 2- left TI switch to activate / deactivate left TI LEDs

All switches are connected as an input for the controller

This content is neither created nor endorsed by Google.

Google Forms