


# Arduino Duemilanove

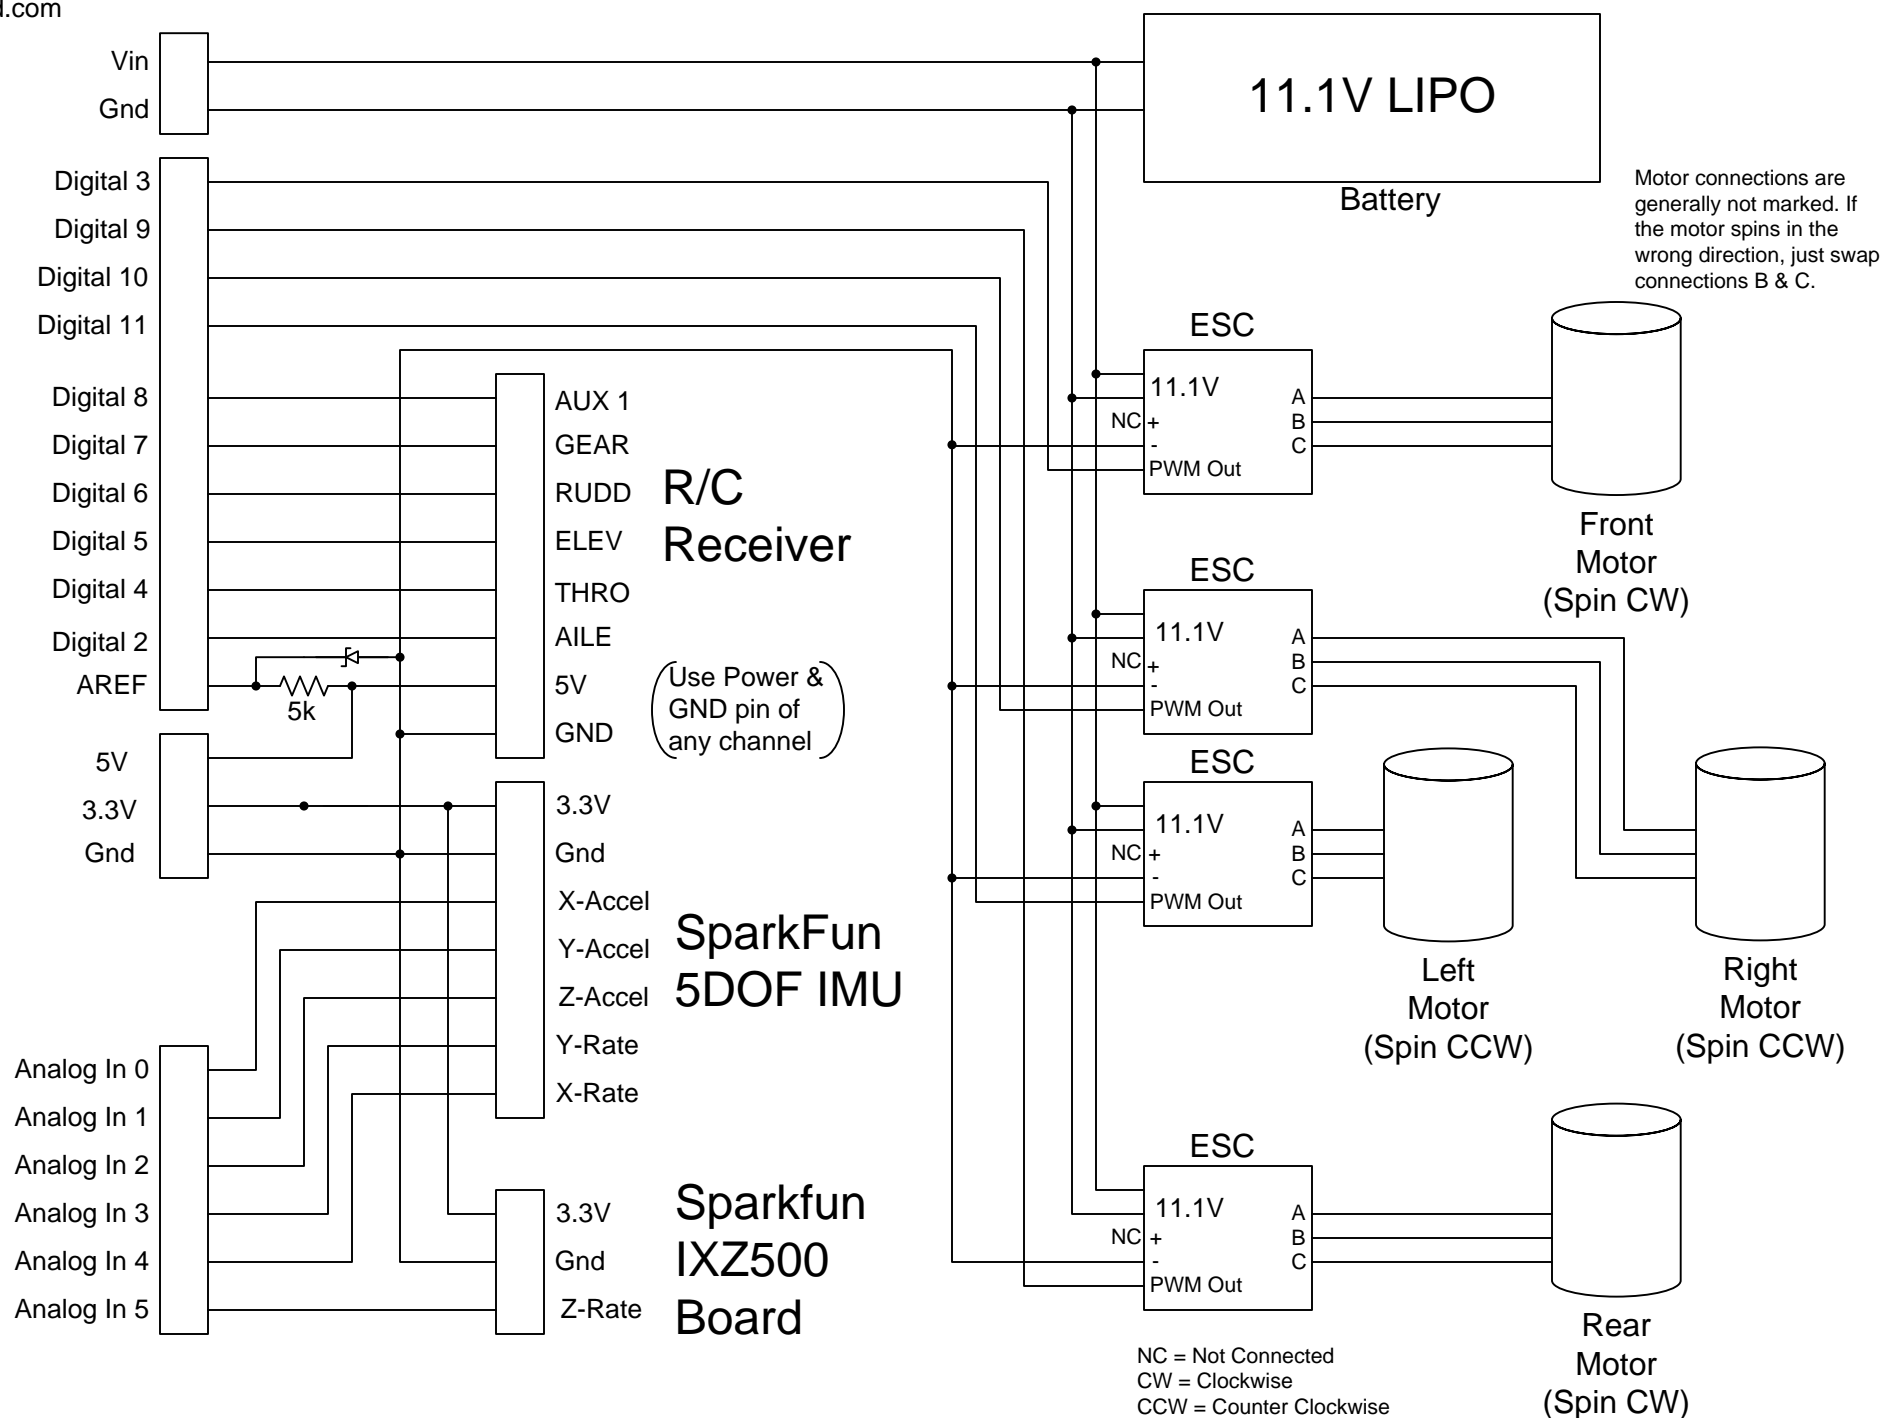

## Note:

This interconnect diagram works with the AeroQuad v1.7 software which can be downloaded from <http://AeroQuad.com>. Channels can be reassigned by modifying the pin out definitions in the software.