



MediaTek Linux SDK Developer Guide

Version: **1.0**
Release date: **2011/12/22**

© 2008 - 2015 MediaTek Inc.

This document contains information that is proprietary to MediaTek Inc.

Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

Specifications are subject to change without notice.

Document Revision History

Revision	Date	Author	Description
<i>Draft</i>	<i>2010/9/15</i>	<i>xyyou</i>	<i>Initial draft</i>
	<i>2011/12/22</i>	<i>fredli</i>	<i>Release SDK</i>
	<i>2015/4/15</i>	<i>Guanhu.zou</i>	<i>Release SDK</i>

Table of Contents

Document Revision History	2
Table of Contents	3
1 Introduction.....	4
2 The Architecture of Build Framework	5
3 Prepare the profile.....	6
3.1 Create a new profile	6
3.2 Configure a profile	6
3.3 Configure Busybox or kernel.....	8
4 Building images.....	11
4.1 Build image	11
4.2 Bootloader	11
4.3 Linux Kernel	12
4.4 Busybox	13
4.5 Modules	13
4.6 Applications	13
4.7 Buildimage only.....	13
5 Task and interrupt setting for user space, kernel and VoIP for CPU binding.....	14
6 How to add a new application	15

1 Introduction


This SDK is the Linux platform for MediaTek CPE and it supports TC3162u, TC3182, RT63260, RT65168 and RT63365 concurrently .

This document is provided for RD that develop the advanced features with MediaTek Linux SDK. Developers can learn the detail of Build Framework architecture and how to choose the profile&feature to build a correct image in different platform. They can also easily add a new application according to the following step.

2 The Architecture of Build Framework

The whole source code structure is shown as below. And the framework contains kernel, driver, user application and configuration files, which locates different directories.

Releasebsp

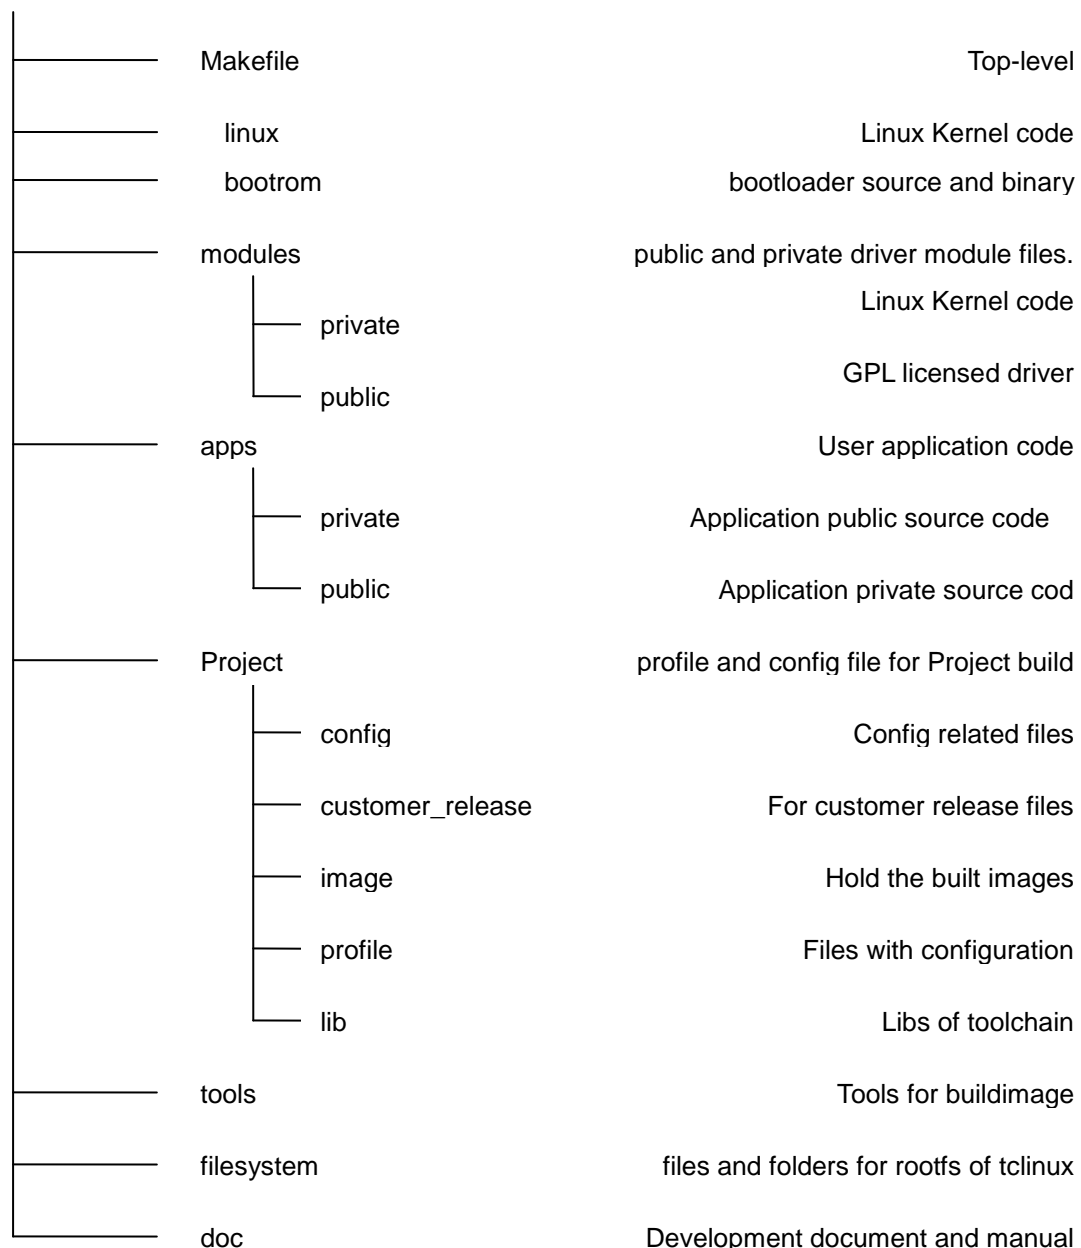

3 Prepare the profile


Uncompress SDK with command “tar -zxvf releasebsp_profilename_releasedate.tgz” into “releasebsp” folder. (the “releasebsp” represents location that you extract the SDK package to, the following the same)

3.1 Create a new profile


Change to dir“releasebsp/Project/profile” , create a folder and empty file under this folder with the same name. For instance, “mkdir test & touch test/test.profile ”

3.2 Configure a profile

Step1: Change to dir “releasebsp/” , configure your target profile with “make PROFILE=[profile to be configure] menuconfig”. For instance, “make PROFILE=test menuconfig”

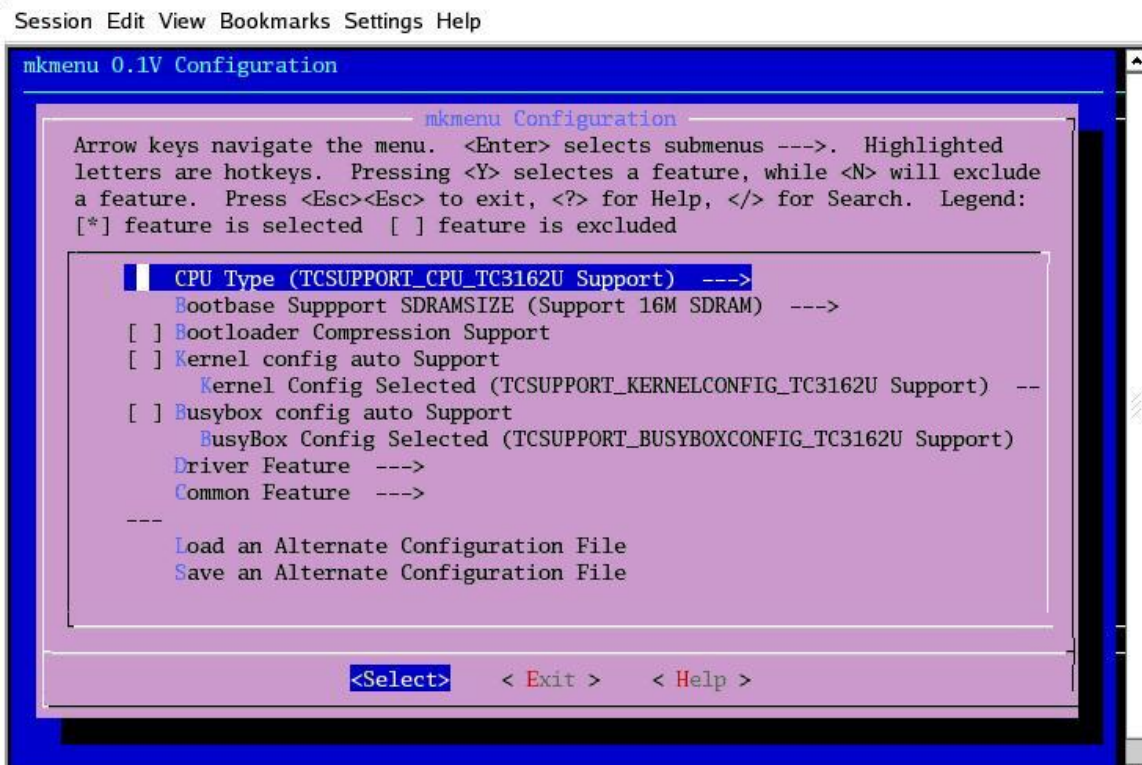

Step 2: Select the item which you want to configure, for example, choose the Bootbase Support SDRAMSIZE, and configure it as Support 16M SDRAM

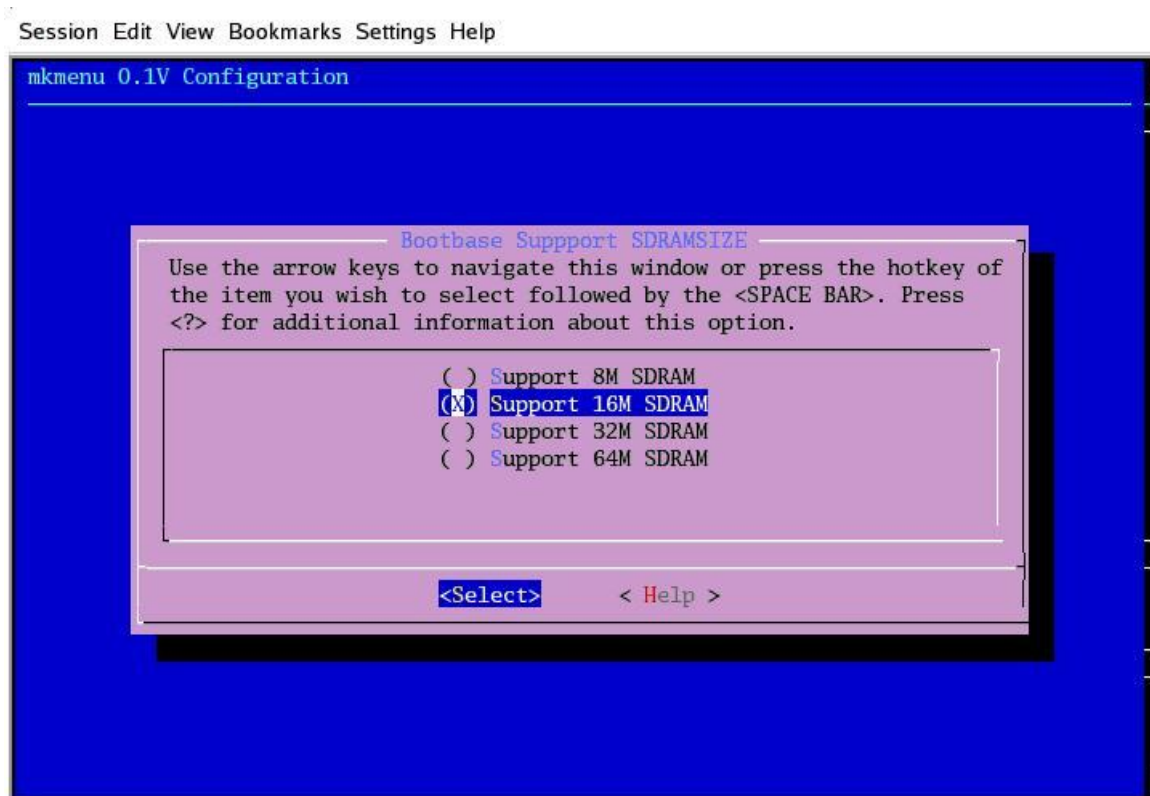

Step 3: When you finish the configuration, please exit and save it, then your profile "test" will be configured as you want.

Session Edit View Bookmarks Settings Help

mkmenu 0.1V Configuration

Do you wish to save your new mkmenu configuration?
<ESC><ESC> to continue.


< Yes > < No >

3.3 Configure Busybox or kernel

We provide two ways to configure Busybox or kernel.


- (1) Enter “releasebsp” folder, Enter command “make PROFILE=test menuconfig”, and choose kernel config selected, then you can select which config file you want.

Session Edit View Bookmarks Settings Help

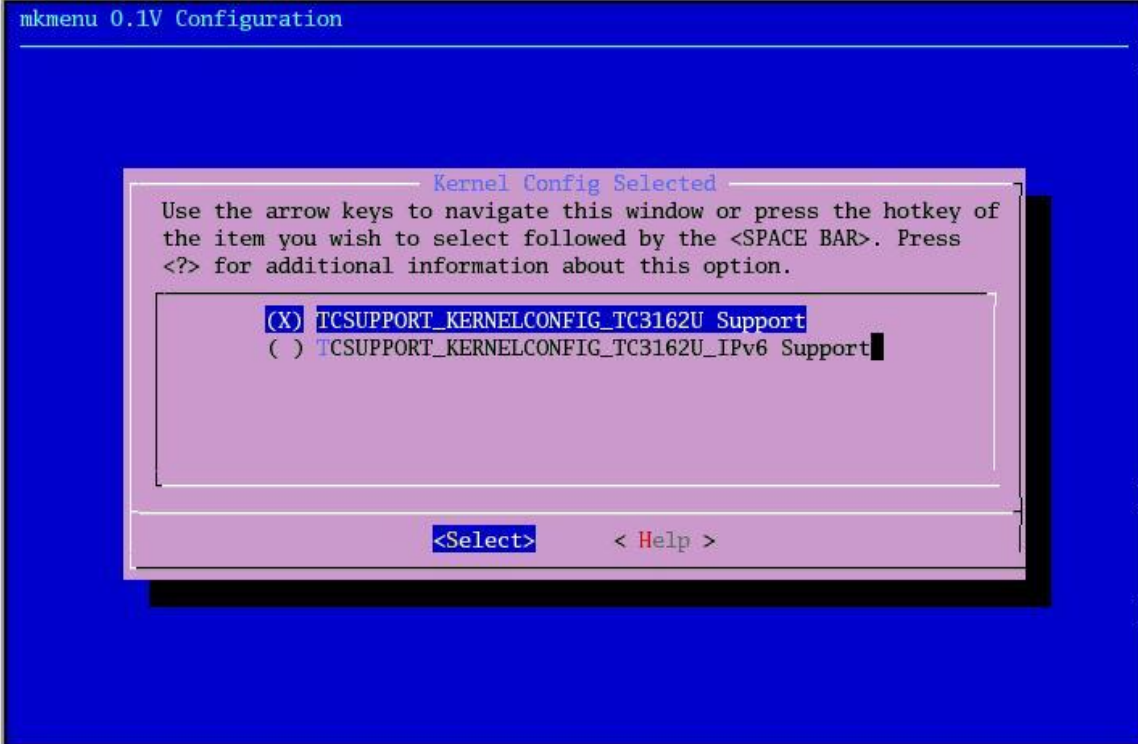

- (2) You can also configure the kernel's detail. Enter command "make PROFILE=test kernel_menuconfig", after configure new kernel config file, will automatically copy to your profile folder as file "kernel.config". When build kernel will use this kernel config first.

Session Edit View Bookmarks Settings Help

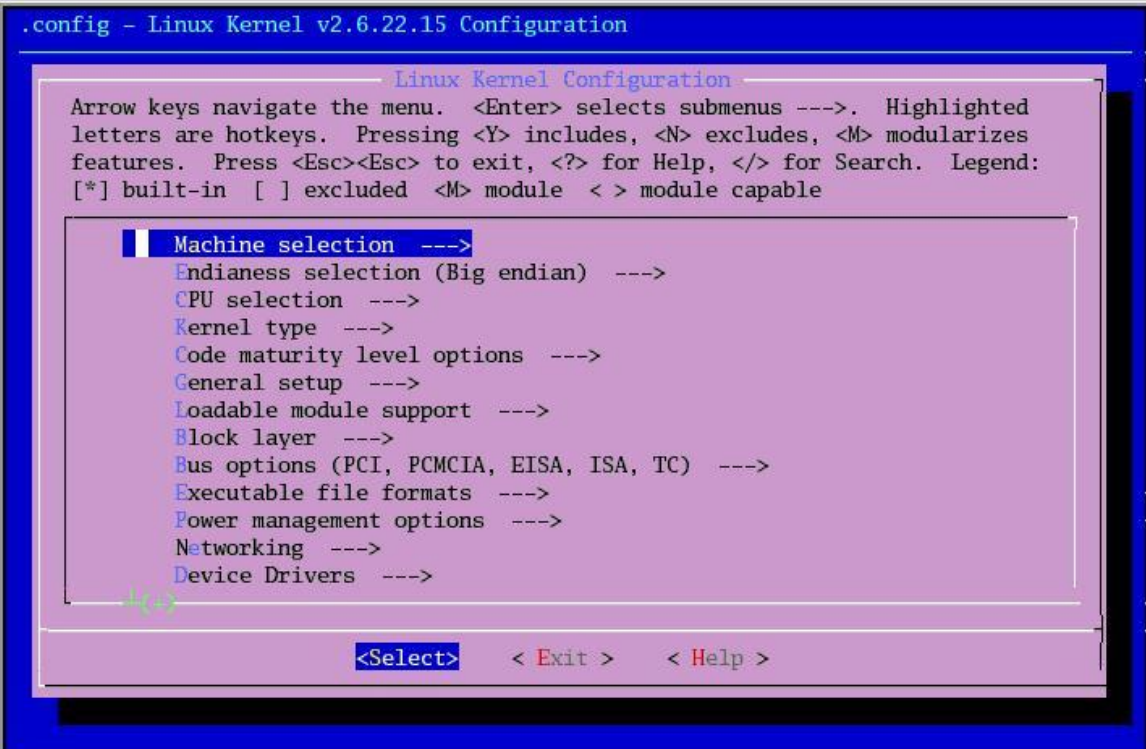

Note:

- (1) We have introduced the way of kernel configuration, and the Busybox configuration is in the same way while use busybox instead of kernel. For example, "make PROFILE=test busybox_menuconfig"
- (2) Once you use the second way to configure the detail of kernel or busybox, it will always use this configuration, except you delete the Project/profile/test/kernel.config and Project/profile/test/busybox.config

4 Building images

4.1 Build image

1. Enter “releasebsp” folder, Enter command “make PROFILE=test clean” & “make PROFILE=test”
2. You can get “tcboot.bin”, “tclinux.bin” , “tclinux_allinone” and “tclinux_allinone.swap” files in “Project/images” folder

4.2 Bootloader

1. Enter “releasebsp” folder, Enter command “make PROFILE=test bootbase_clean” & “make PROFILE=test bootbase”, you can get tcboot.bin files in “Project/images” folder.
Tips: You can select SDRAM size support of bootbase when you configure the profile.
2. Manufacture Related Data(MRD)
The MRD data file named mi.conf includes the following information
 - MAC address
 - vendor name
 - product name
 - GPIO number for Ethernet switch reset in bootloaderYou can use any text editor to modify the content of mi.conf, and rebuild Bootloader.

4.3 Linux Kernel

1. Enter “releasebsp” folder, Enter command “make PROFILE=test menuconfig” to select right kernel config file
2. You can configure kernel manually, Enter command “make PROFILE=test kernel_menuconfig”, after configure new kernel config file, will automatically copy to your profile folder as file “kernel.config”. When build kernel will use this kernel config first.
3. Enter “releasebsp” folder, Enter command “make PROFILE=test kernel_clean” & “make PROFILE=test kernel” to build kernel
4. You should see a binary file named linux.7z is created after building complete at tc3162/linux folder.
5. The linux.bin is the uncompressed linux kernel image at tc3162/linux folder.
6. USB 2.0 Device(Only TC3162U, TC3182,RT63260 support)
 - linux/drivers/usb/gadget/g_ether.ko
7. USB 2.0 Host(Only TC3162U, TC3182,RT65168 and RT63365 support)
 - linux/drivers/scsi/scsi_mod.ko
 - linux/drivers/scsi/scsi_wait_scan.ko
 - linux/drivers/scsi/sd_mod.ko
 - linux/drivers/usb/core/usbcore.ko
 - linux/drivers/usb/host/ehci-hcd.ko
 - linux/drivers/usb/host/ohci-hcd.ko
 - linux/drivers/usb/storage/usb-storage.ko
 - linux/fs/fat/fat.ko
 - linux/fs/msdos/msdos.ko
 - linux/fs/vfat/vfat.ko
 - linux/fs/nls/nls_ascii.ko
 - linux/fs/nls/nls_base.ko
 - linux/fs/nls/nls_cp437.ko

4.4 Busybox

1. Change directory to ““releasebsp”” folder, Enter command “make PROFILE=test menuconfig” to select right busybox config file
2. You can configure busybox manually, Enter command “make PROFILE=test busybox_menuconfig”, after configure new kernel config file, will automatically copy to your profile folder as file “busybox.config”. When build busybox will use this busybox config first.
3. Change directory to ““releasebsp”” folder, Enter command “make PROFILE=test busybox_clean” & “make PROFILE=test busybox” to build busybox
4. Busybox apps will automatically installed in filesystem folder

4.5 Modules

Change directory to ““releasebsp”” folder, Enter command “make PROFILE=test modules_clean” & “make PROFILE=test modules”

4.6 Applications

Change directory to ““releasebsp”” folder, Enter command “make PROFILE=test apps_clean” & “make PROFILE=test apps”

4.7 Buildimage only

Change directory to ““releasebsp”” folder, Enter command “make PROFILE=test buildimage”

5 Task and interrupt setting for user space, kernel and VoIP for CPU binding

1. User space task should be bound to CPU1.


file: tclinux_phoenix\apps\public\busybox-1.00\init.c

```
01124: /*20100921_serena_modify*/
01125: /* to_cpuset(bb_xgetularg_bnd(aff, 16, 1, ULONG_MAX),* &new_mask); */
01126: printf("busybox init and set aff\n");
01127: unsigned i = 0;
01128: //only use TC1 to application. shnwind 20110318.
01129: unsigned long aff = 0x2;
01130: cpu_set_t new_mask;
01131: CPU_ZERO(&new_mask);
01132: while (i < CPU_SETSIZE && aff >= (1<<i)) {
01133:     if ((1<<i) & aff)
01134:         CPU_SET(i, &new_mask);
01135:     ++i;
01136: }
01137: sched_setaffinity(1, sizeof (new_mask), &new_mask);
01138: /*20100921_end_serena_modify*/
```

2. Kernel task should be bound to CPU0,CPU1,CPU2.

file: linux-2.6.36/arch/mips/include/asm/processor.h

INIT_CPUMASK set 0 to 7 (bound to CPU0/CPU1/CPU2)

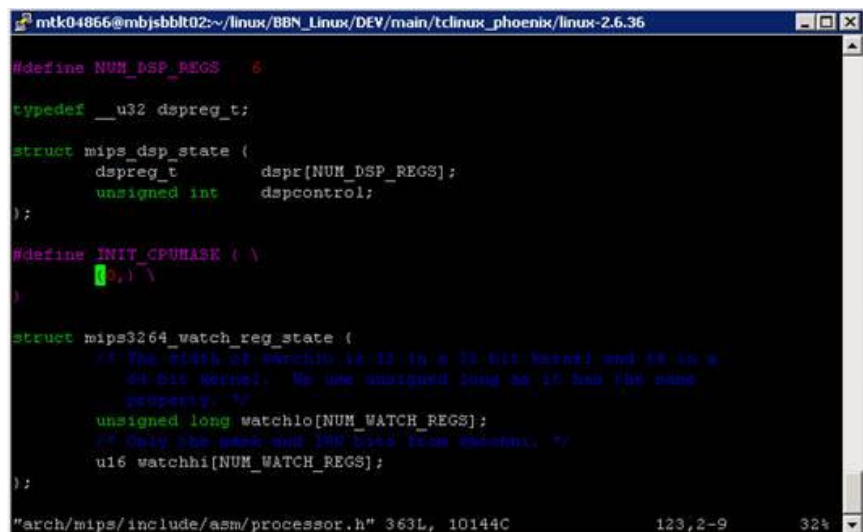

```
#define NUM_DSP_REGS 8

typedef __u32 dspreg_t;

struct mips_dsp_state {
    dspreg_t    dspr[NUM_DSP_REGS];
    unsigned int dsprcontrol;
};

#define INIT_CPUMASK ( \
    0x1 \
)

struct mips3264_watch_reg_state {
    /* The width of watchlo is 32 bit and 32 bit watchhi is 32 bit. We use unsigned long as it has the same property. */
    unsigned long watchlo[NUM_WATCH_REGS];
    /* Only the even-numbered bits are used. */
    u16 watchhi[NUM_WATCH_REGS];
};

"arch/mips/include/asm/processor.h" 363L, 10144C 123,2-9 32%
```

3. CPU3 is only assigned to use for VoIP, other interrupt & user-space task can't be bound to CPU3 except PCM and timer interrupt. For example,qdma interrupt should not be bound to CPU3,and it is recommended to be bound to CPU0,CPU1,CPU2.

6 How to add a new application

Here's an example of how to add TR069 feature:

Step 1: Add source code into apps/TR69_64

Step 2: Define a new compile option: TCSUPPORT_CWMP

Step 3: Add "TCSUPPORT_CWMP" into profile, for example, you can add "TCSUPPORT_CWMP=y" to test/test.profile

Step 4: Modify the Project/config/menuconfig/Config.in to support menu configuration

```
config TCSUPPORT_CWMP
    bool "TCSUPPORT_CWMP Support"
    help
        TR069 support
```

Step 5: Add your application path in Project/dir.mk

```
APP_CWMP_DIR=$(APP_DIR)/TR69_64
```

Step 6: Export your compile option value and modify the TC_CFLAGS in Project/rule.mk

```
ifneq ($(strip $(TCSUPPORT_CWMP)),)
export TCSUPPORT_CWMP
TC_CFLAGS+=-DTCSUPPORT_CWMP
```

Step 7: Add the TC_CFLAGS into apps/TR69_64/Makefile

```
ifneq ($(TC_CFLAGS),)
CFLAGS+=$(TC_CFLAGS)
endif
```

Step 8: Modify the Project/MakeFile_Main

(1)add cwmp into apps:

```
ifeq ($(strip $(TCSUPPORT_PUREBRIDGE)),)
apps: libatm br2684ctl brctl libtcapi mxml tcapi busybox cfg_manager ssl cwmp wirelesstool cpu \
    iptables ebtables mtd pppd tcci tcwdog utelnetd boa dhcrelay dproxy ez-ipupdate \
    bftpd inetd snmpd ntpclient tftpd igmp proxy mtf pppoe-relay zebra radvd iproute ethcmd vconfig cmd_ci

apps_clean: libatm_clean br2684ctl_clean brctl_clean libtcapi_clean busybox_clean cfg_manager_clean ssl_clean cwmp_clean wirelesstool_clean cpu_clean \
    iptables_clean ebtables_clean mtd_clean pppd_clean tcci_clean tcwdog_clean utelnetd_clean mxml_clean boa_clean tcapi_clean dhcrelay_clean dproxy_clean ez-ipupdate_clean \
    bftpd_clean inetd_clean snmpd_clean ntpclient_clean tftpd_clean igmp proxy_clean mtf_clean pppoe-relay_clean zebra_clean radvd_clean iproute_clean ethcmd_clean vconfig_clean cmd_ci_clean
endif
```

(2)add compile cwmp


```
ifneq ($(strip $(TCSUPPORT_CWMP)),)
cwmp:
    echo "Build CWMP!"
    $(MAKE) -C $(APP_CWMP_DIR)
    if test -e $(APP_CWMP_DIR)/tr69; \
    then echo "Compile tr69 success"; \
    else echo "Compile tr69 error!"; exit 1; \
    fi
    cp $(APP_CWMP_DIR)/tr69 $(FILESYSTEM_DIR)/userfs/bin/
    cp $(APP_DIR)/etc_script/devInf.conf $(FILESYSTEM_DIR)/usr/etc/

cwmp_clean:
    $(MAKE) -C $(APP_CWMP_DIR) clean

else
cwmp:
    echo "No Build CWMP!"
cwmp_clean:
    echo "No Clean CWMP!"
endif
```