

Note: This tutorial assumes that you have completed the previous tutorials: Hello World Publisher (/roserial_arduino/Tutorials/Hello%20World).

💡 Please ask about problems and questions regarding this tutorial on answers.ros.org (<http://answers.ros.org>). Don't forget to include in your question the link to this page, the versions of your OS & ROS, and also add appropriate tags.

CMake with roserial_arduino

Description: This tutorial shows how to use the CMake build system with roserial_arduino.

Tutorial Level: ADVANCED

Next Tutorial: Servo Controller (/roserial_arduino/Tutorials/Servo%20Controller)

When you are doing large software projects, the Arduino IDE quickly becomes unwieldy. You often want to be able to compile your project from the command line or use a different IDE like Eclipse where you can use autocompletion. Finally, by using roserial_client CMake infrastructure, you can build and distribute firmwares using the ROS buildfarm.

For this tutorial, we are going to create a simple hello world firmware.

catkin

robuild

Contents

1. Making Your Project

2. Source Code

3. CMakeLists.txt

4. Build & Test

5. Additional Info

New in Indigo You can now again build roserial firmwares and other clients inside your regular ROS packages. This functionality is available from Indigo onward. The installation of the roserial_arduino (/roserial_arduino) package now also installs [arduino-core](http://packages.ubuntu.com/trusty/arduino-core) (<http://packages.ubuntu.com/trusty/arduino-core>), so there's nothing additional needed to make this work.

1. Making Your Project

Starting your roserial_arduino project is just like creating any other package. In your catkin workspace's src folder:

```
catkin_create_pkg helloworld roserial_arduino roserial_client std_msgs
```

As usual, use catkin_create_pkg to create a package named helloworld. You must depend on roserial_arduino for the Arduino toolchain, and on roserial_client for client library generation macros. And finally, since we are going to use std_msgs/String (http://docs.ros.org/api/std_msgs/html/msg/String.html) messages, you must depend on std_msgs (/std_msgs).

2. Source Code

Copy the the source code below and make a file called firmware/chatter.cpp in your helloworld package.

Toggle line numbers

```
1 #include <ros.h>
2 #include <std_msgs/String.h>
3
4 #include <Arduino.h>
5
6 ros::NodeHandle nh;
7
8 std_msgs::String str_msg;
9 ros::Publisher chatter("chatter", &str_msg);
10
11 char hello[13] = "hello world!";
12
13 void setup()
14 {
15     nh.initNode();
16     nh.advertise(chatter);
17 }
18
19 void loop()
20 {
21     str_msg.data = hello;
22     chatter.publish( &str_msg );
23     nh.spinOnce();
24     delay(1000);
25 }
```

This program is almost exactly the same as the hello world covered in the Publisher Tutorial (/roserial_arduino/Tutorials/Hello%20World).

When you are compiling a cpp file outside of the Arduino IDE, you need to explicitly include a header file which contains all of the Arduino functions (digitalRead, analogRead, delay, etc.).

If you are unsure if you are going to be using a file with the Arduino IDE versus CMake, just add this line at the top of your file. It never hurts and it makes sure your file is always compatible with non-Arduino IDE build systems.

3. CMakeLists.txt

Open the CMakeLists.txt in your package directory and replace the contents with the below:

Toggle line numbers

```
1 cmake_minimum_required(VERSION 2.8.3)
2 project(helloworld)
3
4 find_package(catkin REQUIRED COMPONENTS
5     roserial_arduino
6     roserial_client
7 )
8
9 catkin_package()
10
11 roserial_generate_ros_lib(
12     PACKAGE roserial_arduino
13     SCRIPT make_libraries.py
14 )
15
16 roserial_configure_client(
17     DIRECTORY firmware
18     TOOLCHAIN_FILE ${ROSSERIAL_ARDUINO_TOOLCHAIN}
19 )
20
21 roserial_add_client_target(firmware hello ALL)
22 roserial_add_client_target(firmware hello-upload)
```

With roserial_client (/roserial_client)'s CMake scripts, we are not actually building the firmware directly, but configuring a separate CMake project, and passing through targets from the catkin package to the sub-project.

The roserial_generate_ros_lib function creates a target called helloworld_ros_lib, which will generate the roserial client library, including messages headers.

The roserial_configure_client function creates a target which will configure the CMake project in the specified subdirectory, optionally using the supplied toolchain. In this case, we use the Arduino toolchain, helpfully provided by roserial_arduino (/roserial_arduino).

Finally, the roserial_add_client_target calls each pass through targets, so that when you run make the helloworld_firmware_hello catkin target, it will configure the firmware directory and build the hello target therein.

Now, we actually need a second CMakeLists.txt, and that's the one for the firmware subproject. Create the file firmware/CMakeLists.txt in your package, with the following contents:

Toggle line numbers

```
1 cmake_minimum_required(VERSION 2.8.3)
2
3 include_directories(${ROS_LIB_DIR})
4
5 # Remove this if using an Arduino without native USB (eg, other than Leonardo)
6 add_definitions(-DUSB_CON)
7
8 generate_arduino_firmware(hello
9   SRCS chatter.cpp ${ROS_LIB_DIR}/time.cpp
10   BOARD leonardo
11   PORT /dev/ttyACM0
12 )
```

The `generate_arduino_firmware` function is provided by the [🌐 arduino-cmake](https://github.com/queezythegreat/arduino-cmake) toolchain (<https://github.com/queezythegreat/arduino-cmake>), which this uses. It handles the intricacies of locating Arduino, linking any libraries you use, and so on.

You should be done!

4. Build & Test

The firmware should build by default when you run `catkin_make`, but you can also specify it explicitly:

```
catkin_make helloworld_firmware_hello
```

Now connect an Arduino Leonardo, confirm that it comes up as `/dev/ttyACM0` (or change the firmware's `CMakeLists.txt` accordingly), and program it:

```
catkin_make helloworld_firmware_hello-upload
```

Now you can use the Arduino! Launch the following in separate terminals to see it in action:

```
roscore
```

```
roslaunch rosserial_python serial_node.py /dev/ttyACM0
```

```
rostopic echo chatter
```

5. Additional Info

The CMake script which supplies these functions lives [🌐 here](https://github.com/ros-drivers/rosserial/blob/indigo-devel/rosserial_client/cmake/rosserial_client-extras.cmake) (https://github.com/ros-drivers/rosserial/blob/indigo-devel/rosserial_client/cmake/rosserial_client-extras.cmake), if you want to inspect it to understand better what is going on.

If there's a breakage you don't understand, a good first step is to clean your workspace (delete build and devel trees), and then re-run in verbose mode:

```
catkin_make VERBOSE=1
```

Except where otherwise noted, the ROS wiki is licensed under the [Creative Commons Attribution 3.0](http://creativecommons.org/licenses/by/3.0/) (<http://creativecommons.org/licenses/by/3.0/>) | Wiki: rosserial_arduino/Tutorials/CMake (last edited 2015-10-03 13:20:46 by harzus (/harzus))
Find us on Google+ (<https://plus.google.com/113789706402978299308>)

Brought to you by:  Open Source Robotics Foundation

(<http://www.osrfoundation.org>)