

# ISO7816 Serial Communications

## 1. Introduction

ISO/IEC7816 is a series of standards specifying integrated circuit cards (ICC) also known as smart cards.

## 2. Hardware-related considerations

Some CPUs/UARTs (e.g., Microchip AT91) contain a built-in mode capable of handling communication with a smart card.

For these microcontrollers, the Linux driver should be made capable of working in both modes, and proper ioctls (see later) should be made available at user-level to allow switching from one mode to the other, and vice versa.

## 3. Data Structures Already Available in the Kernel

The Linux kernel provides the `serial_iso7816` structure (see [1]) to handle ISO7816 communications. This data structure is used to set and configure ISO7816 parameters in ioctls.

Any driver for devices capable of working both as RS232 and ISO7816 should implement the `iso7816_config` callback in the `uart_port` structure. The `serial_core` calls `iso7816_config` to do the device specific part in response to `TIOCGISO7816` and `TIOCSISO7816` ioctls (see below). The `iso7816_config` callback receives a pointer to struct `serial_iso7816`.

## 4. Usage from user-level

From user-level, ISO7816 configuration can be get/set using the previous ioctls. For instance, to set ISO7816 you can use the following code:

```
#include <linux/serial.h>

/* Include definition for ISO7816 ioctls: TIOCSISO7816 and TIOCGISO7816 */
#include <sys/ioctl.h>

/* Open your specific device (e.g., /dev/mydevice): */
int fd = open ("/dev/mydevice", O_RDWR);
if (fd < 0) {
    /* Error handling. See errno. */
}

struct serial_iso7816 iso7816conf;

/* Reserved fields as to be zeroed */
memset(&iso7816conf, 0, sizeof(iso7816conf));

/* Enable ISO7816 mode: */
iso7816conf.flags |= SER_ISO7816_ENABLED;

/* Select the protocol: */
/* T=0 */
iso7816conf.flags |= SER_ISO7816_T(0);
/* or T=1 */
iso7816conf.flags |= SER_ISO7816_T(1);

/* Set the guard time: */
iso7816conf.tg = 2;

/* Set the clock frequency*/
iso7816conf.clk = 3571200;

/* Set transmission factors: */
iso7816conf.sc_fi = 372;
iso7816conf.sc_di = 1;

if (ioctl(fd_usart, TIOCSISO7816, &iso7816conf) < 0) {
    /* Error handling. See errno. */
}

/* Use read() and write() syscalls here... */

/* Close the device when finished: */
if (close (fd) < 0) {
```

```
        /* Error handling. See errno. */  
    }
```

## 5. References

[1] `include/uapi/linux/serial.h`