

# Input event codes

The input protocol uses a map of types and codes to express input device values to userspace. This document describes the types and codes and how and when they may be used.

A single hardware event generates multiple input events. Each input event contains the new value of a single data item. A special event type, `EV_SYN`, is used to separate input events into packets of input data changes occurring at the same moment in time. In the following, the term "event" refers to a single input event encompassing a type, code, and value.

The input protocol is a stateful protocol. Events are emitted only when values of event codes have changed. However, the state is maintained within the Linux input subsystem; drivers do not need to maintain the state and may attempt to emit unchanged values without harm. Userspace may obtain the current state of event code values using the `EVIOCG*` ioctls defined in `linux/input.h`. The event reports supported by a device are also provided by `sysfs` in `class/input/event*/device/capabilities/`, and the properties of a device are provided in `class/input/event*/device/properties`.

## Event types

Event types are groupings of codes under a logical input construct. Each type has a set of applicable codes to be used in generating events. See the Codes section for details on valid codes for each type.

- `EV_SYN`:
  - Used as markers to separate events. Events may be separated in time or in space, such as with the multitouch protocol.
- `EV_KEY`:
  - Used to describe state changes of keyboards, buttons, or other key-like devices.
- `EV_REL`:
  - Used to describe relative axis value changes, e.g. moving the mouse 5 units to the left.
- `EV_ABS`:
  - Used to describe absolute axis value changes, e.g. describing the coordinates of a touch on a touchscreen.
- `EV_MSC`:
  - Used to describe miscellaneous input data that do not fit into other types.
- `EV_SW`:
  - Used to describe binary state input switches.
- `EV_LED`:
  - Used to turn LEDs on devices on and off.
- `EV_SND`:
  - Used to output sound to devices.
- `EV_REP`:
  - Used for autorepeating devices.
- `EV_FF`:
  - Used to send force feedback commands to an input device.
- `EV_PWR`:
  - A special type for power button and switch input.
- `EV_FF_STATUS`:
  - Used to receive force feedback device status.

## Event codes

Event codes define the precise type of event.

### EV\_SYN

`EV_SYN` event values are undefined. Their usage is defined only by when they are sent in the `evdev` event stream.

- `SYN_REPORT`:
  - Used to synchronize and separate events into packets of input data changes occurring at the same moment in time. For example, motion of a mouse may set the `REL_X` and `REL_Y` values for one motion, then emit a `SYN_REPORT`. The next motion will emit more `REL_X` and `REL_Y` values and send another `SYN_REPORT`.
- `SYN_CONFIG`:
  - TBD
- `SYN_MT_REPORT`:
  - Used to synchronize and separate touch events. See the `multi-touch-protocol.txt` document for more information.
- `SYN_DROPPED`:
  - Used to indicate buffer overrun in the `evdev` client's event queue. Client should ignore all events up to and including next `SYN_REPORT` event and query the device (using `EVIOCG*` ioctls) to obtain its current state.

### EV\_KEY

EV\_KEY events take the form KEY\_<name> or BTN\_<name>. For example, KEY\_A is used to represent the 'A' key on a keyboard. When a key is depressed, an event with the key's code is emitted with value 1. When the key is released, an event is emitted with value 0. Some hardware send events when a key is repeated. These events have a value of 2. In general, KEY\_<name> is used for keyboard keys, and BTN\_<name> is used for other types of momentary switch events.

A few EV\_KEY codes have special meanings:

- BTN\_TOOL\_<name>:
  - These codes are used in conjunction with input trackpads, tablets, and touchscreens. These devices may be used with fingers, pens, or other tools. When an event occurs and a tool is used, the corresponding BTN\_TOOL\_<name> code should be set to a value of 1. When the tool is no longer interacting with the input device, the BTN\_TOOL\_<name> code should be reset to 0. All trackpads, tablets, and touchscreens should use at least one BTN\_TOOL\_<name> code when events are generated. Likewise all trackpads, tablets, and touchscreens should export only one BTN\_TOOL\_<name> at a time. To not break existing userspace, it is recommended to not switch tool in one EV\_SYN frame but first emitting the old BTN\_TOOL\_<name> at 0, then emit one SYN\_REPORT and then set the new BTN\_TOOL\_<name> at 1.

- BTN\_TOUCH:

BTN\_TOUCH is used for touch contact. While an input tool is determined to be within meaningful physical contact, the value of this property must be set to 1. Meaningful physical contact may mean any contact, or it may mean contact conditioned by an implementation defined property. For example, a touchpad may set the value to 1 only when the touch pressure rises above a certain value. BTN\_TOUCH may be combined with BTN\_TOOL\_<name> codes. For example, a pen tablet may set BTN\_TOOL\_PEN to 1 and BTN\_TOUCH to 0 while the pen is hovering over but not touching the tablet surface.

Note: For appropriate function of the legacy mousedev emulation driver, BTN\_TOUCH must be the first evdev code emitted in a synchronization frame.

Note: Historically a touch device with BTN\_TOOL\_FINGER and BTN\_TOUCH was interpreted as a touchpad by userspace, while a similar device without BTN\_TOOL\_FINGER was interpreted as a touchscreen. For backwards compatibility with current userspace it is recommended to follow this distinction. In the future, this distinction will be deprecated and the device properties ioctl EVIOCGPROP, defined in linux/input.h, will be used to convey the device type.

- BTN\_TOOL\_FINGER, BTN\_TOOL\_DOUBLETAP, BTN\_TOOL\_TRIPLETAP, BTN\_TOOL\_QUADTAP:
  - These codes denote one, two, three, and four finger interaction on a trackpad or touchscreen. For example, if the user uses two fingers and moves them on the touchpad in an effort to scroll content on screen, BTN\_TOOL\_DOUBLETAP should be set to value 1 for the duration of the motion. Note that all BTN\_TOOL\_<name> codes and the BTN\_TOUCH code are orthogonal in purpose. A trackpad event generated by finger touches should generate events for one code from each group. At most only one of these BTN\_TOOL\_<name> codes should have a value of 1 during any synchronization frame.

Note: Historically some drivers emitted multiple of the finger count codes with a value of 1 in the same synchronization frame. This usage is deprecated.

Note: In multitouch drivers, the input\_mt\_report\_finger\_count() function should be used to emit these codes. Please see multi-touch-protocol.txt for details.

## EV\_REL

EV\_REL events describe relative changes in a property. For example, a mouse may move to the left by a certain number of units, but its absolute position in space is unknown. If the absolute position is known, EV\_ABS codes should be used instead of EV\_REL codes.

A few EV\_REL codes have special meanings:

- REL\_WHEEL, REL\_HWHEEL:
  - These codes are used for vertical and horizontal scroll wheels, respectively. The value is the number of detents moved on the wheel, the physical size of which varies by device. For high-resolution wheels this may be an approximation based on the high-resolution scroll events, see REL\_WHEEL\_HI\_RES. These event codes are legacy codes and REL\_WHEEL\_HI\_RES and REL\_HWHEEL\_HI\_RES should be preferred where available.
- REL\_WHEEL\_HI\_RES, REL\_HWHEEL\_HI\_RES:
  - High-resolution scroll wheel data. The accumulated value 120 represents movement by one detent. For devices that do not provide high-resolution scrolling, the value is always a multiple of 120. For devices with high-resolution scrolling, the value may be a fraction of 120.

If a vertical scroll wheel supports high-resolution scrolling, this code will be emitted in addition to REL\_WHEEL or REL\_HWHEEL. The REL\_WHEEL and REL\_HWHEEL may be an approximation based on the high-resolution scroll events. There is no guarantee that the high-resolution data is a multiple of 120 at the time of an emulated REL\_WHEEL or REL\_HWHEEL event.

## EV\_ABS

EV\_ABS events describe absolute changes in a property. For example, a touchpad may emit coordinates for a touch location.

A few EV\_ABS codes have special meanings:

- ABS\_DISTANCE:
  - Used to describe the distance of a tool from an interaction surface. This event should only be emitted while the tool is hovering, meaning in close proximity of the device and while the value of the BTN\_TOUCH code is 0. If the input device may be used freely in three dimensions, consider ABS\_Z instead.
  - BTN\_TOOL\_<name> should be set to 1 when the tool comes into detectable proximity and set to 0 when the tool leaves detectable proximity. BTN\_TOOL\_<name> signals the type of tool that is currently detected by the hardware and is otherwise independent of ABS\_DISTANCE and/or BTN\_TOUCH.
- ABS\_MT\_<name>:
  - Used to describe multitouch input events. Please see multi-touch-protocol.txt for details.
- ABS\_PRESSURE/ABS\_MT\_PRESSURE:
  - For touch devices, many devices converted contact size into pressure. A finger flattens with pressure, causing a larger contact area and thus pressure and contact size are directly related. This is not the case for other devices, for example digitizers and touchpads with a true pressure sensor ("pressure pads").  
  
A device should set the resolution of the axis to indicate whether the pressure is in measurable units. If the resolution is zero, the pressure data is in arbitrary units. If the resolution is non-zero, the pressure data is in units/gram. For example, a value of 10 with a resolution of 1 represents 10 gram, a value of 10 with a resolution of 1000 represents 10 microgram.

## EV\_SW

EV\_SW events describe stateful binary switches. For example, the SW\_LID code is used to denote when a laptop lid is closed.

Upon binding to a device or resuming from suspend, a driver must report the current switch state. This ensures that the device, kernel, and userspace state is in sync.

Upon resume, if the switch state is the same as before suspend, then the input subsystem will filter out the duplicate switch state reports. The driver does not need to keep the state of the switch at any time.

## EV\_MSC

EV\_MSC events are used for input and output events that do not fall under other categories.

A few EV\_MSC codes have special meaning:

- MSC\_TIMESTAMP:
  - Used to report the number of microseconds since the last reset. This event should be coded as an uint32 value, which is allowed to wrap around with no special consequence. It is assumed that the time difference between two consecutive events is reliable on a reasonable time scale (hours). A reset to zero can happen, in which case the time since the last event is unknown. If the device does not provide this information, the driver must not provide it to user space.

## EV\_LED

EV\_LED events are used for input and output to set and query the state of various LEDs on devices.

## EV\_REP

EV\_REP events are used for specifying autorepeating events.

## EV\_SND

EV\_SND events are used for sending sound commands to simple sound output devices.

## EV\_FF

EV\_FF events are used to initialize a force feedback capable device and to cause such device to feedback.

## EV\_PWR

EV\_PWR events are a special type of event used specifically for power management. Its usage is not well defined. To be addressed later.

## Device properties

Normally, userspace sets up an input device based on the data it emits, i.e., the event types. In the case of two devices emitting the same event types, additional information can be provided in the form of device properties.

## **INPUT\_PROP\_DIRECT + INPUT\_PROP\_POINTER**

The `INPUT_PROP_DIRECT` property indicates that device coordinates should be directly mapped to screen coordinates (not taking into account trivial transformations, such as scaling, flipping and rotating). Non-direct input devices require non-trivial transformation, such as absolute to relative transformation for touchpads. Typical direct input devices: touchscreens, drawing tablets; non-direct devices: touchpads, mice.

The `INPUT_PROP_POINTER` property indicates that the device is not transposed on the screen and thus requires use of an on-screen pointer to trace user's movements. Typical pointer devices: touchpads, tablets, mice; non-pointer device: touchscreen.

If neither `INPUT_PROP_DIRECT` or `INPUT_PROP_POINTER` are set, the property is considered undefined and the device type should be deduced in the traditional way, using emitted event types.

## **INPUT\_PROP\_BUTTONPAD**

For touchpads where the button is placed beneath the surface, such that pressing down on the pad causes a button click, this property should be set. Common in Clickpad notebooks and Macbooks from 2009 and onwards.

Originally, the buttonpad property was coded into the `bcm5974` driver version field under the name `integrated button`. For backwards compatibility, both methods need to be checked in userspace.

## **INPUT\_PROP\_SEMI\_MT**

Some touchpads, most common between 2008 and 2011, can detect the presence of multiple contacts without resolving the individual positions; only the number of contacts and a rectangular shape is known. For such touchpads, the `SEMI_MT` property should be set.

Depending on the device, the rectangle may enclose all touches, like a bounding box, or just some of them, for instance the two most recent touches. The diversity makes the rectangle of limited use, but some gestures can normally be extracted from it.

If `INPUT_PROP_SEMI_MT` is not set, the device is assumed to be a true MT device.

## **INPUT\_PROP\_TOPBUTTONPAD**

Some laptops, most notably the Lenovo 40 series provide a trackstick device but do not have physical buttons associated with the trackstick device. Instead, the top area of the touchpad is marked to show visual/haptic areas for left, middle, right buttons intended to be used with the trackstick.

If `INPUT_PROP_TOPBUTTONPAD` is set, userspace should emulate buttons accordingly. This property does not affect kernel behavior. The kernel does not provide button emulation for such devices but treats them as any other `INPUT_PROP_BUTTONPAD` device.

## **INPUT\_PROP\_ACCELEROMETER**

Directional axes on this device (absolute and/or relative x, y, z) represent accelerometer data. Some devices also report gyroscope data, which devices can report through the rotational axes (absolute and/or relative rx, ry, rz).

All other axes retain their meaning. A device must not mix regular directional axes and accelerometer axes on the same event node.

## **Guidelines**

The guidelines below ensure proper single-touch and multi-finger functionality. For multi-touch functionality, see the `multi-touch-protocol.rst` document for more information.

### **Mice**

`REL_{X,Y}` must be reported when the mouse moves. `BTN_LEFT` must be used to report the primary button press. `BTN_{MIDDLE,RIGHT,4,5,etc.}` should be used to report further buttons of the device. `REL_WHEEL` and `REL_HWHEEL` should be used to report scroll wheel events where available.

### **Touchscreens**

`ABS_{X,Y}` must be reported with the location of the touch. `BTN_TOUCH` must be used to report when a touch is active on the screen. `BTN_{MOUSE,LEFT,MIDDLE,RIGHT}` must not be reported as the result of touch contact. `BTN_TOOL_<name>` events should be reported where possible.

For new hardware, `INPUT_PROP_DIRECT` should be set.

### **Trackpads**

Legacy trackpads that only provide relative position information must report events like mice described above.

Trackpads that provide absolute touch position must report ABS\_{X,Y} for the location of the touch. BTN\_TOUCH should be used to report when a touch is active on the trackpad. Where multi-finger support is available, BTN\_TOOL\_<name> should be used to report the number of touches active on the trackpad.

For new hardware, INPUT\_PROP\_POINTER should be set.

## Tablets

BTN\_TOOL\_<name> events must be reported when a stylus or other tool is active on the tablet. ABS\_{X,Y} must be reported with the location of the tool. BTN\_TOUCH should be used to report when the tool is in contact with the tablet.

BTN\_{STYLUS,STYLUS2} should be used to report buttons on the tool itself. Any button may be used for buttons on the tablet except BTN\_{MOUSE,LEFT}. BTN\_{0,1,2,etc} are good generic codes for unlabeled buttons. Do not use meaningful buttons, like BTN\_FORWARD, unless the button is labeled for that purpose on the device.

For new hardware, both INPUT\_PROP\_DIRECT and INPUT\_PROP\_POINTER should be set.