




To PC

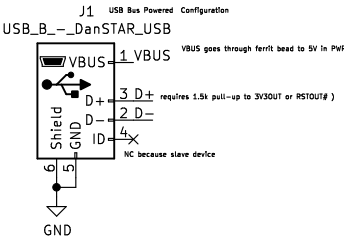


To Target

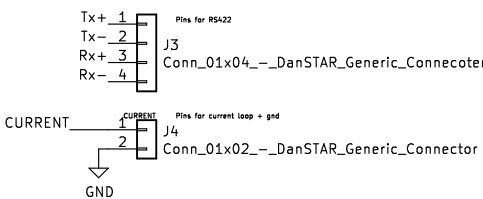


LEDS

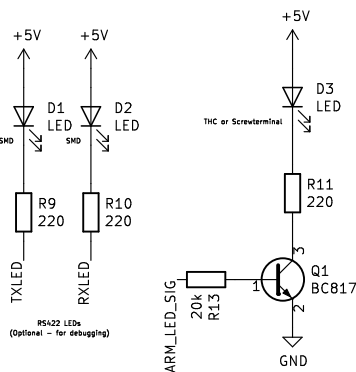


AMPS

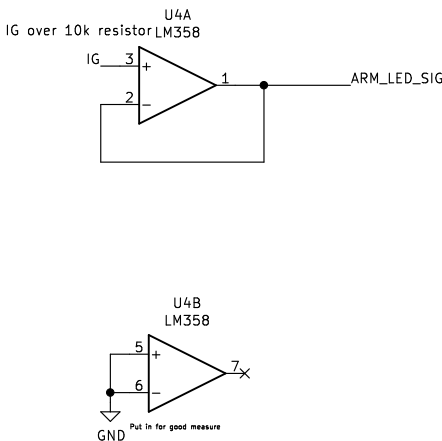


USB-RS422

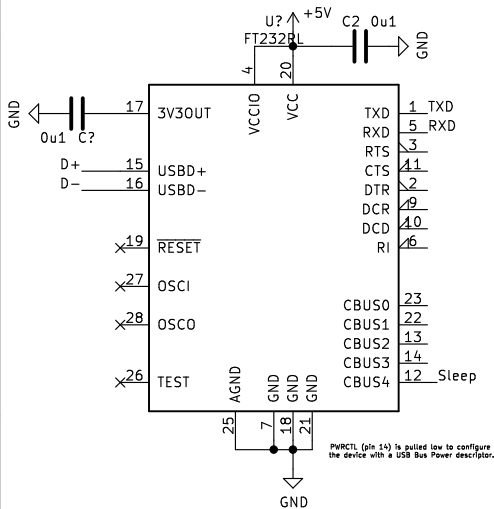


Transceiver

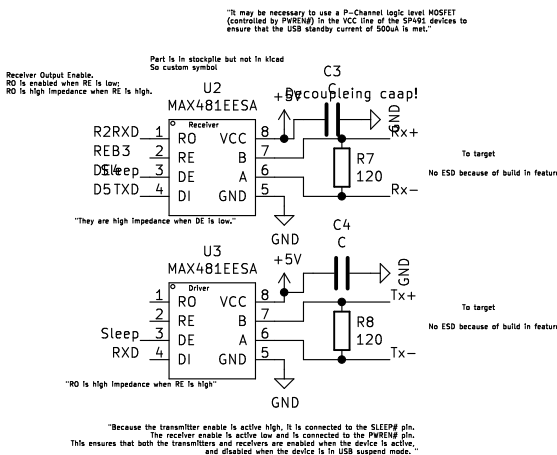


ESD Protection

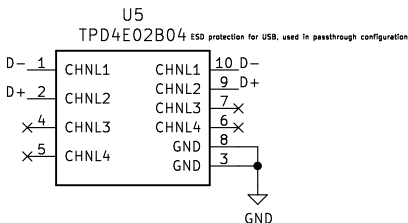


Ignition Key

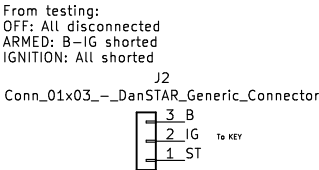

PWR

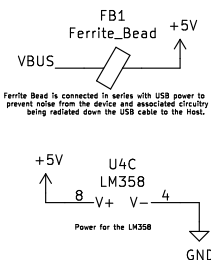

TestPoints

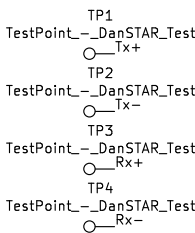

Ignition Wiring

