




Open sdrconsole and click on cluster settings:

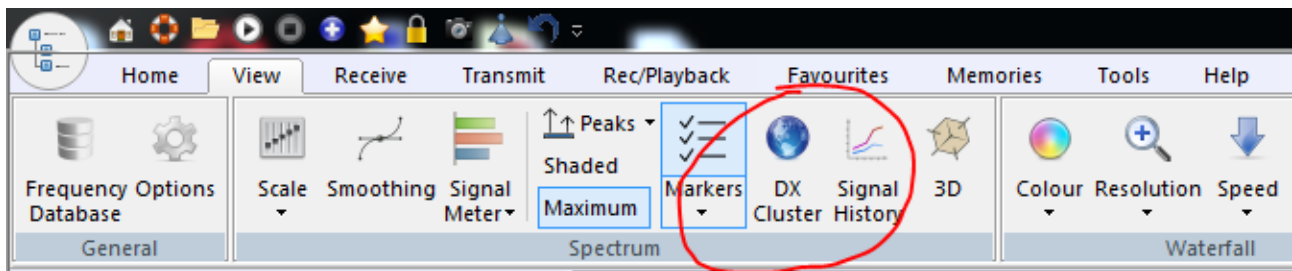

Click on the 3 points here:

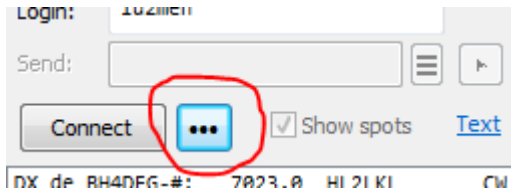


Add server ip address and port on the left, add password as the 1st line on the right

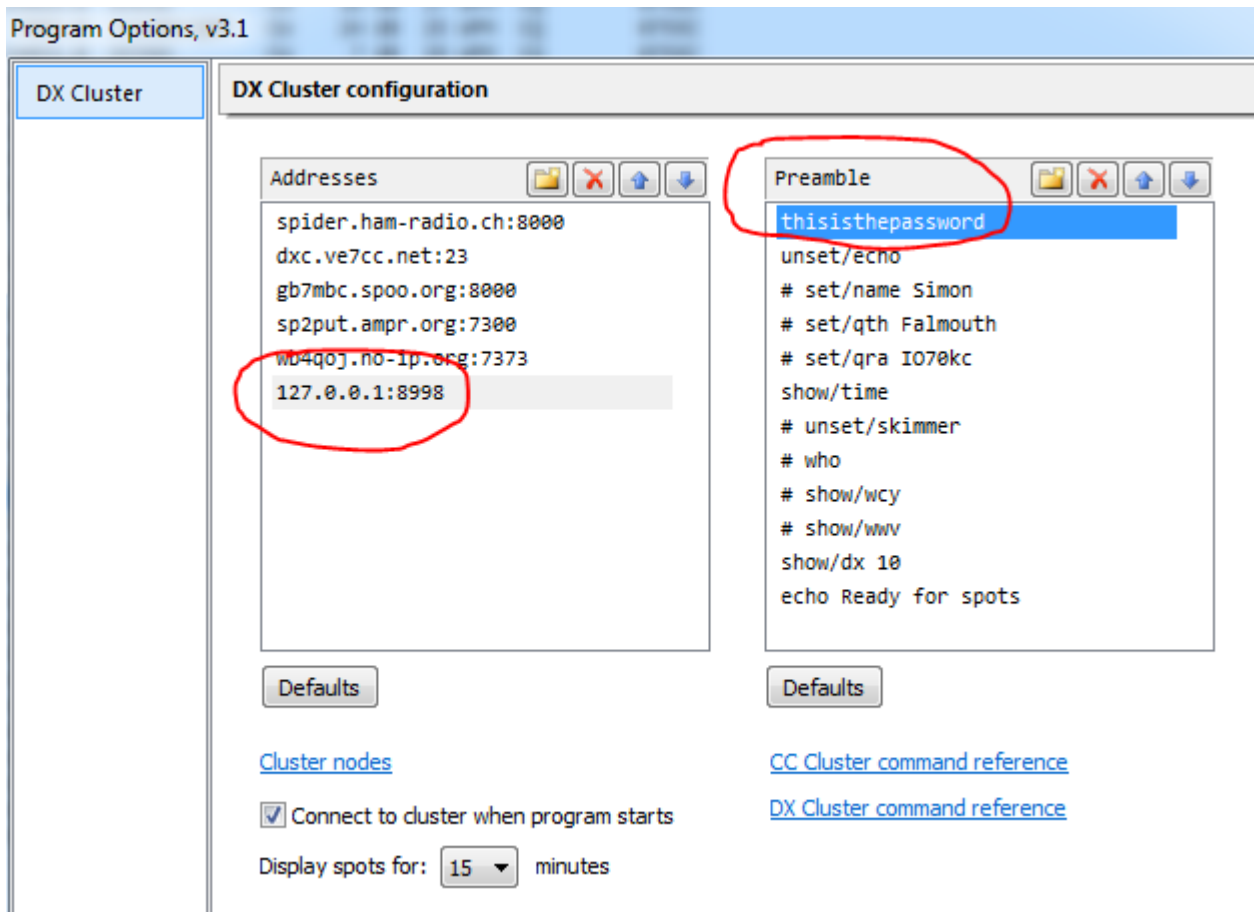

Click ok


In the dropdown menu select the cluster and in login field write your callsign:

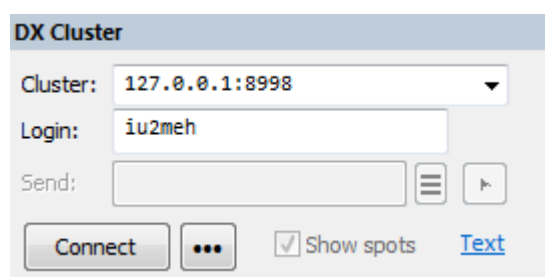

The screenshot shows a window titled "DX Cluster". It contains a "Cluster:" dropdown menu with the value "127.0.0.1:8998" selected. Below it is a "Login:" text field containing the callsign "iu2meh". There is also a "Send:" text field and a button with a right-pointing arrow. At the bottom, there is a "Connect" button, a button with three dots, a checked checkbox labeled "Show spots", and a blue link labeled "Text".

Then click connect.

Make sure that markers are set to visible

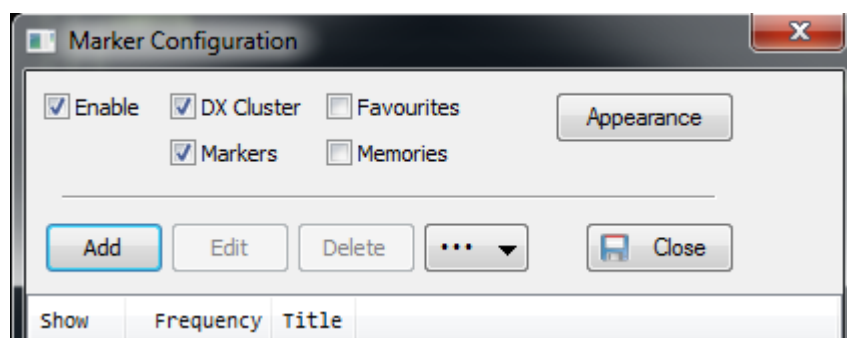

The screenshot shows a dialog box titled "Marker Configuration". It has a close button (X) in the top right corner. Inside, there are four checkboxes: "Enable" (checked), "DX Cluster" (checked), "Favourites" (unchecked), and "Markers" (checked). There are also two unchecked checkboxes: "Memories" and "Appearance" (which is a button). Below these are buttons for "Add", "Edit", "Delete", and a button with three dots and a dropdown arrow. To the right of these is a "Close" button with a floppy disk icon. At the bottom, there is a table with three columns: "Show", "Frequency", and "Title".

Show	Frequency	Title
------	-----------	-------