

UEFI & EDK II TRAINING

EDK II Open Board Platform Design for Intel
Architecture (IA)

tianocore.org

LESSON OBJECTIVE

- ★ Introduce Minimum Platform Architecture (MPA)
- ★ Explain the EDK II Open board platforms infrastructure & focus areas
- ★ Describe Intel® FSP with the EDK II open board platforms

Reference: [Minimum Platform Architecture Specification](#)

DESIRED USE CASES

- Open Source EDK II Platforms

Developers port a board without knowing UEFI

Developers enable functionality incrementally

Developers enable functionality incrementally

Make EDK II easier to use correctly?

INTRODUCING

Minimum Platform Architecture

Minimum Platform Architecture (MPA)

Structured

Enable developers to consistently navigate code, boot flow, and the functional results

Approachable

Enable developers to quickly produce a baseline that is extensible with minimal UEFI or EDK II knowledge

Portable

Minimize coupling between common, silicon, platform, board, and feature packages

Reusable

Enable large granularity binary reuse (FV binaries)

Testable

Enable validating the correctness of a port

Design open source EDK II Intel Architecture firmware

Code Convergence & Consistency



why?

System firmware (BIOS) is the largest payload in the IFWI binary image

Platform implementation is ~2-3 **million** lines+ of “C” code

Technology complexity increasing, strains firmware implementation solutions

Limited firmware engineering resources

Copy + Paste + Modify = Human Errors

Why Move to Open Source?

Goal:


- Enable improvements in quality and security for Intel products
- Enable vertically integrated open solutions

Benefits:

- Allow improved customer engagements
- Builds transparency and trust
- Reduce overhead to transition from internal to external
- Deploy fixes across the ecosystem more rapidly

Easier to access, understand, fix & optimize means
improved product quality

MinPlatform + Intel® Firmware Support Package (Intel® FSP)

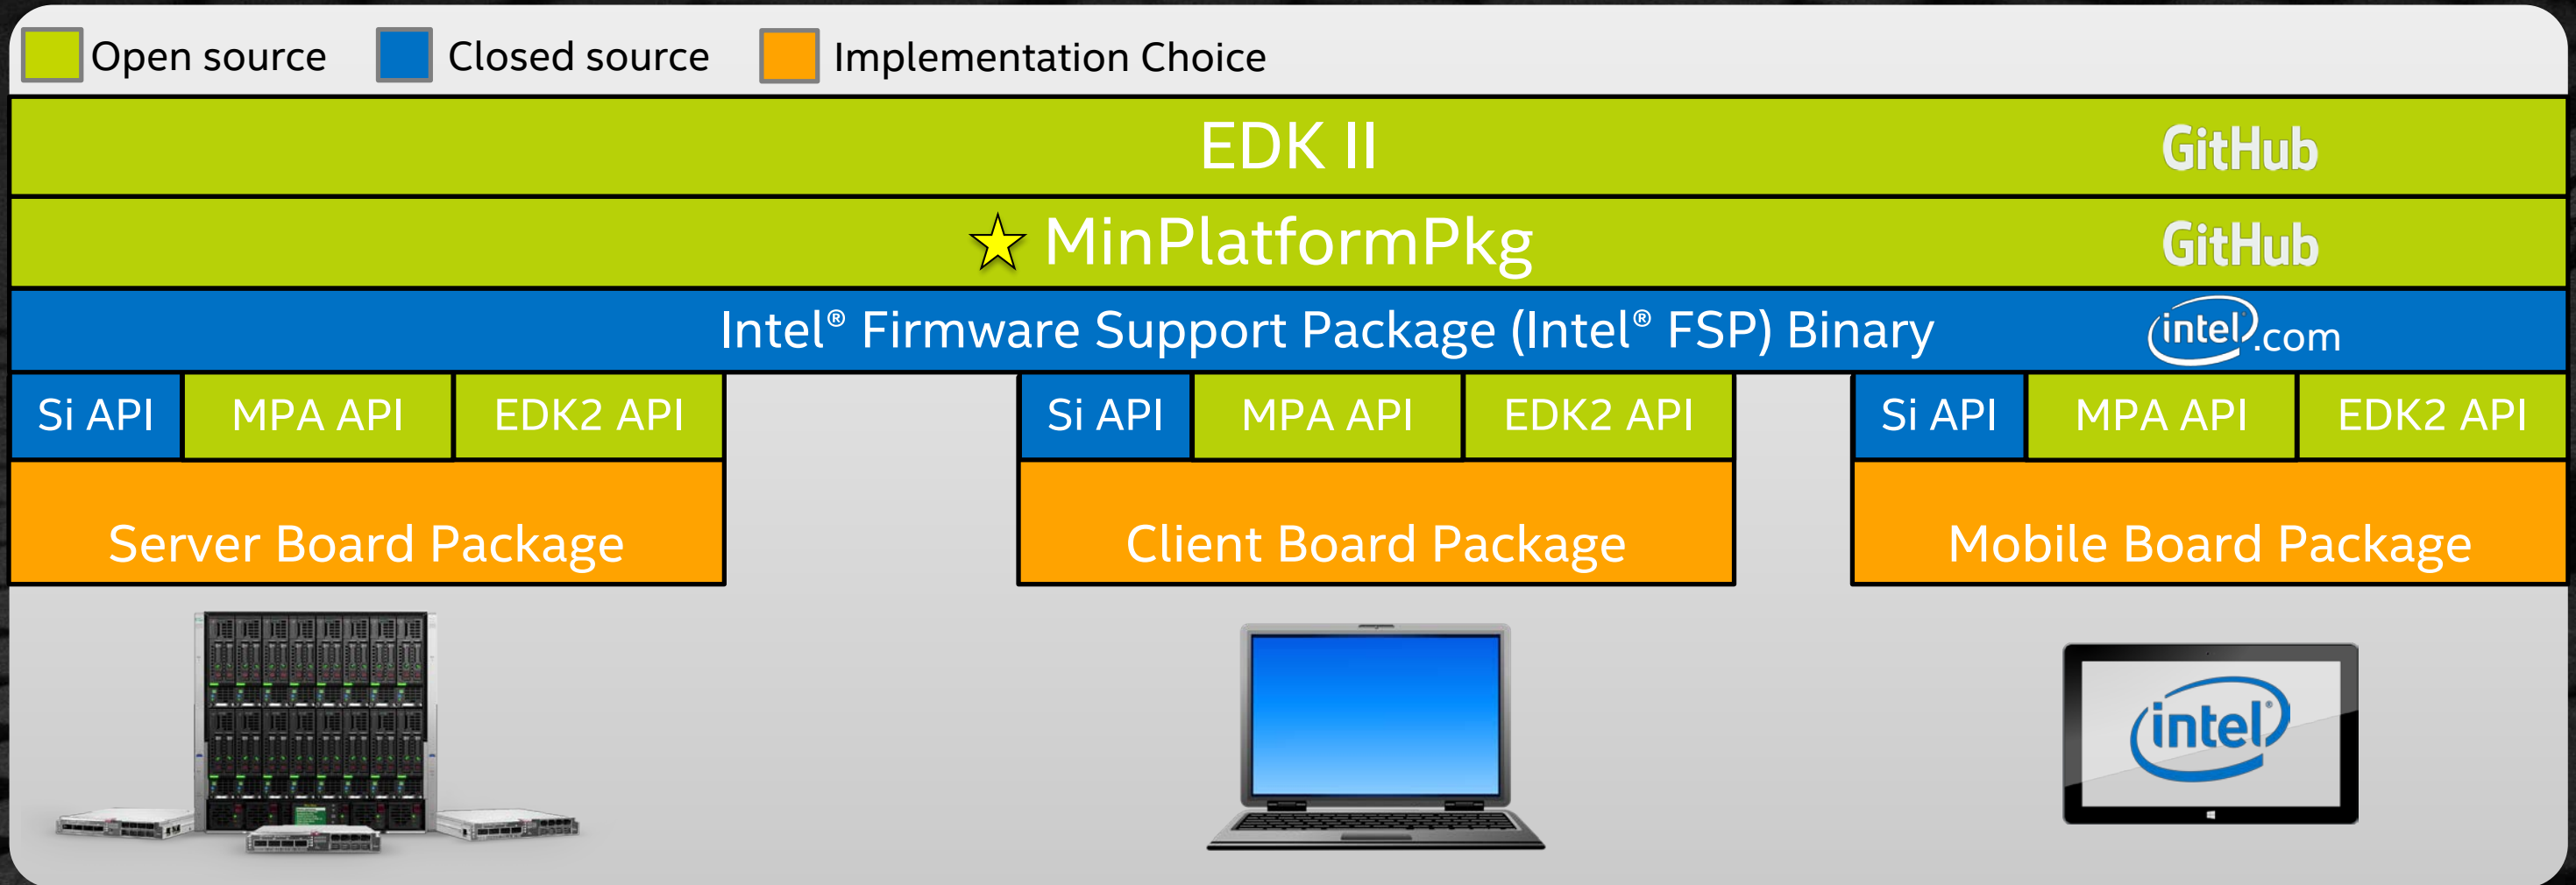

Intel Open Platform Firmware Stack - Minimum Platform


Consistent boot flows and interfaces
Approachable across the ecosystem
Scalable from pre-silicon to derivatives

What are Minimum Platform Stages?




Stages reflect firmware development lifecycle and how a system bootstraps itself

Four Focus Areas

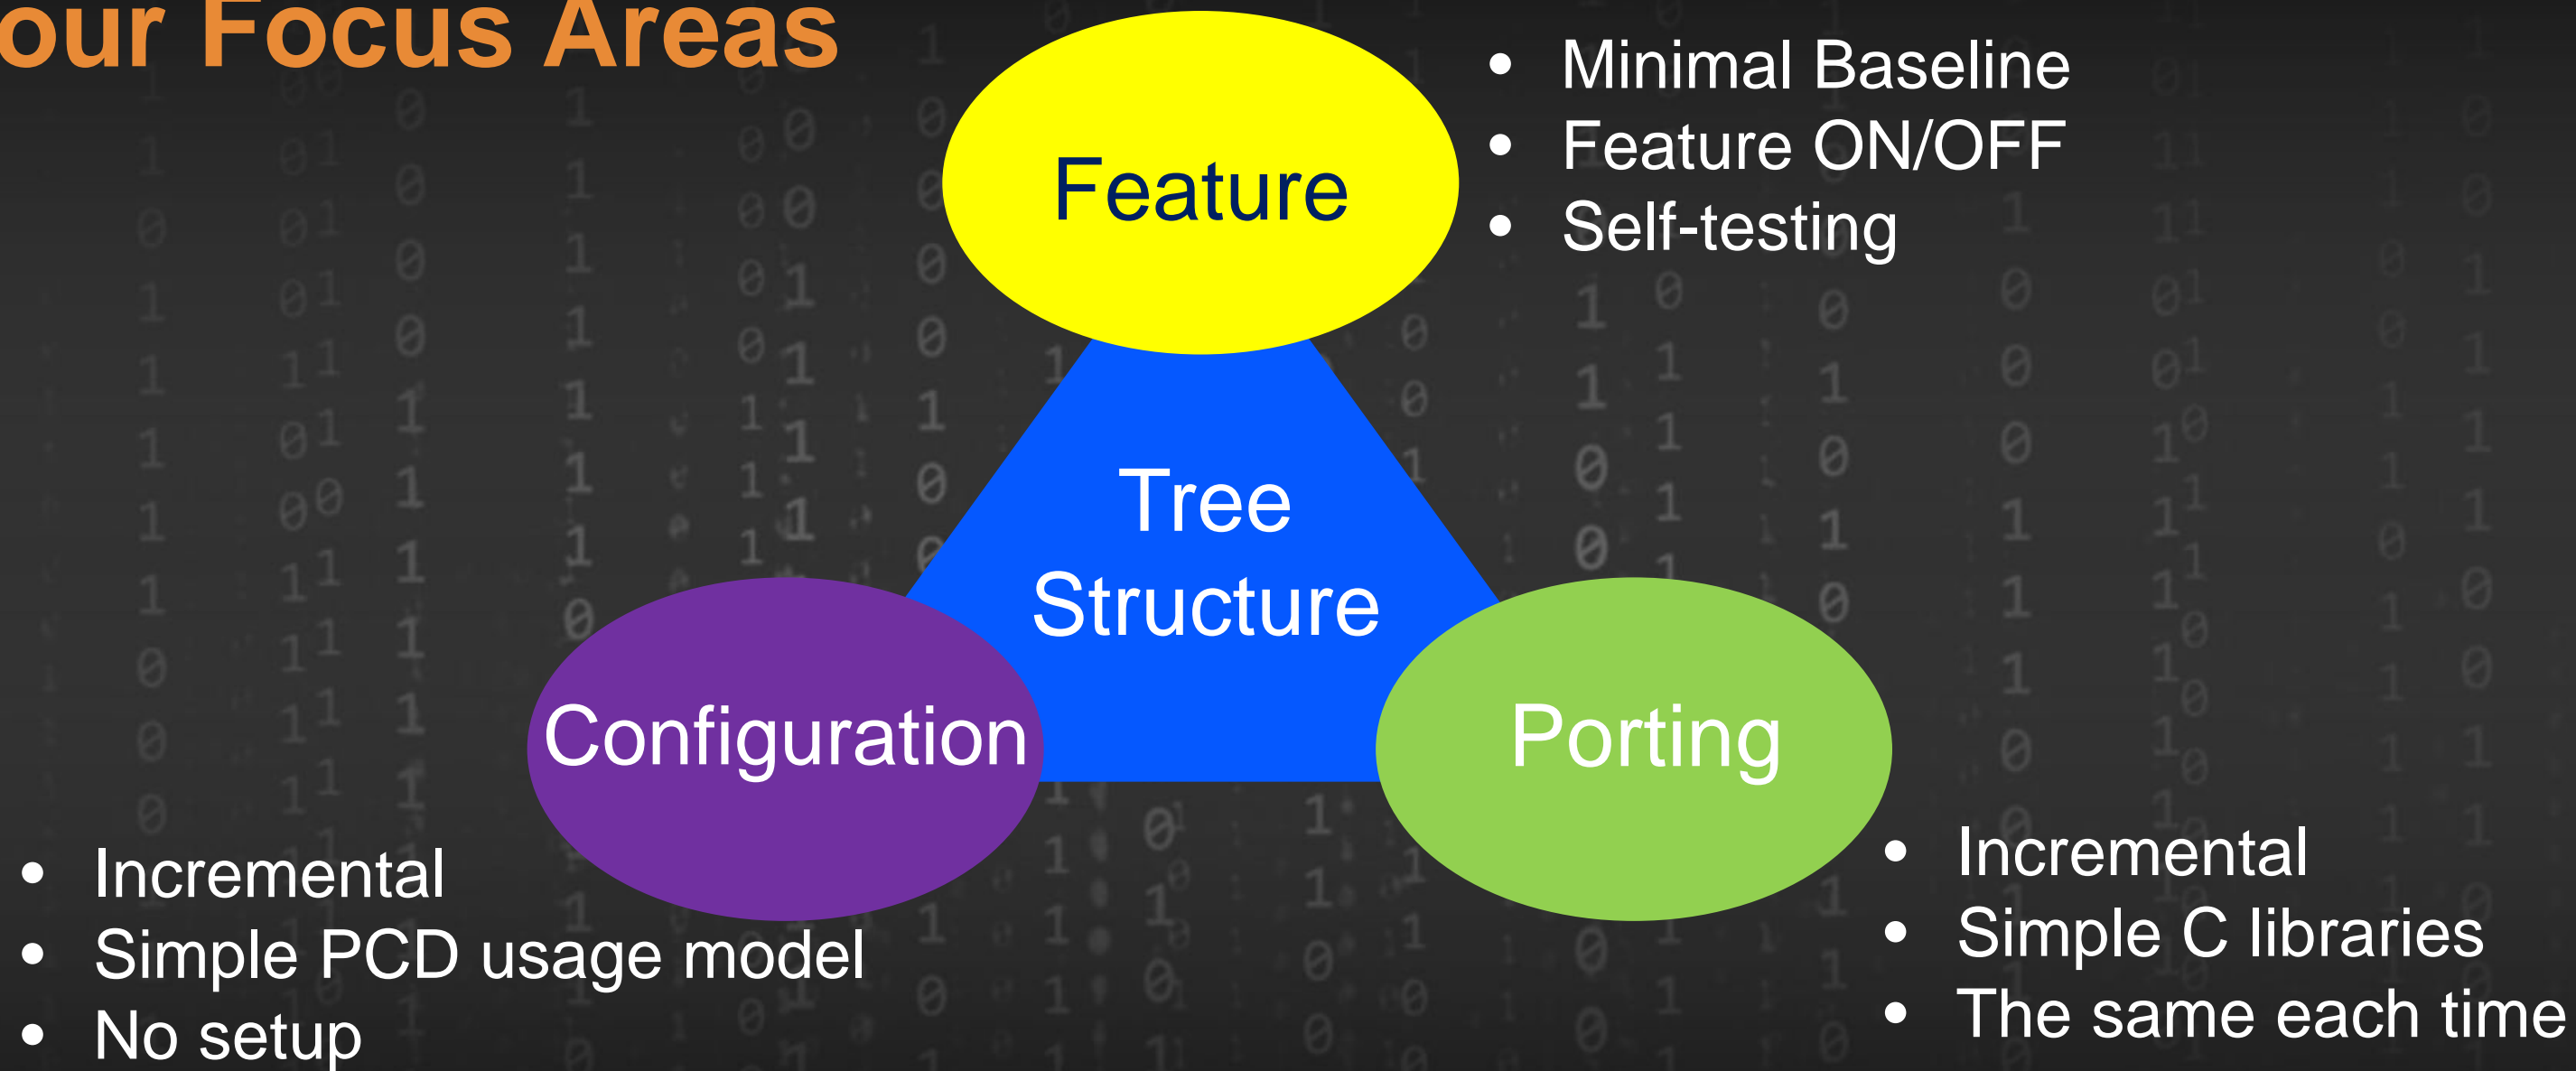

Tree Structure

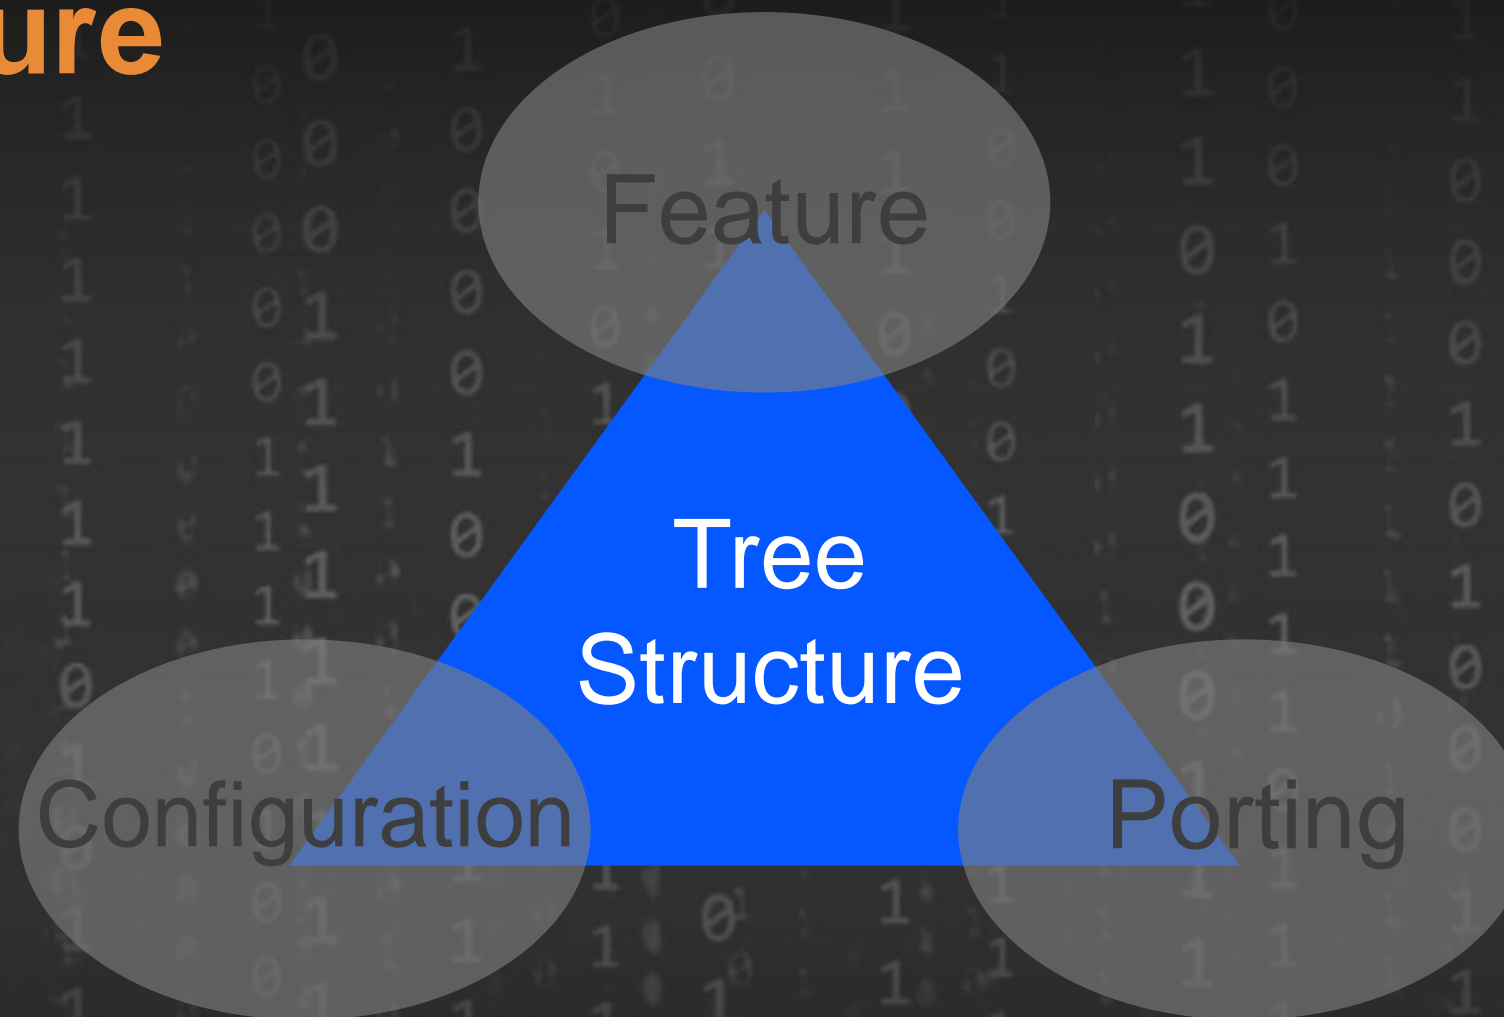

Organization

Common

- No direct HW requirements

Platform


- Enable a specific platform's capabilities.

Board


- Board specific code

Silicon

- Hardware specific code"

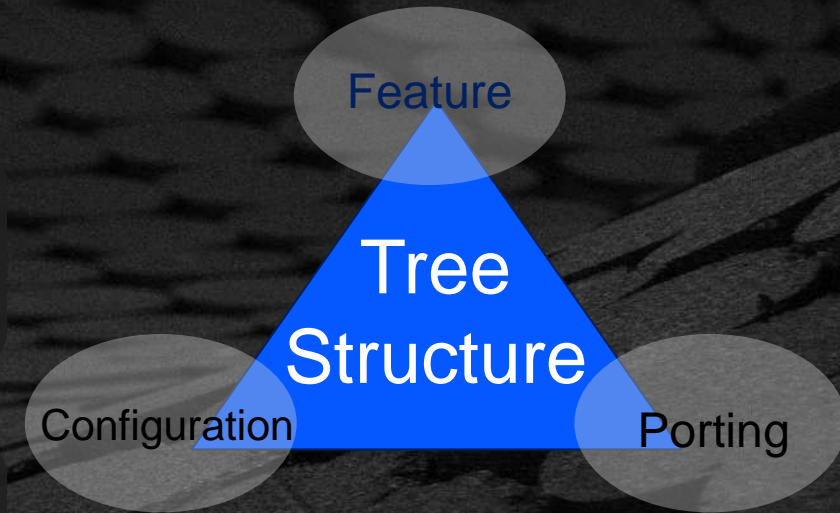

Package Organization Example

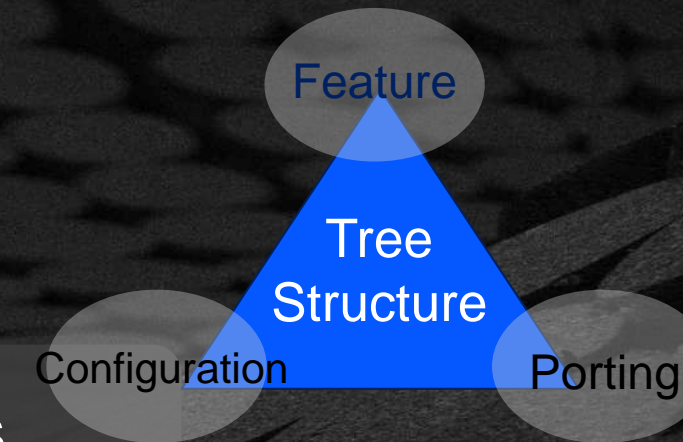

MinPlatformPkg

- Common - Boot flow, well defined interfaces

XxxOpenBoardPkg

- Platform Xxx* - board-specific details: GPIOs, memory config, audio verb tables, etc.

XxxSiliconPkg


- Silicon - Hardware specific code for Xxx

YyyFeaturePkg

- Features – Advanced functional features

*Where Xxx would be an open platform: KabyLakeOpenBoardPkg, WhiskeyLakeOpenBoardPkg, etc.

MPA Dependency Rules

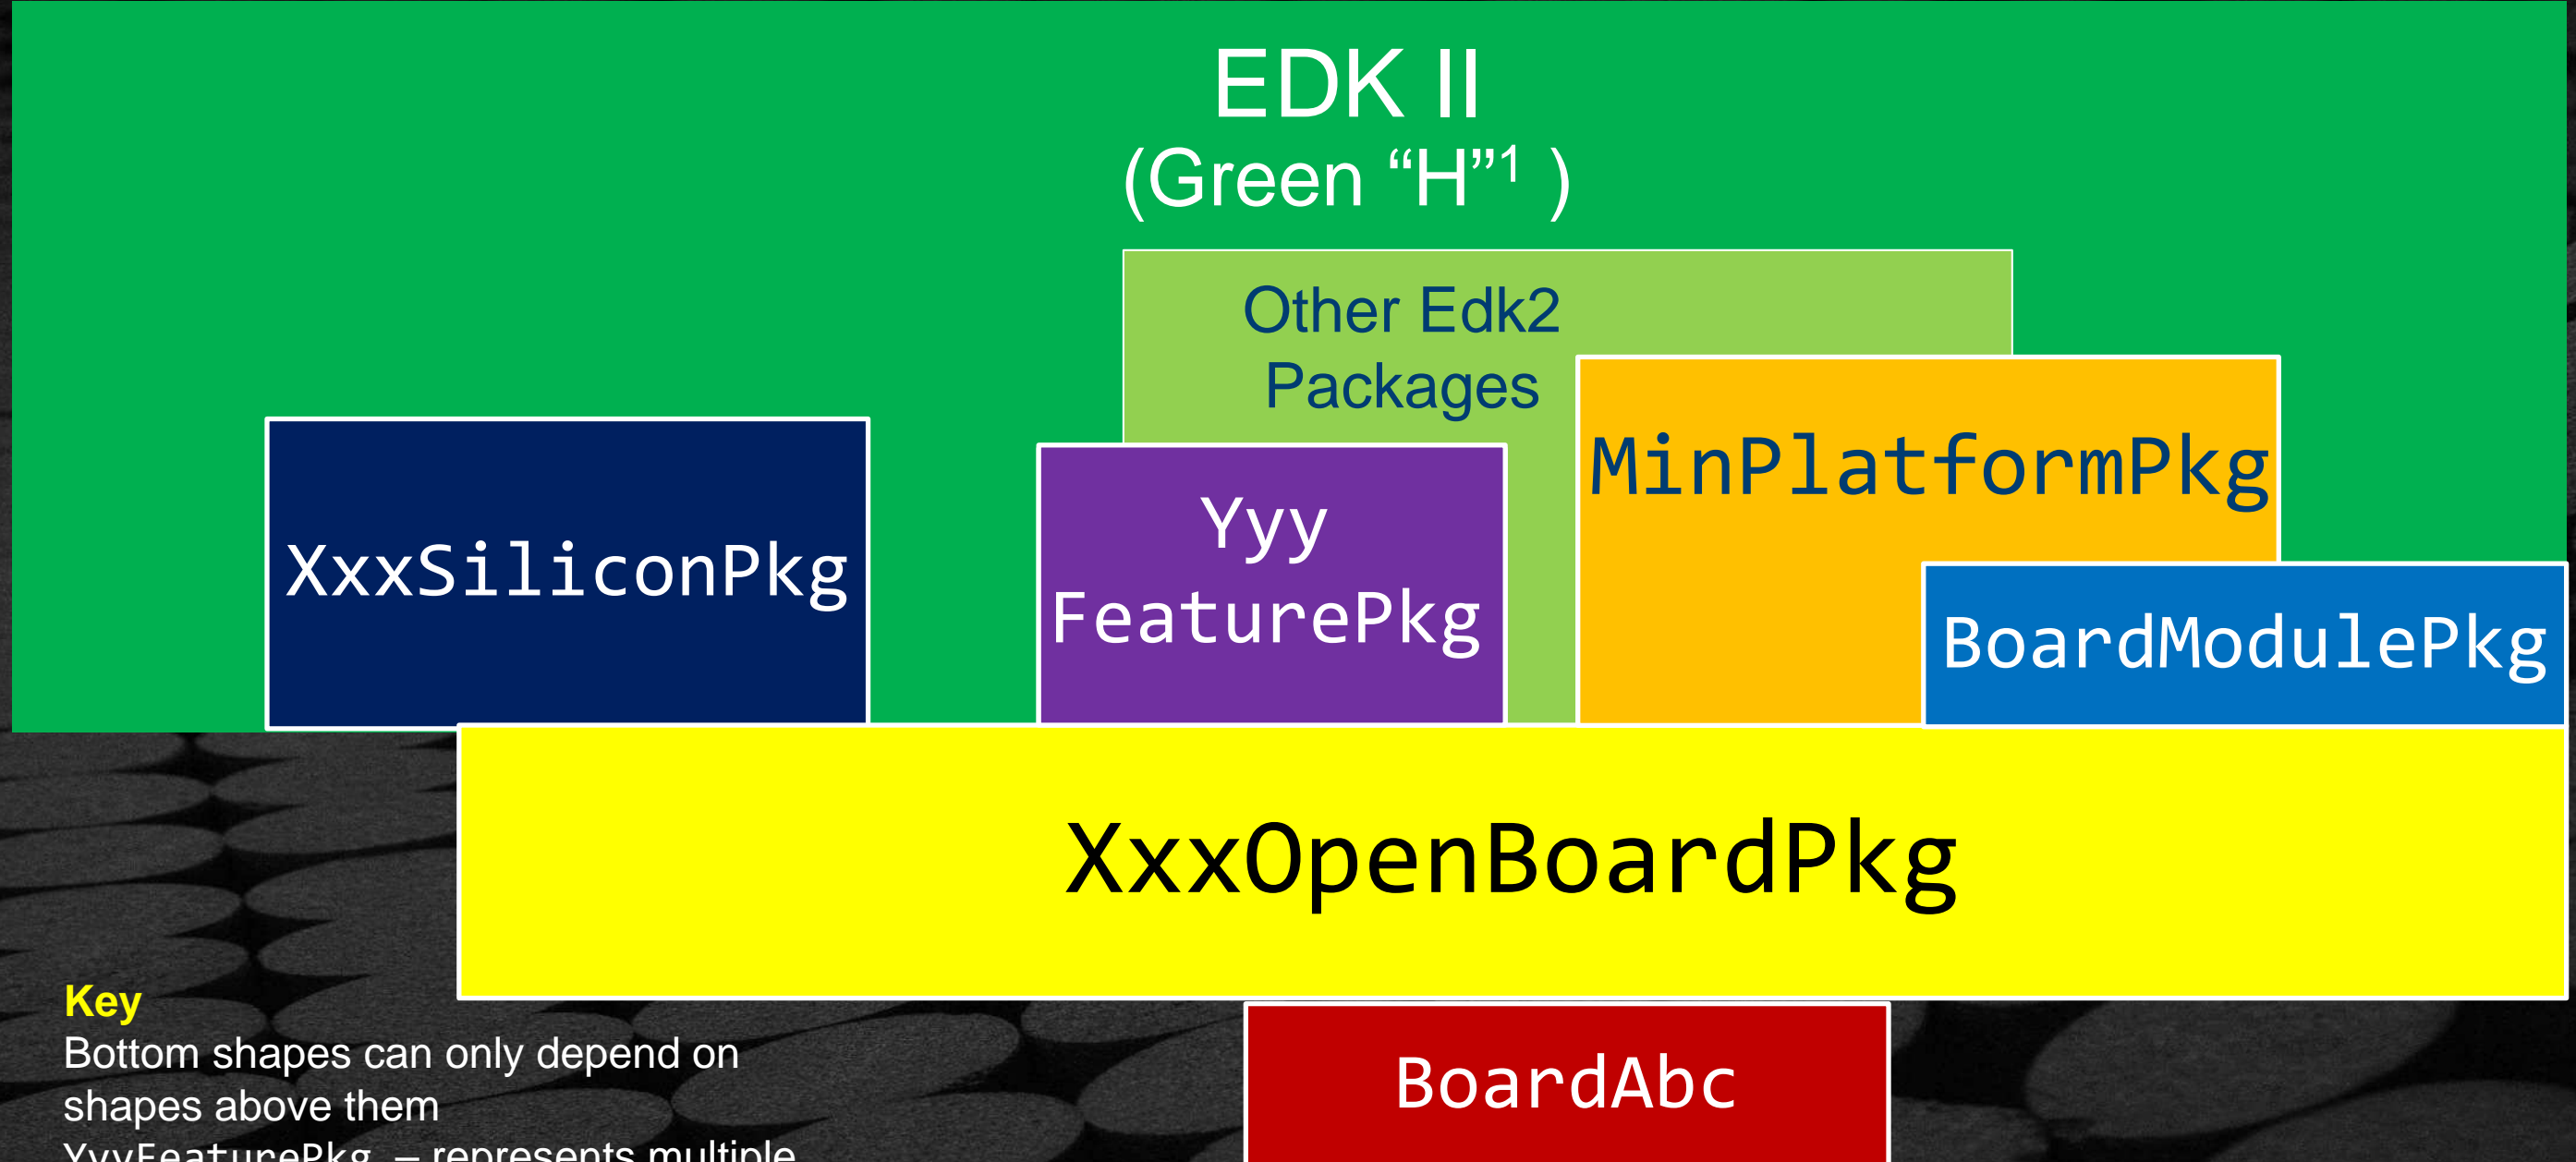

Key

Bottom shapes can only depend on shapes above them

YyyFeaturePkg – represents multiple feature package instances that are mutually exclusive to each other

BoardAbc – directory for **OpenBoardPkg.dsc**

¹GreenH = MdePkg + UefiCpuPkg + IntelSiliconPkg + BaseTools

Open Source EDK II Workspace

```
MyWorkSpace/
  edk2/
    - "edk2 Common"
  edk2-platforms/
    Platform/ "Platform"
      Intel/
        MinPlatformPkg/ "Platform"
        BoardModulePkg/
          XxxOpenBoardPkg/ "Board"
            BoardX/ "Board Instance"
      Silicon/ "Silicon"
        Intel/
          XxxSiliconPkg/
            Features/ "any"
  edk2-non-os/
    Silicon/
      Intel/
        FSP/ "Silicon"
    . . . /
```


Common

Platform

Board

Silicon


Features

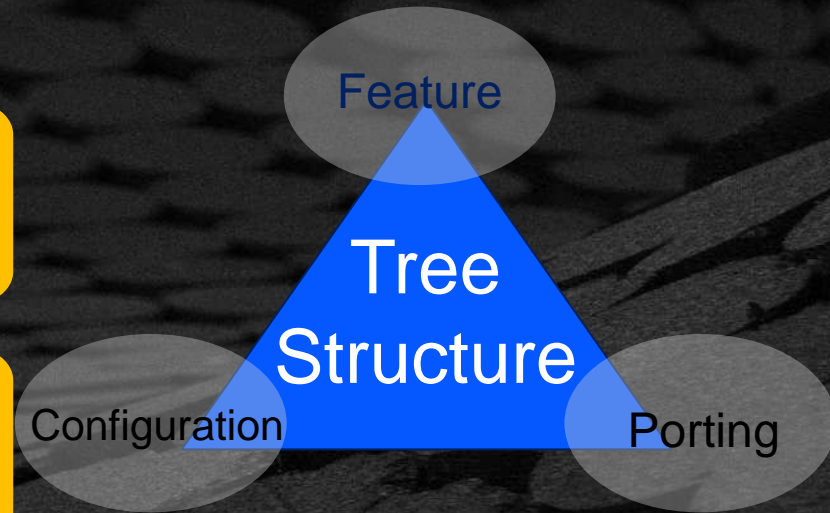

Open Board Tree Structure

```

edk2/ https://github.com/tianocore/edk2 ← Common
. . .
edk2-platforms/ https://github.com/tianocore/edk2-platforms
Platform/
  Intel/
    BoardModulePkg
    KabylakeOpenBoardPkg ← Board (family)
    KabylakeRvp3 ← Board (instance)
    MinPlatformPkg ← Platform (common)
  Silicon/
    Intel/
      KabylakeSiliconPkg ← Silicon
    . . .
  Features/Intel
    AdvancedFeaturePkg ← Features
edk2-non-osi/ https://github.com/tianocore/edk2-non-osi
  Silicon/
    Intel/
      KabylakeSiliconBinPkg ← Silicon
      PurleySiliconBinPkg
FSP/ https://github.com/IntelFsp/FSP ← Silicon
  KabylakeFspBinPkg
  
```

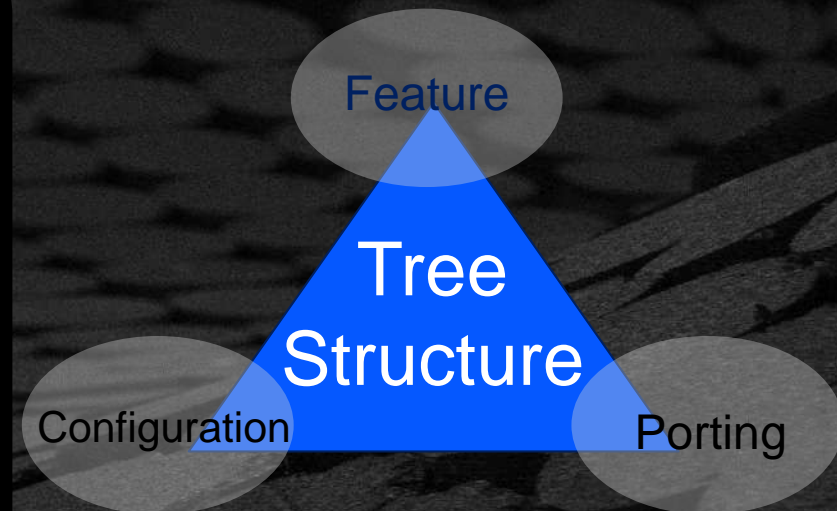

Directory Description

edk2-platforms: EDK II repo includes open source platform code

- Platform folder: contains the platform specific modules by architecture
 - **BoardModulePkg**: generic board functionality (board Lib interfaces)
 - **MinPlatformPkg**: generic platform instance to control the boot flow.
 - **<Generation>OpenBoardPkg**: the silicon generation specific board package. All of the boards based upon this silicon generation can be located here.
- Silicon folder: contains the silicon specific modules.
 - **<Generation>SiliconPkg**: the silicon generation specific silicon package.
- Features/Intel folder: contains Advanced features packages.
 - **<XxxFeature>Pkg**: package and modules for advanced features

edk2-non-osi: EDK II repo for platform modules in binary format (ex: silicon init binaries).

- **<Generation>SiliconBinPkg**: It is the silicon generation specific binary package. For example, CPU Microcode or the silicon binary FVs.

Ideally, Only <Generation>OpenBoardPkg needs updating

FSP Directory Description

FSP: repo for Intel® Firmware Support Package (FSP) binaries

<https://github.com/intel/FSP>

Platform folder Pkg: Each FSP project will be hosted in a separate directory

- ApolloLakeFspBinPkg Intel® Atom™ processor E3900 product family
- ...
- CoffeeLakeFspBinPkg - 8th Generation Intel® Core™ processors and chipsets (formerly Coffee Lake and Whiskey Lake)
- **KabylakeFspBinPkg** 7th Generation Intel® Core™ processors and chipsets
 - Include
 - FSP UPD structure and related definitions used with EDK II build
 - Doc - Integration Guide .PDF documentation
 - **FSP.fd** - Binary to be included with flash device image
 - FSP.bsf - Configuration File with IDE configuration tool <https://github.com/IntelFsp/BCT>

FSP each project based on Intel Architecture

Platform Package Structure

MinPlatformPkg

```
MinPlatformPkg /  
  <Basic Common Driver>/  
  Include /  
  Library /  
  PlatformInit /
```

Platform Common Driver

Where:

- **<Basic Common Driver>**: The basic features to support OS boot, such as ACPI, flash, and FspWrapper. It also includes the basic security features such as Hardware Security Test Interface (HSTI).
- **Include**: The include file as the package interface. All interfaces defined in MinPlatformPkg.dec are put to here.
- **Library**: It only contains feature independent library, such as PeiLib. If a library is related to a feature, this library is put to <Feature>/Library folder, instead of root Library folder.
- **PlatformInit**: The common platform initialization module. There is PreMemPEI, PostMemPEI, DXE and SMM version. These modules control boot flow and provide some hook point to let board code do initialization.

Open Board Package Structure

```
<Generation>OpenBoardPkg /  
  <BasicCommonBoardDrivers>/  
  Include /  
  Library /  
  Features /  
    <AdvancedCommonBoardDrivers> /  
  <BoardX> /  
    Include/  
    Library/  
    <BoardSpecificDriver> /  
    OpenBoardPkg.dsc  
    OpenBoardPkg.fdf
```

<Generation>OpenBoardPkg

Where:

- **<BasicCommonBoardDrivers>** and **<AdvancedCommonBoardDrivers>** designate a board generation specific feature. They need to be updated when we enable a board generation.
- **<Board>** contains all the board specific settings. If we need to port a new board in this generation, copy the <Board> folder and update the copy's settings

One Feature, One directory Guideline


Use a hierarchical layout , KabylakeOpenBoardPkg example

```
KabylakeOpenBoardPkg /  
  Acpi /  
    BoardAcpiDxe /  
  FspWrapper /  
    Library /  
      PeiFspPolicyUpdateLib /  
  Include /  
  KabylakeRvp3 /  
  Library /  
    BaseEcLib /  
    BaseGpioExpanderLib /  
    PeiI2cAccessLib /  
  Policy /
```

```
KabylakeRvp3 / (cont.)  
  Include /  
  Library /  
    OpenBoardPkg.dsc  
    OpenBoardPkg.fdf
```

Only put the basic features into the root directory

Features

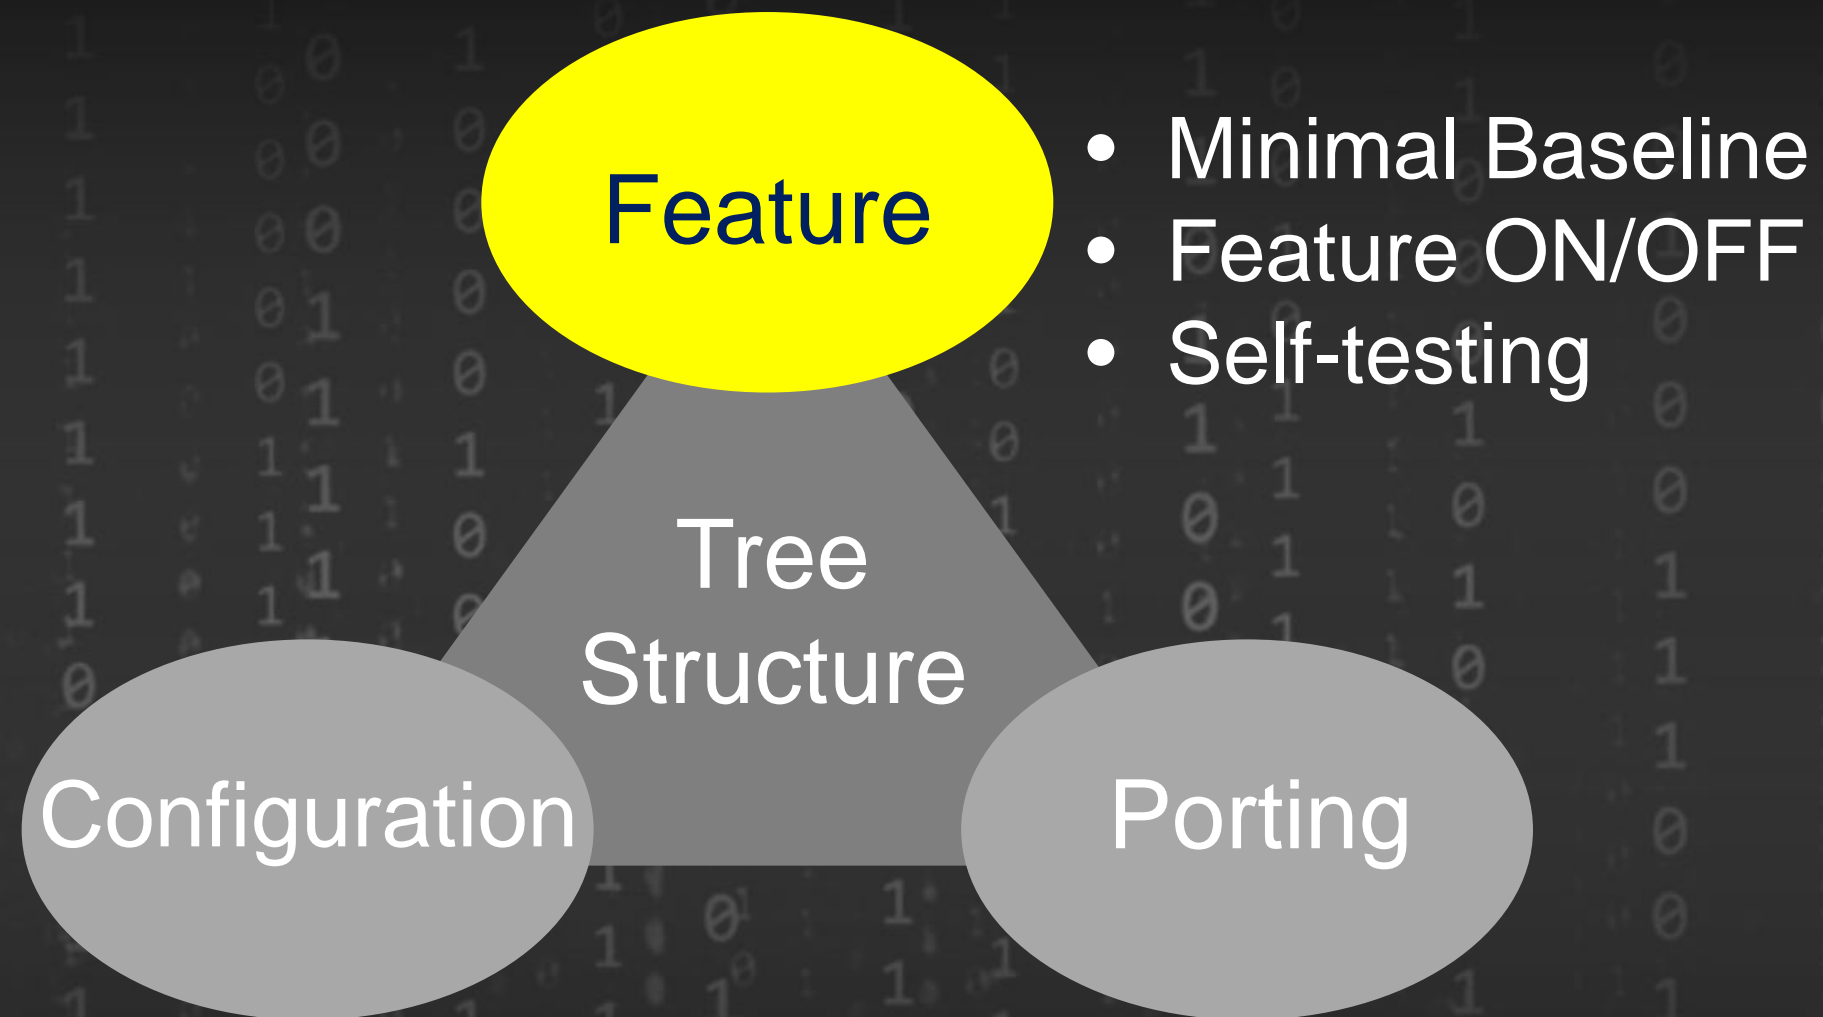

Feature Selection

There are three phases of feature selection

Minimum

Manage Stage I-V options


Advanced Feature Selection

Add rich feature sets (Stage VI)

Optimization

Remove undesired features (Stage VII)

Select features through build, prune in binary

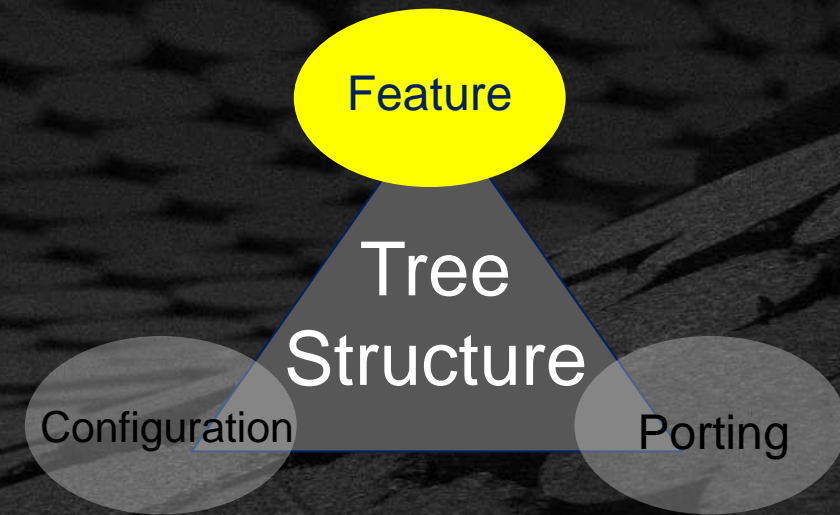


Minimum Platform Feature Selection

Minimum Platform

- Minimum feature selection should be exclusively implemented as Platform Configuration Database (PCD)
- Required PCD are identified in the MPA specification
- PCDs:
 - Declared with defaults in DEC files in different packages
 - Modified in DSC file for the board, if different than the default value

Silicon – FSP Integration from <Generation>FspBinPkg documentation package

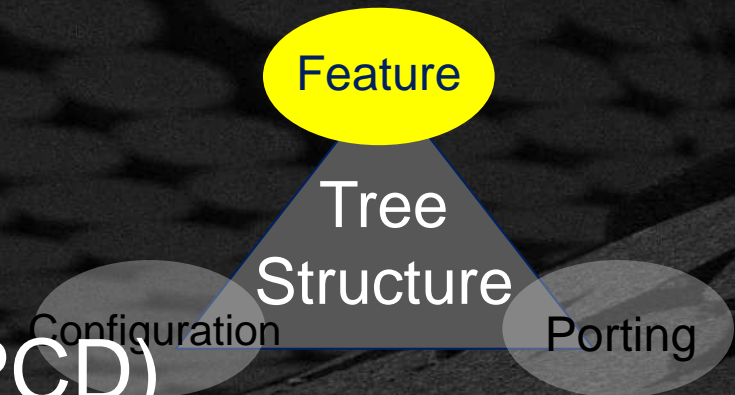

All initial porting features selection should be done this way

Advanced Features- Should be:

Approachable

- Easy to identify, modify, use, and debug

Consistent

- Follow a pattern that reduces arbitrary design differences

Consolidated

- 1:1 mapping between an Intel feature and firmware feature code

Isolated

- No direct coupling between features
- More cohesion within feature code

Self-documenting

- Maintain documentation with the code – easy to find with a shared maintainer.

Self-testing

- Minimize foreseeable errors

Advanced Feature Selection Implementation

AdvancedFeaturePkg/Include has DSC and FDF files to include in your board's DSC and FDF files. The order is important. Each feature has a PcdsFeatureFlag defined to enable the feature. Each feature PCD is OFF by default. Some features have more PCD configuration or library requirements.

OpenBoardPkg.dsc File

...

```
!include *1.../AdvancedFeaturesPcd.dsc
```

```
gAcpiDebugFeaturePkgTokenSpaceGuid.PcdAcpiDebugFeatureEnable|TRUE
```

<End-of-File>

```
!include *1.../AdvancedFeatures.dsc
```

OpenBoardPkg.fdf File

```
[FV.FvAdvancdPreMemory]
```

```
!include *1../PreMem.fdf
```

```
[FV.FvAdvanced]
```

```
!include *1.../PostMem.fdf
```

...

*1../ == "AdvancedFeaturePkg/Include"


Optimization Feature Selection

Minimum Platform takes advantage of UEFI and EDK II features to enable feature selection to be done by post-processing the built binaries

Essentially, after your system is functioning well, you can remove features using the FMMT tool to remove the drivers that are included as you build up the desired functionality

For example, if you need UEFI Shell during power-on, testing, etc. But you don't want it for final product. Minimum Platform architecture makes it easy to locate and remove the shell by post-processing the image


Link for [FMMT Tool](#) in BaseTools directory

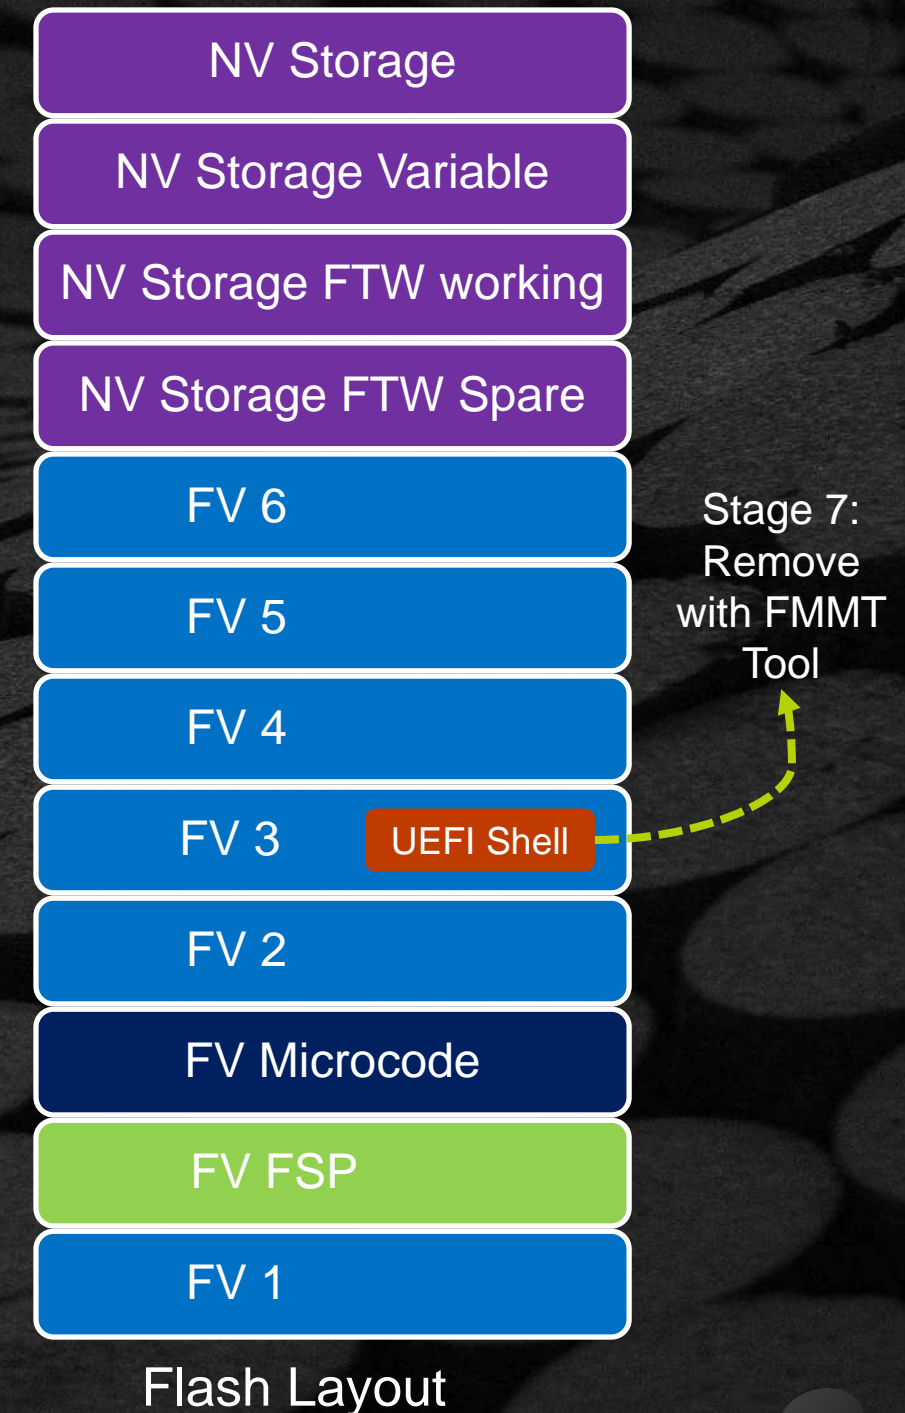

Full Customization Feature Selection

Feature modifications only at the Board / Platform DSC

Preferred modifications at Board (e.g. BoardAbc)

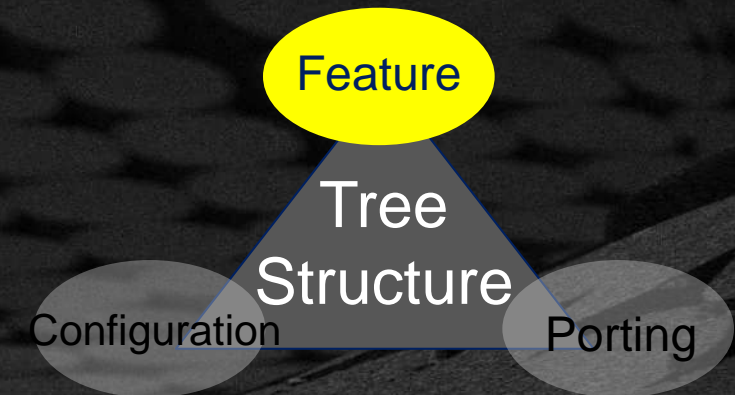


XxxOpenBoardPkg

BoardAbc

BoardAbc – directory for `OpenBoardPkg.dsc`

Platform-Board Build Scripts

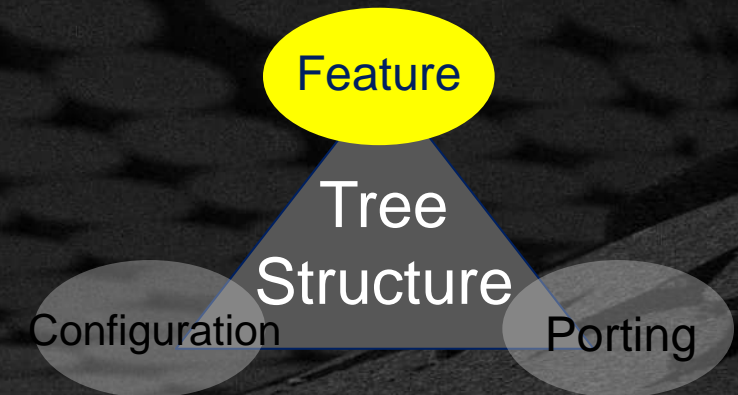

Many platforms have a script (Python or bash) to pre & post process the EDK II build process: [Build Script](#)

Example: Invoked from the `edk2-platforms/Platform/Intel`
`python build_bios.py -p <Board-name>`
uses config file `build.cfg` from the `<Board-name>` directory

Configuration Files:


- `edk2-platforms/Platform/Intel/build.cfg` - default settings
- Default settings are under the `DEFAULT_CONFIG` section
- Override the `edk2-platforms/Platform/Intel/. . ./build.cfg` settings from each board in board specific directory

Example Build Config File

Kabylake example of Board specific settings:

```
<workspace>/edk2-platforms/Platform/Intel/KabylakeOpenBoardPkg/\
KabylakeRvp3/ build_config.cfg
```

```
[CONFIG]
WORKSPACE_PLATFORM_BIN = WORKSPACE_PLATFORM_BIN
EDK_SETUP_OPTION =
openssl_path =
PLATFORM_BOARD_PACKAGE = KabylakeOpenBoardPkg
PROJECT = KabylakeOpenBoardPkg/KabylakeRvp3
BOARD = KabylakeRvp3
FLASH_MAP_FDF = KabylakeOpenBoardPkg/Include/Fdf/FlashMapInclude.fdf
PROJECT_DSC = KabylakeOpenBoardPkg/KabylakeRvp3/OpenBoardPkg.dsc
BOARD_PKG_PCD_DSC =
KabylakeOpenBoardPkg/KabylakeRvp3/OpenBoardPkgPcd.dsc
ADDITIONAL_SCRIPTS =
KabylakeOpenBoardPkg/KabylakeRvp3/build_board.py
PrepRELEASE = DEBUG
SILENT_MODE = FALSE
...
```

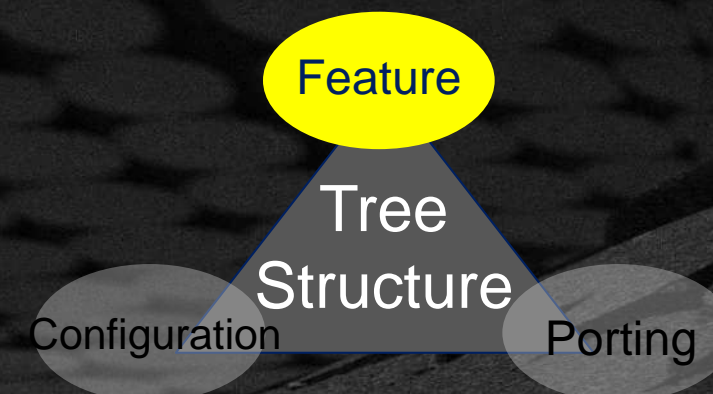

Platform name & path
to build.cfg file
under [PLATFORMS]

Minimum Platform Stage Selection

Platform Firmware Boot Stage PCD :

OpenBoardPkgPcd.dsc

```
[PcdsFixedAtBuild]
```

```
#
```

```
# Please select BootStage here.
```

```
# Stage 1 - enable debug (system deadloop after debug init)
```

```
# Stage 2 - mem init (system deadloop after mem init)
```


```
# Stage 3 - boot to UEFI shell only
```

```
# Stage 4 - boot to OS
```

```
# Stage 5 - boot to OS with security boot enabled
```

```
# Stage 6 - Add Advanced features
```

```
gMinPlatformPkgTokenSpaceGuid.PcdBootStage|4
```

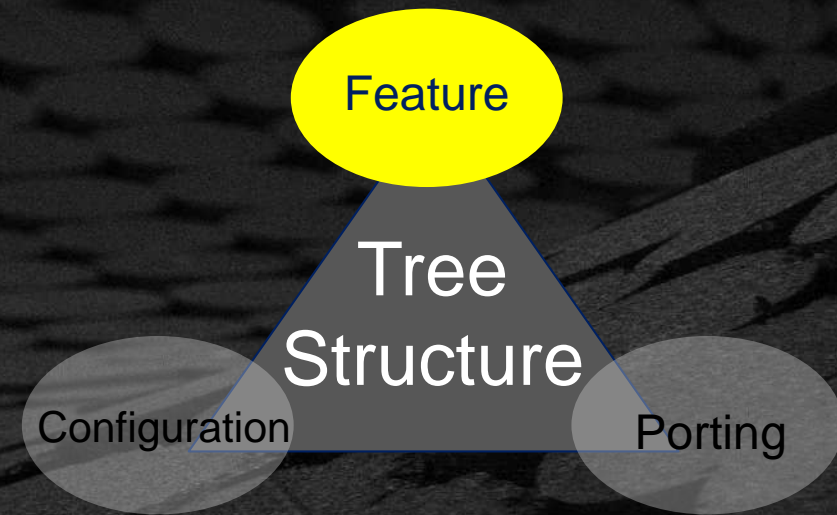

Minimum Platform Stage Selection


Stage selection allows developers to bring up a system in a familiar matter:

- Set to Stage I. Boot, verify serial debug capability, ready for silicon debug
- Set to Stage II. Boot, verify memory and silicon functionality
- Set to Stage III. Boot, verify board porting from shell: devices, GPIO, etc
- Set to Stage IV. Boot, verify ACPI porting, MADT, DSDT methods, etc.

Developers can exercise functionality gradually.

Verification at each stage with built in test points

Required set of PCDs in MPA Spec

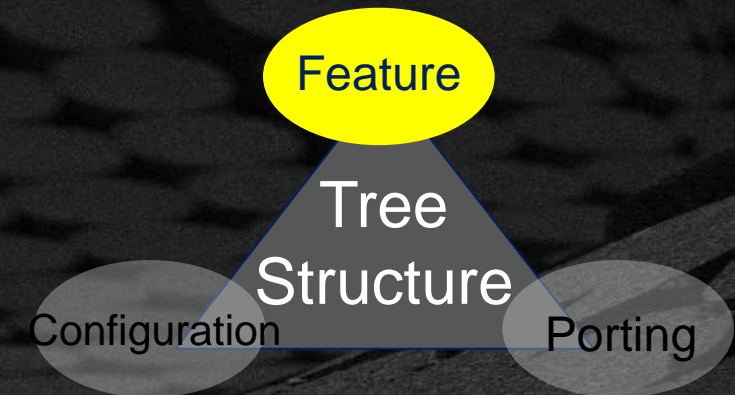

Flash Map Config

Debug Config

Intel® FSP Config

Post Memory FV

UEFI FV

Driver Related

Memory Type Information


OS FV

Security Flash Map

Stage 5 Features

Advanced Feature FV

Build Control Files

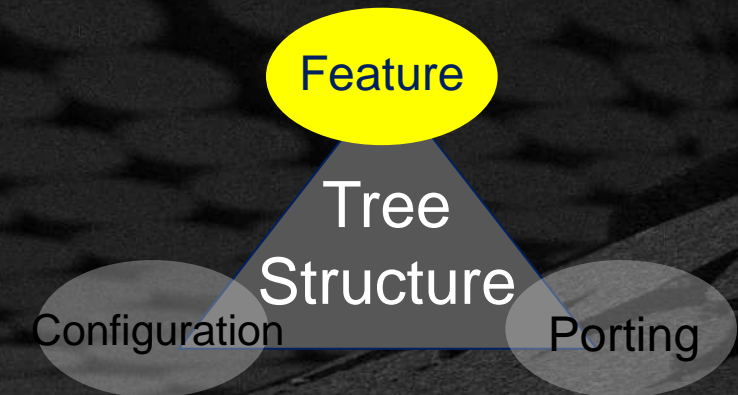

DSC files

control what gets
compiled and linked

FDF files

control what gets
put in the system
FLASH image

Where are the DSC & FDF files?

Kabylake Open Board

Platform/Intel/KabyLakeOpenBoardPkg/
KabyLakeRvp3/

OpenBoardPkgPcd.dsc ← **Modify PCD Here**
OpenBoardPkgBuildOption.dsc
OpenBoardPkg.dsc ← **Add Features Here**

FlashMapInclude.fdf
OpenBoardPkg.fdf ← **Add Features Here**

/edk2-platforms/Platform/
Intel/**MinPlatformPkg**/
Include/
Fdf/
Dsc/

/edk2-platforms/**Features**/
Intel/**YyyAdvancedPkg**/
Include/
Fdf/
Dsc/

OpenBoardPkgPcd.dsc File Controls if feature ON or OFF

Example Kabylake Configuration .DSC file

```
[PcdsFixedAtBuild]
#
# Please select BootStage here.
# Stage 1 - enable debug (system deadlock after debug init)
# Stage 2 - mem init (system deadlock after mem init)
# Stage 3 - boot to shell only
# Stage 4 - boot to OS
# Stage 5 - boot to OS with security boot enabled
#
gMinPlatformPkgTokenSpaceGuid.PcdBootStage|4

[PcdsFeatureFlag]
gMinPlatformPkgTokenSpaceGuid.PcdStopAfterDebugInit|FALSE
gMinPlatformPkgTokenSpaceGuid.PcdStopAfterMemInit|FALSE
gMinPlatformPkgTokenSpaceGuid.PcdBootToShellOnly|FALSE
gMinPlatformPkgTokenSpaceGuid.PcdUefiSecureBootEnable|FALSE
gMinPlatformPkgTokenSpaceGuid.PcdTpm2Enable|FALSE

!if gMinPlatformPkgTokenSpaceGuid.PcdBootStage >= 1
  gMinPlatformPkgTokenSpaceGuid.PcdStopAfterDebugInit|TRUE
!endif
```

Link to
OpenBoardPkgPcd.dsc
[Config .dsc file](#)

[Link to EDK II DSC Spec.](#)

Example Kabylake .FDF file

[FV.FvPreMemory]

```
INF UefiCpuPkg/SecCore/SecCore.inf
INF MdeModulePkg/Core/Pei/PeiMain.inf
!include $(PLATFORM_PACKAGE)/Include/Fdf/CorePreMemoryInclude.fdf
INF $(PLATFORM_PACKAGE)/PlatformInit/PlatformInitPei/PlatformInitPreMem.inf
INF IntelFsp2WrapperPkg/FspmWrapperPeim/FspmWrapperPeim.inf
INF $(PLATFORM_PACKAGE)/PlatformInit/SiliconPolicyPei/SiliconPolicyPeiPreMem.inf
```


[FV.FvPostMemoryUncompact]

```
!include $(PLATFORM_PACKAGE)/Include/Fdf/CorePostMemoryInclude.fdf
# Init Board Config PCD
INF $(PLATFORM_PACKAGE)/PlatformInit/PlatformInitPei/PlatformInitPostMem.inf
INF IntelFsp2WrapperPkg/FspsWrapperPeim/FspsWrapperPeim.inf
INF $(PLATFORM_PACKAGE)/PlatformInit/SiliconPolicyPei/SiliconPolicyPeiPostMem.inf
!if gSiPkgTokenSpaceGuid.PcdPeiDisplayEnable == TRUE
FILE FREEFORM = 4ad46122-ffeb-4a52-bfb0-518cfca02db0 {
SECTION RAW = $(PLATFORM_FSP_BIN_PACKAGE)/SampleCode/Vbt/Vbt.bin
SECTION UI = "Vbt"
}
FILE FREEFORM = 7BB28B99-61BB-11D5-9A5D-0090273FC14D {
SECTION RAW = MdeModulePkg/Logo/Logo.bmp
}
```

Link to [Kabylake .FDF](#)

[Link to EDK II FDF Spec](#)

Configuration

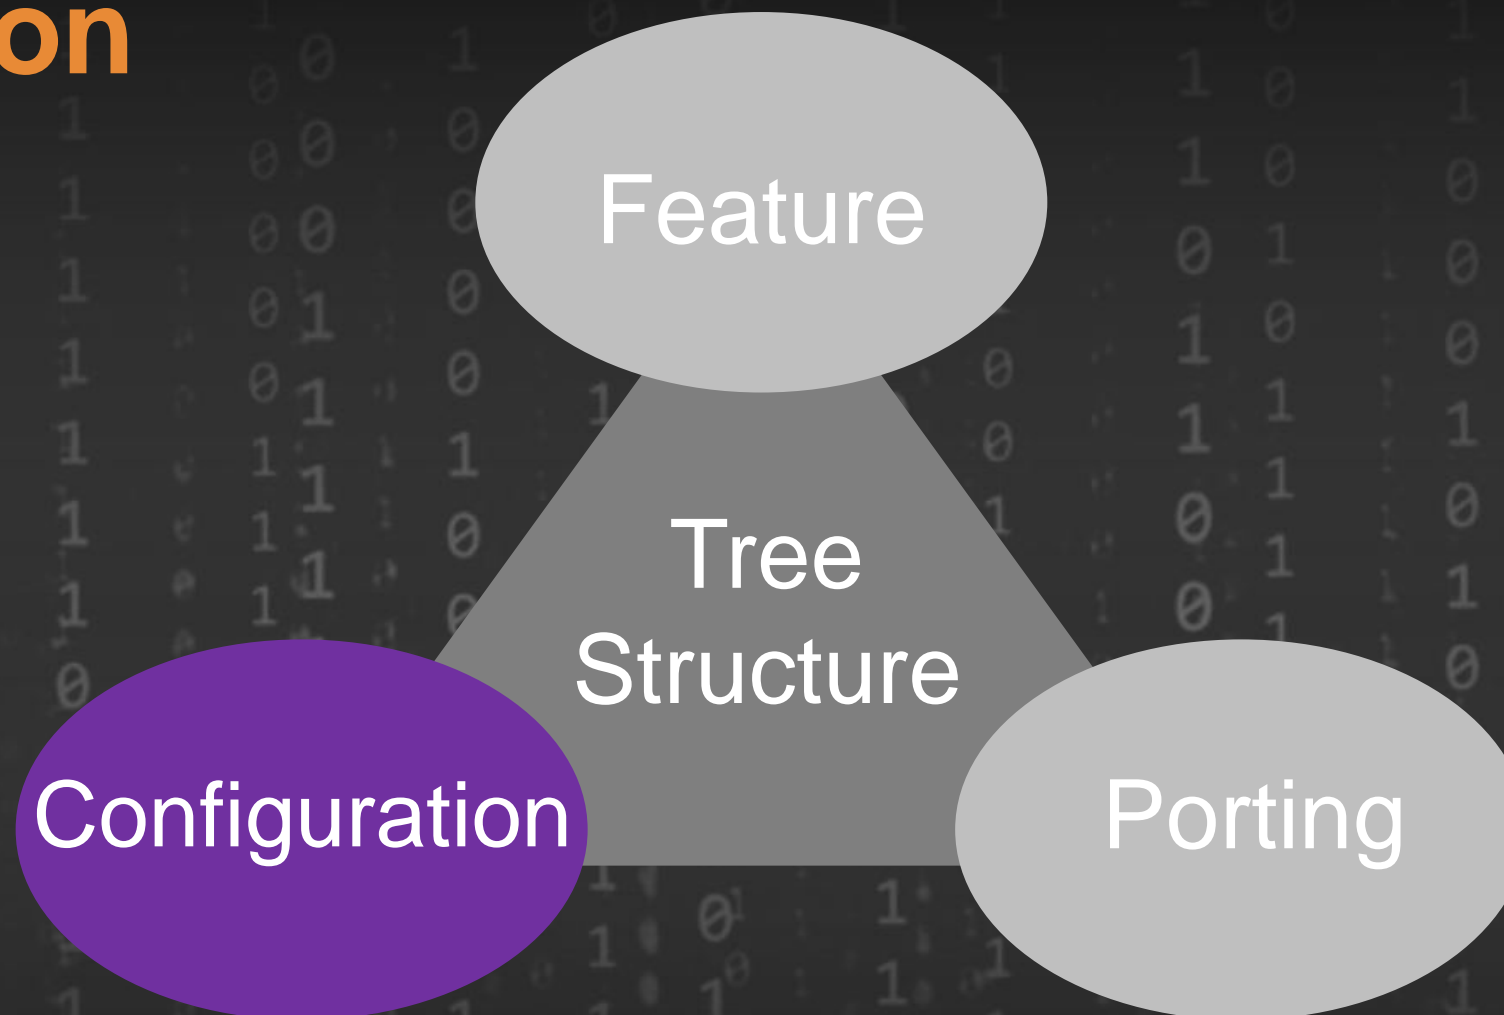

- Incremental
- Simple PCD usage model
- No setup

Configuration Options

There might be many sources of platform configuration data.

PI PCD

Configuration
Block

CMOS

UEFI Variable

Global NVS

MACRO

FSP UPD-
Silicon Policy
Hob/PPI/ Protocol

Platform signed
data blob

MPA Configuration Options

Platform configuration data for Minimum Platform

PI PCD

- The PI PCD could be static data fixed at build time or dynamic data updatable at runtime.

FSP UPD- Silicon Policy Hob/PPI/ Protocol

- FSP UPD can be static default configuration, or a dynamic updatable UPD. It is policy data constructed at runtime or it can be a hook for silicon code

Global NVS

- ACPI region, passes configuration from C code to ASL code.

TIP: Use PCD Instead of UEFI Variable

UEFI Variable

```
//  
// Get config from setup variable  
//  
VarDataSize = sizeof (SETUP_DATA);  
Status = GetVariable (  
    L"Setup",  
    &gSetupVariableGuid,  
    NULL,  
    &VarDataSize,  
    &mSystemConfiguration  
);
```

PCD

```
//  
// Get setup configuration from PCD  
//  
CopyMem (  
    &mSystemConfiguration,  
    PcdGetPtr (PcdSetupConfiguration),  
    sizeof(mSystemConfiguration)  
);
```


DEC

PCD defined in the DEC file from any package

```
[Guids.common]
PcdTokenSpaceGuidName={0x914AEBE7, 0x4635, 0x459b, { 0xAA, . . .}}

. . .
[Pcds...]
PcdTokenSpaceGuidName.PcdTokenName|Value[|DatumType[|MaxSize]]|Token
```

INF

PCD usage listed in INF file for module

```
[...Pcd...]
PcdTokenSpaceGuidName.PcdTokenName|[Value]
```

DSC


Value of PCD set in **OpenBoardPkg...dsc**

```
[Pcds...]
PcdTokenSpaceGuidName.PcdTokenName|Value[|DatumType[|MaximumDatumSize]]
```


How to Map PCD to Configuration Data

Using “**Callback**” mechanism to convert PCD to Configuration data

Platform driver should use PcdGet() to retrieve policy data, and PcdSet() to update policy data.

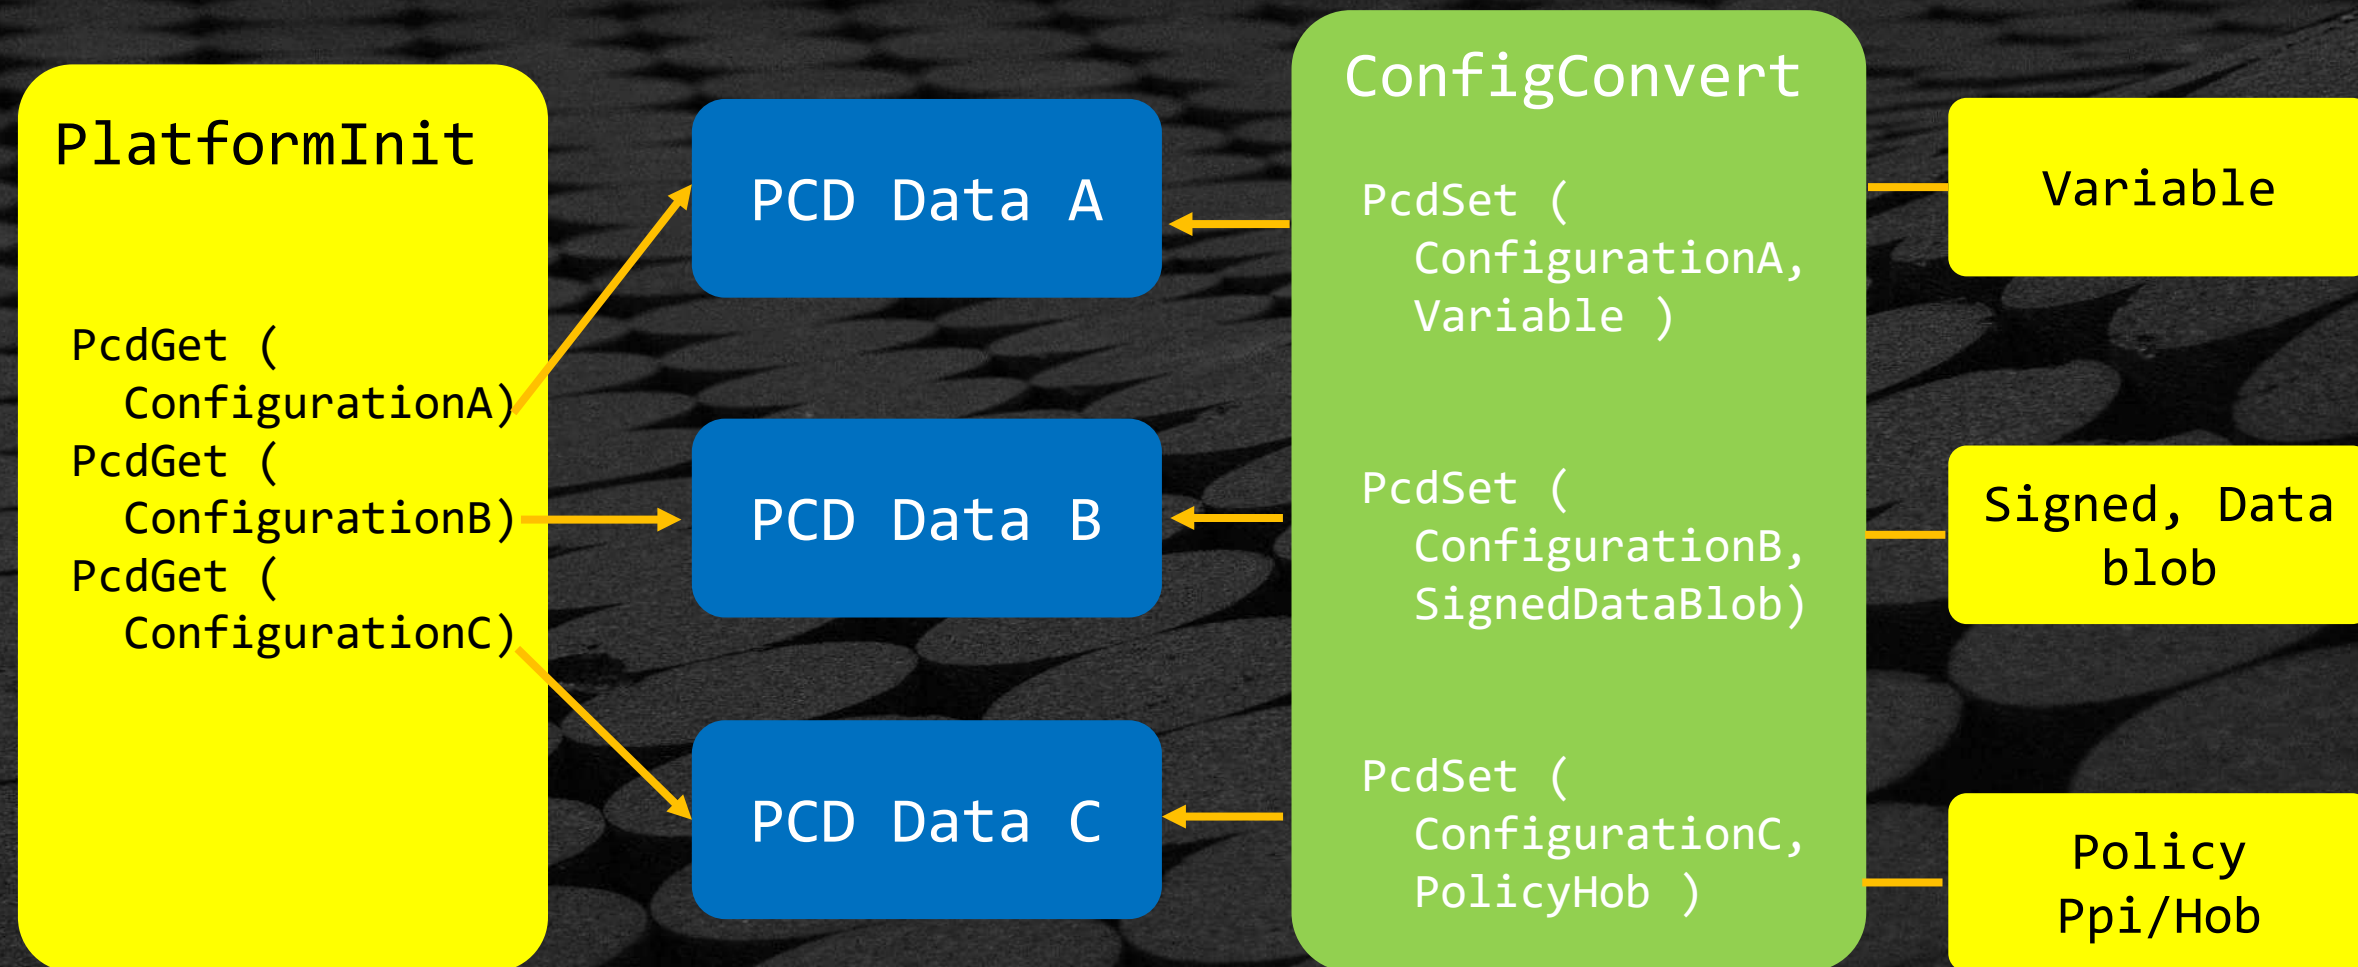

“C” Data Structure as PCDs

Example: AdvancedFeaturePkg.dec for SMBIOS type 0 data structure

```
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation| \  
    {0x0}|SMBIOS_TABLE_TYPE0|0x80010000 {  
    <HeaderFiles>  
        IndustryStandard/SmBios.h  
    <Packages>  
        MdePkg/MdePkg.dec  
        AdvancedFeaturePkg/AdvancedFeaturePkg.dec  
}  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.Vendor|0x1  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.BiosVersion|0x2  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.BiosSegment|0xF000  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.BiosReleaseDate|0x3  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.BiosSize|0xFF  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.BiosCharacteristics.\  
    PciIsSupported|1  
gAdvancedFeaturePkgTokenSpaceGuid.PcdSmbiosType0BiosInformation.BiosCharacteristics.\  
    PlugAndPlayIsSupported|1
```


Example of DSC xRef (.DEC & .h)

Purley Pkg DEC File

```
## gEfiSetupVariableGuid
OemSkuTokenSpaceGuid.PcdSetupData|{0x0}| \
SYSTEM_CONFIGURATION|0x000F0001 {
<HeaderFiles>
    Guid/SetupVariable.h
<Packages>
    MdePkg/MdePkg.dec
    PurleyRcPkg/RcPkg.dec
    PurleySktPkg/SocketPkg.dec
    LewisburgPkg/PchRcPkg.dec
    PurleyOpenBoardPkg/PlatPkg.dec
}
```

“C” SetupVariable.h File

```
. . .
UINT8    FanPwmOffset;
UINT8    WakeOnLanSupport;
UINT8    Use1GPageTable;
UINT8    CloudProfile;
} SYSTEM_CONFIGURATION;
```

StructureConfig.DSC File

```
gOemSkuTokenSpaceGuid.PcdSetupData.\
CloudProfile|0x0

gOemSkuTokenSpaceGuid.PcdSetupData.\
Use1GPageTable|0x1

gOemSkuTokenSpaceGuid.PcdSetupData.\
FanPwmOffset|0x0

gOemSkuTokenSpaceGuid.PcdSetupData.\
WakeOnLanSupport|0x0

. . .
```


Configuration Multi-SKU PCD – Board ID

DSC File – SKU Set at BUILD time

```
• • •
SKUID_IDENTIFIER = ?

[SkuIds]
0|DEFAULT
4|BoardX
0x42|BoardY

[PcdsDynamicDefault.common.BoardX]
gBoardModuleTokenSpaceGuid.PcdGpioPin|0x8
gBoardModuleTokenSpaceGuid.PcdGpioInitValue|\
    {0x00, 0x04, 0x02, 0x04, ...}

[PcdsDynamicDefault.common.BoardY]
gBoardModuleTokenSpaceGuid.PcdGpioPin|0x4
gBoardModuleTokenSpaceGuid.PcdGpioInitValue|\
    {0x00, 0x02, 0x01, 0x02, ...}
```

SKU PCD Set Dynamically

```
BoardXBoardDetect( VOID)
{
    • • •
    if (LibPcdGetSku () != 0) {
        return EFI_SUCCESS;
    }
    if (IsBoardX ()) {
        LibPcdSetSku (BoardIdIsBoardX);
        ASSERT (LibPcdGetSku() ==
                BoardIdIsBoardX);
    }
    return EFI_SUCCESS;
}
```


Default Stores PCD – for Configuration

DSC File –

• • •
VPD_TOOL_GUID = 8C3D856A-9 ...

```
[DefaultStores]
0|STANDARD
1|MANUFACTURING
2|SAFE
```

```
[PcdsDynamicExVpd.common.DEFAULT]
  gEfiMdeModulePkgTokenSpaceGuid.PcdNvStoreDefaultValueBuffer|*
[PcdsDynamicEx.common.DEFAULT.STANDARD]
  gOemSkuTokenSpaceGuid.PcdSetupData.CloudProfile|0x0
  gOemSkuTokenSpaceGuid.PcdSetupData.Use1GPageTable|0x1
[PcdsDynamicEx.common.DEFAULT.MANUFACTURING]
  gOemSkuTokenSpaceGuid.PcdSetupData.CloudProfile|0x1
  gOemSkuTokenSpaceGuid.PcdSetupData.Use1GPageTable|0x0
```

- Special PCD to support the default stores concept in UEFI specification
- Can be Dynamically set

Silicon Policy Data Flow Guidelines


Silicon Module Provides
Default Silicon Policy Data

- Typedef data structure

Board Module Updates the
Silicon Policy Data

- PCD database, Setup Variable, Binary Blob, etc.

Example: FSP policy in MinPlatformPkg

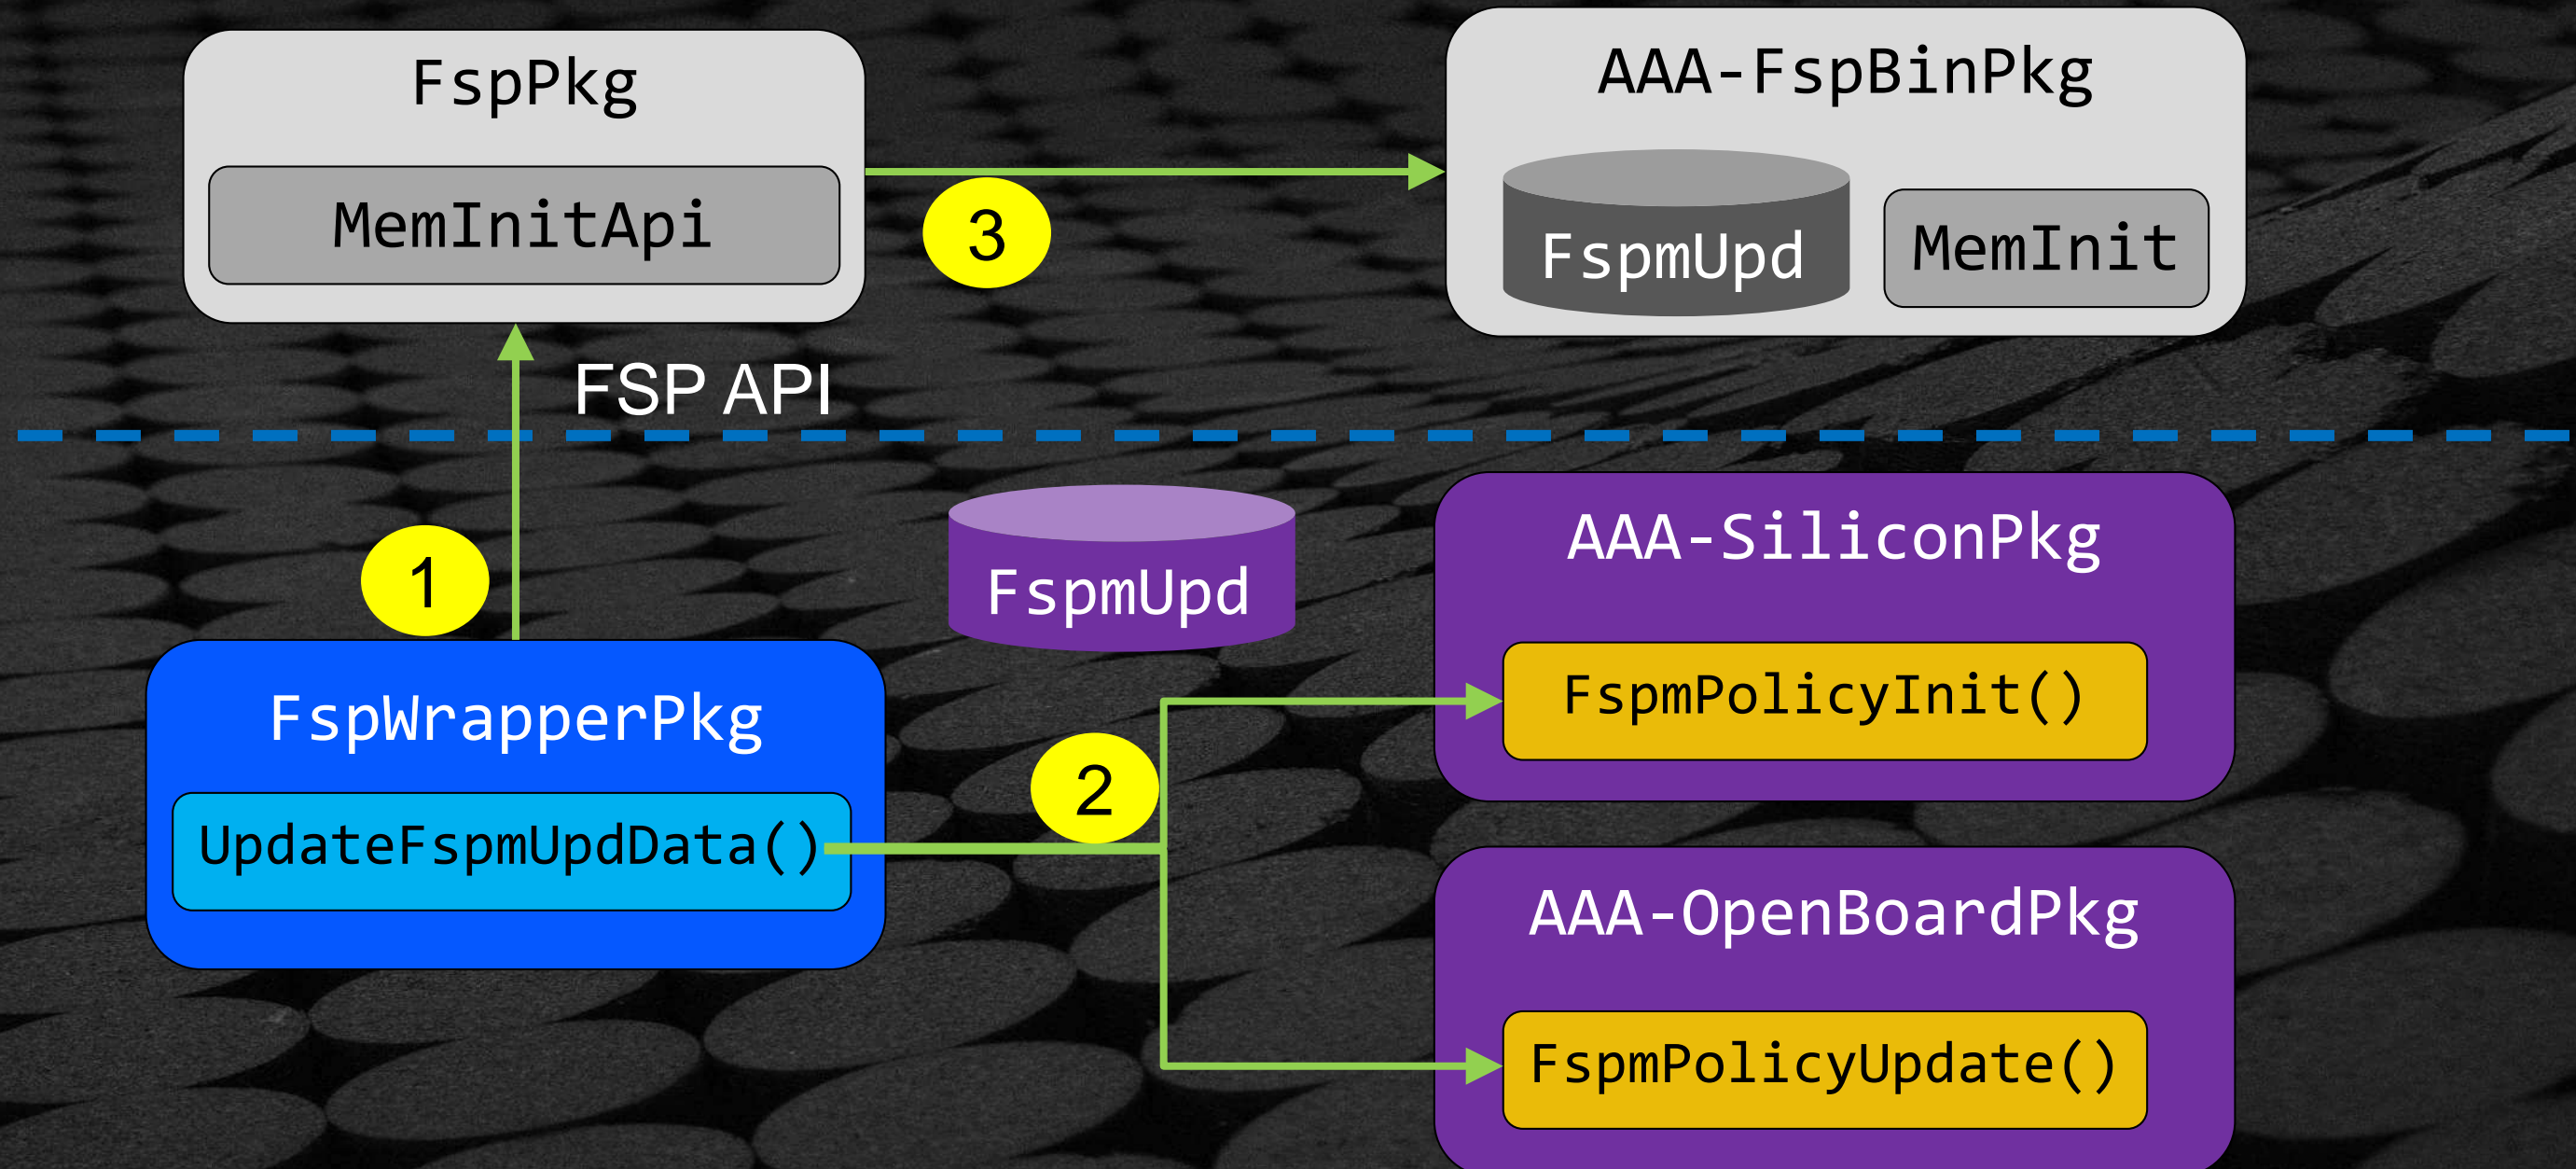

Update Silicon Policy example

KabyLakeOpenBoardPkg/FspWrapper/Library/PeiSiliconPolicyUpdateLibFsp

```
EFI_STATUS
EFIAPI
PeiFspSaPolicyUpdatePreMem (
IN OUT FSPM_UPD *FspmUpd
)
{
VOID *Buffer;
// Override MemorySpdPtr
CopyMem((VOID *)(UINTN)\
FspmUpd->FspmConfig.MemorySpdPtr00,\
(VOID *)(UINTN)PcdGet32 (PcdMrcSpdData), \
PcdGet16 (PcdMrcSpdDataSize));
CopyMem((VOID *)(UINTN)\
FspmUpd->FspmConfig.MemorySpdPtr10,\
(VOID *)(UINTN)PcdGet32 (PcdMrcSpdData), \
PcdGet16 (PcdMrcSpdDataSize));
```

```
• • •
// Updating Dq Pins Interleaved,Rcomp Resistor &
// Rcomp Target Settings

Buffer = (VOID *) (UINTN) PcdGet32 \
(PcdMrcRcompTarget);
if (Buffer) {
CopyMem ((VOID *)\
FspmUpd->FspmConfig.RcompTarget, \
Buffer, 10);
}
return EFI_SUCCESS;
}
```

Link to file: [PeiSaPolicyUpdatePrMem.c](#)

Dynamically Set Defaults


The Default Store PCD is also a dynamic PCD.

During boot, the board initialization code checks the boot mode and selects the default store.

This step must be after SetSku. Otherwise, the default setting may be wrong.

```
...  
if (NeedDefaultConfig()) {  
    PcdSet16S (PcdSetNvStoreDefaultId, 0x0);  
}
```


Board Porting

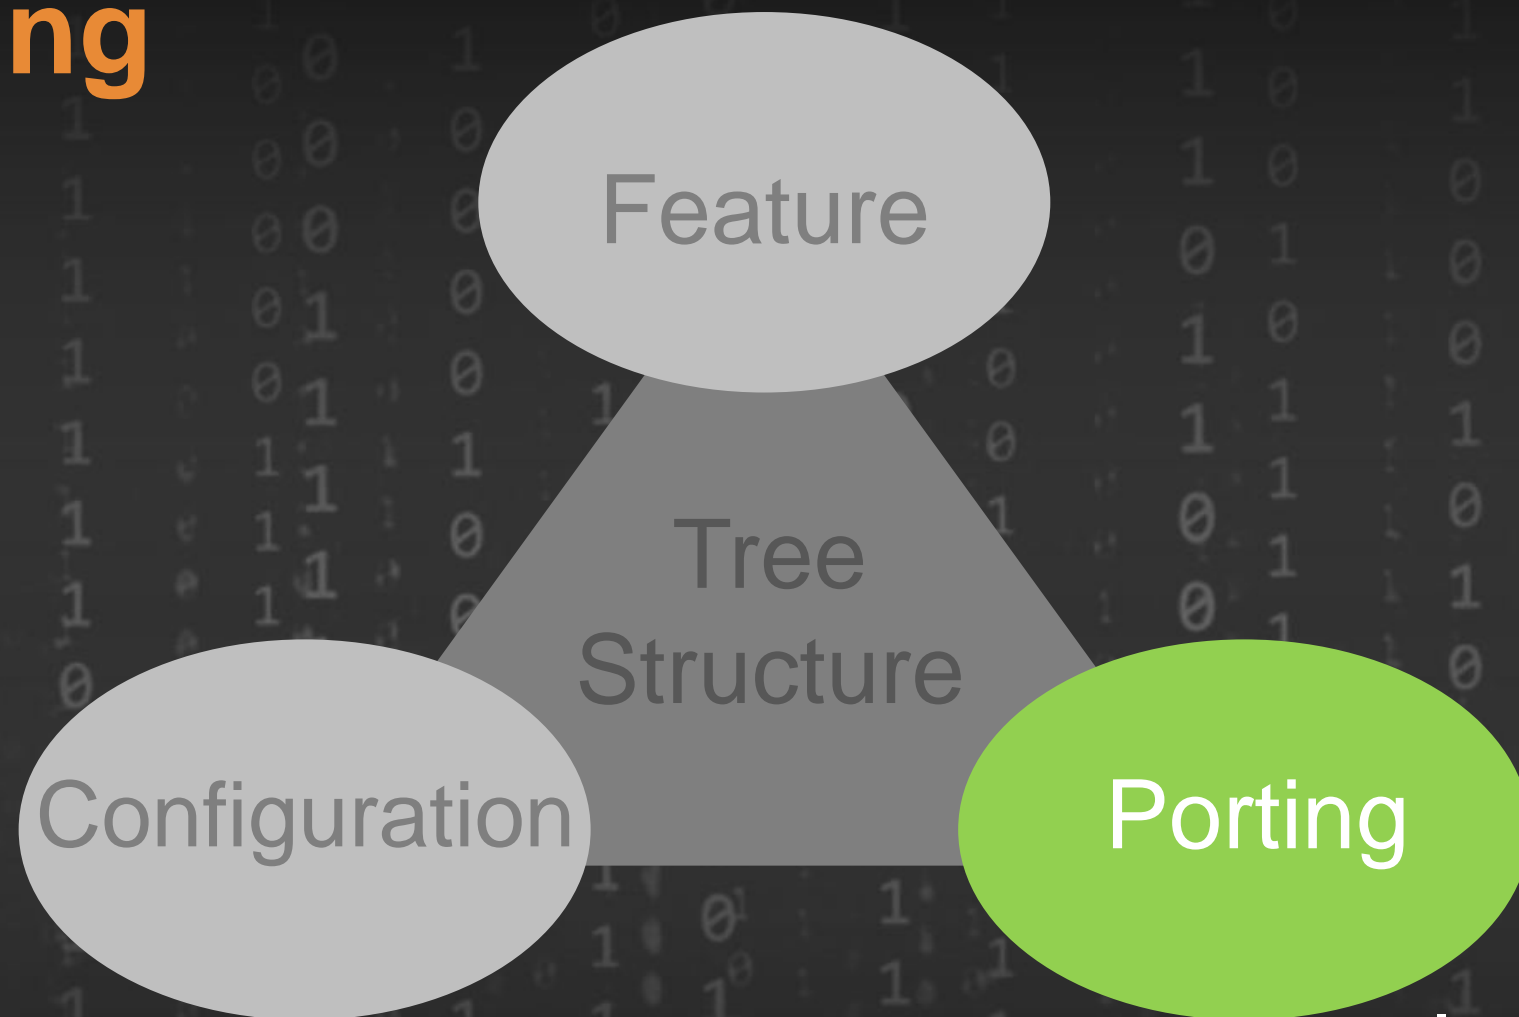

- Incremental
- Simple C libraries
- The same each time

Staged Approach by Features

- Platform Firmware Boot Stage PCD

PCD Variable:

`gPlatformModuleTokenSpaceGuid.PcdBootStage`

Stage 1	enable debug
Stage 2	memory initialization
Stage 3	boot to UEFI shell only
Stage 4	boot to OS
Stage 5	boot to OS w/ security enabled
Stage 6	Advanced Feature Selection
Stage 7	Performance Optimizations




PCD Is tested within .FDF to see which modules to include

Minimum Platform + Intel® FSP Boot Flow

- Staged Approach




Stages Organize the MPA Specification

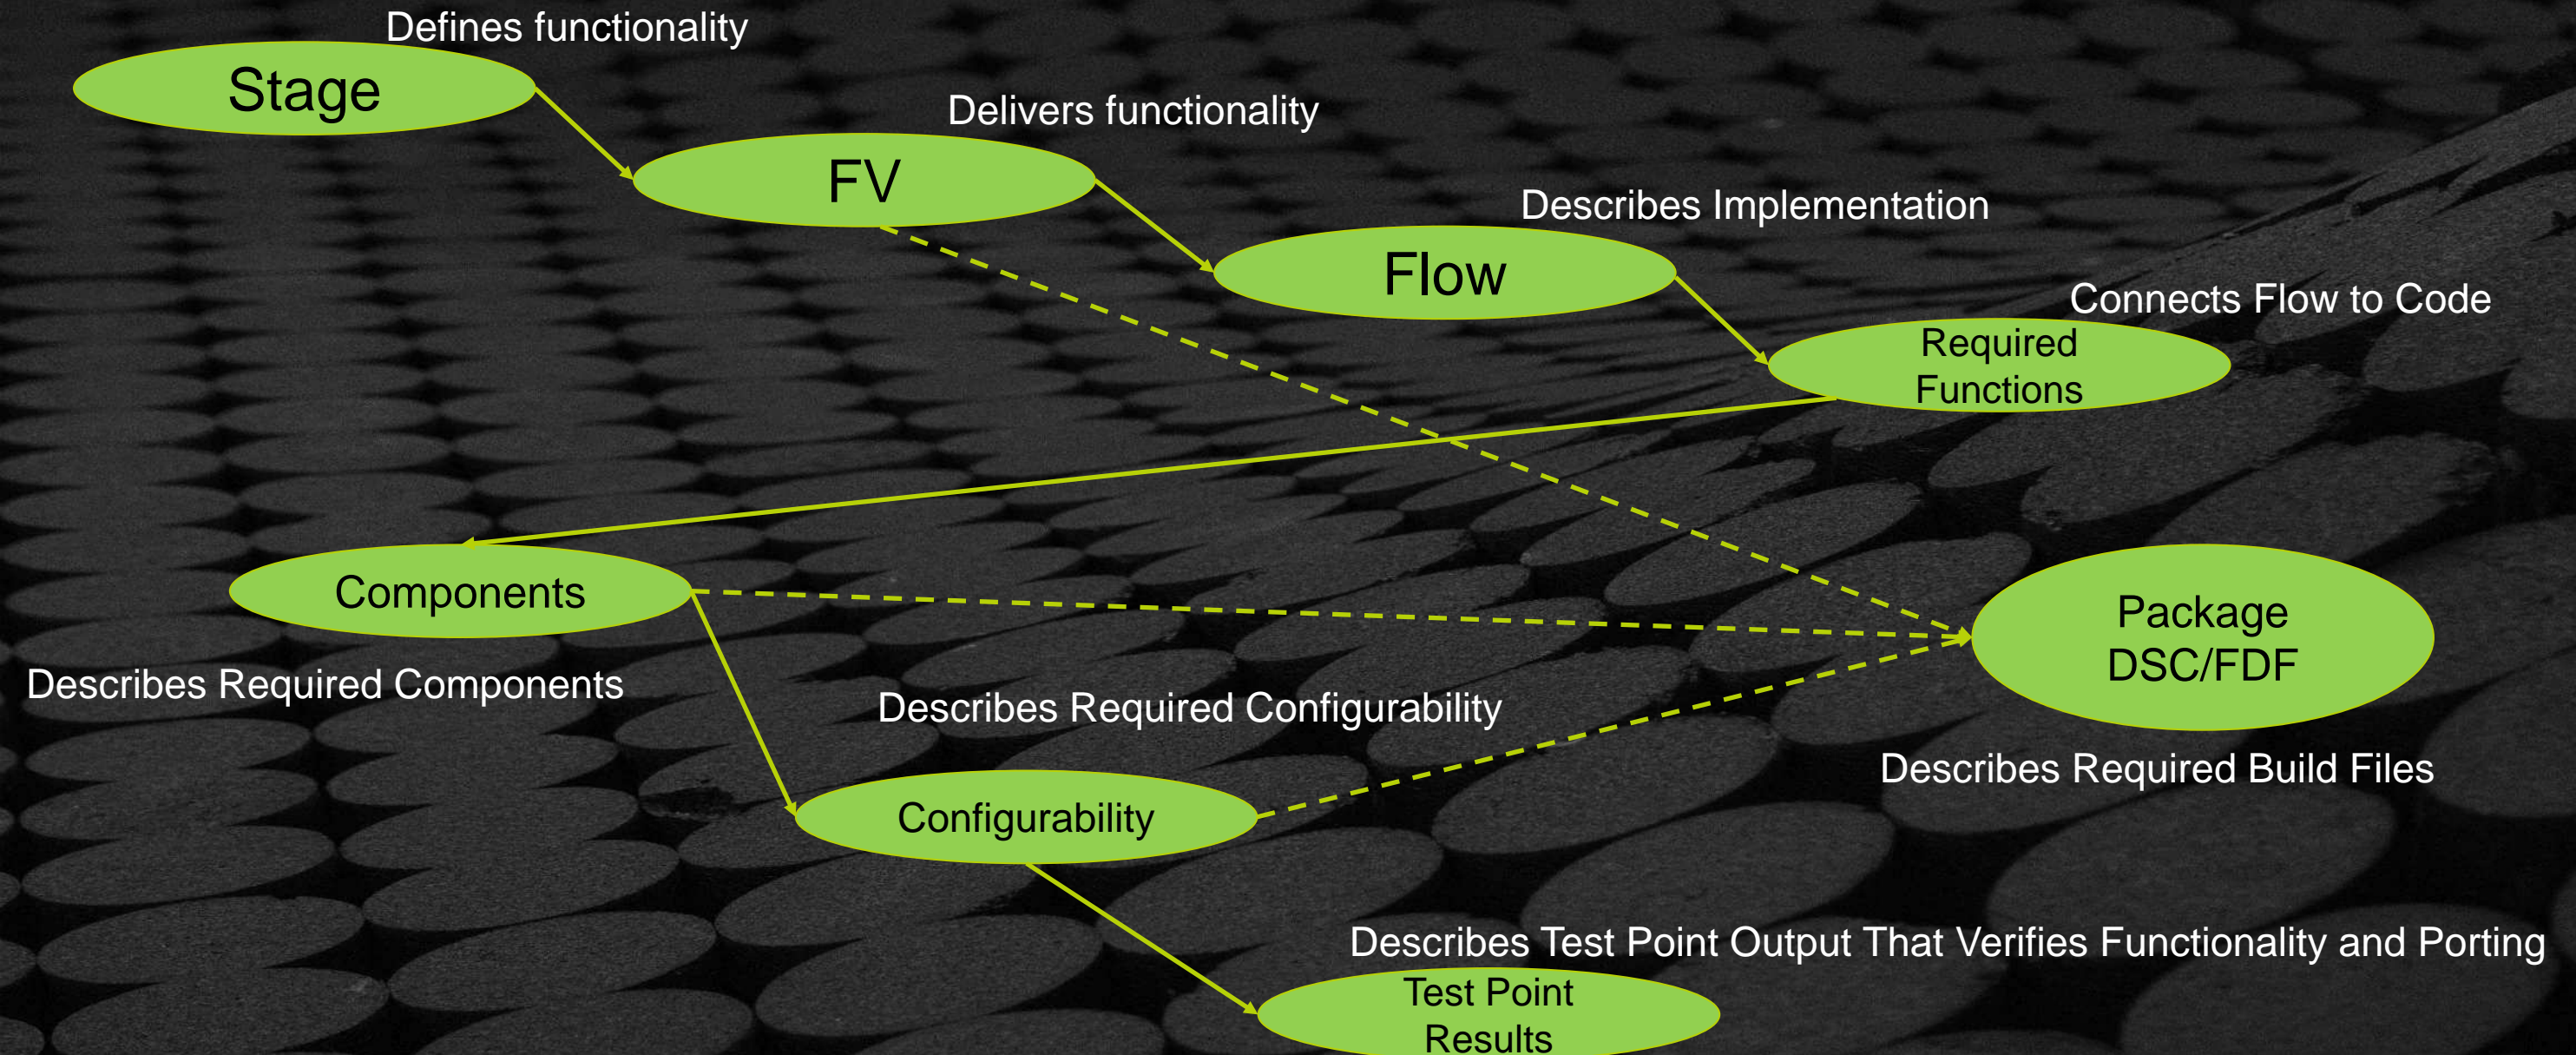

Staged Approach by Features

- Firmware Volume

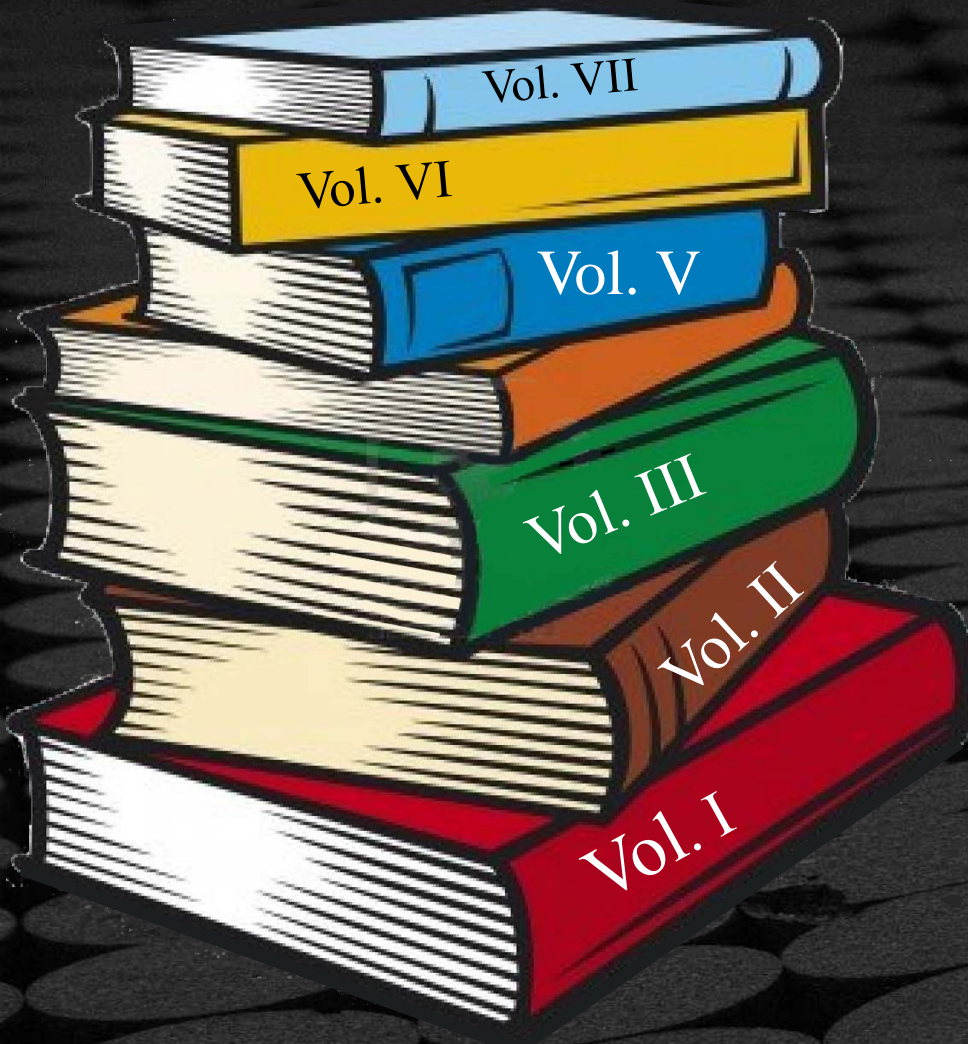


Modules organized by Firmware
Volumes according to the different
boot stages

UEFI Firmware Volumes (FV) - Review

Platform Initialization - Firmware Volume

- Basic storage repository for data and code is the Firmware Volume (FV)
- Each FV is organized into a file system, each with attributes
- One or more Firmware File Sections (FFS) files are combined into a FV
- Flash Device may contain one or more FVs.
- .FDF file controls the layout → .FD image(s)

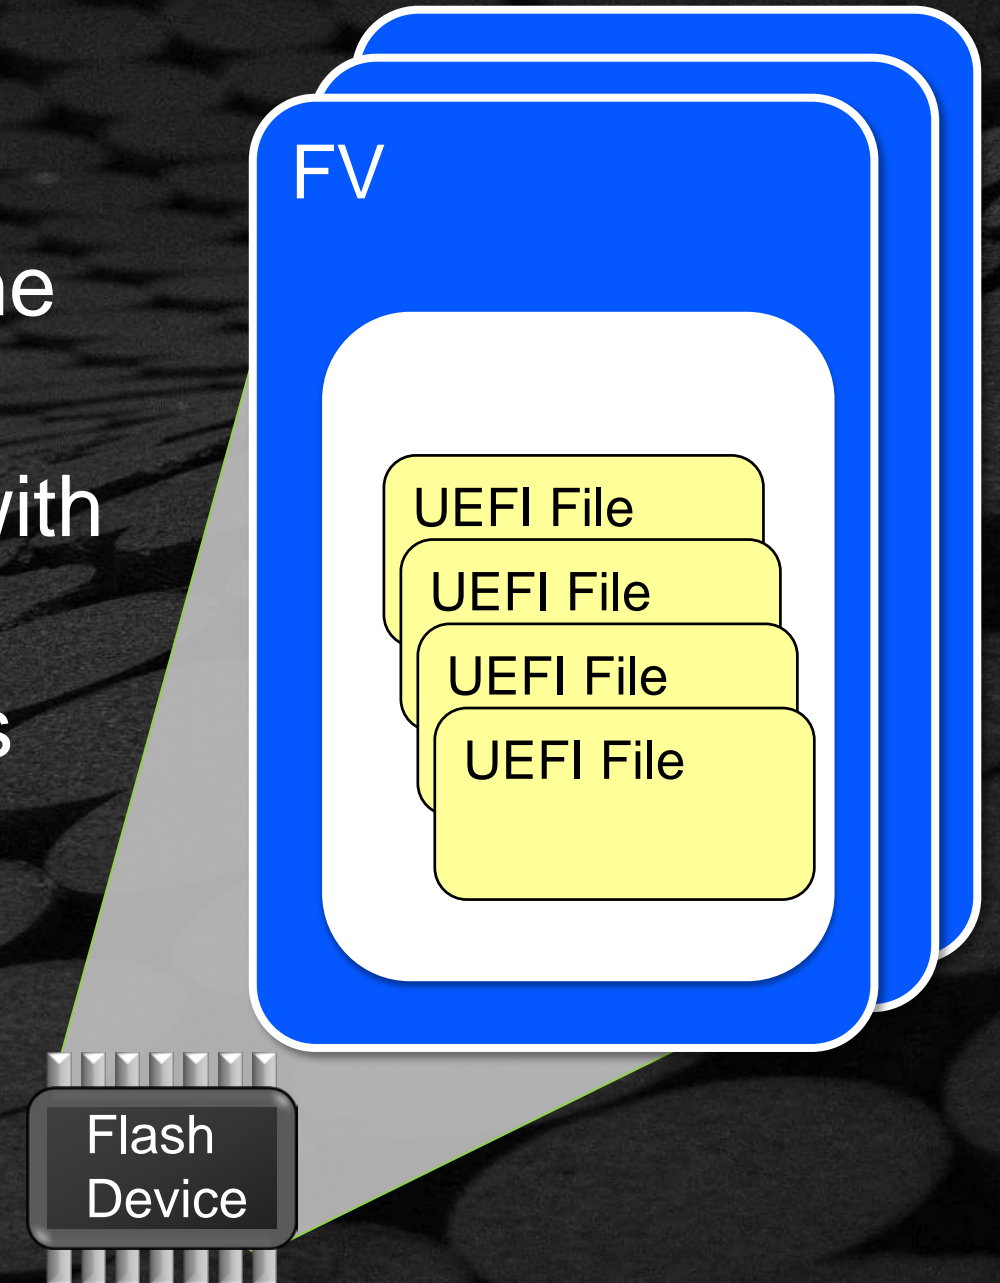

Standardize FV By Stages

Pre-Memory

- **FvPreMemory** – The PEIM dispatched before the memory initialization. Also included **FSP - FV**

Post Memory

- **FvPostMemory** – The PEIM dispatched after the memory initialization. Also included **FSP - FV**

UEFI Boot

- **FvUefiBoot** – The DXE driver supporting UEFI boot, such as boot to UEFI shell.

OS Boot

- **FvOsBoot** – The DXE driver supporting UEFI OS boot, such as UEFI Windows.

Security

- **FvSecurity** – The security related modules, such as UEFI Secure boot, TPM etc.

Advanced

- **FvAdvanced** – The advanced feature modules, such as UEFI network, IPMI etc.

Intel FSP Firmware Volumes

– created Pre-Build

Fsp.fd Rebased for FVs

```
MyWorkSpace/  
  edk2/  
    - “edk2 Common”  
  edk2-platforms/  
    Platform/Intel “Platform”  
      KabyLakeOpenBoardPkg/  
        include/fdf \  
          FlashMapInclude.fdf  
      BoardXPkg/ “Board”  
    Silicon/ “Silicon”  
      Intel/MinPlatformPkg/  
  edk2-non-osi/  
    Silicon/Intel/  
  FSP/  
    BoardXPkg  
      Fsp.fd
```

FvFspT

- – Temp Memory

FvFspM


- -> FvPreMemorySilicon

FvFspS

- -> FvPostMemorySilicon


Pre-Build w/
RebaseAndPatchFspBinBaseAddress.py

Intel FSP APIs in FSP Binary

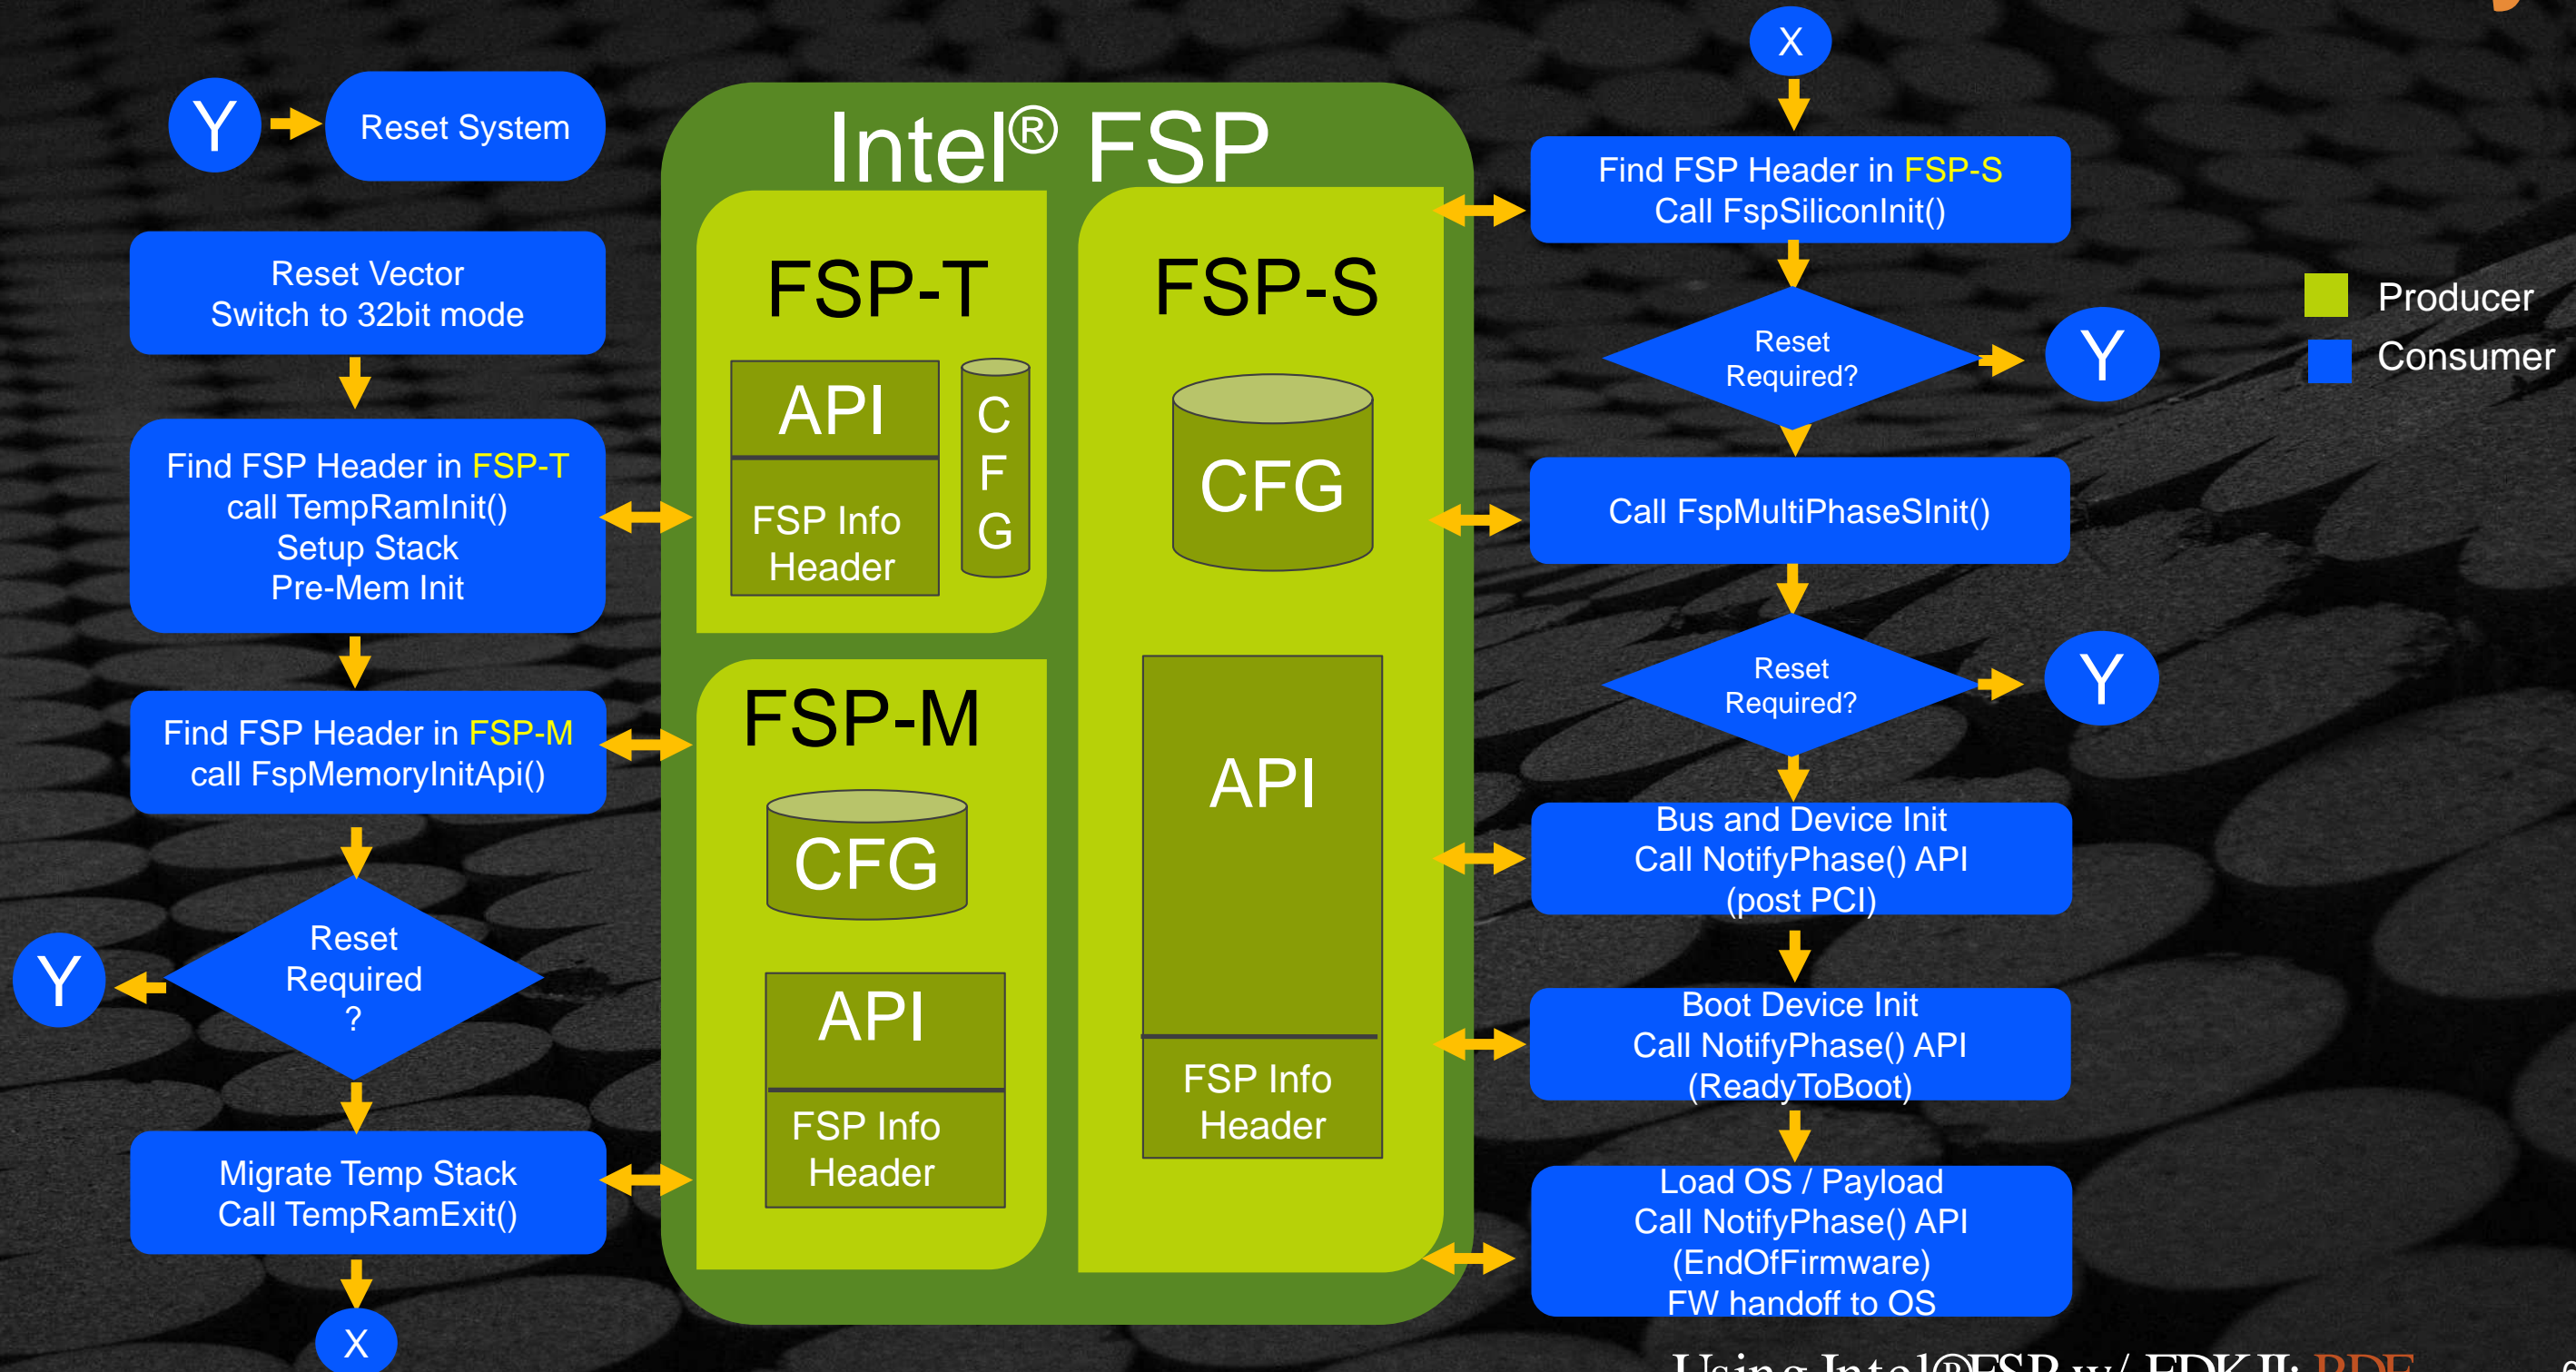

Boot Flow with Intel FSP API Mode


6 APIs for FSP

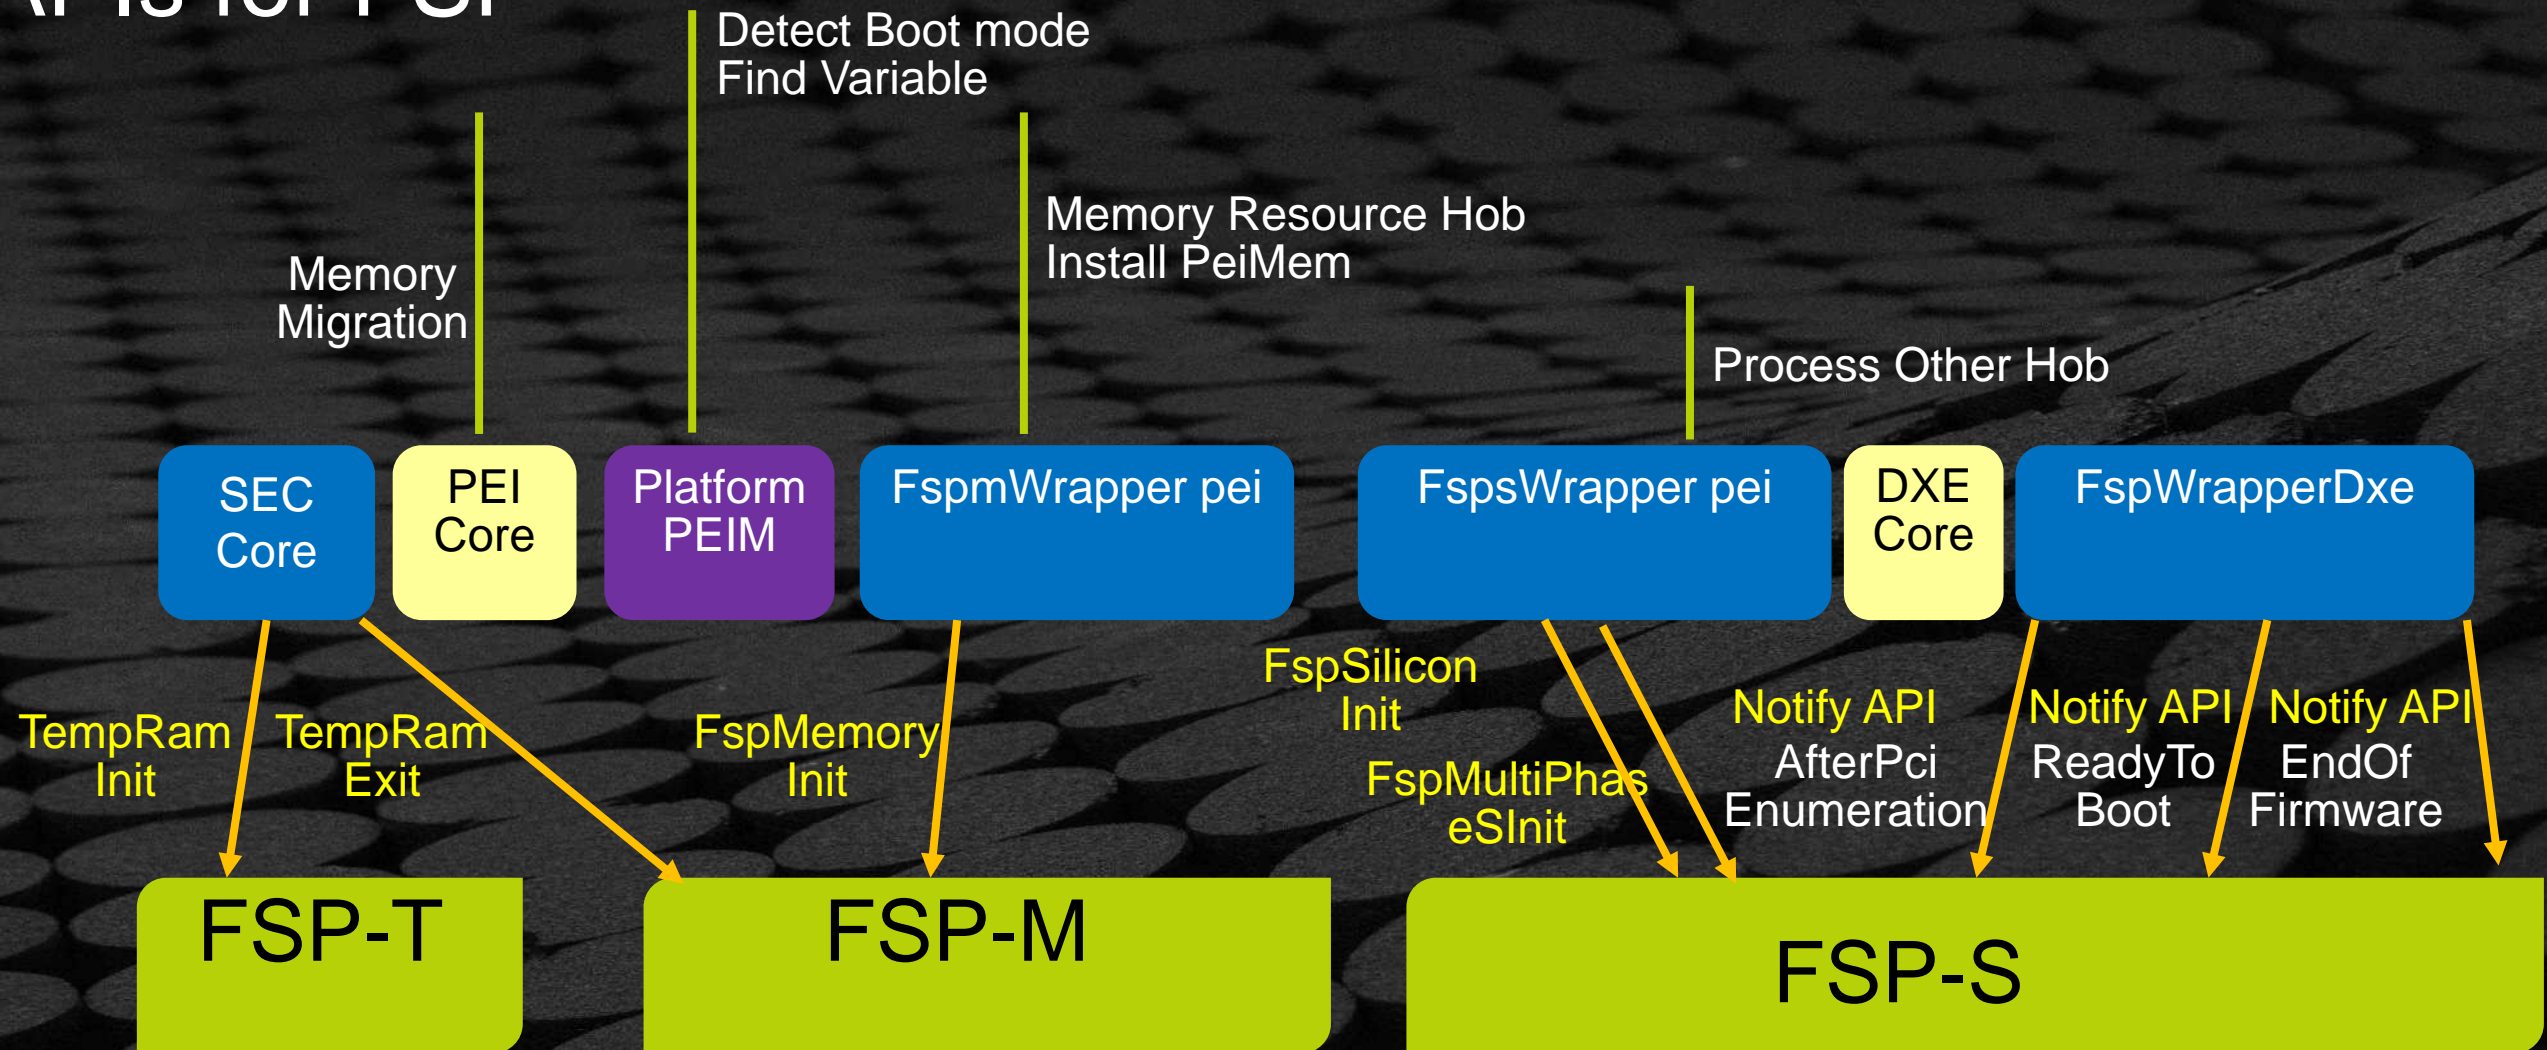

Original Source: [Using the Intel® FSP with EDK II \(2.0\)](#) Fig 4. – This now shows a 6 API added in FSP 2.2

Intel FSP 2.1 Dispatch Mode Boot Flow

gIntelFsp2WrapperTokenSpaceGuid.**PcdFspModeSelection** 0 - dispatch, 1 – API

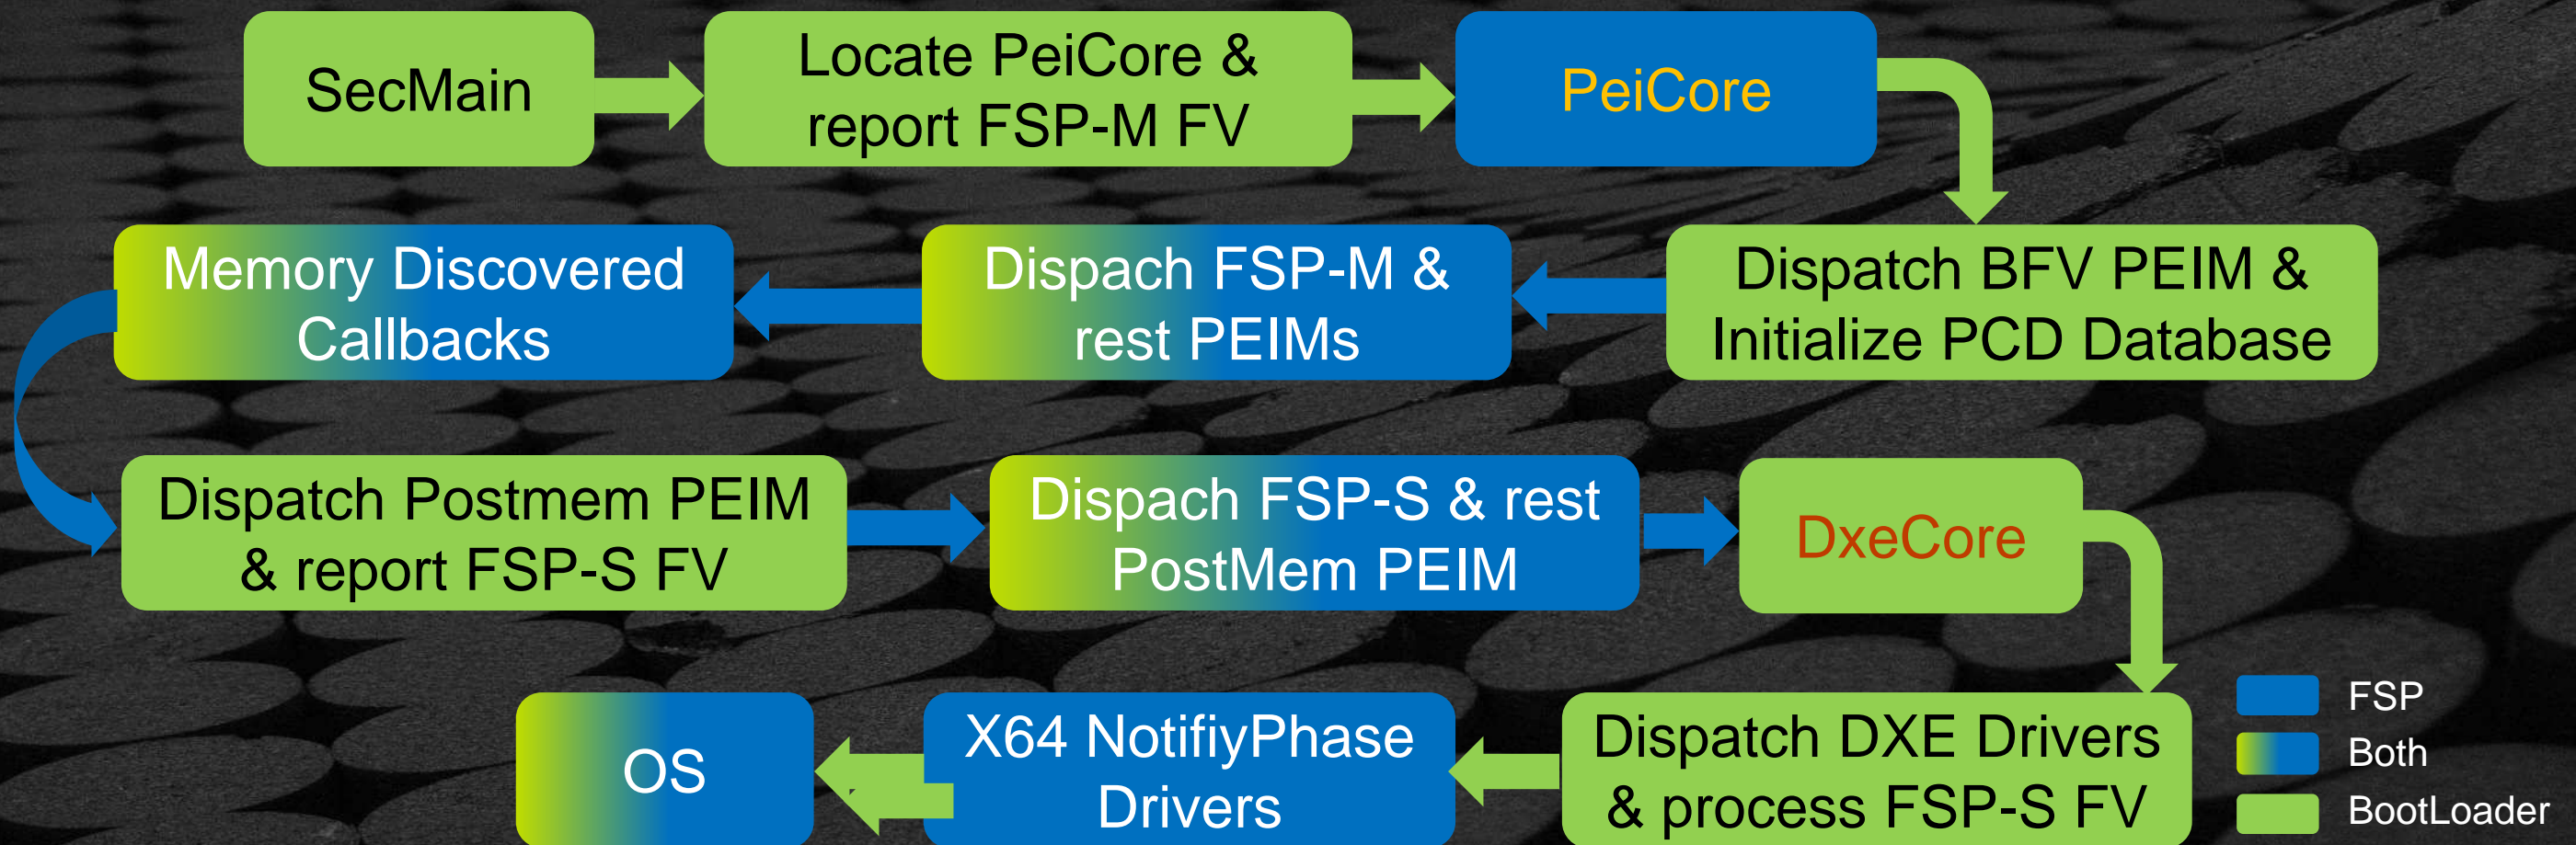

Dispatch Mode Interface

- Optional boot flow intended to enable Intel FSP to integrate well in to UEFI bootloader implementations.
- Conforms to UEFI & PI Specifications
- The FSP-T, FSP-M, and FSP-S are containers that expose firmware volumes (FVs) directly to the bootloader.
- UPD Mechanism to pass Config data is not needed
- PCD Database Required

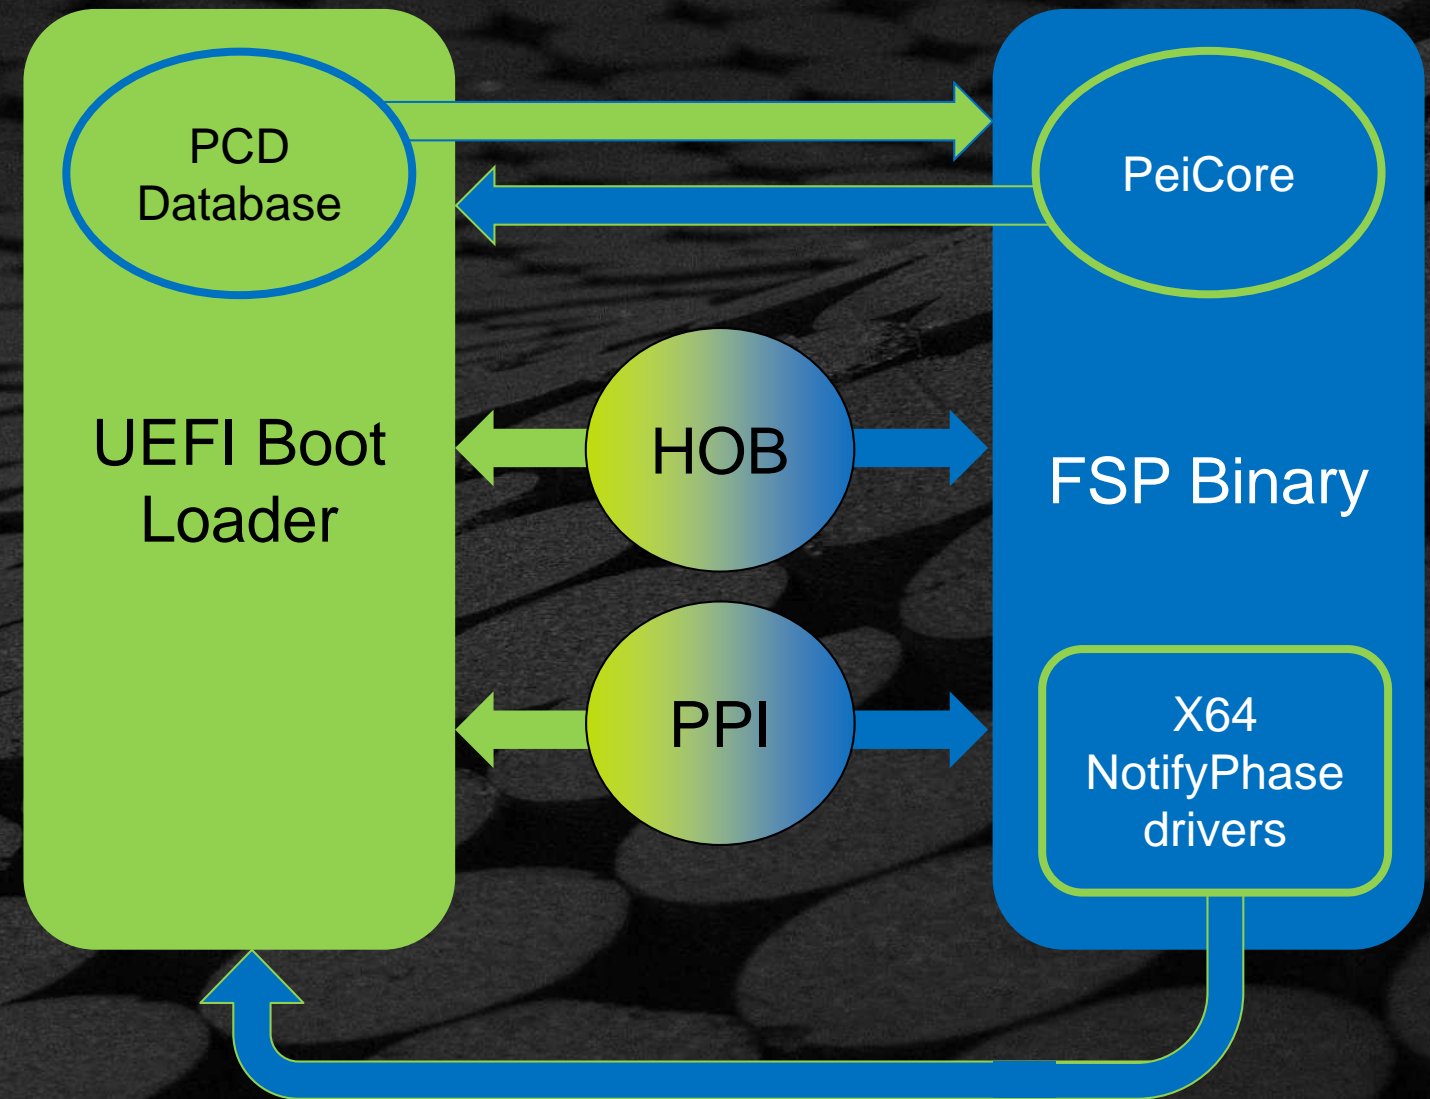


Figure 6 FSP Spec 2.2

PLATFORM HOOKS

Using EDK II Libraries



EDK II Libraries w/ Platform Hooks



DSC maps library class to library-instances

Syntax in DSC file

```
[libraryclasses]
```

```
LibraryClassName|Path/To/LibInstanceNameInstance1.inf
```

Search INF files for string: **“LIBRARY_CLASS =”**

Library Classes Section in DSC

DebugLib class example



Library Class Section

```
[LibraryClasses]
  DebugLib|MdePkg/Library/BaseDebugLibNull/BaseDebugLibNull.inf
  ...
[LibraryClasses.common.DXE_CORE]
  ...
  DebugLib|IntelFrameworkModulePkg/Library/PeiDxeDebugLibReportStatusCode/
    PeiDxeDebugLibReportStatusCode.inf
  ...
[LibraryClasses.common.DXE_SMM_DRIVER]
  DebugLib|MdePkg/Library/BaseDebugLibNull/BaseDebugLibNull.inf
```

Components Section

```
[Components]
  ...
MyPath/MyModule.inf {
  <LibraryClasses>
    DebugLib|MdePkg/Library/BaseDebugLibSerialPort.inf
  }
```


Platform Initialization Board Hook Modules

```
MinPlatformPkg/  
  Include/  
    Library/  
      BoardInitLib.h  
  Library/  
    . . .  
  PlatformInit/  
    PlatformInitPei/  
    PlatformInitPreMem/  
    PlatformInitPostMem/  
    PlatformInitDxe/  
    PlatformInitSmm/
```

```
BoardDetect()  
BoardDebugInit()  
BoardBootModeDetect()  
BoardInitBeforeMemoryInit()  
BoardInitBeforeTempRamExit()  
BoardInitAfterTempRamExit()  
BoardInitAfterMemoryInit()  
BoardInitBeforeSiliconInit()
```

PEI

```
BoardInitAfterPciEnumeration()  
BoardInitReadyToBoot()  
BoardInitEndOfFirmware()
```

DXE

Platform Initialization Board Hook Modules

MinPlatformPkg/

. . .

PlatformInit/

PlatformInitPei/

PlatformInitPreMem/

PlatformInitPostMem/

PlatformInitPreMem/

BoardDetect()

BoardDebugInit()

BoardBootModeDetect()

BoardInitBeforeMemoryInit()

. . .

Notify call back

BoardInitAfterMemoryInit()

PEI

PlatformInitPostMem/

BoardInitBeforeSiliconInit()

. . .

BoardInitAfterSiliconInit()

How to find the Platform Hooks: Process of Porting





Where's the platform code

Check the Board/Platform .FDF file layout

Investigate the FDF then DSC files

Porting process per stage find and update platform hooks

- ① Locate FVs for each stage
- ② Modules for each FV contents
- ③ Module Locations
- ④ Platform Porting Libraries per Module
- ⑤ Update the Hook Function for Board

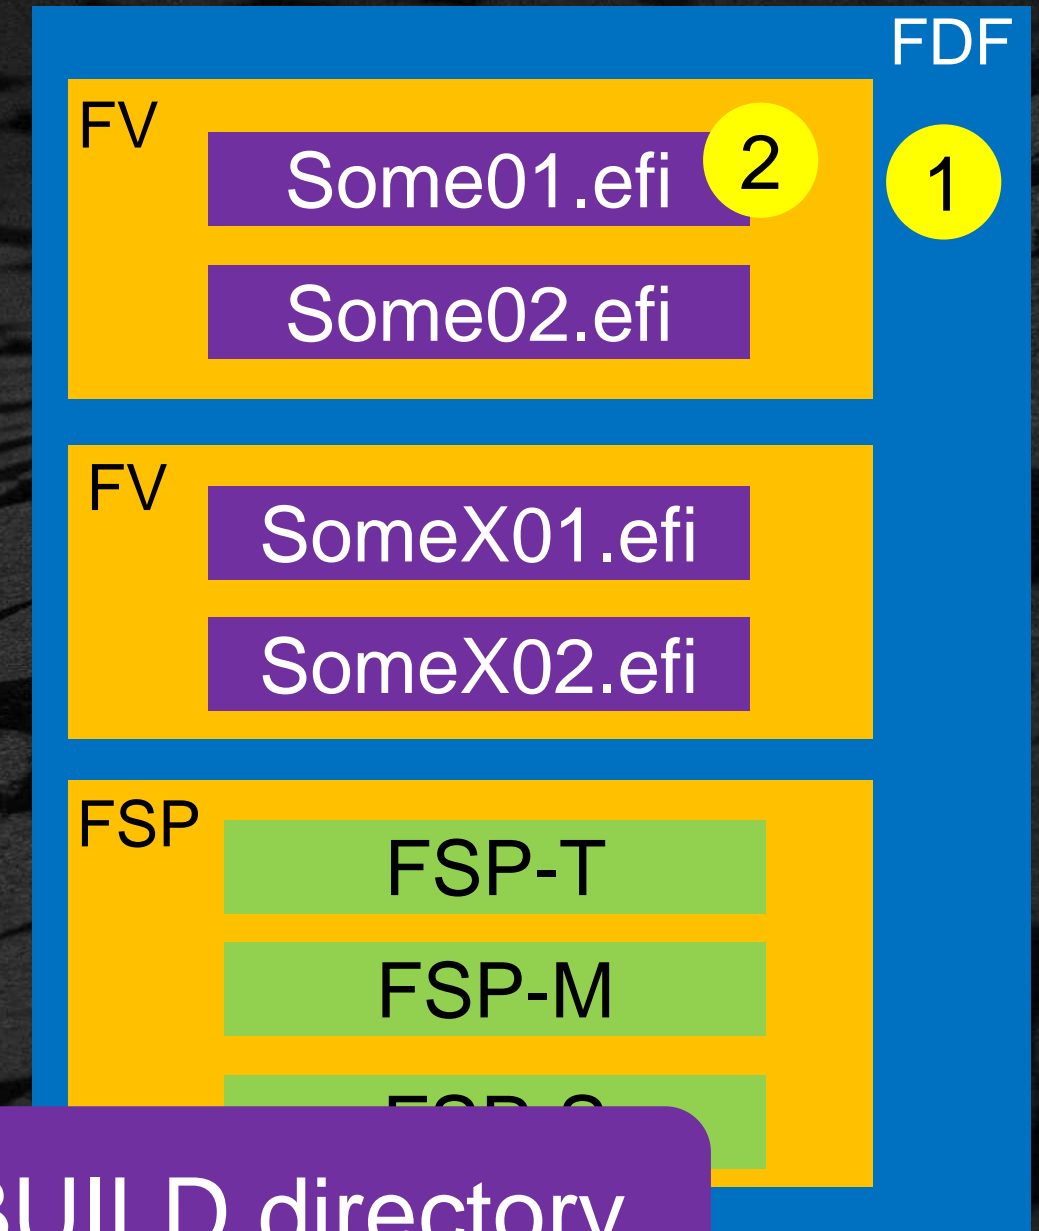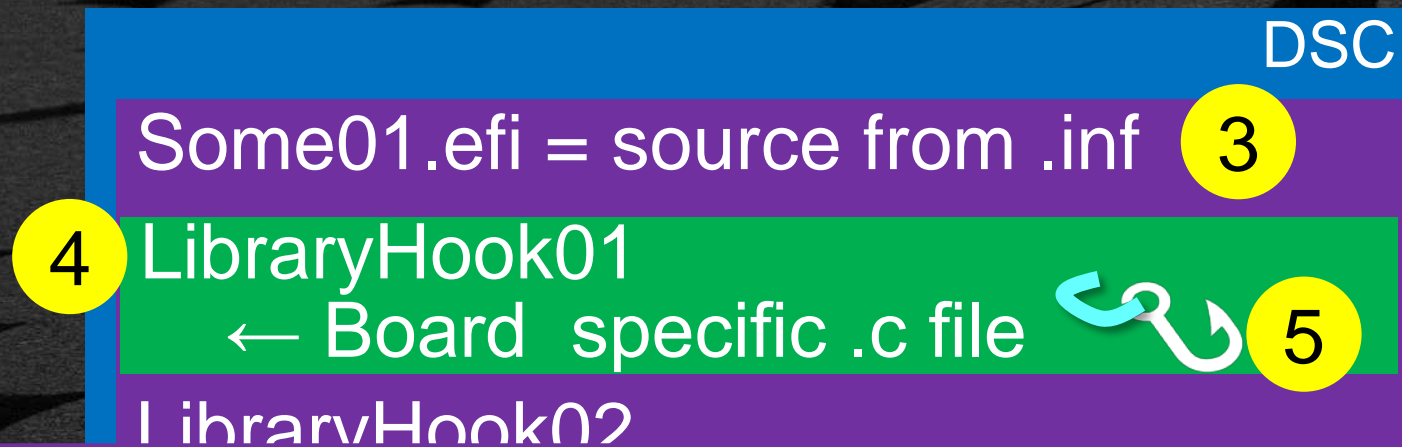

Also check the reference platform BUILD directory

How to search for Libraries in the Workspace

1. Search the workspace .DSC files for the string of the library
2. Open the .DSC files associated with the open board platform project
3. Determine which Library is used and that should have the build path in the workspace
4. DSC file will have similar to:
`SomeLib|Path_to_the_Library_used.inf`
5. Verify the instance used from the Build directory



Platform Initialization Board Hook Modules

- Stage 1



```
MinPlatformPkg/  
  Include/  
    Library/  
      BoardInitLib.h ← // hooks  
  Library/  
  . . .  
PlatformInit/  
  PlatformInitPei/  
  PlatformInitPreMem/
```

```
BoardDetect()  
BoardDebugInit()  
BoardBootModeDetect()  
BoardInitBeforeMemoryInit()
```

Platform folder PlatformInit controls
the platform initialization flow

Example Hook - Board Detection

-Kabylake example 

MinPlatformPkg/

. . .

PlatformInit/

PlatformInitPei ->

PlatformInitPreMem.c

BoardDetect()

KabylakeOpenBoardPkg/

. . .

KabylakeRvp3/

Library/

BoardInitLib ->

PeiBoardInitPreMemLib.c

BoardDetect()

PeiKabylakeRvp3Detect.c

KabylakeRvp3BoardDetect()

Uses PCD Library calls to set / get Board SKU for Storing Board ID


LibPcdGetSku() & LibPcdSetSku()

KabylakeRvp3BoardDetect() function reads Board ID from embedded controller (EC) using the LPC bus

LibPcdSetSku() stores Board ID

LibPcdGetSku() used from that point on

Minimum Platform Architecture Summary

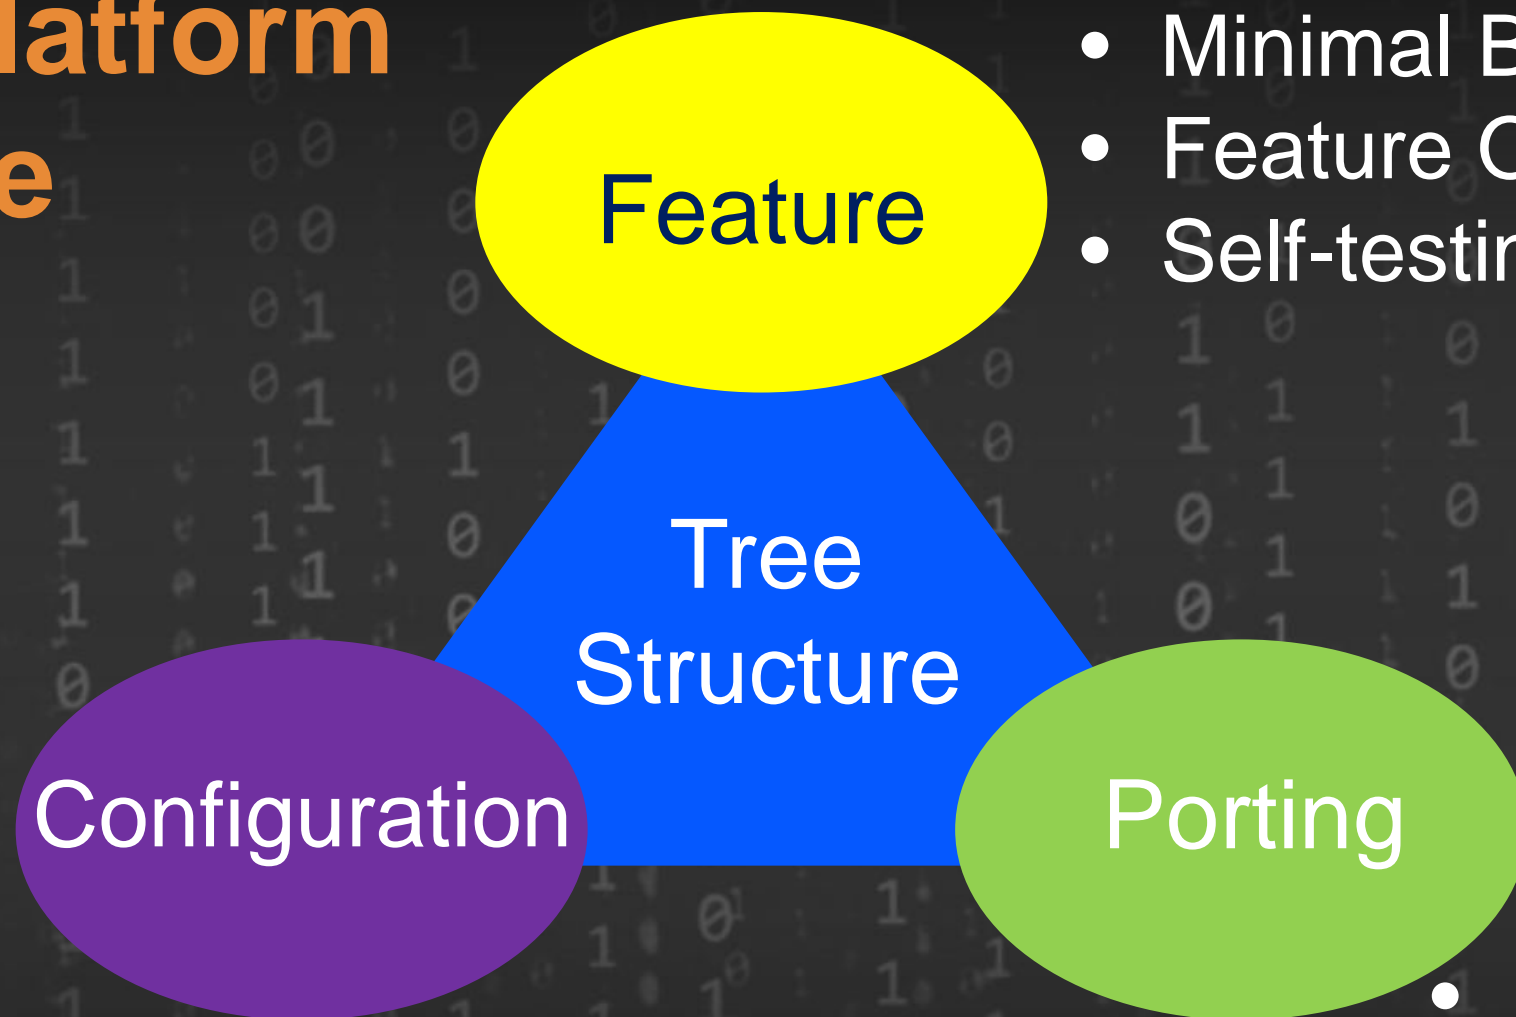

- Minimal Baseline
- Feature ON/OFF
- Self-testing

- Incremental
- Simple PCD usage model
- No setup

- Incremental
- Simple C libraries
- The same each time

SUMMARY

- ★ Minimum Platform Architecture (MPA) is an Open source Intel platform code base for use with EDK II
- ★ EDK II Minplatform's infrastructure focus areas: Tree, Features, Configuration & Porting
- ★ MinPlatform uses Intel® FSP for processor, silicon and memory init & uses silicon policy guid lines for data flow

Questions?



Return to Main Training Page



Return to Training Table of contents for next presentation [link](#)



ACKNOWLEDGEMENTS

Redistribution and use in source (original document form) and 'compiled' forms (converted to PDF, epub, HTML and other formats) with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code (original document form) must retain the above copyright notice, this list of conditions and the following disclaimer as the first lines of this file unmodified.


Redistributions in compiled form (transformed to other DTDs, converted to PDF, epub, HTML and other formats) must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS DOCUMENTATION IS PROVIDED BY TIANOCORE PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL TIANOCORE PROJECT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2020, Intel Corporation. All rights reserved.

BACK UP

Basic Boot Components

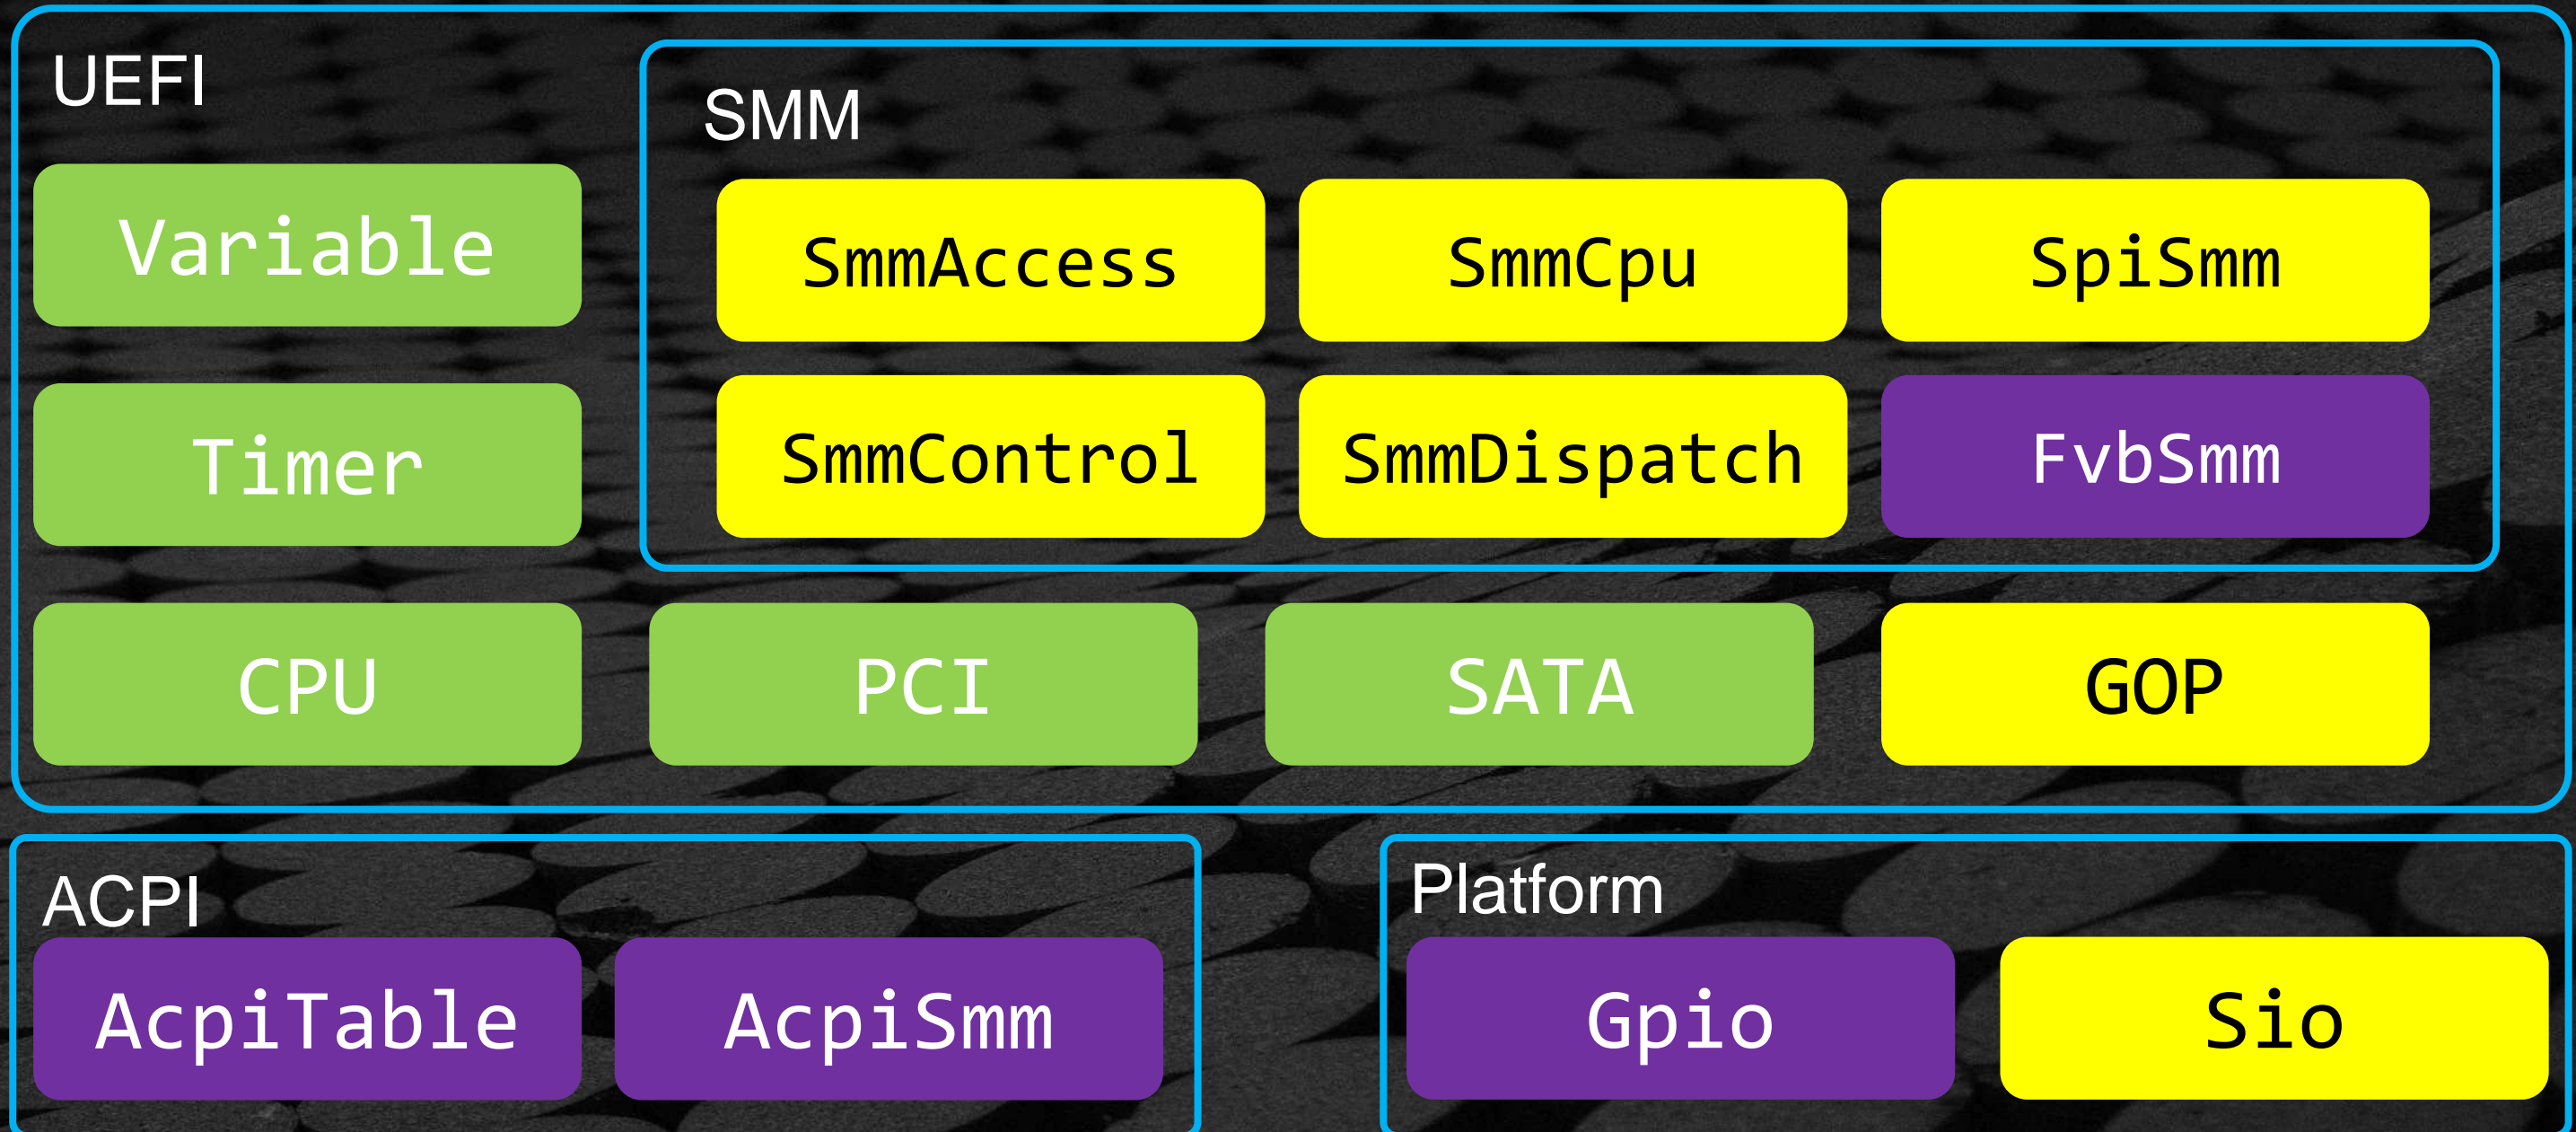


Key -

EDK II


Silicon

Platform

Board default setup variable data

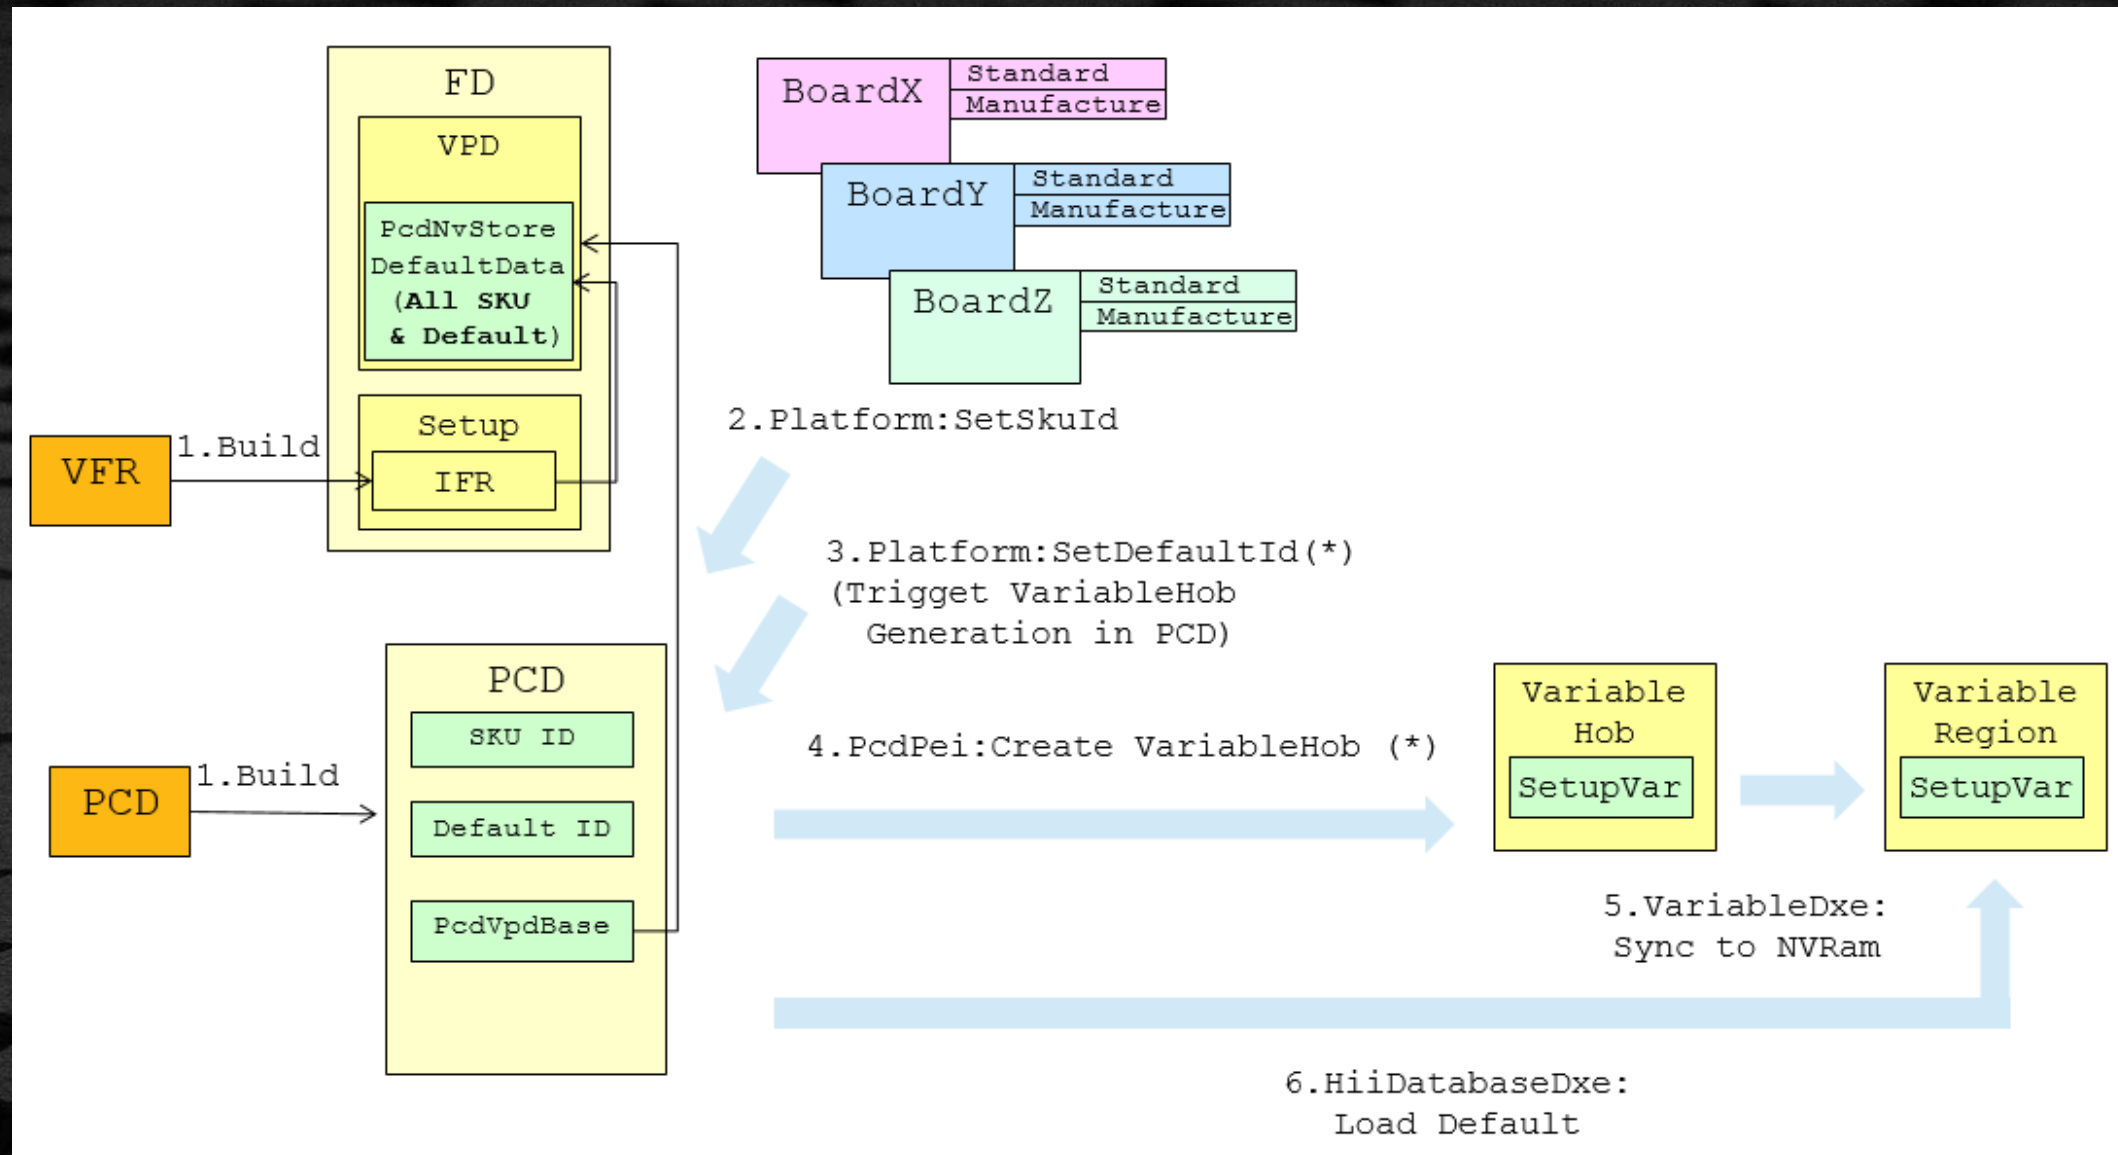

Board Detection and Initialization Flow

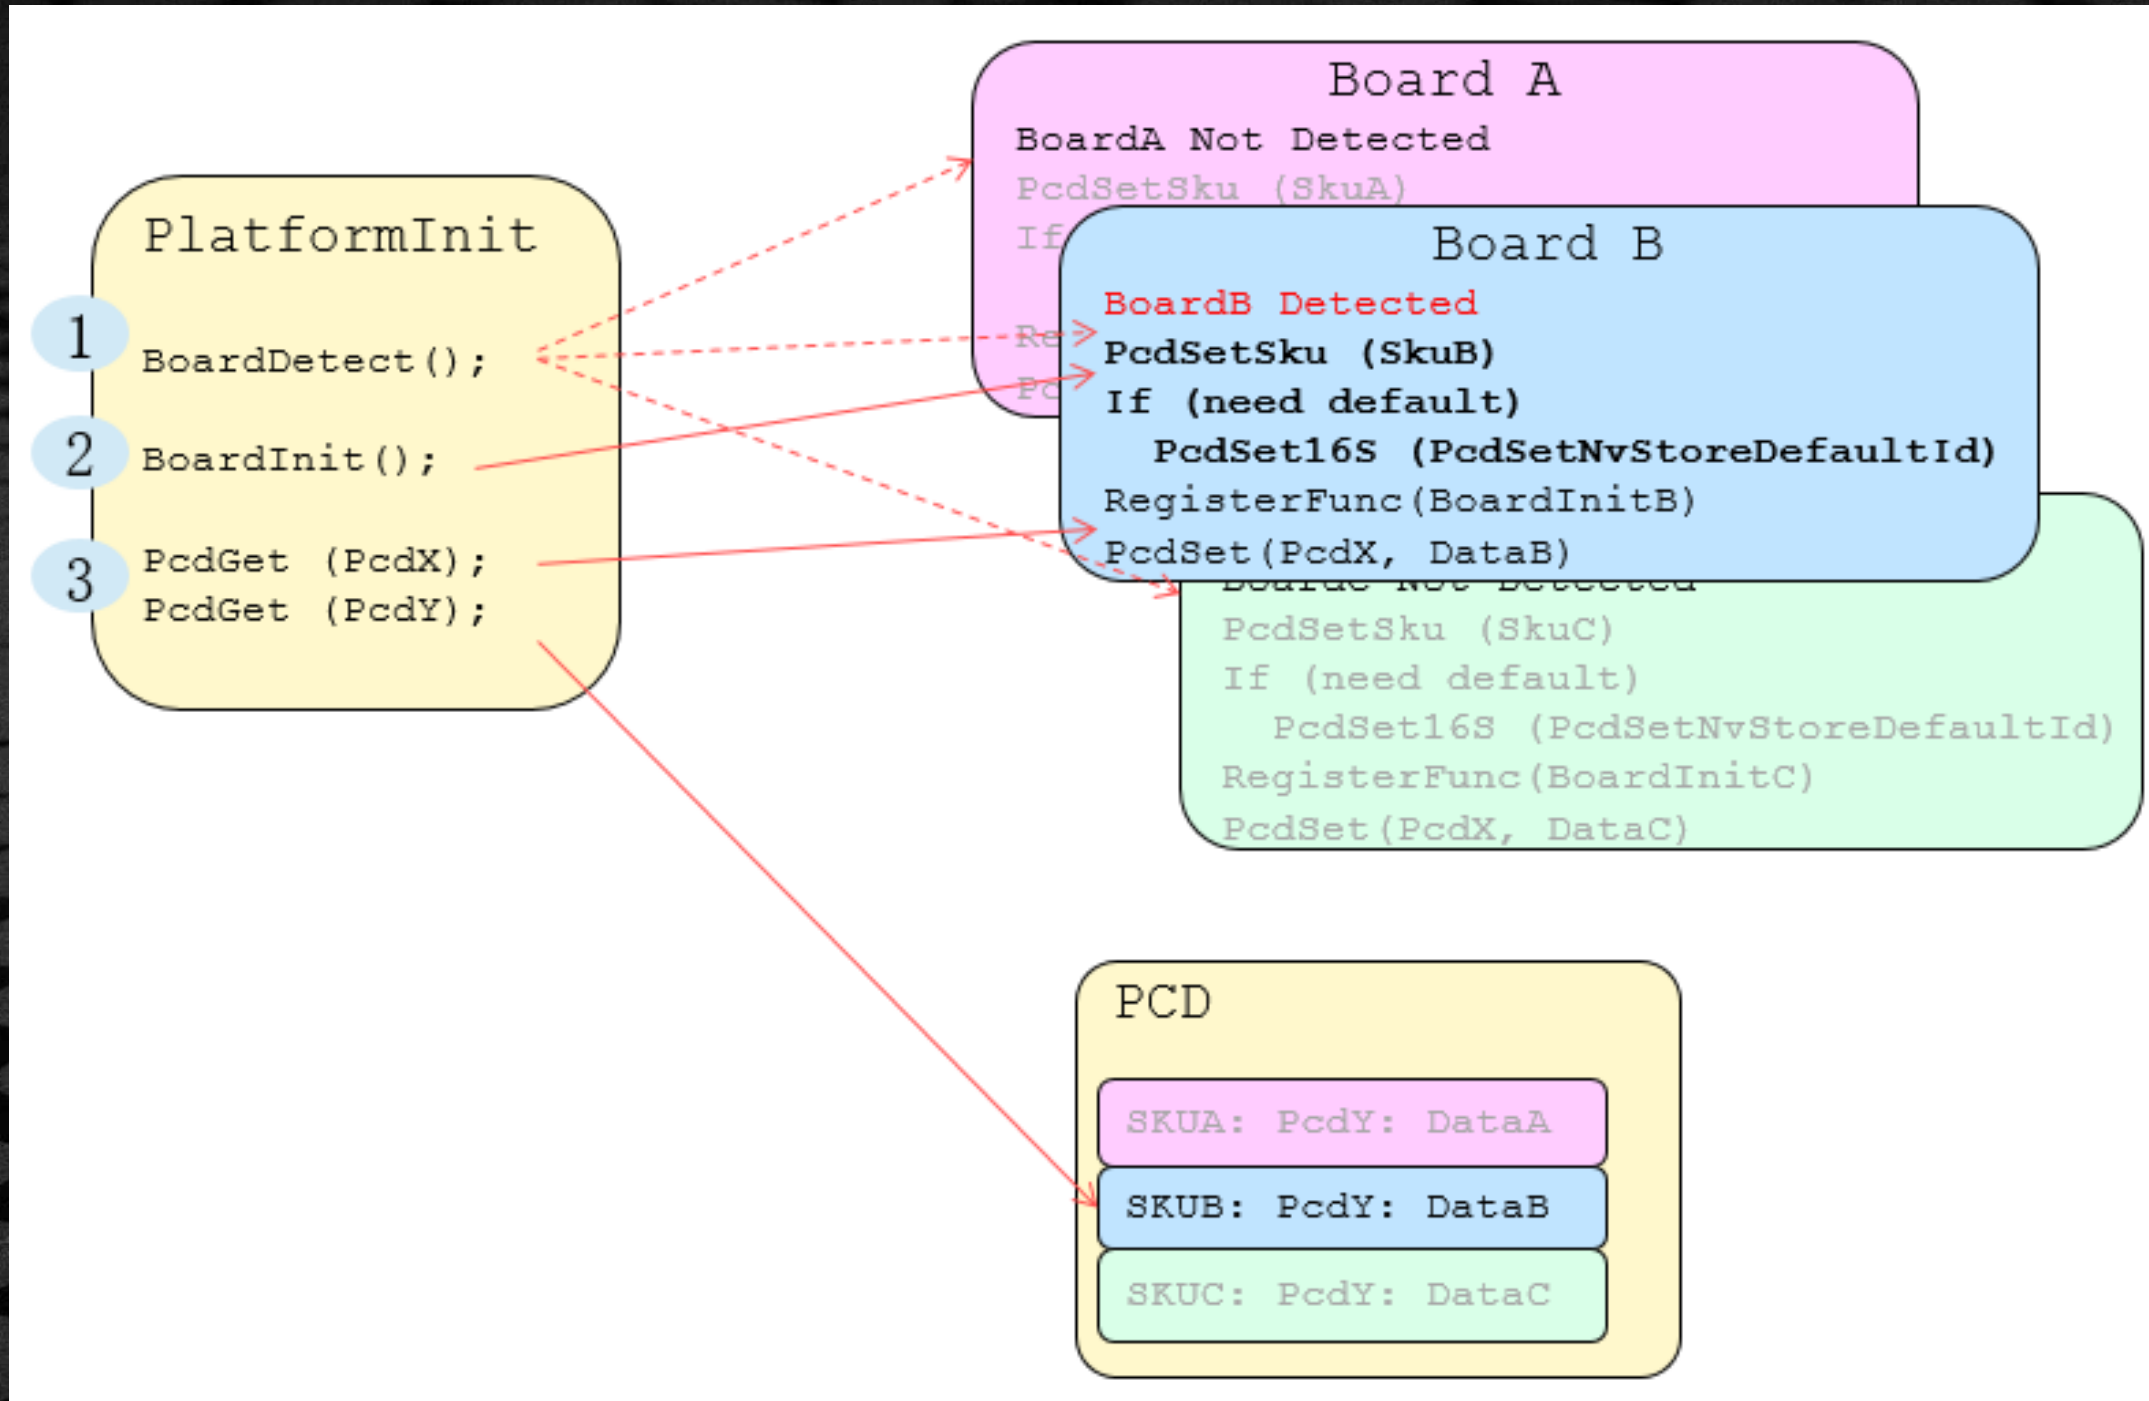

Board Module Package Structure

BoardModulePkg

```
BoardModulePkg /  
  Include /  
  Library /  
    BiosIdLib /  
    CmosAccessib /  
    PlatformCmosAccessLibNull /
```

Board Generic Functionality

Where:

- **Include:** The include file as the package interface. All interfaces defined in BoardModulePkg.dec are put to here.
- **Library:** It only contains board generic features as independent library, such as BiosIdLib and Cmos Access Lib

Advanced Feature Package

```
Features/Intel /  
  AdvancedFeaturePkg /  
    Include /  
  XxxFeature /  
    XxxFeatureSub1Pkg /  
      Include /  
      Library /
```

Where:

- ← The package interface and Includes for .DSC & .FDF files
- ← Sub1Feature.dsc PostMemory.fdf PreMemory.fdf
- ← Implementation of the feature as a library

The advanced features, domains such as SMBIOS table, IPMI, User Interface, Power Management