

## 1>Passwords.

There are two level of passwords on DCX 4800XL. Level 1 is the passwords which is setted by end user/customer themself. then they need remember/store it well to protect the DSP settings in their systems. of course. the end users/customers can change the Leve 1 passwords freely, just save/remember it very well!

In case of Level 1 passwords is forgot, then you need using the Level 2 passwords(we called it MASTER PASSWORDS) to Unlock the DSP and setting a new Level 1 passwords. So. the Level 2 passwords (MASTER PASSWORDS) is so critical and need to be save at high confidential. once it leaks to public,then you/we can not protect the DSP settings anymore. because it can unlock all DCX-4800XL DSPs.

Here is MASTER PASSWORDS ( 2017 ) unlock the DSP and doing the after sale service. please think about how to management this MASTER PASSWORDS before you start the service.

## 2>Factory default.

Stpe 1: Power off the DSP --> Step 2: Press down/Release quickly for several times to the two buttons on DSP front panel " UTIL + RECALL" when Power on the DSP--> Step 3: Then you will see the "FACTORY DEFAULT" will displaying on the DSP's LCD-->Step 4: Factory default is completed.

In case of you not see the Factory default text displaying on the LCD.then repeat above steps until you see it.