


This mode requires the flash to be programmed with the tinyFPGA bootloader.

- To enable:
- Program Flash with bootloader
- Open R35, 36
- Install R22, R23 (68 Ohms)
- Install R21 (1.5K)
- Enjoy!



Layout Note:
Layout with overlapping resistors so that only horizontal/vertical resistors need to be installed.

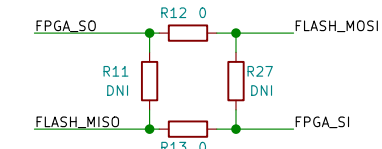

Programming modes:
Flash: Default, horizontal short
CRAM: Optional, vertical short

