


Changing a Flat Tire on your 4WD

Once your car is in a safe and stable area, parked with the **parking brake (handbrake) engaged**, follow this flow chart to change your flat tire.


Reference: <https://www.dmv.org/how-to-guides/changing-tire.php>

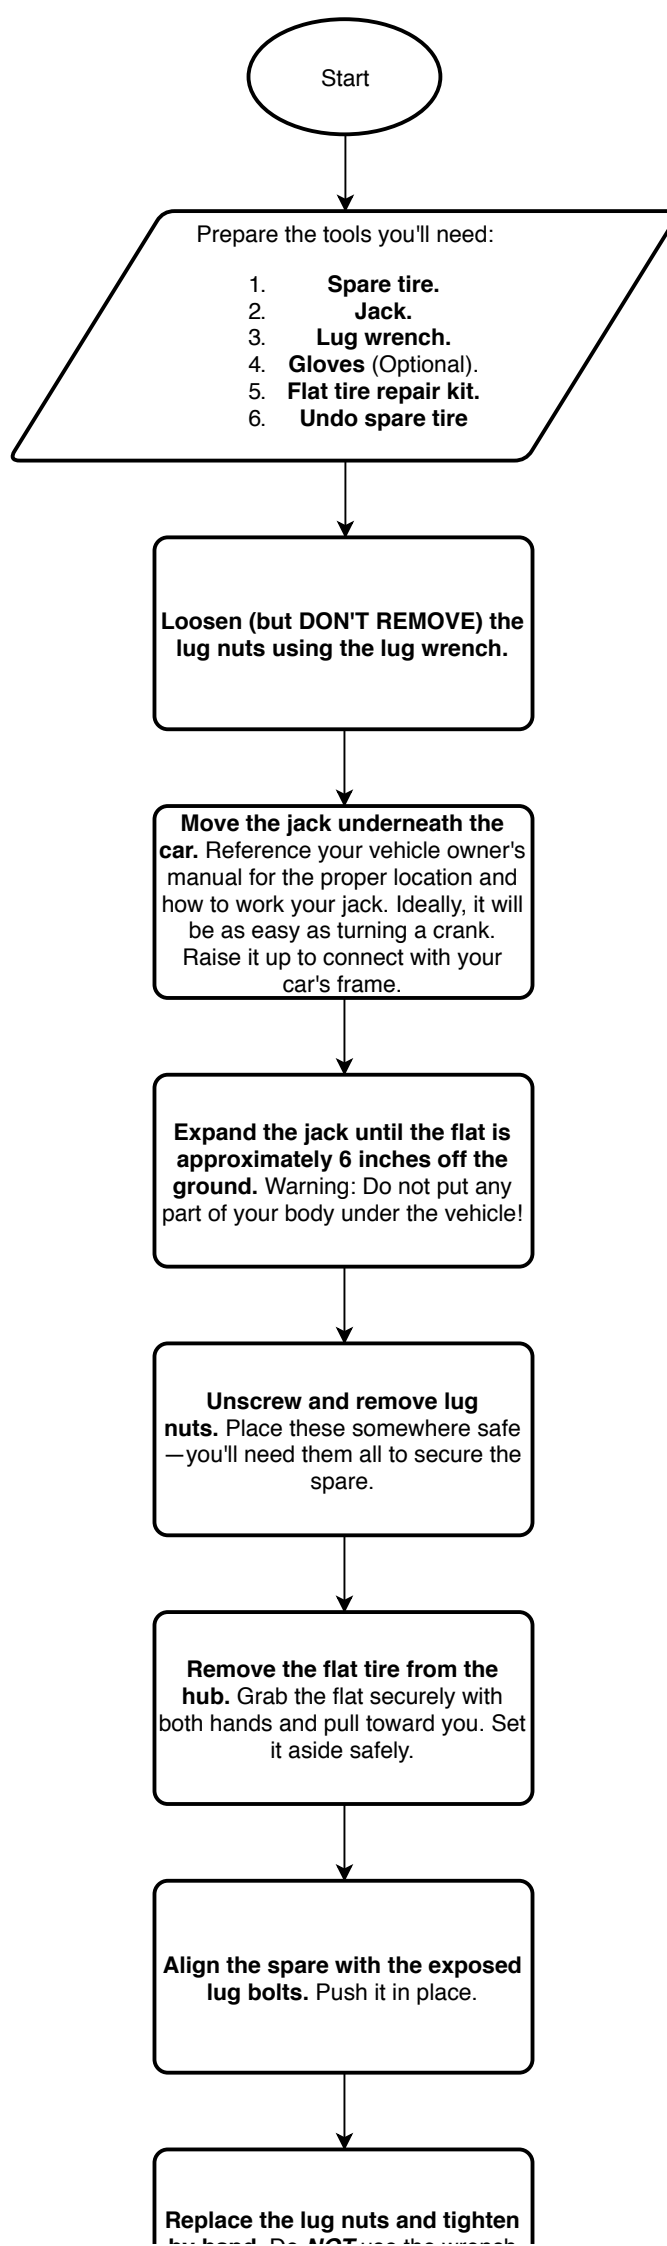

by hand. Do **NOT** use the wrench until you lower the vehicle.

Lower the jack carefully until the spare touches the ground. Remove the jack.


Tighten the lug nuts with the wrench. Put your weight into it—these should be really tight. To ensure even alignment, **tighten your lug nuts in a star pattern**, so you're never tightening lug nuts that are immediately adjacent to one another.

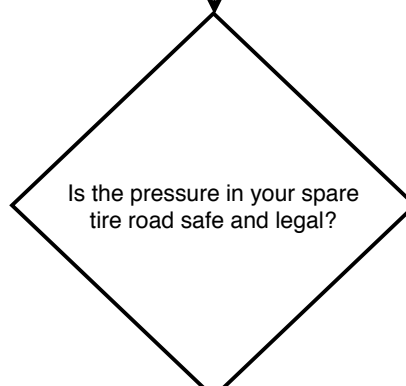

True

Pack away your tools that you used, and place the flat tire in the boot.

False

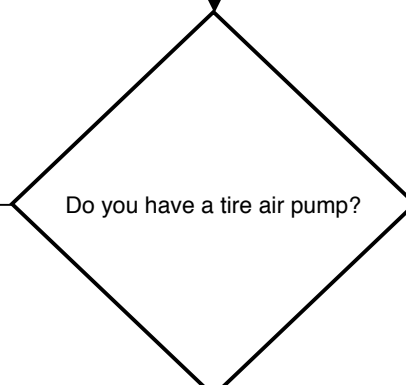

True

Use the tire air pump to inflate your tire.

Pack away your tools that you used, and place the flat tire in the boot.

False

Pack away your tools that you used, and place the flat tire in the boot.

Cry about the fact that you spent an hour replacing your tire all for nothing. :(

