



www.supremainc.com



Innovative Fingerprint Terminal

Installation Guide

(ver 1.1)

Contents


Product Contents	3
Connectors for External Interfaces	5
Cable and Connector Pinout	6
Installation Example	7
Product Dimension	8
Installation of Wall-mount Bracket	9
Power Connection	10
USB Cable Connection	11
LAN Connection	12
Wireless LAN Connection	13
RS485 Network Connection	14
USB Memory Connection	15
Intercom Connection	16
Relay Connection – Fail Safe Lock	17
Relay Connection – Fail Secure Lock	18
Relay Connection - Automatic Door	19
TTL Input Port Connection – RTE Switches	20
TTL Output Port Connection	21
Wiegand Input Connection – External reader	22
Wiegand Output Connection – Control Panel	23
Ferrite Core Installation	24
System Specification	25
Electrical Specification	26

Product Contents

■ Basic Contents



BioStation fingerprint terminal

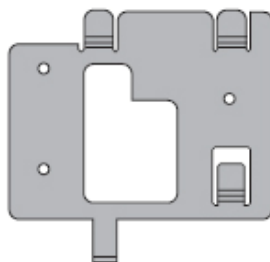

Wall mounting metal bracket



Wall mounting
screws and holders - 3 ea



Star-shape screw for fixing
main body



USB cable



Star-shape small wrench




5pin, 3pin, 6pin, 4pin, 7pin cable – 1 ea




Software CD

Product Contents

■ Optional accessories

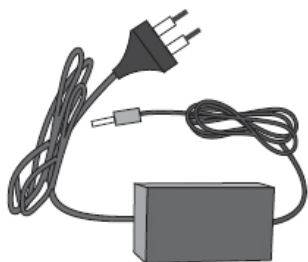

12V power adaptor

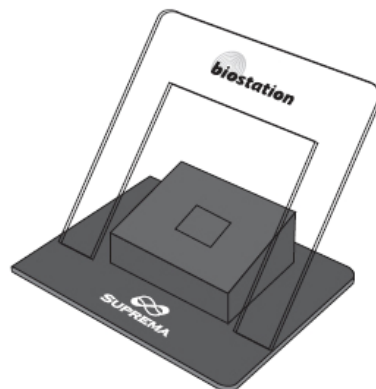


Plastic stand type A



Plastic stand type B



 
USB fingerprint scanner
for enrollment on PC



USB memory




Wireless LAN Access Point

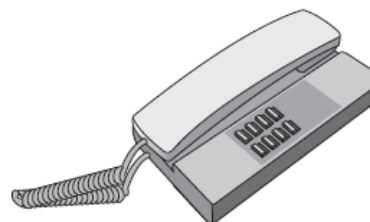

Interphone

Connectors for External Interfaces


■ Bottom

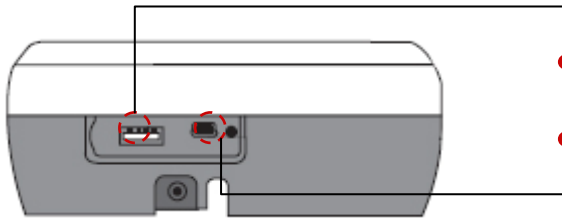

● Slot for USB memory device : USB type A

● Slot for PC USB connection : Mini USB

■ Rear

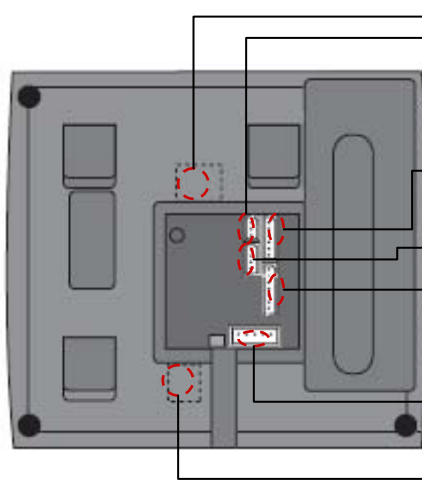

● Ethernet cable connector : RJ45

● 3pin cable connector - Door

● 6pin cable connector – Input/Output or Wiegand

● 4pin cable connector - RS485

● 7pin cable connector - RS232 or BEACon

● 5pin cable connector – Power and doorphone

● 12V power adaptor

Cable and Connector Pinout

Power & Doorphone




PIN	PIN DESCRIPTION	WIRE
1	POWER + (12Vdc)	RED
2	POWER -	BLACK
3	Doorphone AUDIO	ORANGE
4	Doorphone DATA	BLUE
5	SHIELD GND	GRAY

Relay




PIN	PIN DESCRIPTION	WIRE
1	NORMAL OPEN	WHITE
2	COMMON	BLUE
3	NORMAL CLOSE	ORANGE

TTL I/O or Wiegand

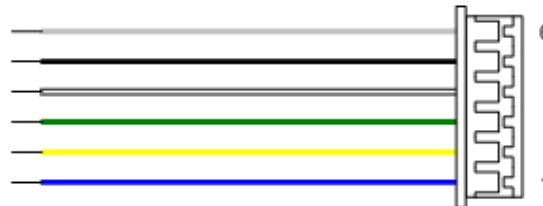


PIN	PIN DESCRIPTION	WIRE
1	TTL or Wiegand IN0	BLUE
2	TTL or Wiegand IN1	YELLOW
3	TTL or Wiegand OUT0	GREEN
4	TTL or Wiegand OUT1	WHITE
5	GND	BLACK
6	SHIELD GND	GRAY

RS485

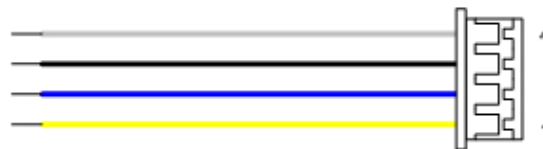


PIN	PIN DESCRIPTION	WIRE
1	TRX -	YELLOW
2	TRX +	BLUE
3	GND	BLACK
4	SHIELD GND	GRAY

RS232

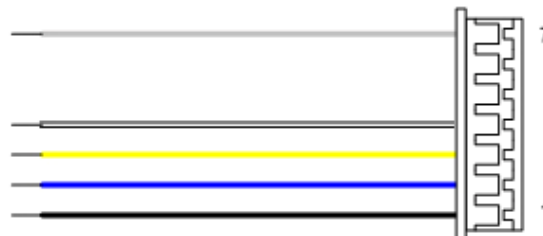


PIN	PIN DESCRIPTION	WIRE
1	GND	BLACK
2	RS-232 TX	BLUE
3	RS-232 RX	YELLOW
4	TTL OUT1	WHITE
7	SHIELD GND	GRAY


Installation Example

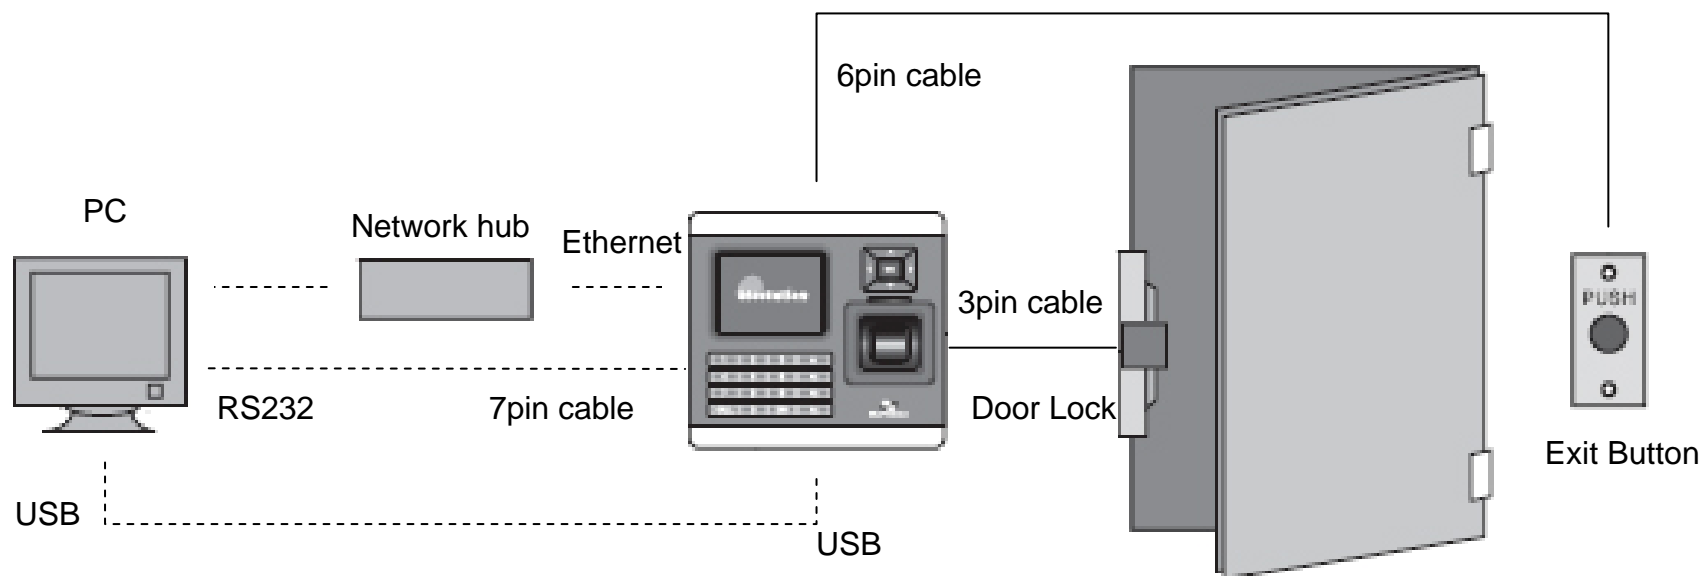


Product Dimension

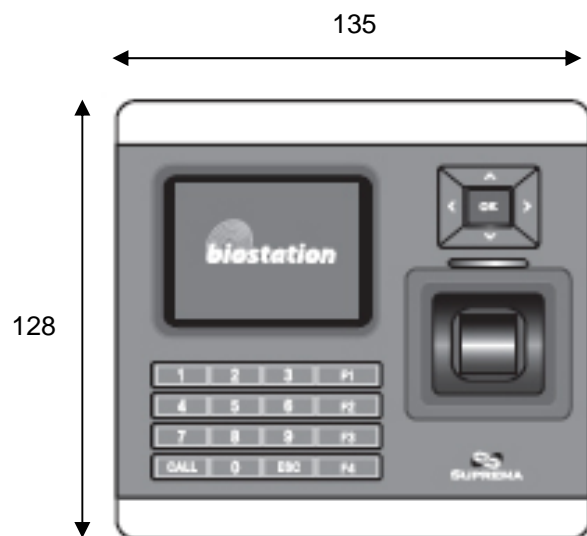

Front

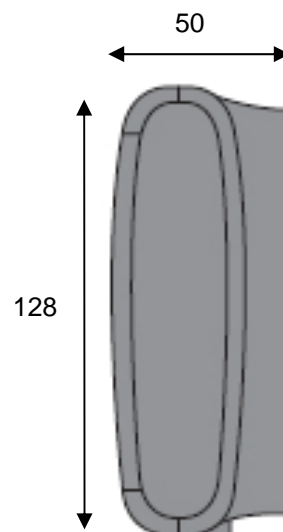

Side

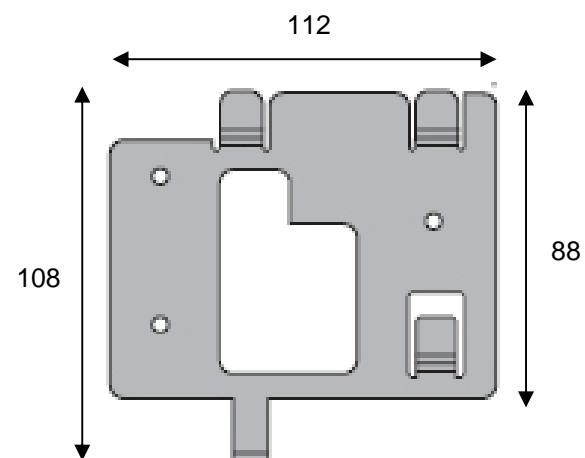


Bracket

(unit : mm)


Installation of Wall-mount Bracket

- Fix wall mount bracket on a wall using wall mounting screws


Wall Mounting
Screws

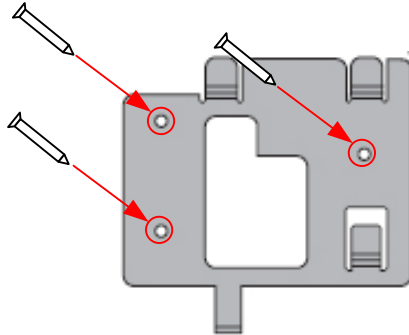

- Hook BioStation on the wall mount bracket.

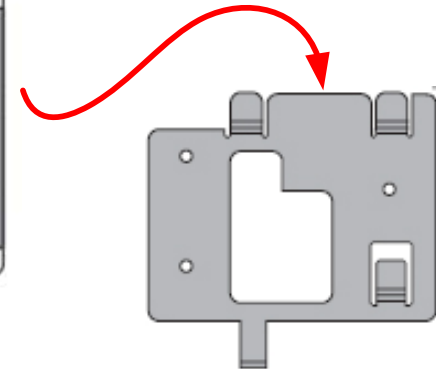


- Fix BioStation and wall mounting bracket using a star shape screw.

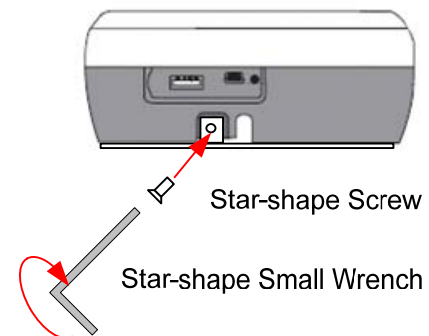

Power Connection


Method 1

DC12V ADAPTOR

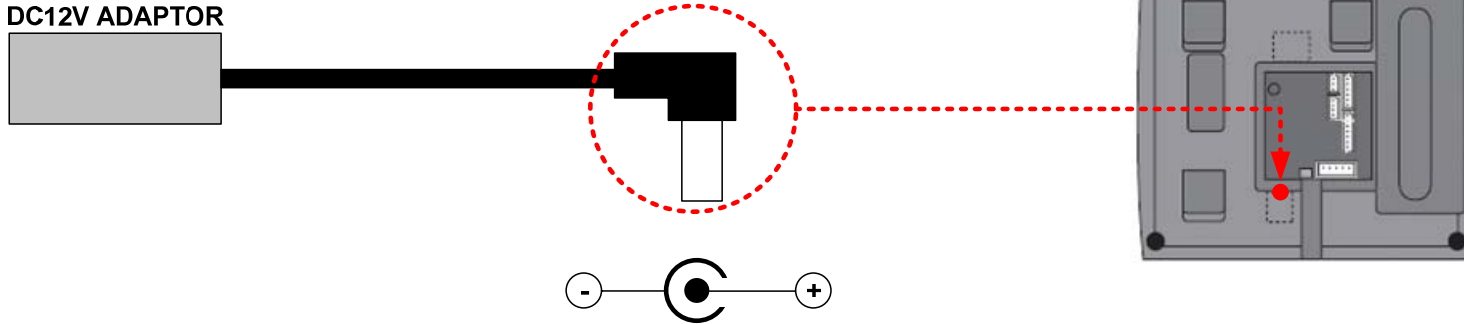

Method 2


DC12V POWER

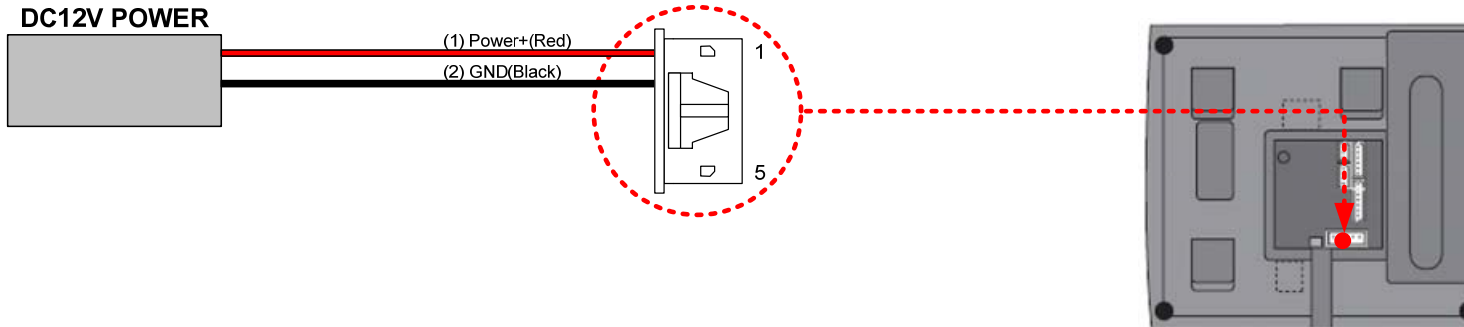


Recommended power supply

- 12V \pm 10%, at least 1500mA for BioStation alone installation.
- Comply with standard IEC/EN 60950-1
- To share the power with other devices, use a power supply with higher current ratings.

USB Cable Connection

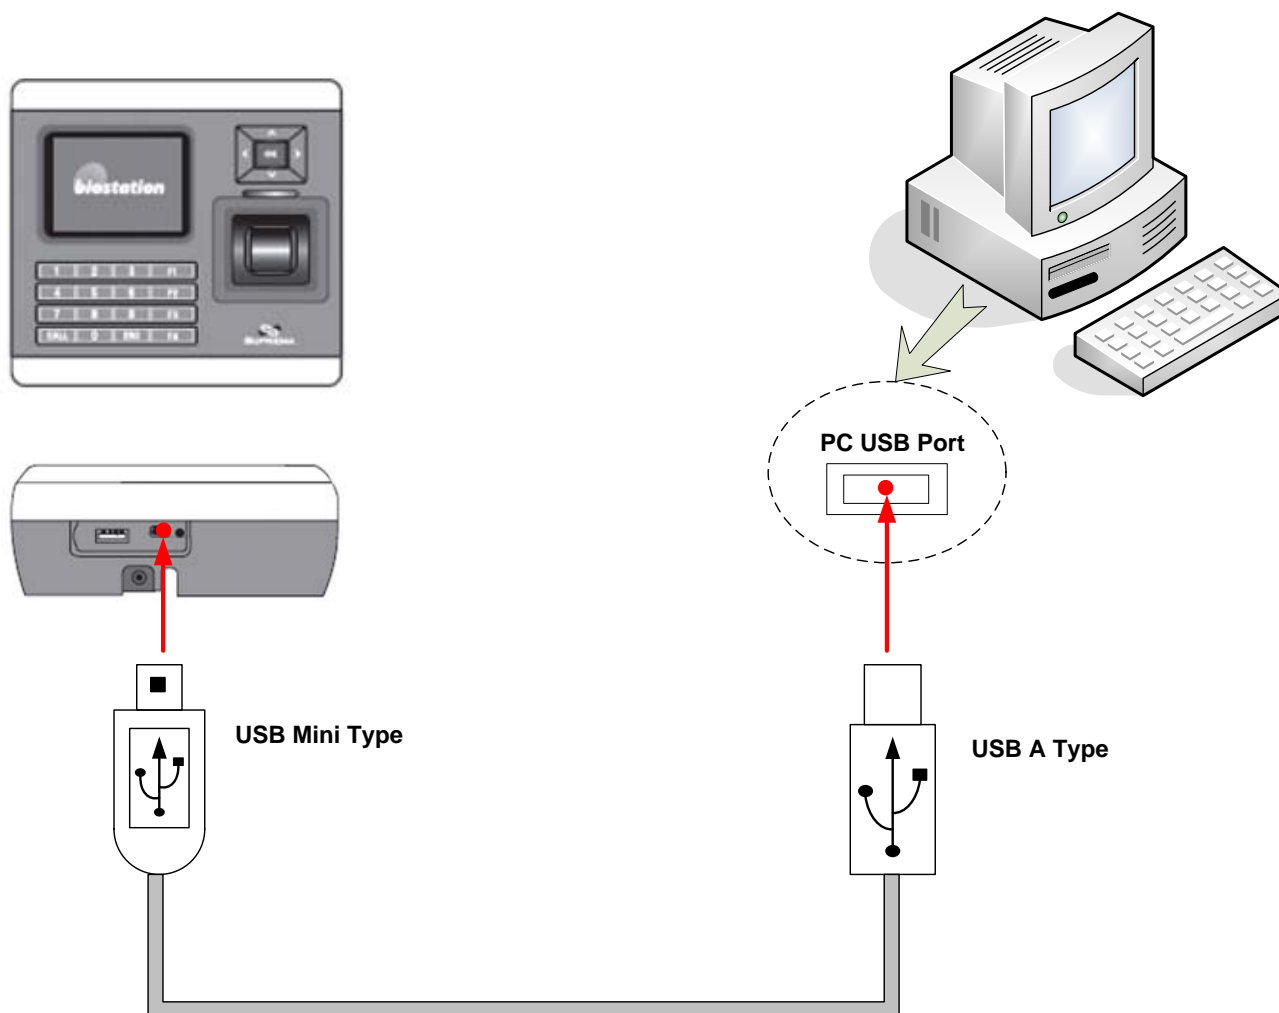

LAN Connection


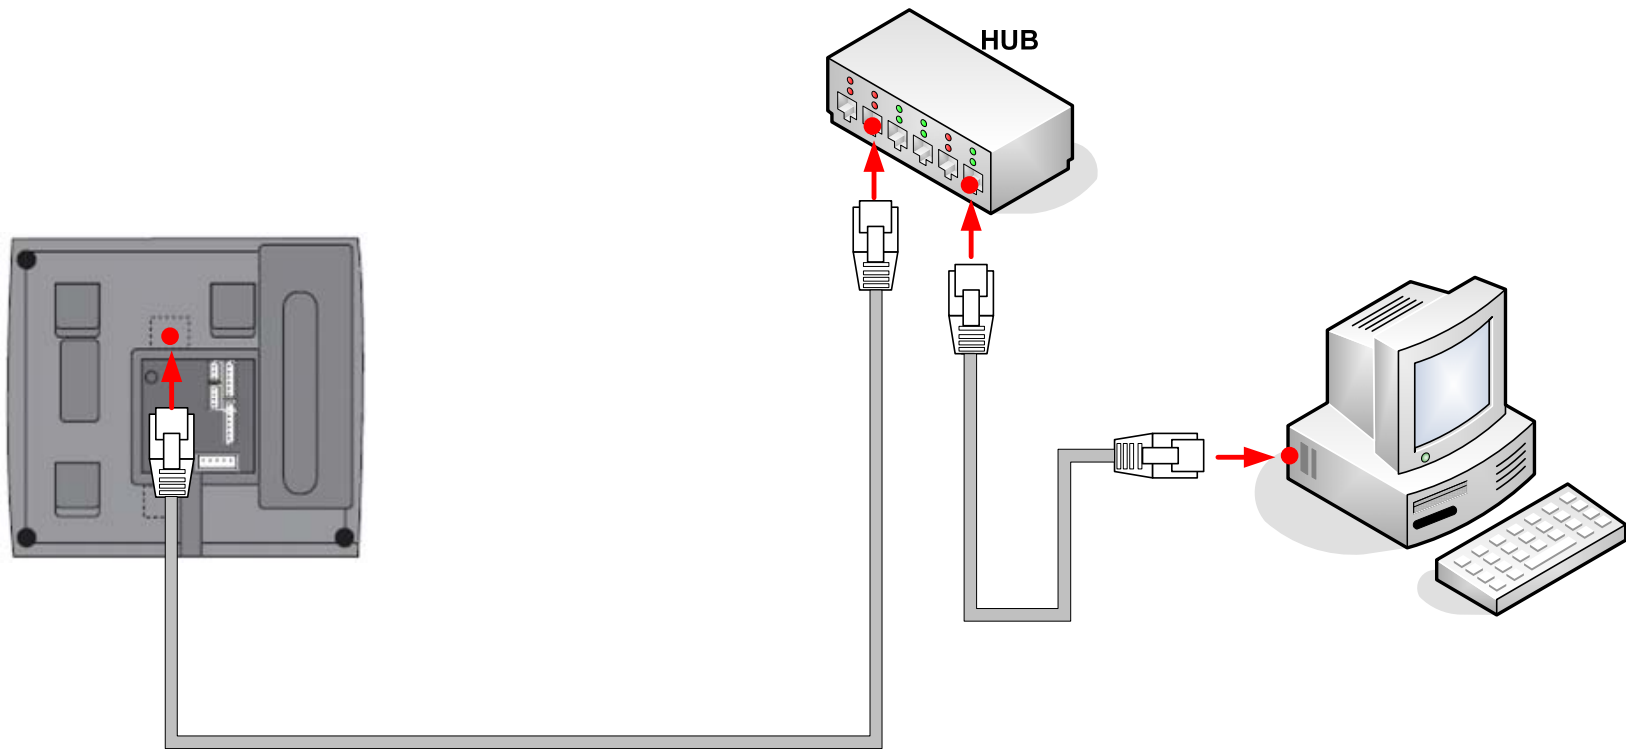


Wireless LAN Connection


- Performance of wireless LAN is affected a lot by surrounding environments and the type of AP(Access Point).
- The list of APs with compatibility tested with BioStation is as follows.
 - Buffalo WHR-HP-G54
 - Cisco-Linksys WRTH54GS
 - 3COM OfficeConnect 3CRWE554G72T
- Using an AP other than these lists, wireless LAN communication may not work properly.

★ Warning ★

If you installed USB Wireless LAN and closed rubber cap, there might be communication error or a fire due to the overheating.

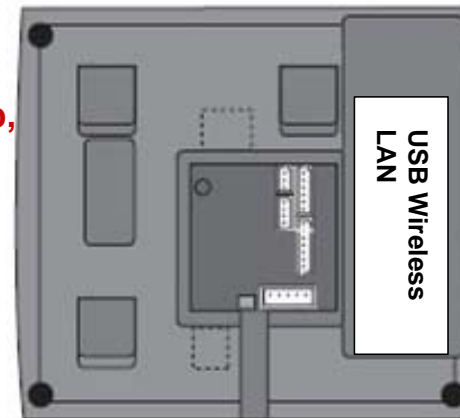
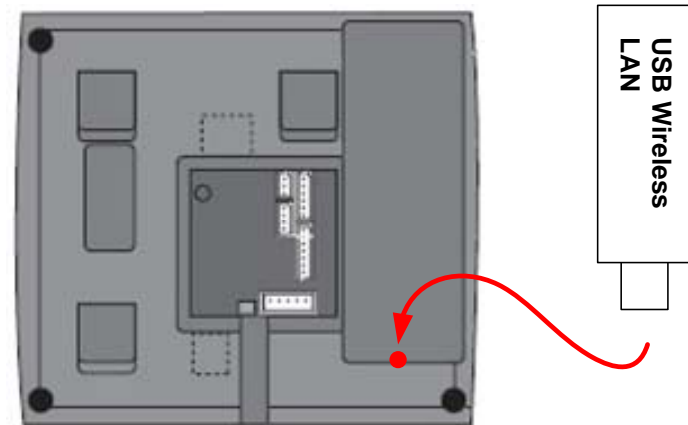


RS485 Network Connection

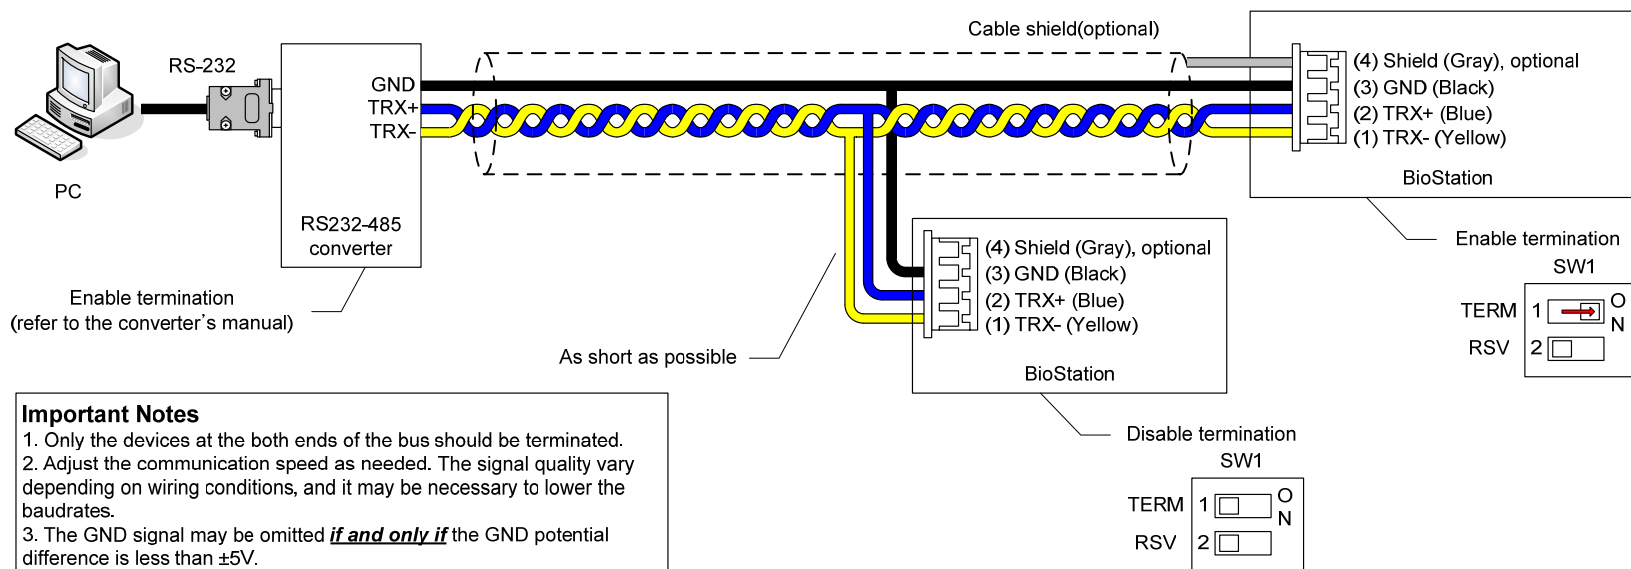


USB Memory Connection


- **Because of hardware compatibility issue, some USB memory devices may not work properly.**
- **The following is a list of USB memory devices already tested with BioStation.**
 - SanDisk cruzer micro 512MB
 - Transcend JF110 512MB
 - Transcend JF150 512MB
 - LG XTICK 512MB
 - Samsung PLEOMAX SPUB-S50 1GB
 - Sony Microvault USM512J
 - Imation iFLASH Slim 512MB
 - Imation Swivel Pro 512MB
 - PQI Intelligent Stick 1GB

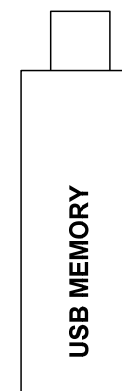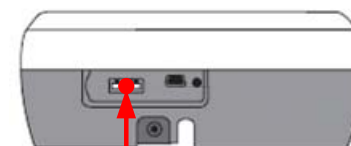


Intercom Connection

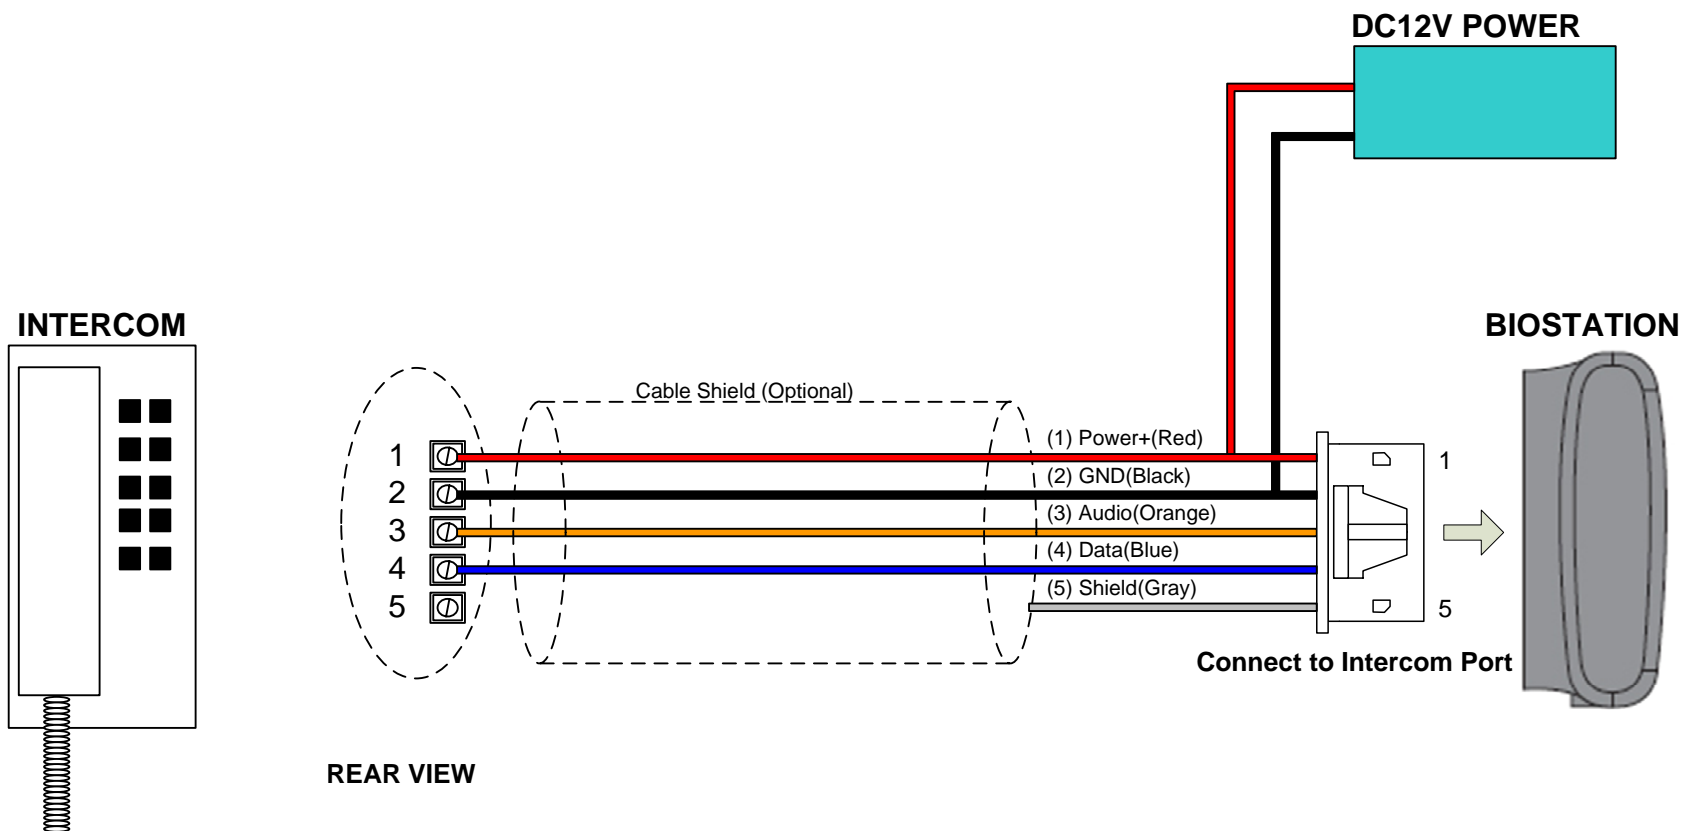


Relay Connection – Fail Safe Lock

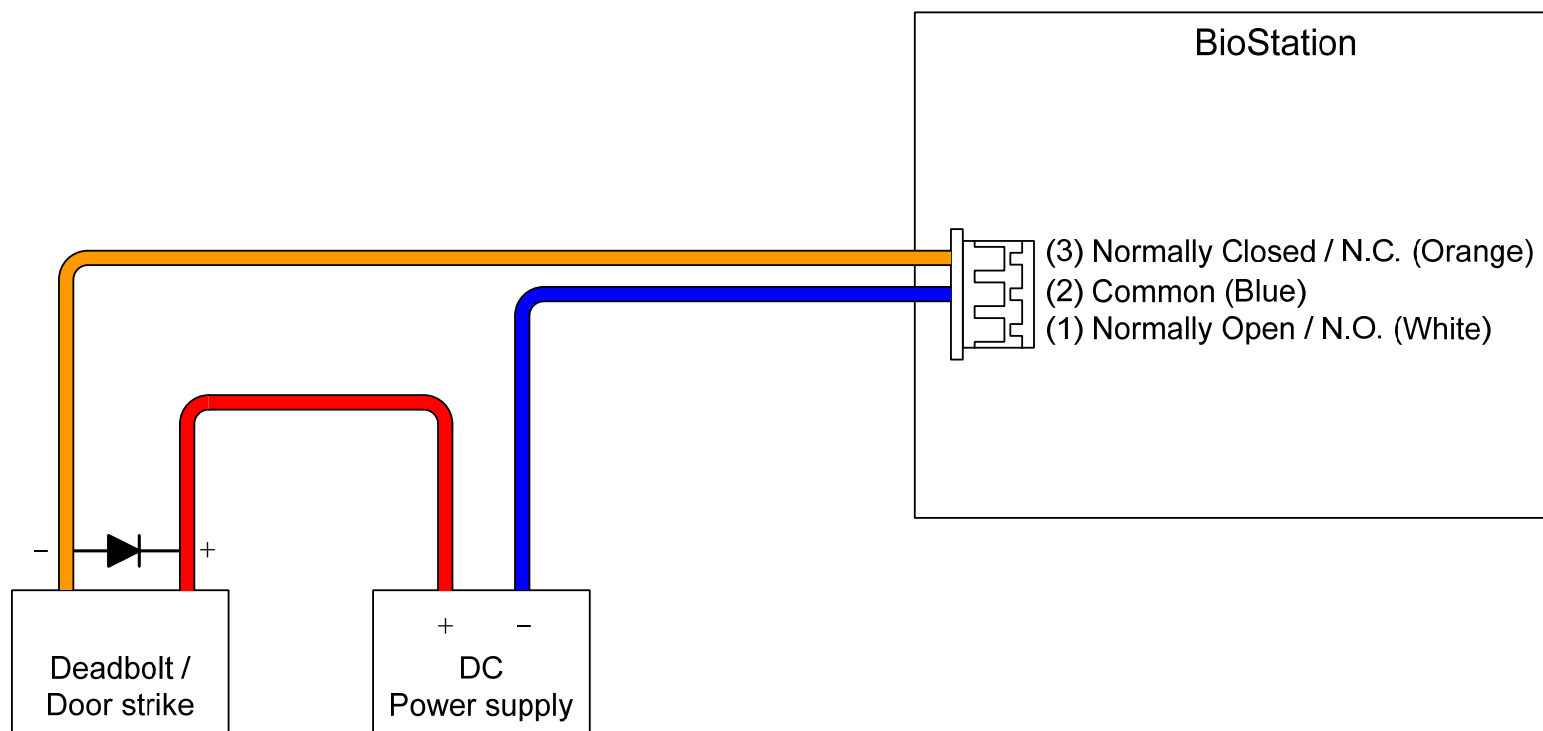


Relay Connection – Fail Secure Lock

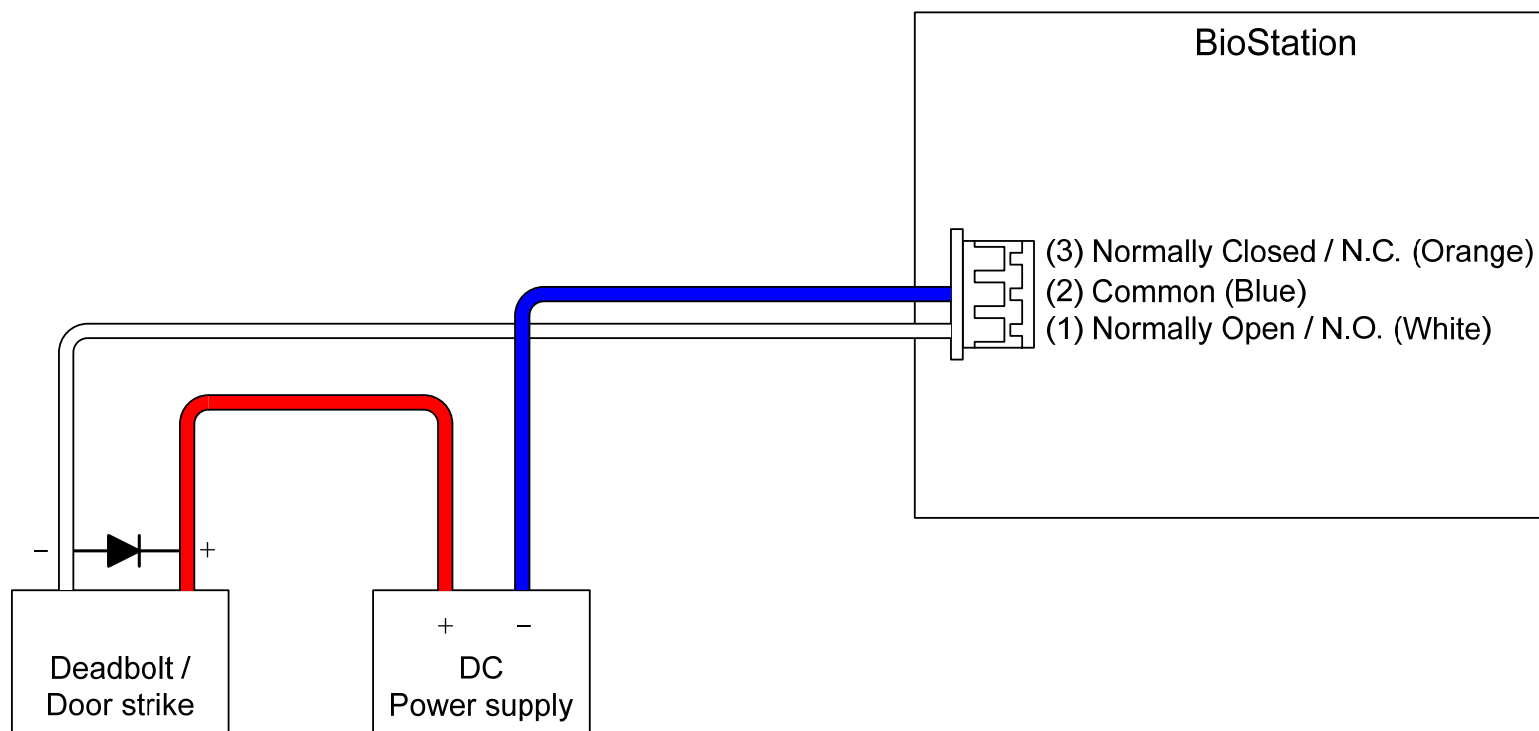


Relay Connection - Automatic Door

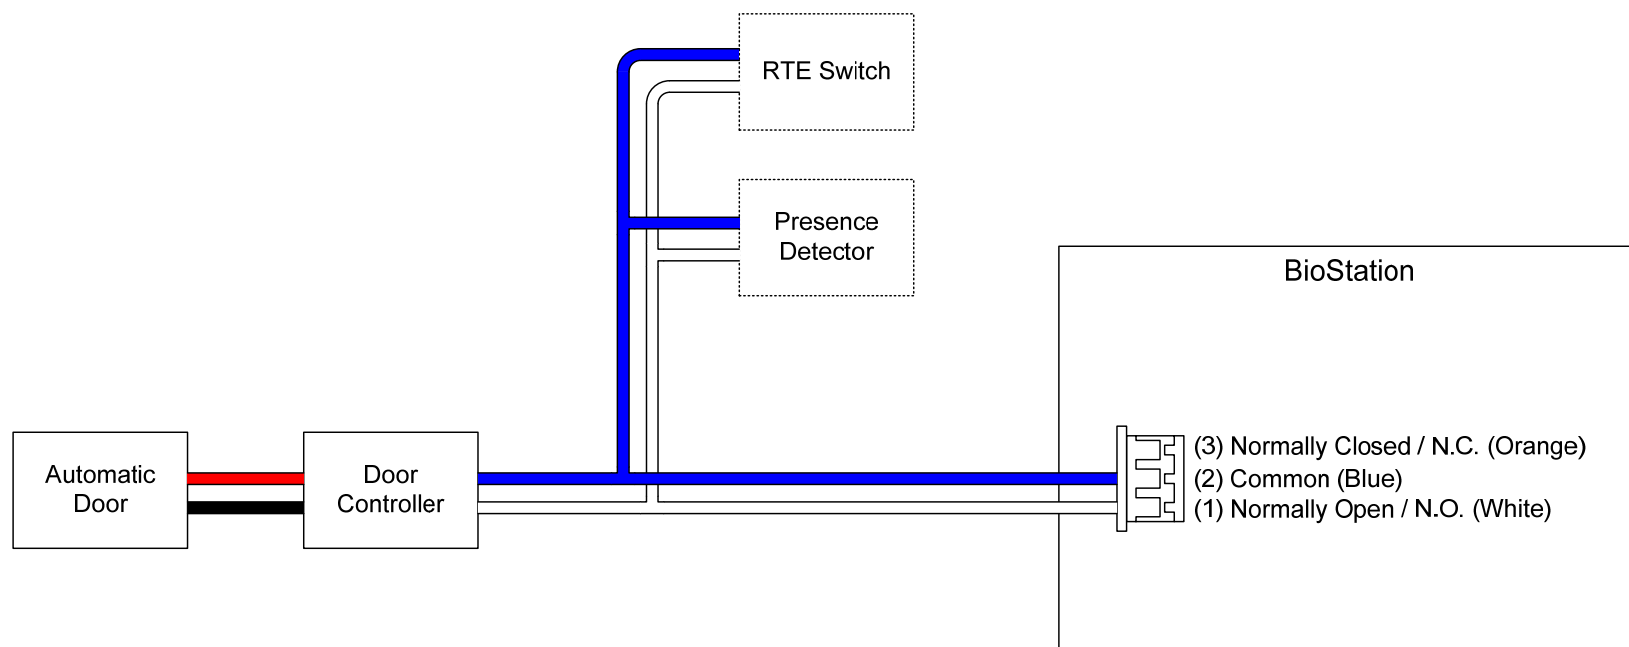


TTL Input Port Connection – RTE Switches

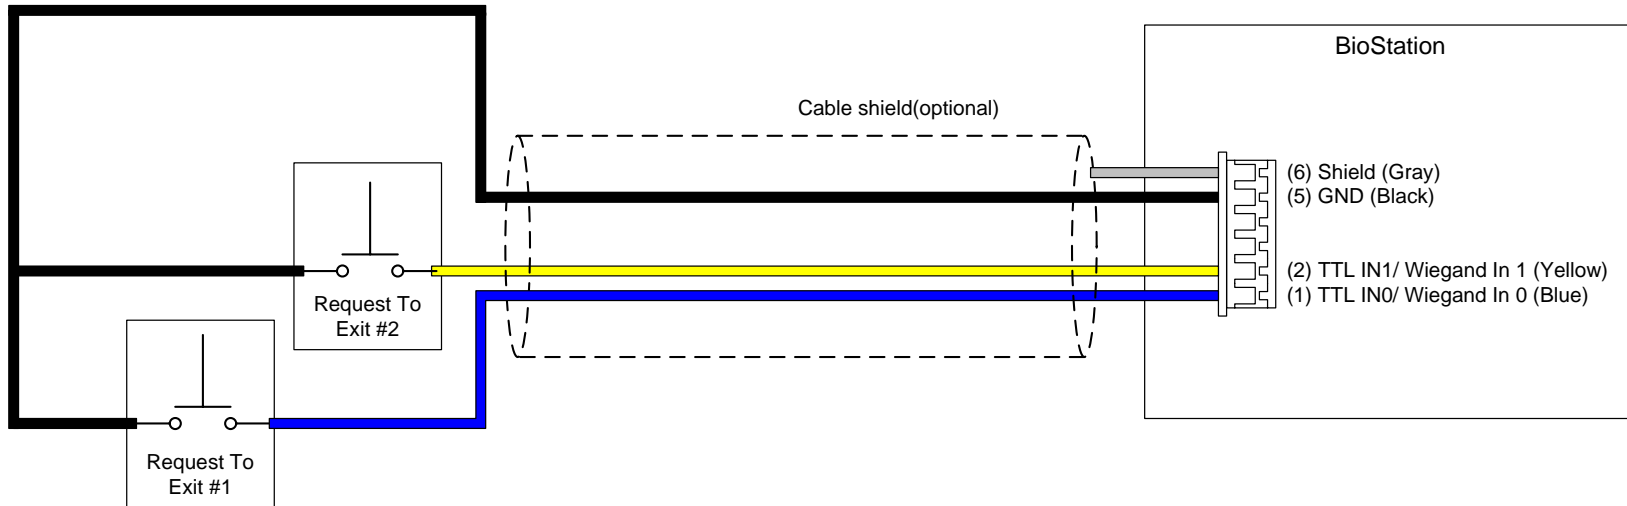


TTL Output Port Connection

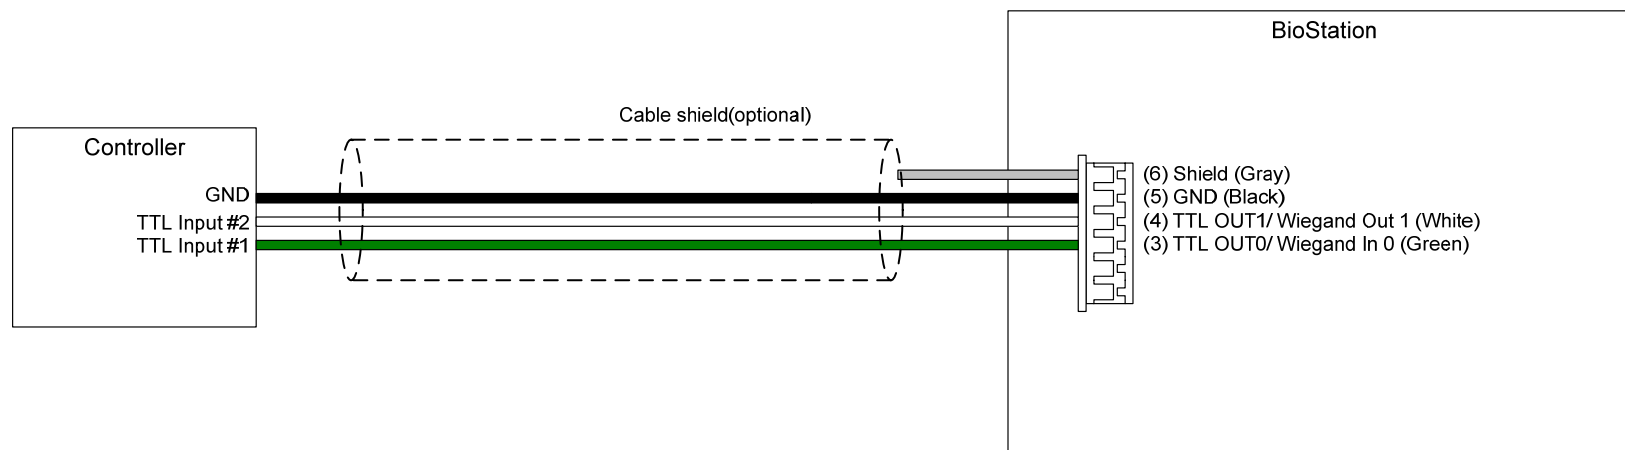


Wiegand Input Connection – External reader

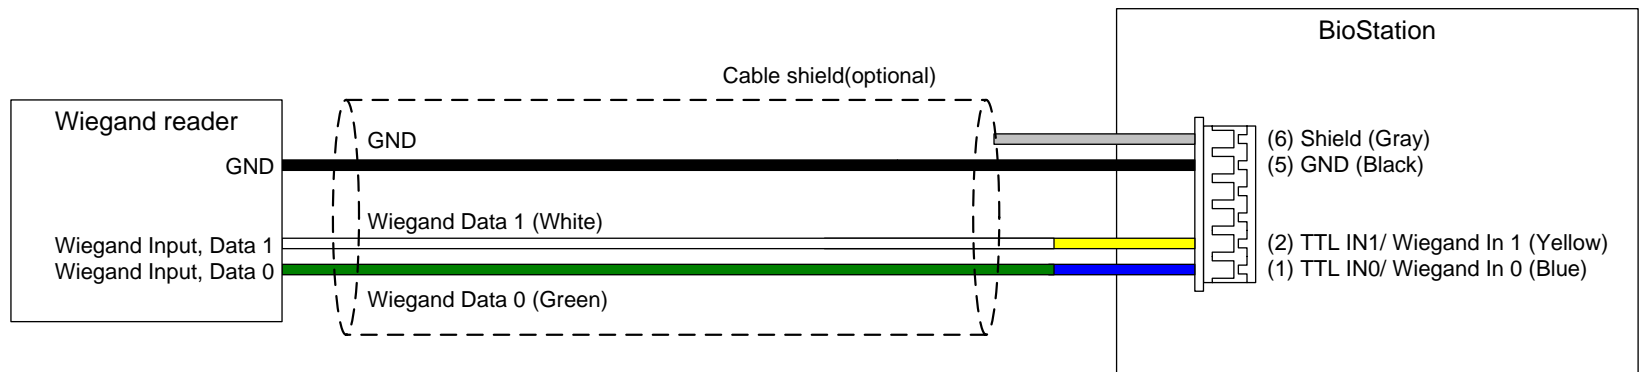


Wiegand Output Connection – Control Panel

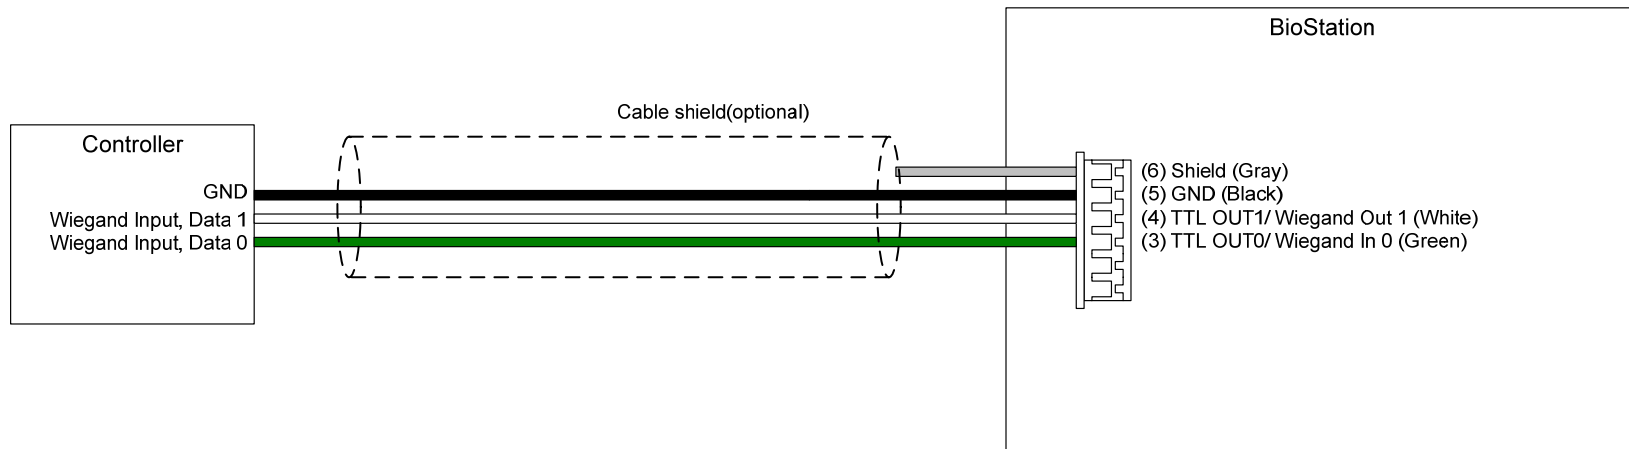

Ferrite Core Installation

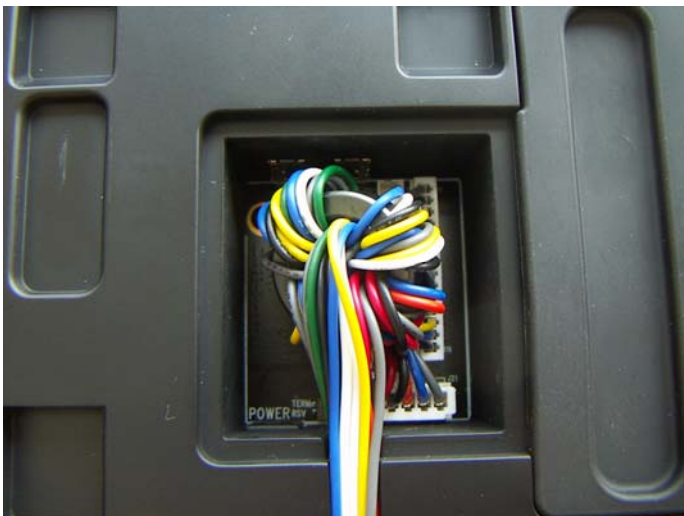

Core winding

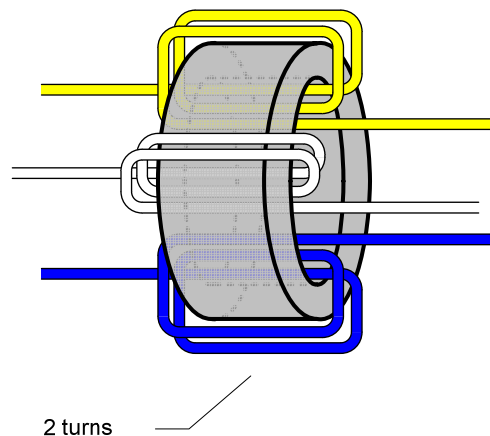

The following cables must be wound around the core (2 turns)

1. RS232 cable
2. RS485 cable
3. Intercom/Power cable
4. TTL/Wiegand IO cable

System Specifications

- **CPU : Dual CPU (32 bit RISC + 400MHz DSP)**
- **Memory : 72MB flash + 34MB RAM**
- **Display : 2.5 inch QVGA 16 million color LCD**
- **Identification speed : 3,000 fingerprints in 1 second**
- **Fingerprint capacity : 50,000 fingerprint templates**
- **Log capacity : 500,000 events**
- **Host interface : Wireless LAN (optional), TCP/IP, RS485**
- **PC interface : USB, RS232**
- **USB memory slot : USB host**
- **1 relay for deadbolt, EM lock, door strike, or automatic door**
- **Wiegand input/output, 4 TTL input/output**
- **Built-in microphone and speaker supporting door phone**
- **Convenient menu navigation key**
- **4 function keys for user defined functions**
- **Operation mode : Fingerprint, PIN, PIN+Fingerprint,
Card only*, Card+Fingerprint*, Card+PIN* (*RF model only)**
- **RF Card : 125KHz proximity (RF model only)**
- **RTC with backup battery (CR2032)****
- **Product size : 135 x 128 x 50 mm (width x length x depth)**

**** CAUTION** : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERY ACCORDING TO THE INSTRUCTIONS

Electrical Specification

	Min.	Typ.	Max.	Notes
Power				
Voltage (V)	10.8	12	13.2	
Current (mA)	-	500	800	
TTL/Wiegand Input				
V _{IH} (V)	2	-	-	
V _{IL} (V)	-	-	0.8	
Pull-up resistance (Ω)	-	10k	-	
TTL/Wiegand Output				
V _{OH} (V)	4	-	-	@ I _{OH} = -5mA
V _{OL} (V)	-	-	1	@ I _{OL} = 5mA
Output resistance (Ω)	-	100	-	
Relay				
Switching capacity (A)	-	-	1 0.3	30V DC 125V AC
Switching power (resistive)	-	-	30W 37.5VA	DC AC
Switching voltage (V)	-	-	110 125	DC AC



Suprema Inc.
16F Parkview Office Tower, Jeongja-dong, Bundang-gu,
Seongnam, Gyeonggi, 463-863 Korea
E-mail : support@supremainc.com
Website : www.supremainc.com

Functions and specifications of the product are subject to changes without notice due to quality enhancement or function update. For any inquiry on the product, please contact **Suprema Inc.**