

Chapter 5a: PSoC 6 / AnyCloud Core Concepts

After completing this chapter, you will understand what the PSoC solution is, what tools are included, and how to use those tools to compile and run programs on your device.

5A.1	PSOC 6 SOLUTION TOUR	2
5A.1.1	WEB	3
5A.1.2	ECLIPSE-BASED IDE	6
5A.1.3	TOOLS	10
5A.1.4	COMMAND LINE	11
5A.2	EXERCISES (PART 1)	14
5A.2.1	EXERCISE 1: BLINKING AN LED FROM THE ECLIPSE IDE	14
5A.2.2	EXERCISE 2: BLINKING LED FROM THE COMMAND LINE	17
5A.3	CREATE MODUSTOOLBOX PROJECTS	18
5A.3.1	PROJECT CREATOR TOOL	18
5A.3.2	COMMAND LINE / MANUAL SETUP	21
5A.4	IMPORTING/EXPORTING APPLICATIONS	24
5A.4.1	IMPORT PROJECTS INTO THE ECLIPSE IDE	24
5A.4.2	EXPORT FOR VISUAL STUDIO (VS) CODE	26
5A.4.3	EXPORT FOR IAR EMBEDDED WORKBENCH	32
5A.4.4	EXPORT FOR KEIL μ VISION	34
5A.5	PROJECT DIRECTORY ORGANIZATION	36
5A.5.1	BINARIES	36
5A.5.2	INCLUDES	36
5A.5.3	BUILD	36
5A.5.4	DEPS	36
5A.5.5	IMAGES	37
5A.5.6	LIBS	37
5A.5.7	MAIN.C	37
5A.5.8	LICENSE	37
5A.5.9	MAKEFILE	37
5A.5.10	MAKEFILE.INIT	38
5A.5.11	README.MD	38
5A.6	LIBRARY MANAGEMENT	39
5A.6.1	LIBRARY CLASSIFICATION	39
5A.6.2	LIBRARY MANAGEMENT FLOWS	39
5A.6.3	BSP CONFIGURATORS	41
5A.6.4	LIBRARY CONFIGURATORS	45
5A.6.5	LIBRARY MANAGER	48
5A.6.6	MANUAL LIBRARY MANAGEMENT	51
5A.6.7	RE-DOWNLOADING LIBRARIES	54
5A.7	BOARD SUPPORT PACKAGES	55
5A.7.1	BSP DIRECTORY STRUCTURE	55
5A.7.2	BSP DOCUMENTATION	57
5A.7.3	MODIFYING THE BSP CONFIGURATION (E.G. DESIGN.MODUS) FOR AN APPLICATION	58
5A.7.4	CREATING YOUR OWN BSP	59
5A.7.5	UPDATING THE MCU DEVICE IN A BSP	60
5A.7.6	UPDATING THE CONNECTIVITY DEVICE IN A BSP	60
5A.8	APPLICATION LAYERS	61
5A.8.1	HAL	61
5A.8.2	PDL	63

5A.8.3	CONFIGURATORS	63
5A.9	MODUSTOOLBOX CONFIGURATORS	64
5A.9.1	BSP CONFIGURATORS	64
5A.9.2	LIBRARY CONFIGURATORS	69
5A.10	MANIFESTS	70
5A.11	NETWORK CONSIDERATIONS	71
5A.11.1	NETWORK PROXY SETTINGS	71
5A.11.2	OFFLOADING MANIFEST FILES	72
5A.11.3	OFFLINE CONTENT	72
5A.12	FREERTOS	73
5A.13	COMPILER OPTIMIZATION	73
5A.14	DUAL CPU DESIGNS	74
5A.15	EXERCISES (PART 2)	75
5A.15.1	EXERCISE 3: MODIFY THE BLINKING LED TO USE THE GREEN LED	75
5A.15.2	EXERCISE 4: MODIFY THE PROJECT TO BLINK GREEN/RED USING THE HAL	76
5A.15.3	EXERCISE 5: PRINT A MESSAGE USING THE RETARGET-IO LIBRARY	76
5A.15.4	EXERCISE 6: CONTROL THE RGB LED WITH A LIBRARY	78
5A.15.5	EXERCISE 7: CAPSENSE BUTTONS AND SLIDER	79
5A.15.6	EXERCISE 8: WRITE A MESSAGE TO THE TFT SHIELD	80
5A.15.7	EXERCISE 9: USE AN RTOS TO BLINK LEDs	82
5A.15.8	EXERCISE 10: USE THE IOT EXPERT FREERTOS TEMPLATE	84
5A.15.9	EXERCISE 11: CREATE A CUSTOM DEVICE CONFIGURATION	85
5A.15.10	EXERCISE 12: CREATE AND USE A CUSTOM BSP	87

5a.1 PSoC 6 Solution Tour

The PSoC 6 solution & Reference flow contains a “classic” MCU development flow and it includes:

- The Eclipse IDE for ModusToolbox
- Hardware Abstraction Layer (HAL)
- Board Support Packages (BSPs) for supported kits
- Peripheral Driver Library (PDL)
- Libraries (Retarget-IO, emWin etc.)
- Programming and debug tools


This section provides a brief tour of the ModusToolbox websites, Eclipse IDE, and various tools.

5a.1.1 Web

Cypress.com

On the Cypress website, you can download the software, view the documentation, and access the solutions:

<https://www.cypress.com/products/modustoolbox-software-environment>

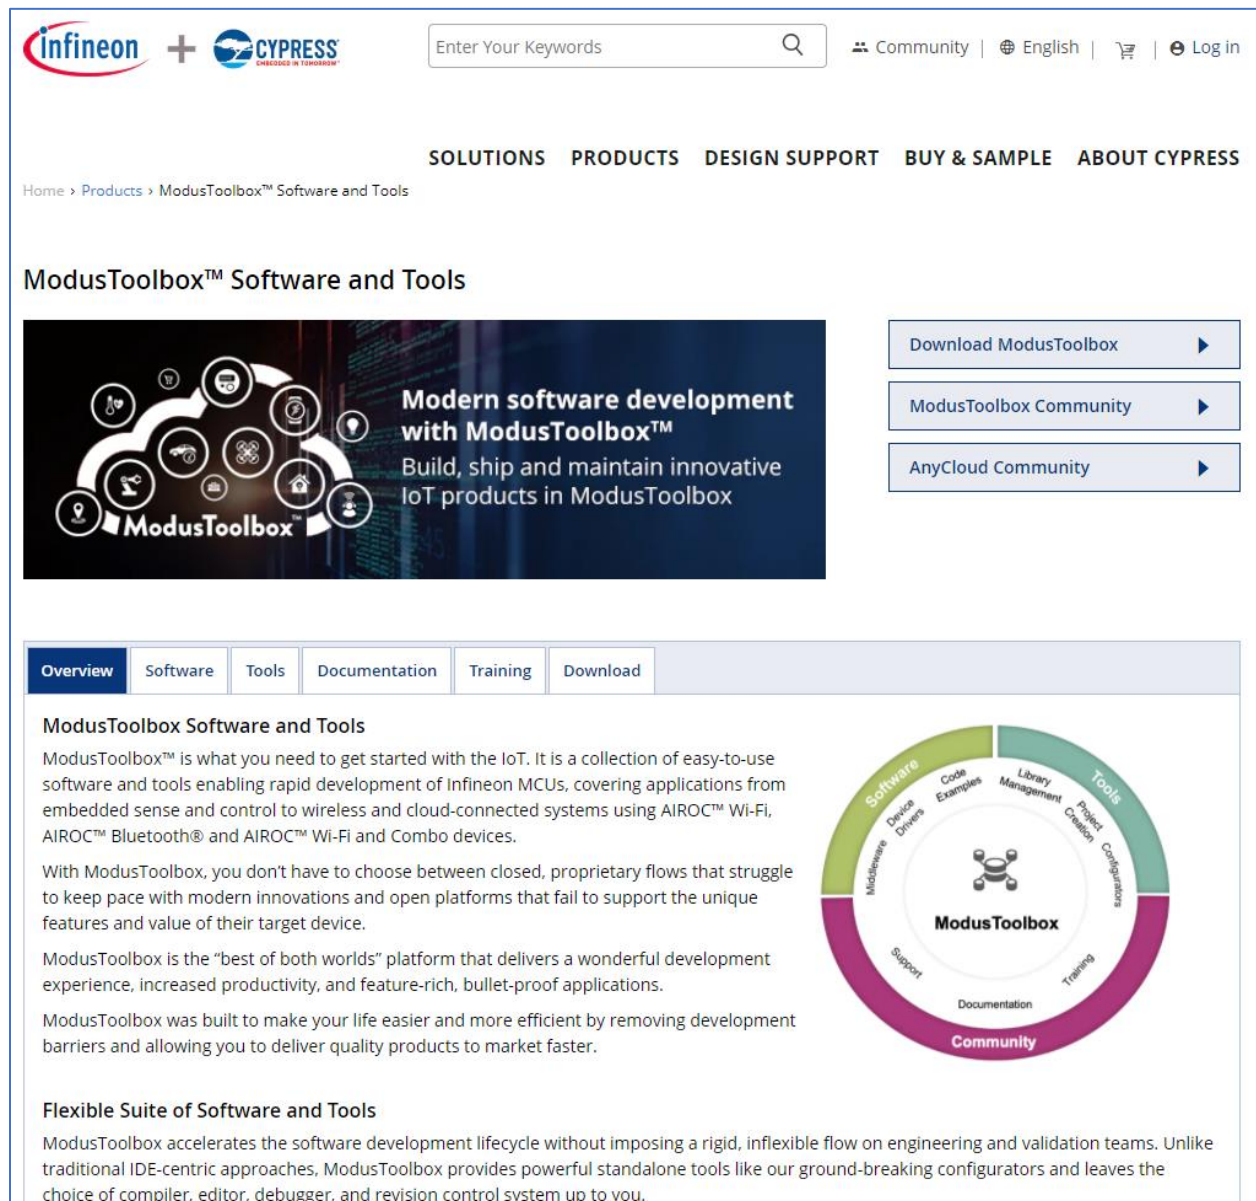

The screenshot shows the Cypress website for ModusToolbox Software and Tools. The header includes the Infineon and Cypress logos, a search bar, and navigation links for Community, English, and Log in. The main navigation bar lists SOLUTIONS, PRODUCTS, DESIGN SUPPORT, BUY & SAMPLE, and ABOUT CYPRESS. The breadcrumb trail is Home > Products > ModusToolbox™ Software and Tools.

ModusToolbox™ Software and Tools

Modern software development with ModusToolbox™
Build, ship and maintain innovative IoT products in ModusToolbox

Download ModusToolbox
ModusToolbox Community
AnyCloud Community

Overview | Software | Tools | Documentation | Training | Download

ModusToolbox Software and Tools

ModusToolbox™ is what you need to get started with the IoT. It is a collection of easy-to-use software and tools enabling rapid development of Infineon MCUs, covering applications from embedded sense and control to wireless and cloud-connected systems using AIROC™ Wi-Fi, AIROC™ Bluetooth® and AIROC™ Wi-Fi and Combo devices.


With ModusToolbox, you don't have to choose between closed, proprietary flows that struggle to keep pace with modern innovations and open platforms that fail to support the unique features and value of their target device.

ModusToolbox is the “best of both worlds” platform that delivers a wonderful development experience, increased productivity, and feature-rich, bullet-proof applications.

ModusToolbox was built to make your life easier and more efficient by removing development barriers and allowing you to deliver quality products to market faster.

Flexible Suite of Software and Tools

ModusToolbox accelerates the software development lifecycle without imposing a rigid, inflexible flow on engineering and validation teams. Unlike traditional IDE-centric approaches, ModusToolbox provides powerful standalone tools like our ground-breaking configurators and leaves the choice of compiler, editor, debugger, and revision control system up to you.

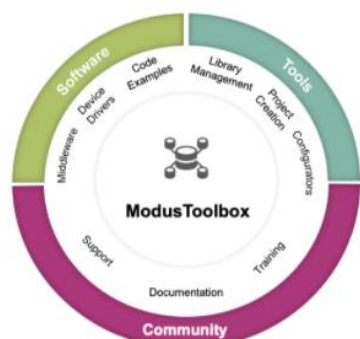


The diagram illustrates the ModusToolbox ecosystem as a circular flow. At the center is the ModusToolbox logo. Surrounding it are various components: Software (including Code Examples, Library Management, and Project Creation), Tools (including Configuration, Training, and Documentation), and Community (including Support, Middleware, and Device Drivers). The flow is clockwise, indicating a continuous development cycle.

Community

On the ModusToolbox Community website, you can interact with other developers and access various Knowledge Base Articles (KBAs):

<https://community.cypress.com/community/software-forums/modustoolbox>

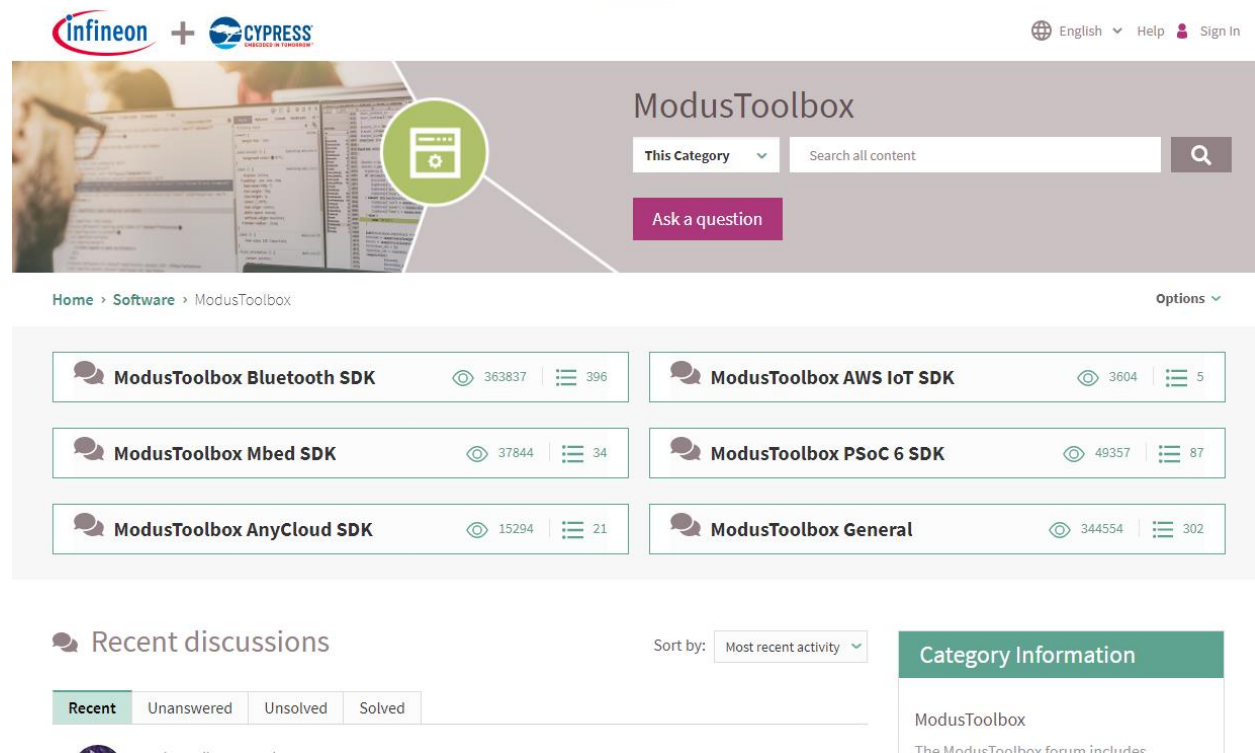


The screenshot shows the ModusToolbox Community website. At the top, there are logos for Infineon and Cypress, along with a search bar and a sign-in link. The main header features the text "ModusToolbox" and a search bar. Below the header, there is a navigation bar with "Home" and "Software" links. The main content area displays a grid of six categories, each with a speech bubble icon, the category name, and a count of posts and answers. The categories are: ModusToolbox Bluetooth SDK (363837 posts, 396 answers), ModusToolbox AWS IoT SDK (3604 posts, 5 answers), ModusToolbox Mbed SDK (37844 posts, 34 answers), ModusToolbox PSoC 6 SDK (49357 posts, 87 answers), ModusToolbox AnyCloud SDK (15294 posts, 21 answers), and ModusToolbox General (344554 posts, 302 answers). Below the grid, there is a "Recent discussions" section with a "Sort by" dropdown set to "Most recent activity". To the right of the discussions is a "Category Information" box for ModusToolbox, which includes the text "The ModusToolbox forum includes".

Category	Posts	Answers
ModusToolbox Bluetooth SDK	363837	396
ModusToolbox AWS IoT SDK	3604	5
ModusToolbox Mbed SDK	37844	34
ModusToolbox PSoC 6 SDK	49357	87
ModusToolbox AnyCloud SDK	15294	21
ModusToolbox General	344554	302

Github.com

The Cypress GitHub website contains all the BSPs, code examples, and libraries for use with various ModusToolbox tools.

<https://github.com/cypresssemiconductorco>

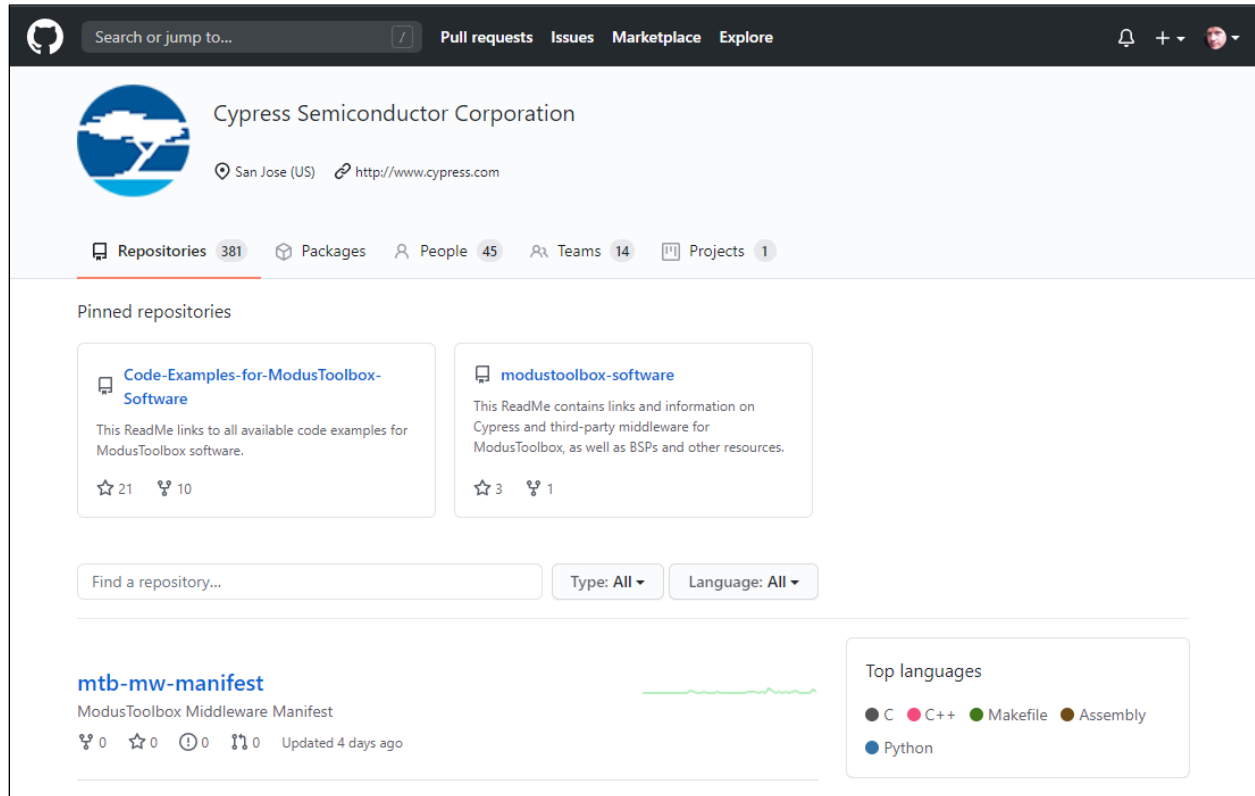

Note If you want to see HTML documentation from GitHub, you can access it using `cypresssemiconductorco.github.io` so that it is rendered properly. For example, if you go to the GitHub site for the RGB LED library, you will see this path to the documentation:


https://github.com/cypresssemiconductorco/rgb-led/blob/master/docs/api_reference_manual.html

To see the documentation properly rendered, change the URL to the following:

https://cypresssemiconductorco.github.io/rgb-led/api_reference_manual.html

5a.1.2 Eclipse-Based IDE

The Eclipse IDE for ModusToolbox uses several plugins, including the Eclipse C/C++ Development Tools (CDT) plugin. The IDE contains Eclipse standard menus and toolbars, plus various views such as the Project Explorer, Code Editor, and Console.

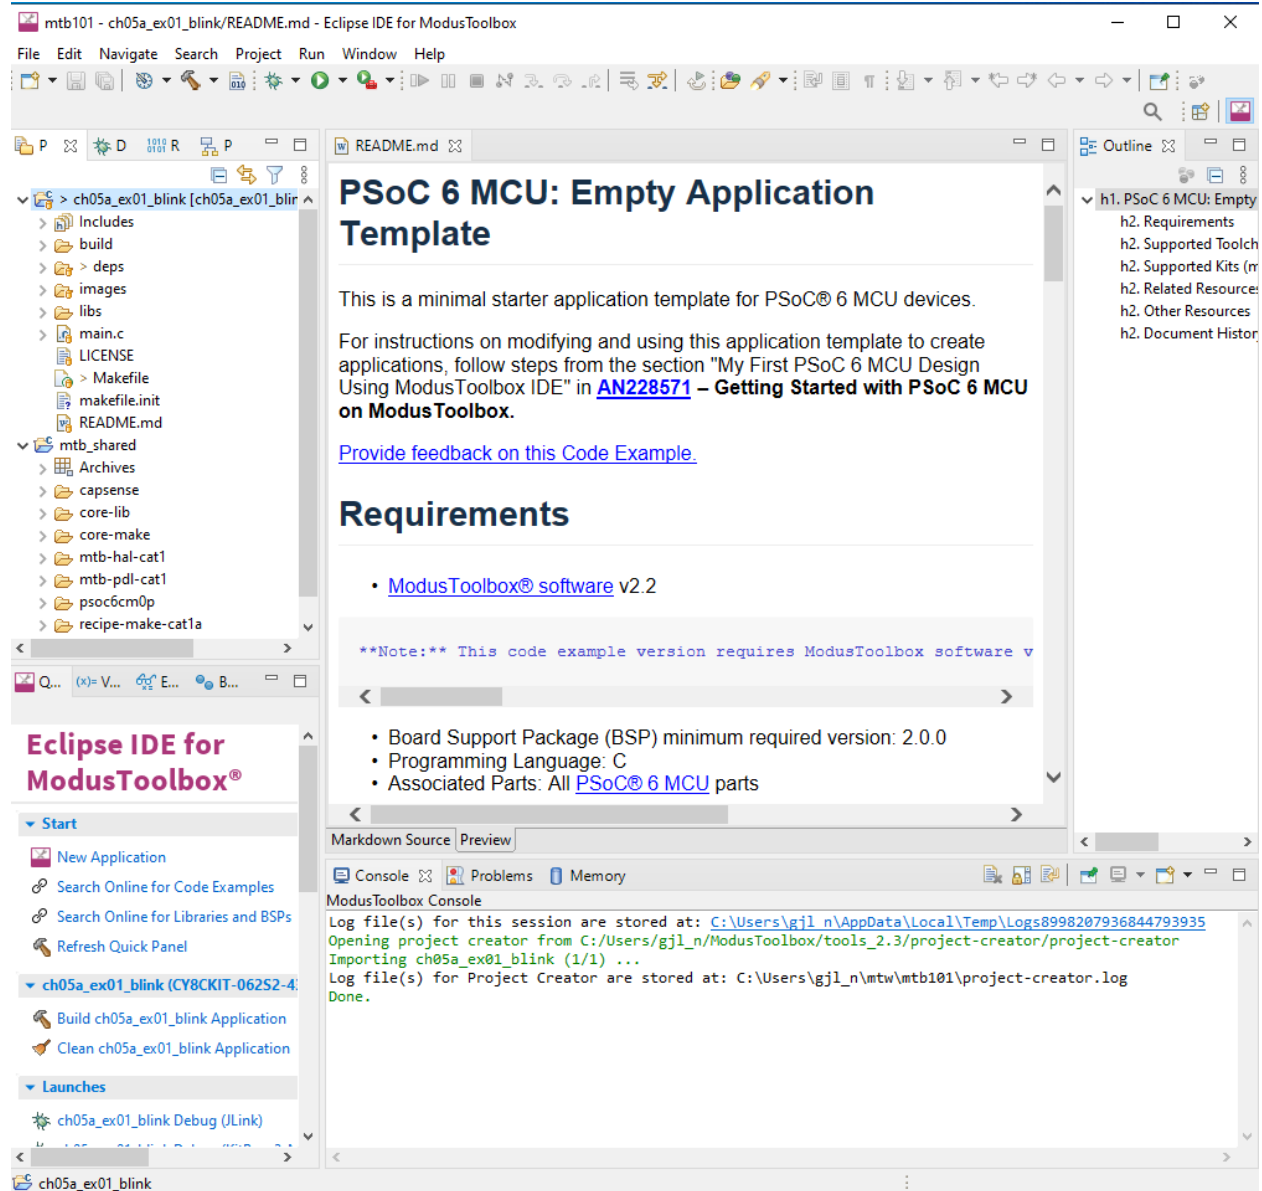


For more information about the IDE, refer to the “Eclipse IDE for ModusToolbox User Guide”:

<http://www.cypress.com/MTBEclipseIDEUserGuide>


Quick Panel

We have extended the Eclipse functionality with a “ModusToolbox” Perspective. Among other things (such as adding a bunch of useful Debug windows), this perspective includes a panel with links to commonly used functions including:

- Create a New Application
- Clean & Build
- Program/Debug Launches
- Tools (Configurators)
- Documentation

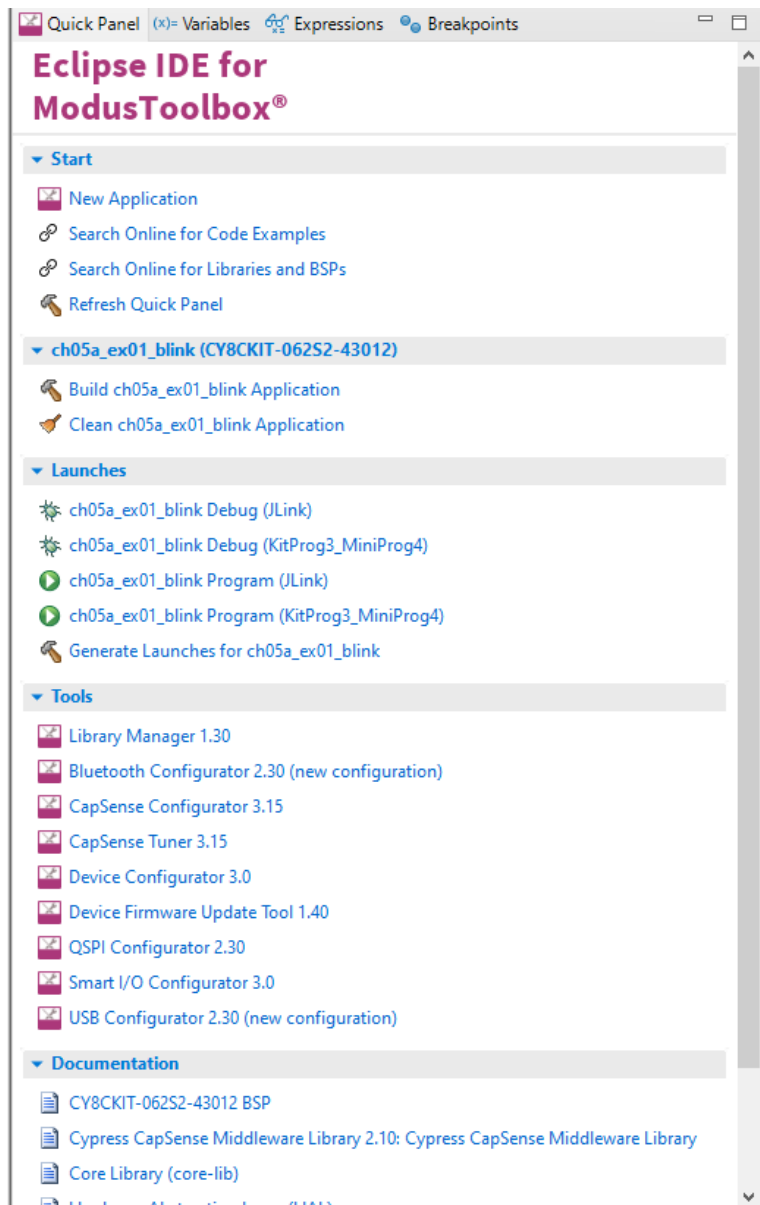


In addition to the launch configurations in the Quick Panel, there are usually others that you can find under **Run > Run Configurations > GDB OpenOCD Debugging** and **GDB SEGGER J-Link Debugging**. These typically include configurations to erase the chip or attach the debugger to a running target. You can also see exactly what the other launch configurations do from that menu.

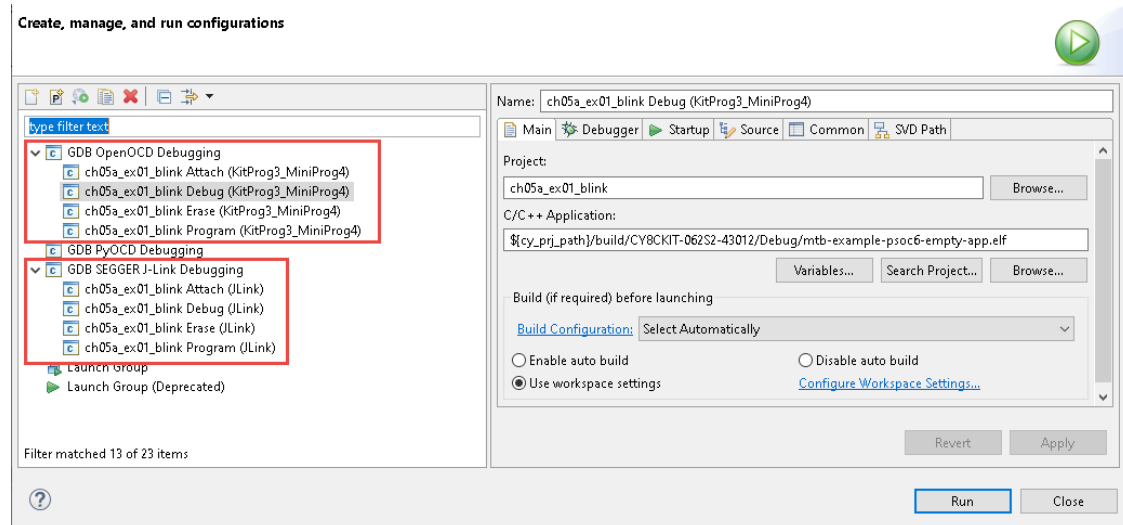

Help Menu

The IDE Help menu provides links to general documentation, such as the [ModusToolbox User Guide](#) and [ModusToolbox Release Notes](#), as well as IDE-specific documentation, such as the [Eclipse IDE for ModusToolbox Quick Start Guide](#).

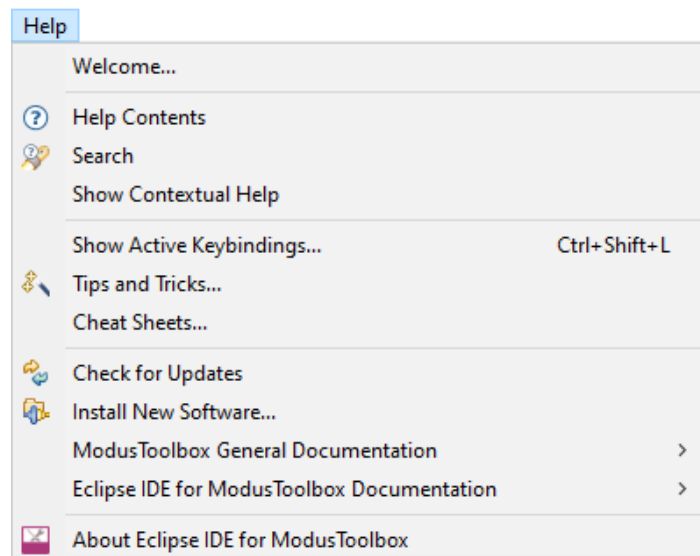


Integrated Debugger

The Eclipse IDE provides an integrated debugger using either the KitProg3 (OpenOCD) on the PSoC 6 development kit, or through a MiniProg4 or Segger J-Link debug probe.



Documentation

After creating a project, assorted links to documentation are available directly from the Quick Panel, under the “Documentation” section. This will update to include documentation for new libraries as you add them to the application.

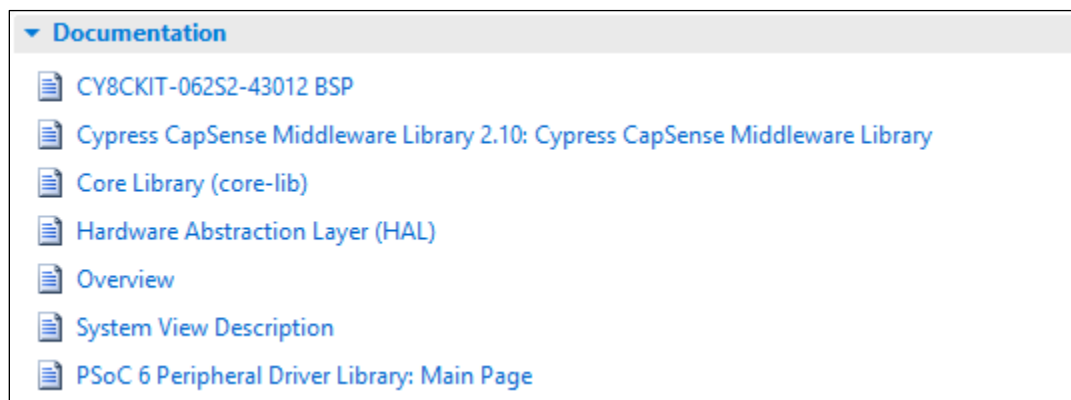

Eclipse IDE Tips & Tricks

Eclipse has several quirks that new users may find hard to understand at first. Here are a few tips to make the experience less difficult:

























- If your code has IntelliSense issues, use **Program > Rebuild Index** and/or **Program > Build**.
- Sometimes when you import a project, you don't see all the files. Right-click on the project and select **Refresh**.
- Various menus and the Quick Panel show different things depending on what you select in the Project Explorer. Make sure you click on the project you want when trying to use various commands.
- Right-click in the column on the left- side of the text editor view to pop up a menu to:
 - Show/hide line numbers
 - Set/clear breakpoints

Refer also to our [Eclipse Survival Guide](#) for more tips and tricks.

5a.1.3 Tools

The ModusToolbox installer includes several tools that can be used along with the IDE, or as stand-alone tools. These tools include Configurators that are used to configure hardware blocks, as well as utilities to create projects without the IDE or to manage BSPs and libraries. All the tools can be found in the installation directory. The default path (Windows) is:

C:/Users/<user-name>/ModusToolbox/tools_2.3:



- ▼  tools_2.3
 - >  bt-configurator
 - >  capsense-configurator
 - >  cfg-backend-cli
 - >  cymcuelftool-1.0
 - >  device-configurator
 - >  dfuh-tool
 - >  driver_media
 - >  ez-pd-configurator
 - >  fw-loader
 - >  gcc
 - >  jre
 - >  library-manager
 -  make
 - >  modus-shell
 - >  openocd
 - >  project-creator
 - >  proxy-helper
 - >  python
 - >  qspi-configurator
 - >  secure-policy-configurator
 - >  seglcd-configurator
 - >  smartio-configurator
 - >  usbdev-configurator

5a.1.4 Command Line

You can run all the tool functions using the command line.

Windows

To run the command line, you need a shell that has the correct tools (such as git, make, etc.). This could be your own Cygwin installation or Git Bash but ModusToolbox includes the “modus-shell” which is based on Cygwin. It is in the ModusToolbox installation under *ModusToolbox/tools_<version>/modus-shell*. It is listed in the Start menu under ModusToolbox <version> or you can just enter `modus-shell` in the Windows search box.

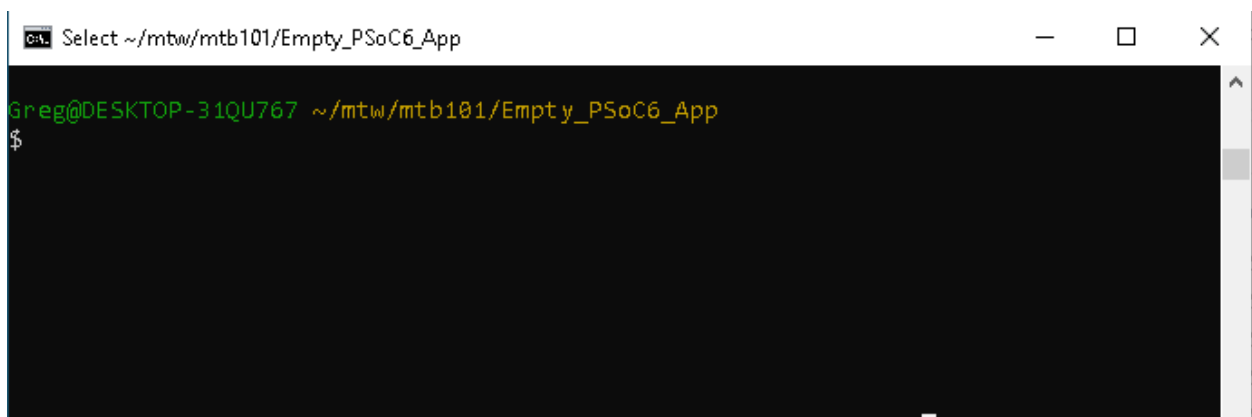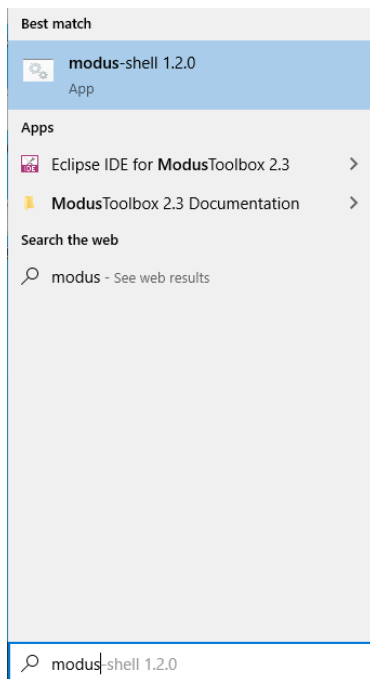

macOS / Linux

To run the command line on macOS or Linux, just open a terminal window.

Make Targets (Commands)

In order to have the command line commands work, you need to be at the top level of a ModusToolbox project where the Makefile is located.

The following table lists a few helpful make targets (i.e. commands). Refer also to the [ModusToolbox User Guide](#) document.


Make Command	Description
<code>make help</code>	This command will print out a list of all the make targets. To get help on a specific target type <code>make help CY_HELP=getlibs</code> (or whichever target you want help with).
<code>make getlibs</code>	Process all the <i>mtb</i> files (or <i>lib</i> files) and bring all the libraries into your project.
<code>make debug</code>	Build your project, program it to the device, and then launch a GDB server for debugging.
<code>make program</code>	Build and program your project.
<code>make qprogram</code>	Program without building.
<code>make config</code>	This command will open the Device Configurator.
<code>make get_app_info</code>	Prints all variable settings for the app.
<code>make get_env_info</code>	Prints the tool versions that are being used.
<code>make printlibs</code>	Prints information about all the libraries including Git versions.

The help make target by itself will print out top level help information. For help on a specific variable or target use `make help CY_HELP=<variable or target>`. For example:

```
make help CY_HELP=build
```

or

```
make help CY_HELP=TARGET
```

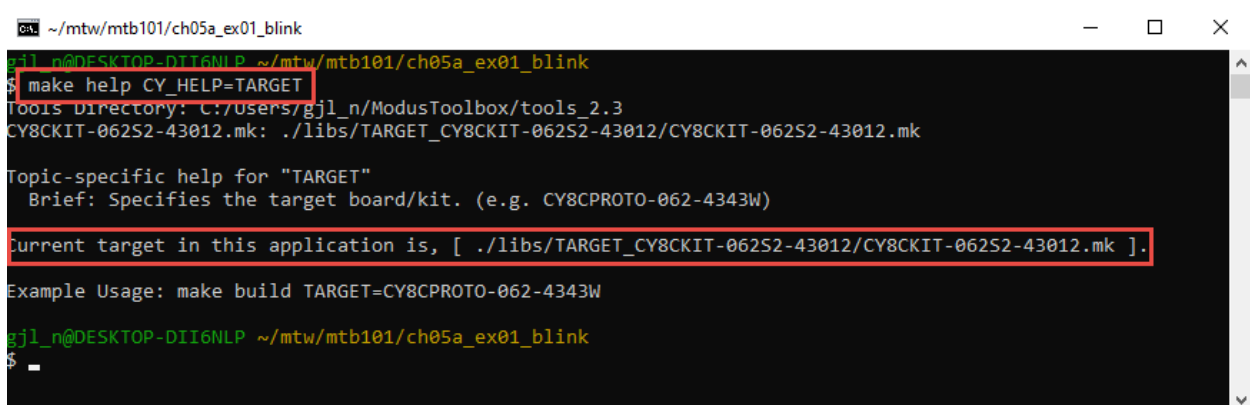

```
gjl ~/mtw/mtb101/ch05a_ex01_blink
$ make help CY_HELP=TARGET
Tools Directory: C:/Users/gjl_n/ModusToolbox/tools_2.3
CY8CKIT-062S2-43012.mk: ./libs/TARGET_CY8CKIT-062S2-43012/CY8CKIT-062S2-43012.mk

Topic-specific help for "TARGET"
  Brief: Specifies the target board/kit. (e.g. CY8CPROTO-062-4343W)

Current target in this application is, [ ./libs/TARGET_CY8CKIT-062S2-43012/CY8CKIT-062S2-43012.mk ].

Example Usage: make build TARGET=CY8CPROTO-062-4343W
gjl_n@DESKTOP-DII6NLP ~/mtw/mtb101/ch05a_ex01_blink
$
```

Accessing Tools from the Command Line

There are make targets to launch some of the tools from an application's folder. Use `make help` and look for *Tools make targets* for a full list. A couple useful examples:

- `make config` launches the Device Configurator and opens the application's configuration file.
- `make modlibs` launches the Library Manager and opens the application's library settings.

You can launch other ModusToolbox tools using `make open` and specifying a tool name or a file to open. Use `make help CY_HELP=open` for details. For example:

- `make open CY_OPEN_TYPE=capsense-tuner` launches the CapSense Tuner and opens the application's design.cycapsense file.


Hint: If you run `make open CY_OPEN_TYPE=junk` it displays a complete list of valid tool types.

All the tools can be run directly from the tools folder as well. Launch each tool from its respective directory inside *ModusToolbox/tools_<version>*.

On Windows, the tools are listed in the Start menu under *ModusToolbox <version>* and you can enter the tool name in the Windows search box to launch it quickly.

For many tools, there is a command line (i.e. non-GUI) version that can be useful for scripting/automation. The `-h` option shows help for the CLI tools. For example:

```
./capsense-configurator-cli -h
```

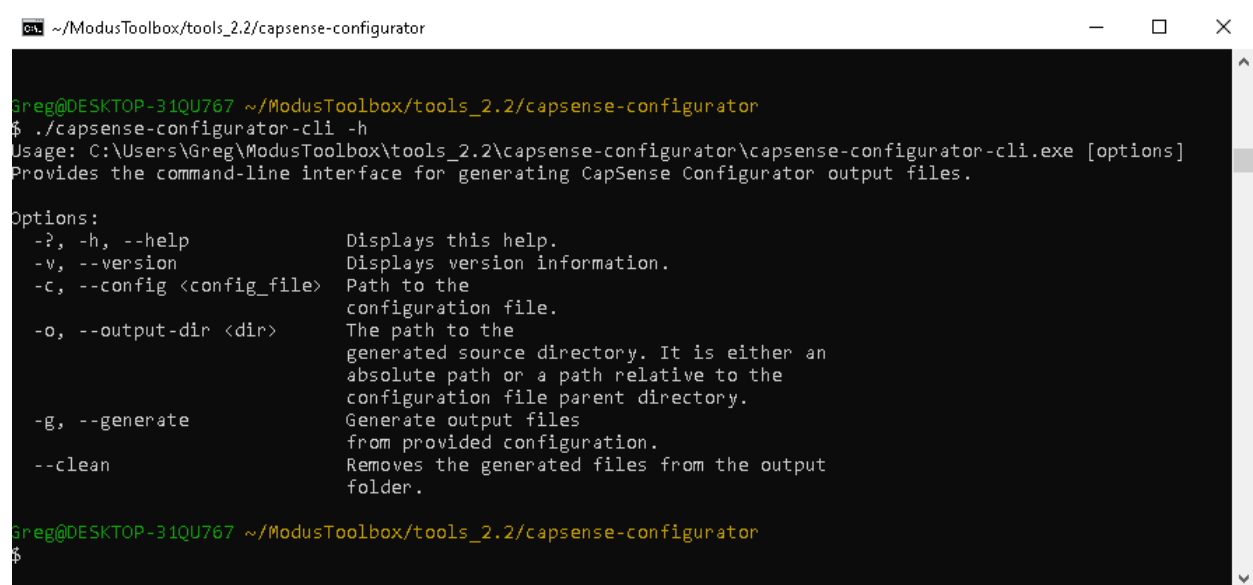

```

~/ModusToolbox/tools_2.2/capsense-configurator
Greg@DESKTOP-31QU767 ~/ModusToolbox/tools_2.2/capsense-configurator
$ ./capsense-configurator-cli -h
Usage: C:\Users\Greg\ModusToolbox\tools_2.2\capsense-configurator\capsense-configurator-cli.exe [options]
Provides the command-line interface for generating CapSense Configurator output files.

Options:
-?, -h, --help           Displays this help.
-v, --version           Displays version information.
-c, --config <config_file> Path to the
                        configuration file.
-o, --output-dir <dir>  The path to the
                        generated source directory. It is either an
                        absolute path or a path relative to the
                        configuration file parent directory.
-g, --generate           Generate output files
                        from provided configuration.
--clean                 Removes the generated files from the output
                        folder.

Greg@DESKTOP-31QU767 ~/ModusToolbox/tools_2.2/capsense-configurator
$
  
```


5a.2 Exercises (Part 1)

5a.2.1 Exercise 1: Blinking an LED from the Eclipse IDE


For the first example project, we will use the Eclipse IDE to create, build, and program the classic blinking LED project. I first created a new workspace called *mtb101* under the *mtw* folder so that I can keep all the class exercises together, but you can call your workspace anything you like.



1. Select either **File > New > ModusToolbox Application**.

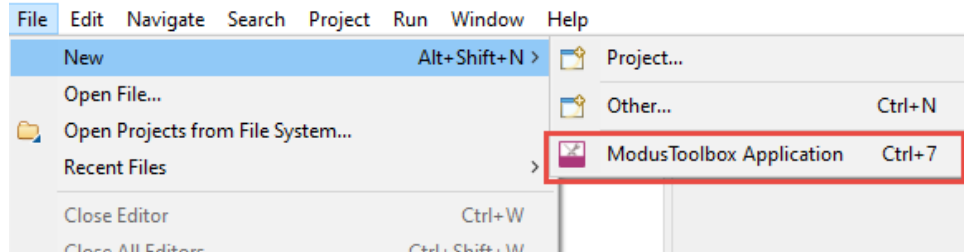


Or on the Quick Panel, click the **New Application** link.

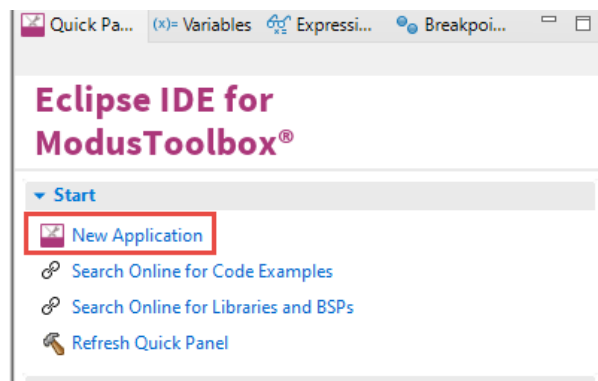


Either option launches the ModusToolbox Project Creator tool.



2. Choose the correct development kit from the PSoC 6 section and click **Next >**.

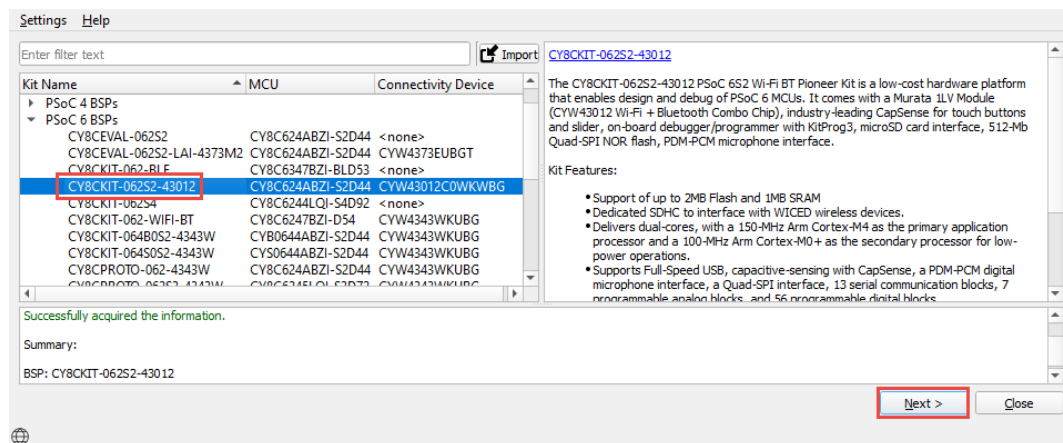

3. Check the box next to *Empty PSoC 6 App* and give your project a name (in this case **ch05a_ex01_blink**). Then, click **Create**.

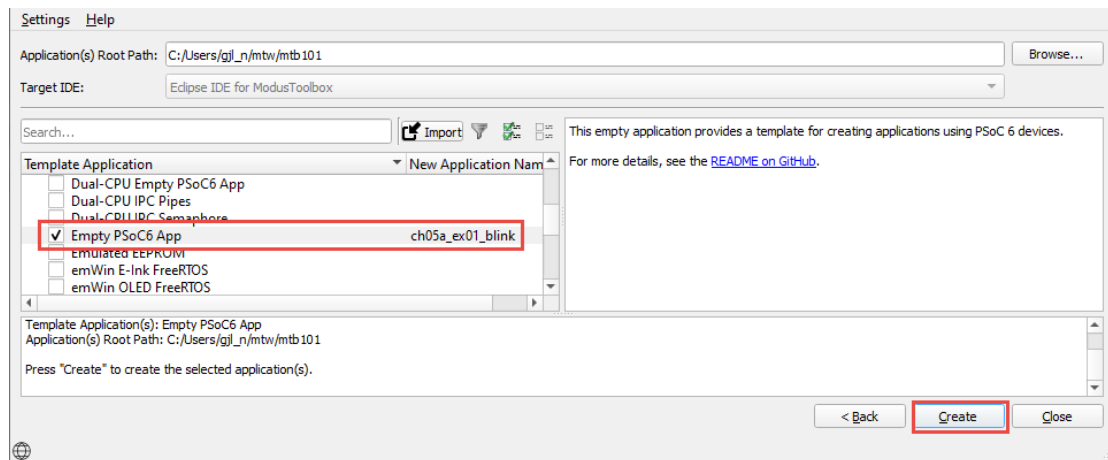


You can check the box for more than one application at a time if you want to create multiple applications in a single operation.

There are application searching and filtering capabilities which we will talk about in the [Project Creator Tool](#) section.

4. At this point, the application is created.

Once creation is done, the new project creation window will close (unless there are errors) and the new project is imported into the Eclipse IDE.

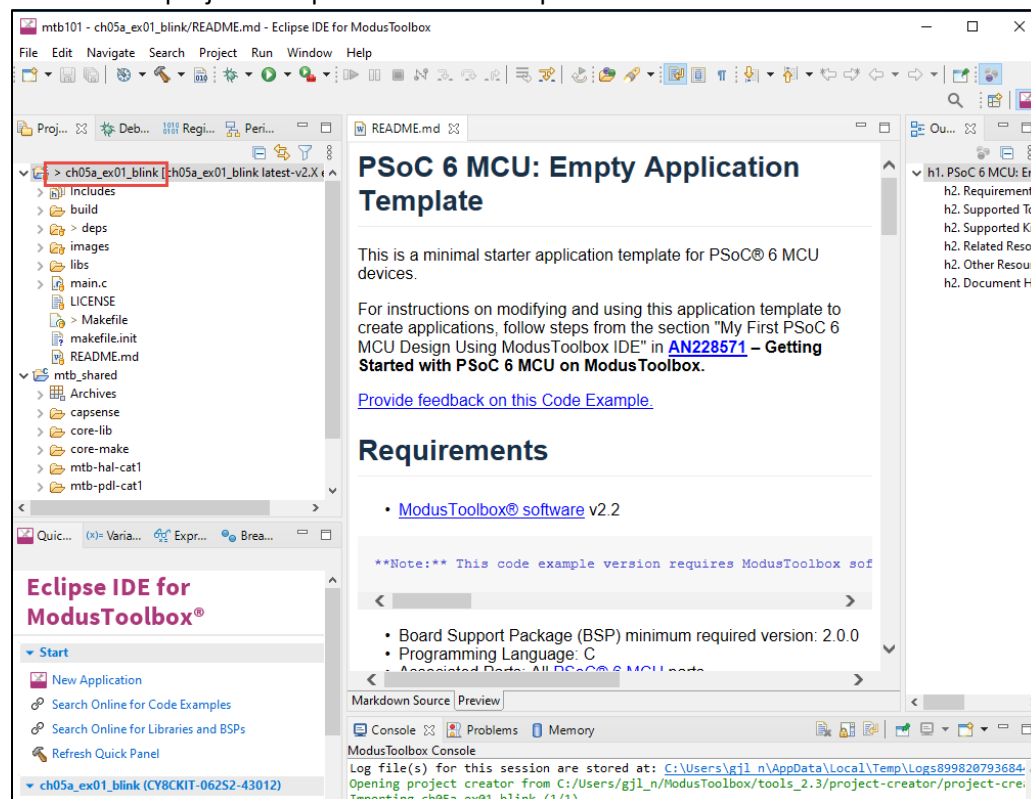



5. Double click on `main.c` in the Project Explorer window and change the code to look like this:

```
#include "cy_pdl.h"
#include "cyhal.h"
#include "cybsp.h"
int main(void)
{
    cy_rslt_t result;

    /* Initialize the device and board peripherals */
    result = cybsp_init() ;
    CY_ASSERT(result == CY_RSLT_SUCCESS);


    __enable_irq();

    cyhal_gpio_init(CYBSP_USER_LED1, CYHAL_GPIO_DIR_OUTPUT,
        CYHAL_GPIO_DRIVE_STRONG, CYBSP_LED_STATE_OFF);

    for(;;)
    {
        cyhal_gpio_toggle(CYBSP_USER_LED1);
        cyhal_system_delay_ms(500);
    }
}
```



6. Finally, click on *ch05a_ex01_blink Program (KitProg3_MiniProg4)* from the Quick Panel Launches. This will build the project and then program the kit.

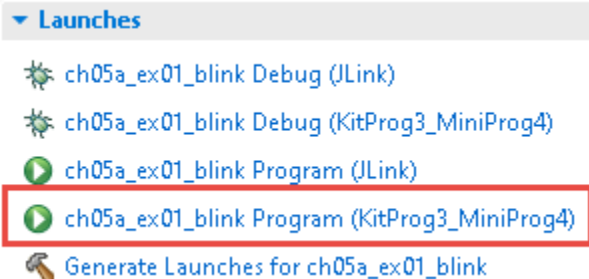

You should now have a blinking LED. If you don't, then you probably need to switch the mode of the KitProg to be CMSIS-DAP Bulk or HID. Refer to the "PSoC Firmware Loader" section in Chapter 1 for details.

5a.2.2 Exercise 2: Blinking LED from the Command Line

You can build and program the same project using the command line. For more details, refer to section [5a.1.4 Command Line](#).



1. On Windows, select *modus-shell* from the list of programs in the Start menu (or enter `modus-shell` in the Windows search box).

On Linux or macOS, open a terminal window.



2. Navigate to the project directory that you created previously. For example:


```
cd <user_home>/mtw/mtb101/ch05a_ex01_blink
```



3. Use any text editor to modify the delay from 500 ms to 200 ms.



4. Next, run `make help` to see the list of commands.

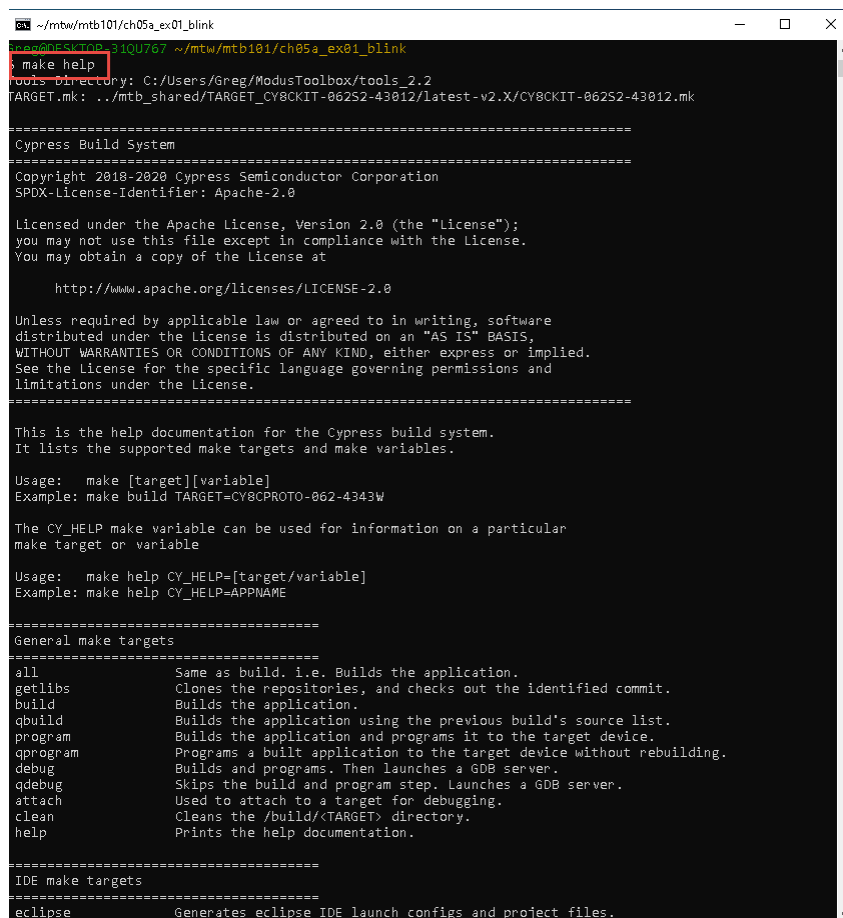

```
~/mtw/mtb101/ch05a_ex01_blink
$ make help
Usage: make [target][variable]
Example: make build TARGET=CY8CPROTO-062-4343W

The CY_HELP make variable can be used for information on a particular
make target or variable

Usage: make help CY_HELP=[target/variable]
Example: make help CY_HELP=APPNAME

General make targets
-----
all                Same as build. i.e. Builds the application.
getlibs            Clones the repositories, and checks out the identified commit.
build              Builds the application.
qbuild             Builds the application using the previous build's source list.
program            Builds the application and programs it to the target device.
qprogram           Programs a built application to the target device without rebuilding.
debug              Builds and programs. Then launches a GDB server.
qdebug             Skips the build and program step. Launches a GDB server.
attach             Used to attach to a target for debugging.
clean              Cleans the /build/<TARGET> directory.
help               Prints the help documentation.

IDE make targets
-----
eclipse            Generates eclipse IDE launch configs and project files.
```



5. Then you can run:

```
make clean
make build
make program
```

5a.3 Create ModusToolbox Projects

As we've discussed already, you can use the Eclipse IDE for ModusToolbox IDE to develop projects. We understand many developers may not want to use the Eclipse IDE. So, there are several ways to create projects (all based on the `git clone` mechanism). Here are some of the methods you can use:


- Project Creator tool through Eclipse IDE (discussed previously)
- Stand-alone Project Creator tool
- Command Line / Manual Setup


You can also create projects in offline mode. See the ["Offline Content"](#) section for details.

5a.3.1 Project Creator Tool

Instead of using the Project Creator tool through the Eclipse IDE, you can create new projects with the tool in stand-alone mode. It is in the `ModusToolbox/tools_<version>/project-creator` directory. You can also just search for "project-creator" in the Windows search box.

The first thing the project-creator tool does is read the configuration information from our GitHub site so that it knows all the BSPs etc. that we support. That information is stored in *manifest* files which we will discuss in the [Manifests](#) section.

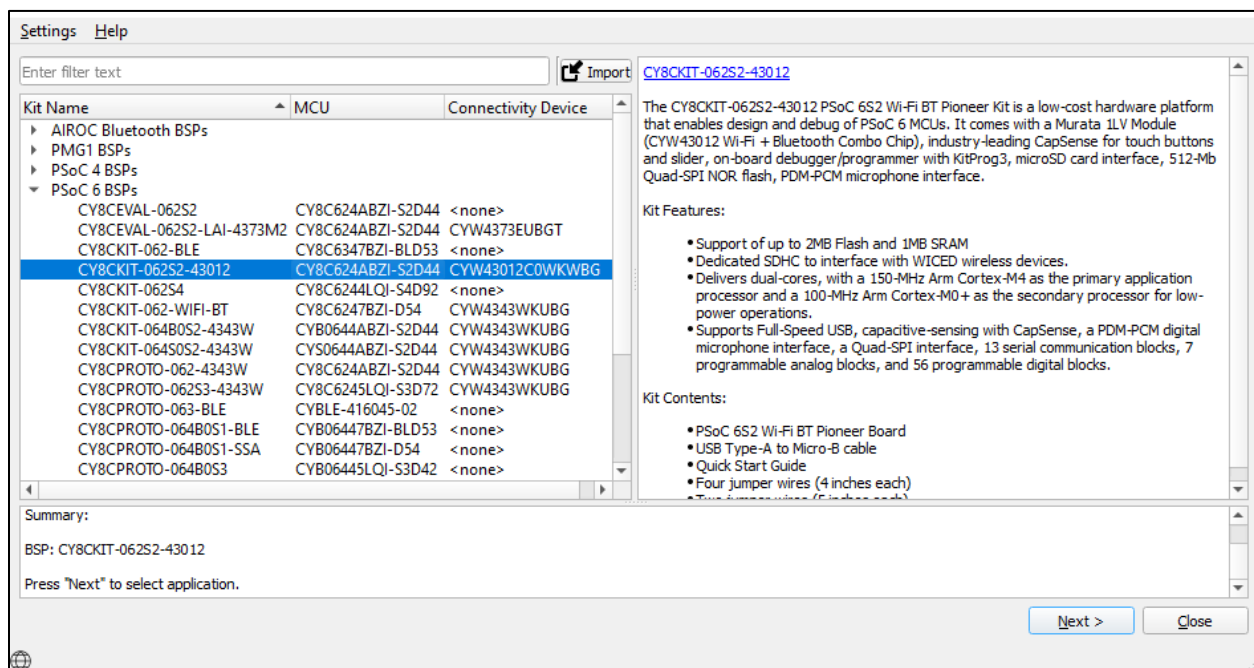


Note that there is also an  **Import** button, so you can specify your own custom BSP if you have one. We will show you how to create your own BSP in the [Creating your Own BSP](#) section of this chapter.

Select a kit and click **Next >**.


Now you will be presented with all the code examples supported by the BSP you chose. Pick an application to start from and give it a name. You can specify a different **Application Root Path** if you

don't want to use the default value. A directory with the name of your application(s) will be created inside the specified Application Root Path. The value for the Application Root Path is remembered from the previous invocation, so by default it will create applications in the same location that was used previously.

The Target IDE selection lets you decide if you want files to be created for use with an IDE. Currently it supports Eclipse IDE for ModusToolbox, Microsoft Visual Studio Code (VSCode), IAR Embedded Workbench, and ARM MDK (μ Vision). If you run the Project Creator from the Eclipse IDE, this field will be fixed to Eclipse IDE for ModusToolbox. If you don't select an IDE at this step, you can generate the required files later using the command line. You'll get to see that a bit later in this chapter.

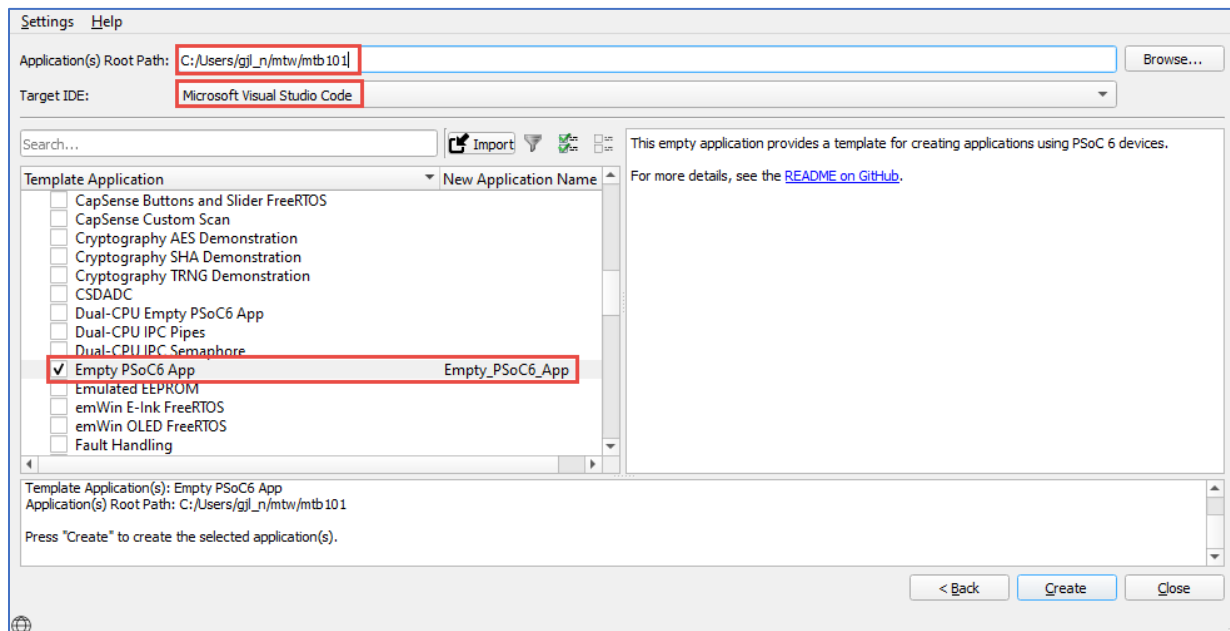

You can use the "Search..." box to enter a string to match from the application names and their descriptions. For example, if you enter *wifi*, you may see a list like this. (The exact list will change over time as new code examples are created):

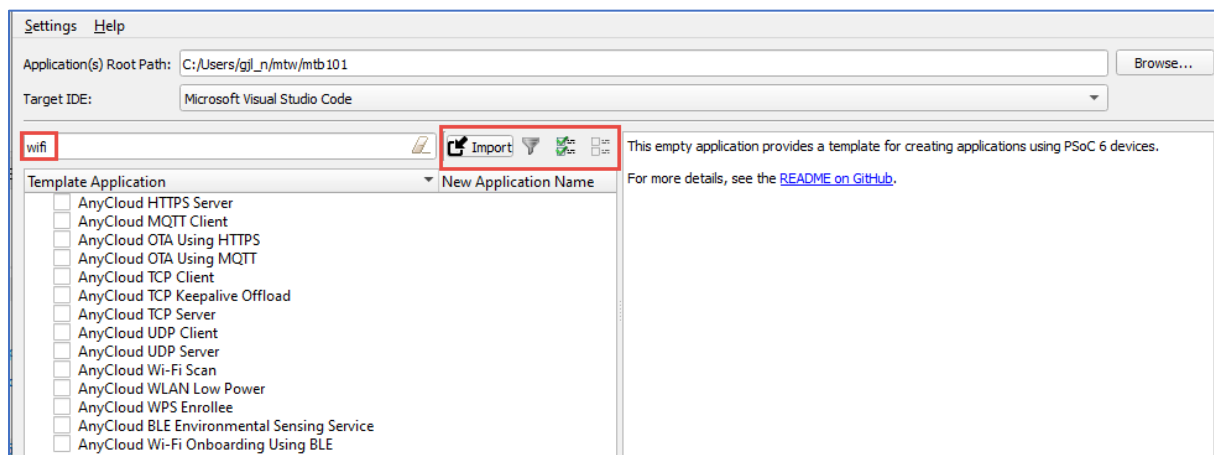


If desired, you can select all the applications in the search result by using the **Select All** button or you can unselect them with the **Unselect All** button.

The **Filter** button can be used to list only the applications which are currently checked. This can be useful if you have a large number of applications checked and want to see them all listed together.

If you want to start with your own local project or template instead of one of the code examples that we provide, click the **Import** button. This allows you to browse files on your computer and then create a new application based on an existing one. Make sure the path you select is to the directory that contains the *Makefile* (or one above it – more on that in a minute), otherwise the import will fail.

Once you select an application folder, it will show up at the top of the list of applications.

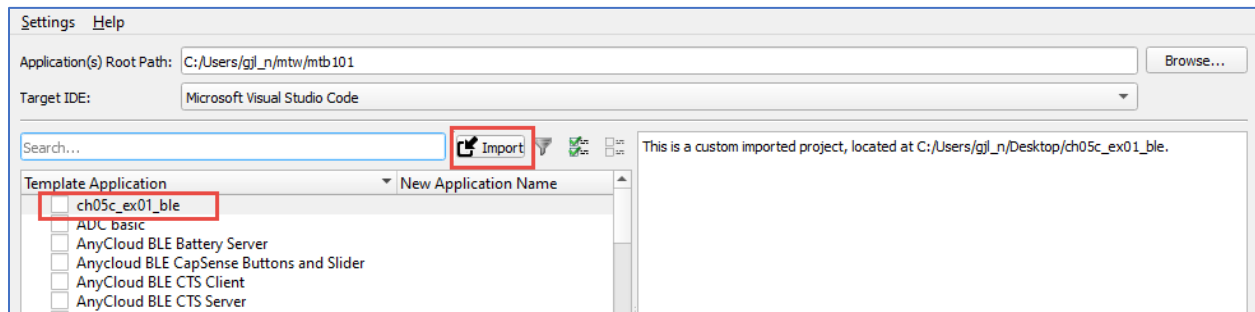

Note that the existing project can be one that is in your workspace or one that is located somewhere else. It does not need to be a full Eclipse project. At a minimum, it needs a Makefile and source code files, but it may contain other items such as configurator files and mtb files which are a mechanism to include dependent libraries in an application.

Creating Bundled Applications

If you specify a path to a directory that is above the Makefile directory, the hierarchy will be maintained, and the path will be added to each individual application name inside Eclipse. This can be useful if you have a directory containing multiple applications in sub-directories and you want to import them all at once. For example, if you have a directory called *myapps* containing the 2 subdirectories *myapp1* and *myapp2*, when you import from the *myapps* level into Eclipse, you will get a project called *myapps.myapp1* and *myapps.myapp2*.

PSoC 6 Dual-CPU applications use the bundled application concept. For those applications, there is a top-level application name with sub-application directories called *cm0p_app* and *cm4_app*. This will be discussed in more detail in [Dual CPU Designs](#).

One thing to be careful of when creating bundled applications is the location of any shared libraries relative to the application. This will be discussed in more detail in the [Library Management Flows](#) section.

Once you have selected the application you want to create (whether it's one of our code examples or one of your own applications), click **Create** and the tool will create the application for you.

The tool runs the `git clone` operation and then the `make getlibs` operation. The project is saved in the directory you specified previously. When finished, click **Close**.

5a.3.2 Command Line / Manual Setup

Project Creator CLI

The Project Creator tool described above also has a command line version that you can run from a shell (e.g. modus-shell). It is in the same folder as the Project Creator GUI (*ModusToolbox/tools_<version>/project-creator*) but the executable is called *project-creator-cli.exe*. You can run it with no arguments to see the different options available. For example, you can run it to see a listing of all the available BSPs:

```
./project-creator-cli --list-boards
```

You can also see all the available applications for a given BSP:

```
./project-creator-cli --list-apps <BSP_Name>
```

To use the Project Creator in CLI mode to create the empty PSoC 6 application for the kit we are using in the user's *mtw/mtb101* directory with a name of *my_app*, the command is:


```
./project-creator-cli  
  --board-id CY8CKIT-062S2-43012  
  --app-id mtb-example-psoc6-empty-app  
  --target-dir "~/mtw/mtb101"  
  --user-app-name "my_app"
```

Note that double-quotes are required around the target directory name if you are using a tilde (~) to specify the user's home directory.

Using GitHub

Instead of using the Project Creator CLI tool, you can use git commands directly to clone a project.

You can get to the Cypress GitHub repo using the “Search Online for Code Examples” link in the Eclipse IDE Quick Panel. That will take you the following website. You can use the GitHub website tools to clone projects. You can also use the command line to clone as described in the next section.

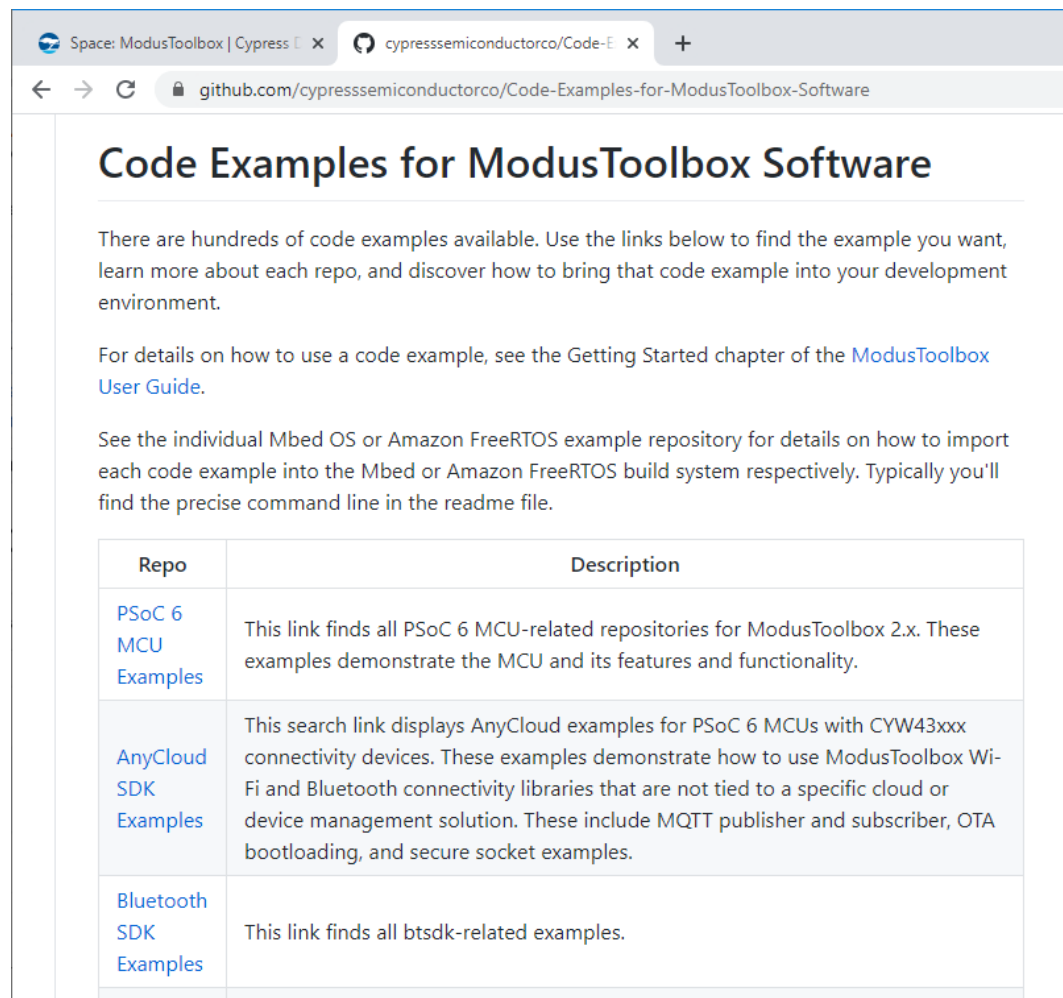

The screenshot shows a web browser window with the URL `github.com/cypresssemiconductorco/Code-Examples-for-ModusToolbox-Software`. The page title is "Code Examples for ModusToolbox Software". The content includes a paragraph stating there are hundreds of code examples available, a link to the "ModusToolbox User Guide" for details on using a code example, and a paragraph explaining how to import code examples into the Mbed or Amazon FreeRTOS build system. Below this is a table with two columns: "Repo" and "Description".

Repo	Description
PSoC 6 MCU Examples	This link finds all PSoC 6 MCU-related repositories for ModusToolbox 2.x. These examples demonstrate the MCU and its features and functionality.
AnyCloud SDK Examples	This search link displays AnyCloud examples for PSoC 6 MCUs with CYW43xxx connectivity devices. These examples demonstrate how to use ModusToolbox Wi-Fi and Bluetooth connectivity libraries that are not tied to a specific cloud or device management solution. These include MQTT publisher and subscriber, OTA bootloading, and secure socket examples.
Bluetooth SDK Examples	This link finds all btsdk-related examples.

Using Git from the Command Line

If you know the URL and don't want to use GitHub, from a shell you can use the `git clone` command to clone the project:


```
git clone https://github.com/cypresssemiconductorco/mtb-example-psoc6-empty-app
```

Make

Once you have cloned the project from GitHub or the command line, change to the project's directory:

```
cd mtb-example-psoc6-empty-app
```


Run make to see the list of available commands:

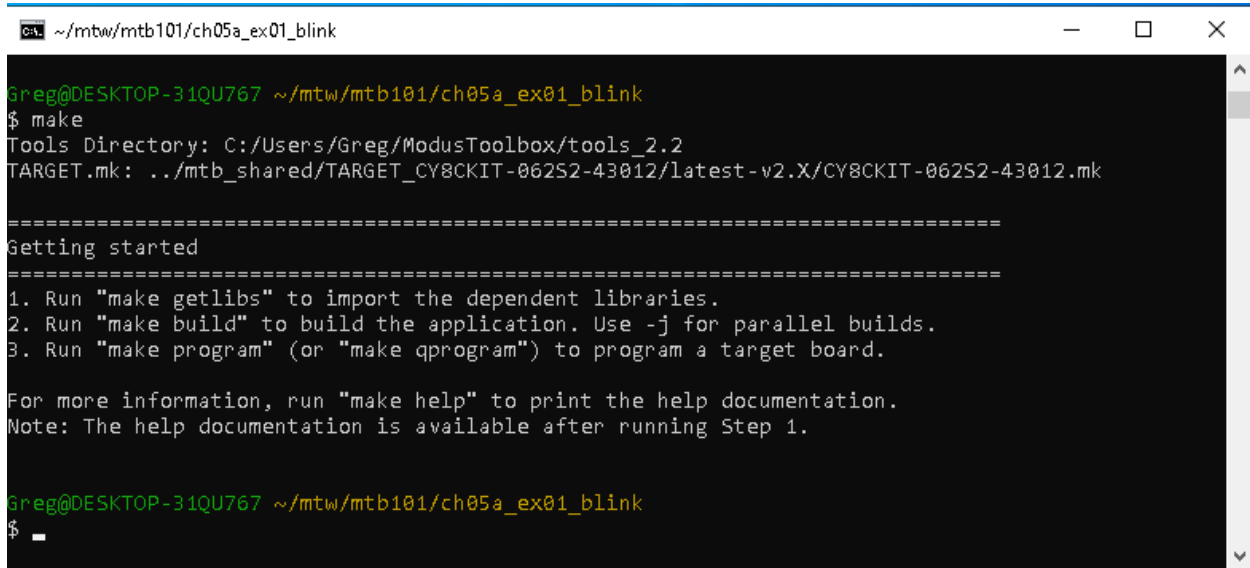

```

~/mtw/mtb101/ch05a_ex01_blink
Greg@DESKTOP-31QU767 ~/mtw/mtb101/ch05a_ex01_blink
$ make
Tools Directory: C:/Users/Greg/ModusToolbox/tools_2.2
TARGET.mk: ../mtb_shared/TARGET_CY8CKIT-062S2-43012/latest-v2.X/CY8CKIT-062S2-43012.mk

=====
Getting started
=====
1. Run "make getlibs" to import the dependent libraries.
2. Run "make build" to build the application. Use -j for parallel builds.
3. Run "make program" (or "make qprogram") to program a target board.

For more information, run "make help" to print the help documentation.
Note: The help documentation is available after running Step 1.

Greg@DESKTOP-31QU767 ~/mtw/mtb101/ch05a_ex01_blink
$

```

Then you can run:

```

make getlibs
make build
make program

```

Note If you use the CY8CKIT-062S2-43012 kit, programming will not succeed since the default library and TARGET are set for the CY8CPROTO-062-4343W kit. You will need to manually add the CY8CKIT-062S2-43012 library to the project and change the TARGET in the Makefile (or specify it on the command line), or you can use the Library manager to add the library and set the active BSP. See [Library Management](#) for more details about adding and managing libraries.


5a.4 Importing/Exporting Applications

Once you have an application created with the Project Creator tool, you can use it from the command line, or you can convert it to use in the IDE of your choosing. You can even switch back and forth between the command line and IDE.


To open a command-line application in an IDE, you need to run a `make <IDE>` command to generate appropriate files. When you create an application starting from the Eclipse IDE, the `make eclipse` command is run for you automatically. There is also an import option in the Eclipse IDE for ModusToolbox that runs `make eclipse` plus a few other required actions, so it isn't necessary for you to run `make eclipse` first. For other IDEs (VS Code, IAR Embedded Workbench, and Keil μ Vision), you must run the appropriate `make <IDE>` command manually prior to opening the application in the IDE.

5a.4.1 Import Projects into the Eclipse IDE

If you have a project that was created from the command line or stand-alone Project Creator tool, you can use the Eclipse Import feature: **File > Import... > ModusToolbox > ModusToolbox Application Import**. Note that this imports the application in-place; it does NOT copy it into your workspace. If you want the resulting application to be in your workspace, make sure you put it in the workspace folder before importing it.

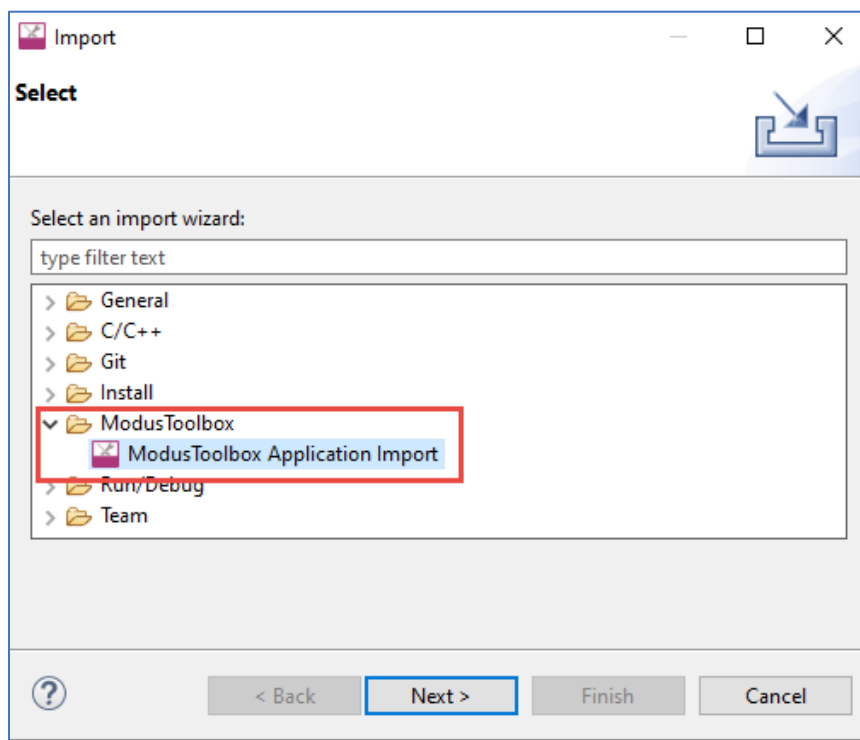

After clicking **Next >**, browse to the location of the application's directory, select it, and click **Finish**.

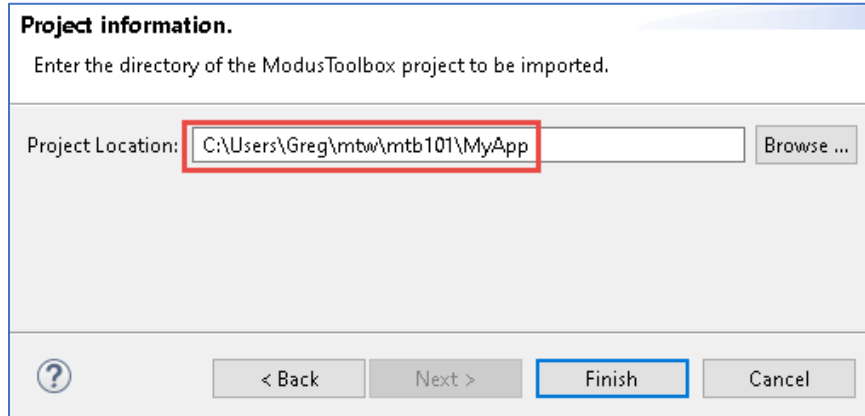

Project information.
Enter the directory of the ModusToolbox project to be imported.

Project Location:

This import mechanism runs `make eclipse` plus various commands to help the application run smoothly in the Eclipse IDE for ModusToolbox.

Launch Configs

A few important notes regarding the launch configurations inside Eclipse:

There is a directory inside the application called `.mtbLaunchConfigs`. This is where the launch configurations are located for an application. There are cases where you may end up with old launch configurations in that directory which can confuse Eclipse. You may see no launch configs, the wrong launch configs, or multiple sets of launch configs.

In case you see that behavior, it is safe to blow away the `.mtbLaunchConfigs` directory at any time and then just click on "Generate Launches for <project name>" in the Quick Panel.


Some of the cases where you may end up with stale or multiple sets of launch configs:

- If you rename an application directory before importing.
- If you rename an application inside of Eclipse (that is, **right-click > Rename**).

5a.4.2 Export for Visual Studio (VS) Code

One alternative to using the Eclipse-based IDE is a code editor program called VS Code. This tool is quickly becoming a favorite editor for developers. The ModusToolbox command line knows how to make all the files required for VS Code to edit, build, and program a ModusToolbox program. If you didn't select Microsoft Visual Studio Code in the Project Creator tool when you created the project, you will need to create the required files using the command line interface. To create the files, go to an existing project directory and type the following from the command line:

```
make vscode
```

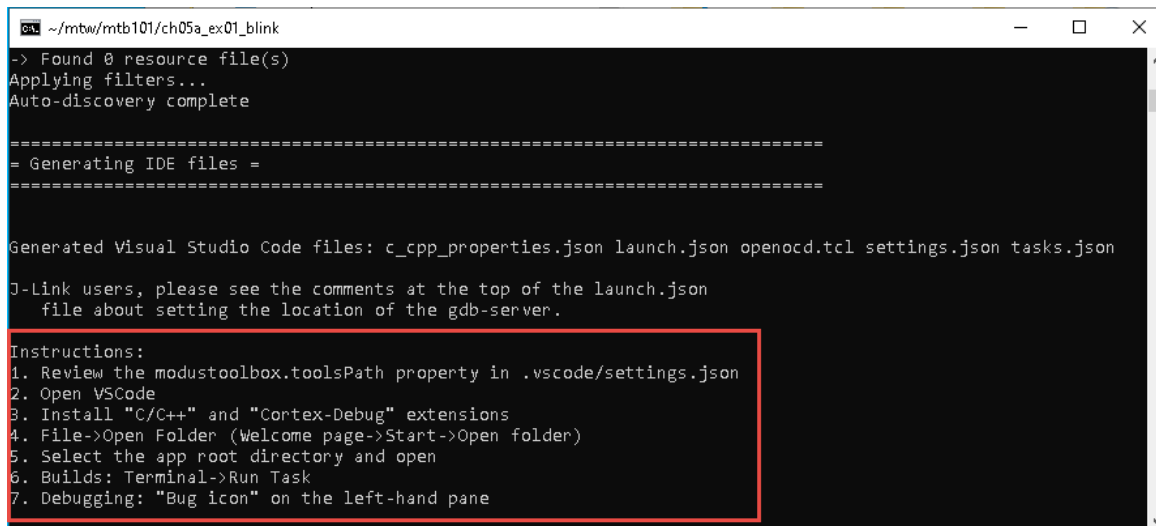

```
~/mtbx/mtb101/ch05a_ex01_blink
-> Found 0 resource file(s)
Applying filters...
Auto-discovery complete



=====
= Generating IDE files =
=====

Generated Visual Studio Code files: c_cpp_properties.json launch.json openocd.tcl settings.json tasks.json
J-Link users, please see the comments at the top of the launch.json
file about setting the location of the gdb-server.

Instructions:
1. Review the modustoolbox.toolsPath property in .vscode/settings.json
2. Open VSCode
3. Install "C/C++" and "Cortex-Debug" extensions
4. File->Open Folder (Welcome page->Start->Open folder)
5. Select the app root directory and open
6. Builds: Terminal->Run Task
7. Debugging: "Bug icon" on the left-hand pane
```

The message at the bottom of the command window tells you the next steps to take. These steps are explained as follows:


1. This step is just to verify that the version of ModusToolbox tools is what you expect.
2. Start VS Code.
3. Install the C/C++ and Cortex-Debug extensions if you don't already have them.
4. Open your application in Visual Studio Code using **File > Open** (on macOS) or **File > Open Folder** (on Windows).

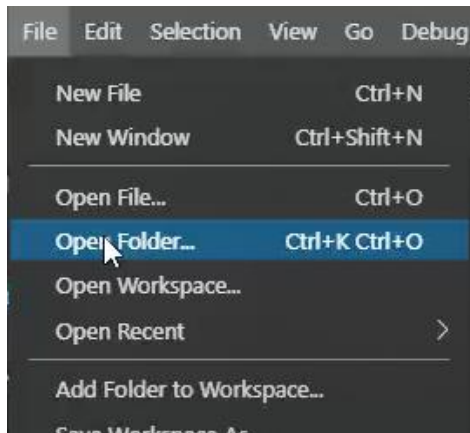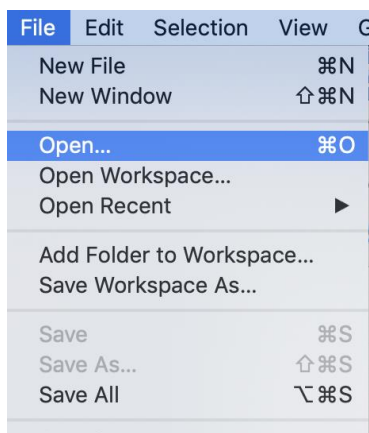

- Then, navigate to the directory where your project resides and click **Open**.


Hint: Alternately, if it is in your path you can just enter `code .` on the command line after running `make vscode` and it will open VS Code and load the application all in one step. (Depending on how you installed VS Code, it may or may not be in your path by default.)

Now your windows should look something like this. You can open the files by clicking on them in the Explorer window.

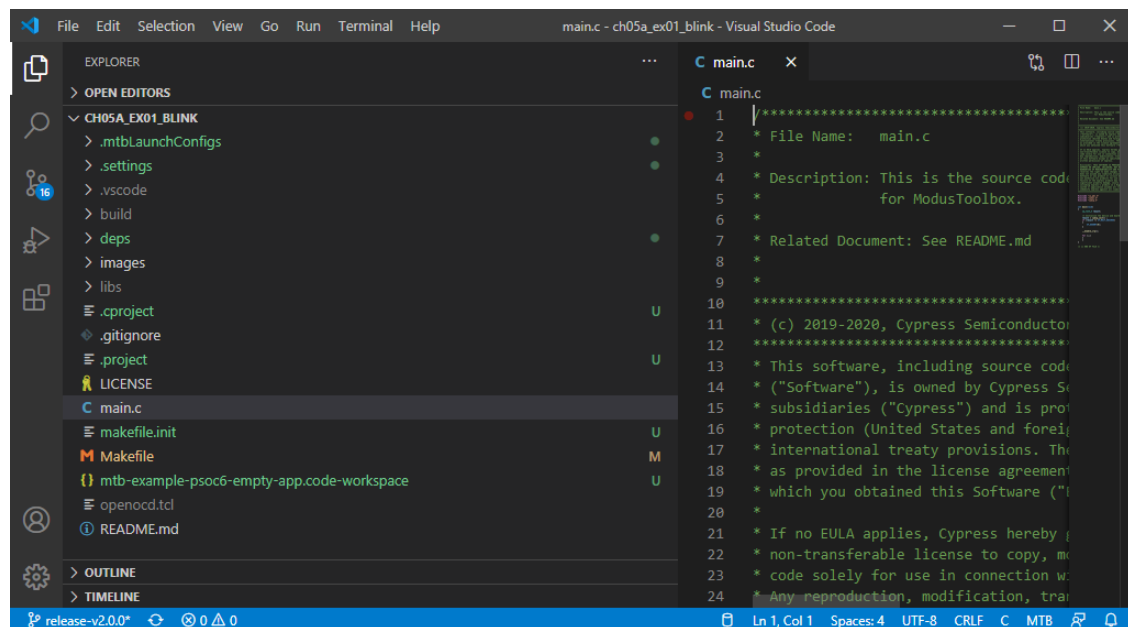


This method will work, but it does not show you the shared libraries (*mtb_shared*). If you want to see those libraries, either click the popup window in VSCode to open the workspace or follow the instructions below.

- In order to build your project, make sure your application is selected and do **Terminal > Run Task...**

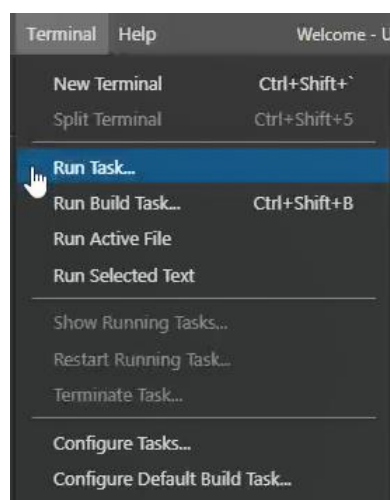


Then, select **Build Debug**. This will essentially run `make build` at the top level of your project.

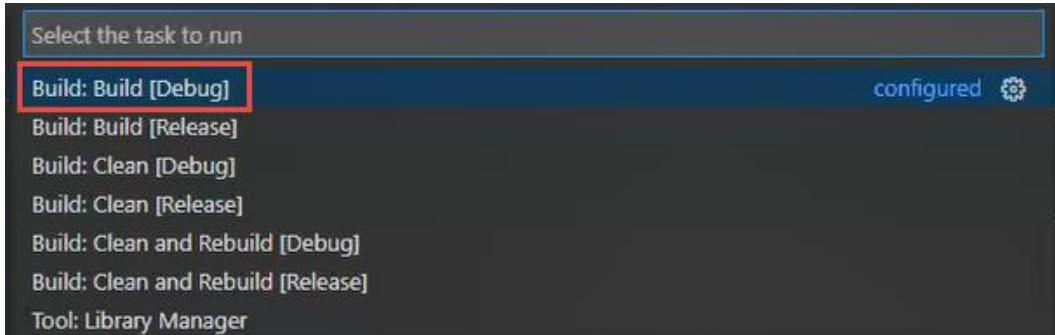

(Note that you can also access the Library Manager from the Task list.)


You should see the normal compiler output in the console at the bottom of VS Code:

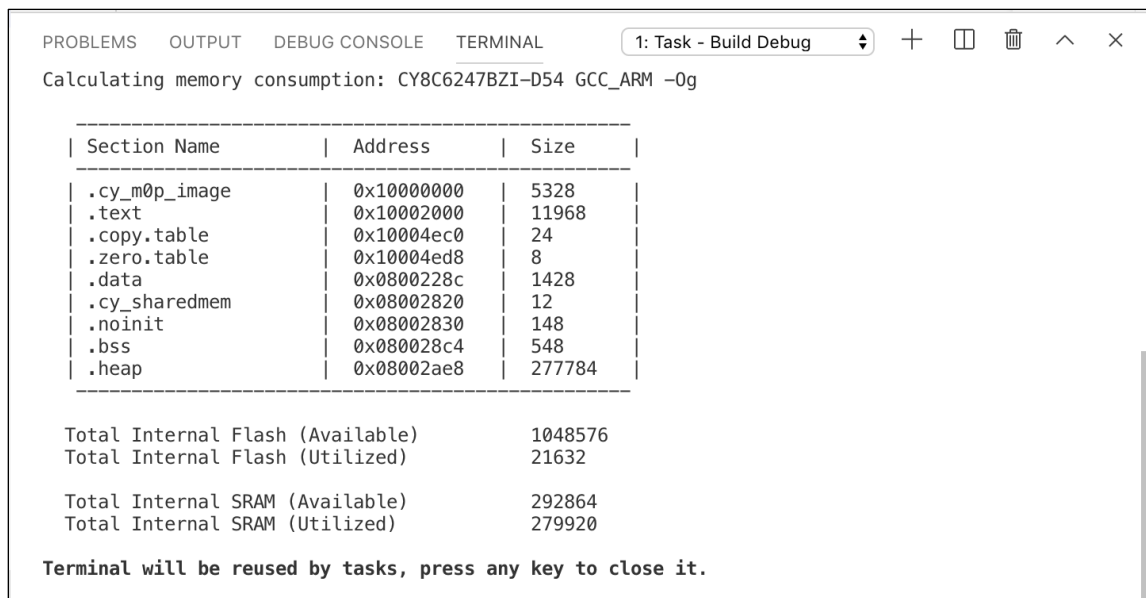


7. To program the kit or run the debugger, first make sure you have installed the “Cortex-Debug” VS Code extension from the marketplace. See the software installation instructions if you didn't do this when you installed VS Code.

Typically, you will need to build first, then program or program and start the debugger. The program and debug can be done in one step but not the build. That is, you don't need to explicitly program before debugging, but you do need to build first to see any changes.

To do programming or debug, click the little “bug” icon on the left side of the screen. Then click the drop-down next to the green **Play** button to select Program (to program), Launch PSoc 6 CM4 (to program and debug), or Attach PSoc 6 CM4 (to debug without programming).

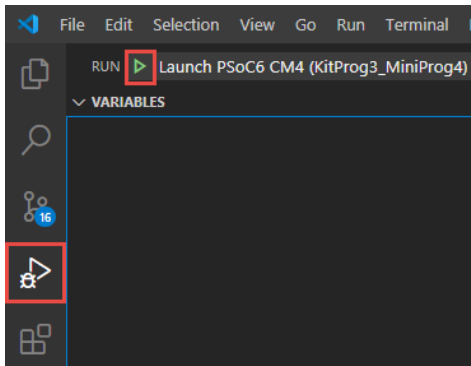

If you chose one of the debugging options, after clicking **Play**, your screen should look something like this. Your application has been programmed into the chip (if you chose the Launch option). The reset of the chip has happened, and the project has run until *main*. Notice the yellow highlighted line. It is waiting on you. You can now add breakpoints or get the program running or single step.

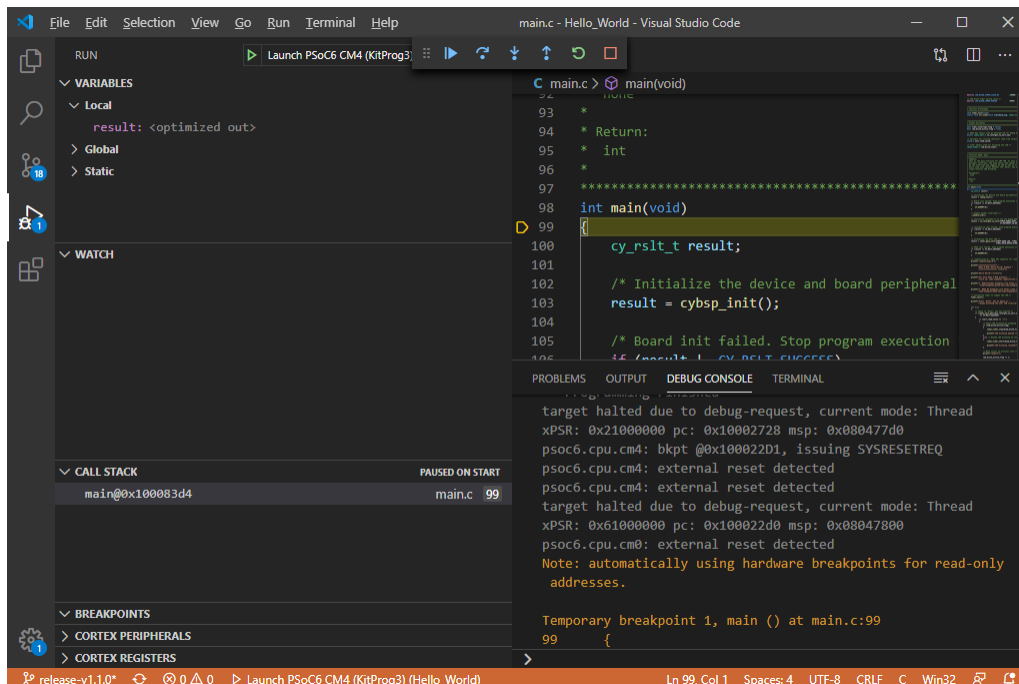

You can also run some of the ModusToolbox tools such as the Library Manager from inside VSCode. These will show up in the list of tasks as "Tool: <tool name>".

Using Workspaces in VS Code

If you want to be able to see the shared libraries or even see all the applications that are in your application root path at once, you can use a VS Code workspace. They are text files with the extension `code-workspace`.

You can create and use workspaces in several different ways depending on what you want to see. You can launch the GUI first and then create a workspace or you can use the command line to launch the GUI and create the workspace as a single step.

If you want to see a single application along with the shared directory (e.g. application + `mtb_shared`) you can use a workspace that is created during `make vscode`. To use it:

From the command line, go to the application's directory and run the following to launch the GUI and open the workspace:

```
code <workspace_name>
```

The workspace name ends in the extension `.code-workspace`.

If you already have the GUI running, use the following to open the workspace:

File > Open Workspace...

Navigate to the workspace file and click **Open**

If you want to see all applications in your application root path:

The easiest way to do this is to edit the workspace from one of your apps. The procedure is:

1. Copy/rename the workspace file from any application up one level (parallel with your apps and shared library repo).
2. Edit the workspace file to change the list of folders to match the list of applications and shared folder. You can add as many or as few applications as you want. Notice that the path to `mtb_shared` was changed. For example (only partial contents are shown):

Original:

```
"folders": [
    {
        "path": "."
    },
    {
        "path": "../mtb_shared"
    }
],
```

Modified:

```
"folders": [
    {
        "path": "ch05a_ex01_blink"
    },
    {
        "path": "ch05a_ex03_green"
    },
    {
        "path": "mtb_shared"
    }
],
```

3. Once you have done this, open the workspace as usual (i.e. code <workspace name> from the command line or File > Open Workspace... from the GUI).

A few notes about workspaces:

1. You must run `make vscode` on any application that you include in your workspace so that it contains the required build information.
2. If more than one directory is open in a workspace, the Run Task list and the Debug Launch list will show entries for all available task/launches. Be careful to choose the correct entry.
3. If you quit and restart VS Code, any workspace that you didn't close will re-open. This may result in multiple instances of VS Code opening at the same time. To resolve this, use **File > Close Workspace**.
4. When you close a workspace that you have created, you will be asked if you want to save it. If you chose to save your workspace, you can open it using one of these methods:
 - a. From the command line: `code <workspace_name>`
 - b. From the GUI: **File > Open Workspace...**
5. If you create new applications after creating a workspace you can add them manually to your workspace file or if you have the workspace open in the GUI you can use **File > Add Folder to Workspace...**

5a.4.3 Export for IAR Embedded Workbench


The ModusToolbox build system also provides a make target for IAR Embedded Workbench. If you didn't generate the files during project creation you can run the following command:

```
make ewarm8 TOOLCHAIN=IAR
```

Note that export to IAR Embedded Workbench is **not** currently supported for Bluetooth SoC solution applications.


An IAR connection file appears in the application directory:

- *<project-name>.ipcf*
1. Start IAR Embedded Workbench.
 2. On the main menu, select **Project > Create New Project > Empty project** and click **OK**.
 3. Browse to the ModusToolbox application directory, enter an arbitrary application name, and click **Save**.

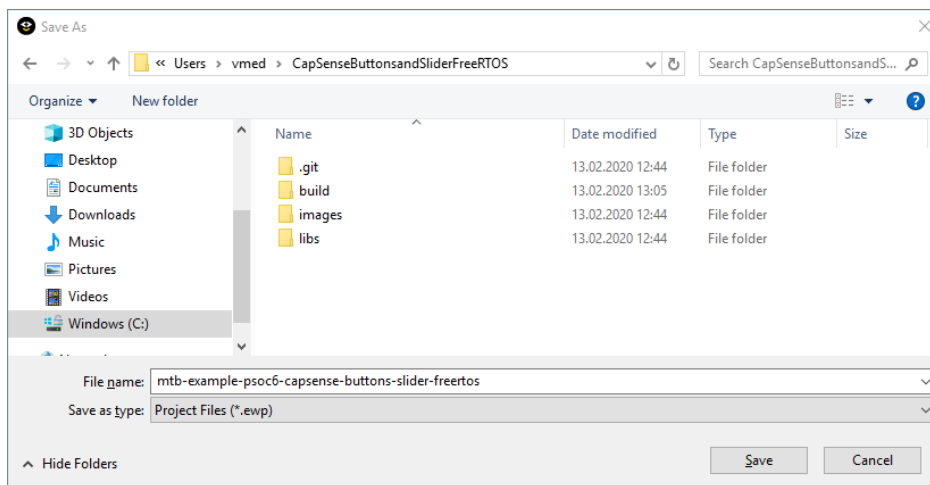

4. After the application is created, select **File > Save Workspace**, enter an arbitrary workspace name and click **Save**.
5. Select **Project > Add Project Connection** and click **OK**.

6. On the Select IAR Project Connection File dialog, select the *.ipcf* file and click **Open**:

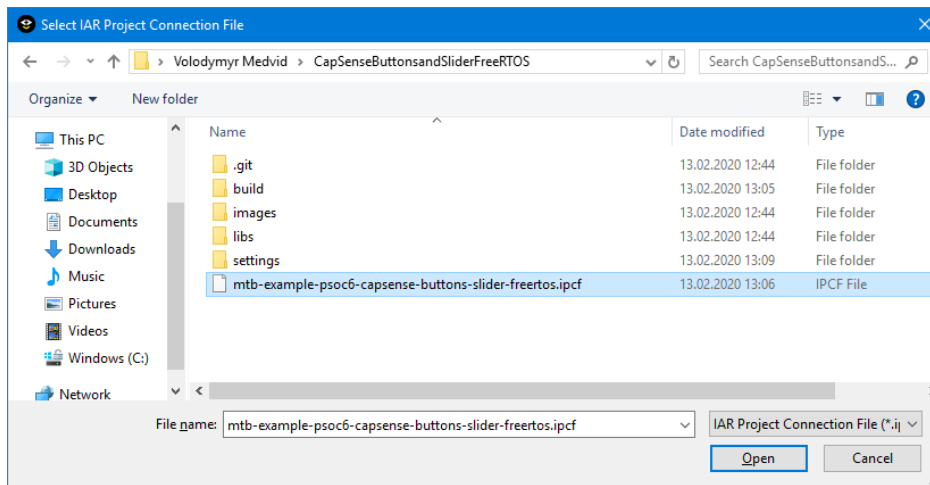

7. On the main menu, Select **Project > Make**.

At this point, the application is open in the IAR Embedded Workbench. There are several configuration options in IAR that we won't discuss here. For more details about using IAR, refer to the "Exporting to IDEs" chapter in the [ModusToolbox User Guide](#).

5a.4.4 Export for Keil μ Vision

The ModusToolbox build system also provides a make target for Keil μ Vision. If you didn't generate the files during project creation you can run the following command:

```
make uvision5 TOOLCHAIN=ARM
```


Note that export to Keil μ Vision is **not** currently supported for Bluetooth SoC solution applications.

This generates three files in the application directory:


- *<project-name>.cpdsc*
- *<project-name>.cprj*
- *<project-name>.gpdsc*


The cpdsc file extension should have the association enabled to open it in Keil μ Vision.

1. Double-click the *mtb-example-psoc6-hello-world.cpdsc* file. This launches Keil μ Vision IDE. The first time you do this, the following dialog displays:

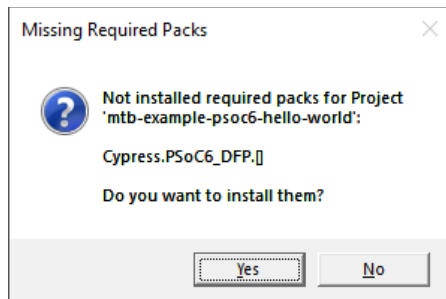

2. Click **Yes** to install the device pack. You only need to do this once.
3. Follow the steps in the Pack Installer to properly install the device pack.

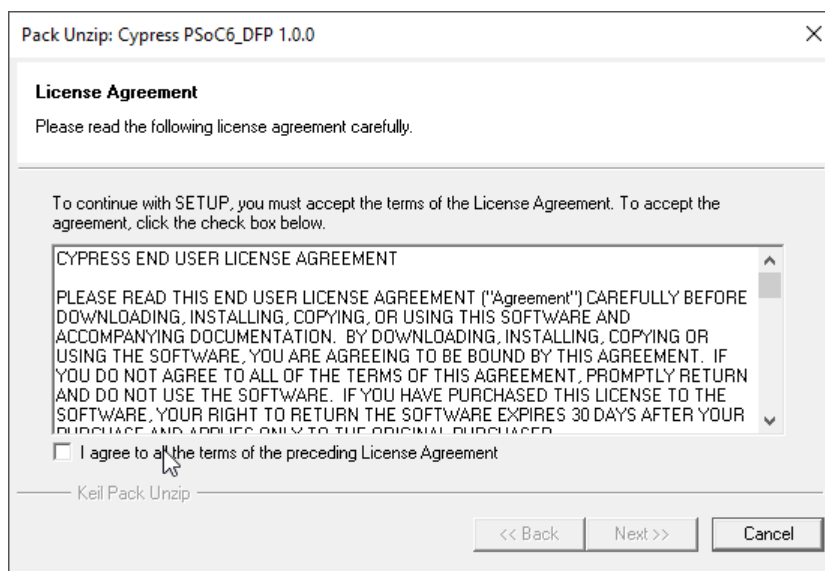

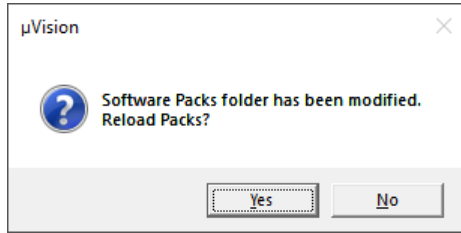


4. When complete, close the Pack Installer and close the Keil μVision IDE.
5. Then double-click the *.cpdsc* file again and the application will be created for you in the IDE.

At this point, the application is open in the Keil μVision IDE. There are several configuration options in μVision that we won't discuss here. For more details about using μVision, refer to the "Exporting to IDEs" chapter in the [ModusToolbox User Guide](#).

5a.5 Project Directory Organization

Once created, a typical ModusToolbox PSoC 6 project contains various files and directories.

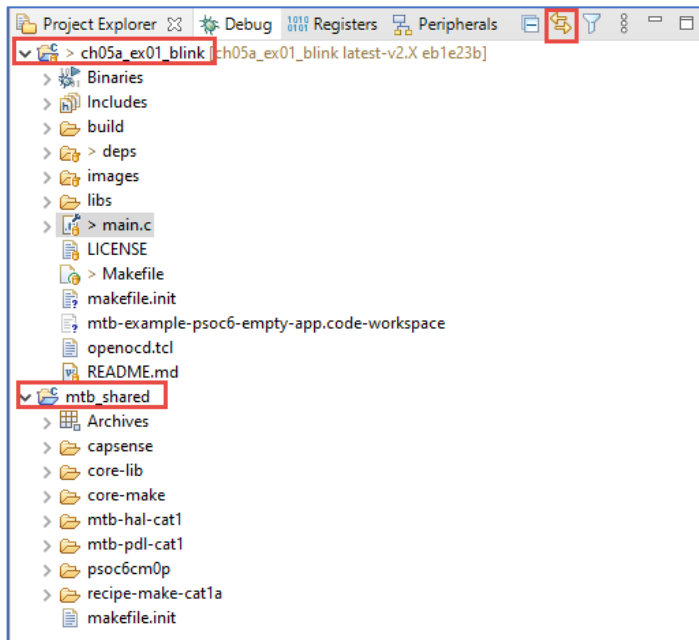

Hint: if you are going back and forth between files from two different applications (e.g. to copy code from one application to another), switching between files can be greatly speeded up by turning off the "Link with Editor" feature. This prevents the active project from being changed every time you switch between files. It can be turned off using the icon with two arrows shown inside the red box above.

There are two top-level directories associated with most applications - the application project itself (ch05a_ex01_blink in this example) and a location that contains shared library source code (mtb_shared).

The directories in the application's project are:

5a.5.1 Binaries

Virtual directory that points to the elf file from the build. This folder may not appear until a build is done.

5a.5.2 Includes

Virtual directory that shows the include paths used to find header files.

5a.5.3 build

This directory contains build files, such as the .elf and .hex files. It may not appear until a build is done.

5a.5.4 deps

This directory contains *mtb* files that specify where the `make getlibs` command finds the libraries directly included by the project. Note that libraries included via *mtb* files may have their own library

dependencies listed in the manifest files. We'll talk more about dependencies, *mtb* files and manifests in the [Library Management](#) section.

As you will see, the source code for libraries either go in the shared repository (for shared libraries) or in the *libs* directory inside the application (for libraries that are not shared).

5a.5.5 images

This directory contains artwork images used by the documentation.

5a.5.6 libs

The *libs* directory contains source code for local libraries (i.e. those that are not shared) and *mtb* files for indirect dependencies (i.e. libraries that are included by other libraries). Most libraries are placed in a shared repo and are therefore not in the *libs* directory. One notable exception is the BSP which is typically placed local to the app. The *libs* directory also includes a file called *mtb.mk* which specifies which shared libraries should be included in the application and where they can be found. This will be discussed in detail in the [Library Management](#) section.

As you will see, the *libs* directory only contains items that can be recreated by running `make getlibs`. Therefore, the *libs* directory should normally not be checked into a source control system.

5a.5.7 main.c

This is the primary application file that contains the project's application code.

5a.5.8 LICENSE

This is the ModusToolbox license agreement file.

5a.5.9 Makefile

The *Makefile* is used in the application creation process. It defines everything that ModusToolbox needs to know to create/build/program the application. This file is interchangeable between Eclipse IDE and the Command Line Interface so once you create an application, you can go back and forth between the IDE and CLI at will.

Various build settings can be set in the *Makefile* to change the build system behavior. These can be "make" settings or they can be settings that are passed to the compiler. Some examples are:

Target Device (**TARGET=**)

```
# Target board/hardware (BSP).
# To change the target, it is recommended to use the Library manager
# ('make modlibs' from command line), which will also update Eclipse IDE launch
# configurations. If TARGET is manually edited, ensure TARGET_<BSP>.mtb with a
# valid URL exists in the application, run 'make getlibs' to fetch BSP contents
# and update or regenerate launch configurations for your IDE.
TARGET=CY8CKIT-062S2-43012
```

Build Configuration (**CONFIG=**)

```
# Default build configuration. Options include:
#
# Debug -- build with minimal optimizations, focus on debugging.
# Release -- build with full optimizations
# Custom -- build with custom configuration, set the optimization flag in CFLAGS
#
# If CONFIG is manually edited, ensure to update or regenerate launch configurations
# for your IDE.
CONFIG=Debug
```

Note **TARGET** and **CONFIG** are used in the launch configurations (program, debug, etc.) so if you change either of these variables manually in the Makefile, you must update or regenerate the Launch configs inside the Eclipse IDE. Otherwise, you will not be programming/debugging the correct firmware.

Note The **TARGET** board should have a *.mtb* file in the *deps* directory (if it is a standard BSP) and must be in the source file search path if it is in the shared location. Therefore, if you change the value of **TARGET** manually in the *makefile*, you must add the *.mtb* file for the new BSP and then run `make getlibs` to update the search path in the *libs/mtb.mk* file.

Because of the reasons listed above, it is better to use the library manager to update the **TARGET** BSP since it makes all of the necessary changes to the project. If you are working exclusively from the command line and don't want to run the library manager, you can regenerate the *libs/mtb.mk* file by running `make getlibs` once the appropriate *.mtb* files are in place.

Adding Components (**COMPONENTS=**)

```
#####
# Advanced Configuration
#####

# Enable optional code that is ordinarily disabled by default.
#
# Available components depend on the specific targeted hardware and firmware
# in use. In general, if you have
#
#     COMPONENTS=foo bar
#
# ... then code in directories named COMPONENT_foo and COMPONENT_bar will be
# added to the build
#
COMPONENTS=

# Like COMPONENTS, but disable optional code that was enabled by default.
DISABLE_COMPONENTS=
```

5a.5.10 Makefile.init

This file contains variables used by the make process. This is a legacy file not needed any more.

5a.5.11 README.md

Almost every code example / starter application includes a *README.md* (mark down) file that provides a high-level description of the project.

5a.6 Library Management

A ModusToolbox project is made up of your application files plus libraries. A library is a related set of code, either in the form of C-source or compiled into archive files. These libraries contain code which is used by your application to get things done. These libraries range from low-level drivers required to boot the chip, to the configuration of your development kit (called Board Support Package) to Graphics or RTOS or CapSense, etc.

5a.6.1 Library Classification

The way libraries are used in an application can be classified in several ways:

Shared vs. Local

Source code for libraries can either be stored locally in the application directory structure, or they can be placed in a location that can be shared between all the applications in a workspace.

Direct vs. Indirect

Libraries can either be referenced directly by your application (i.e. direct dependencies) or they can be pulled in as dependencies of other libraries (i.e. indirect dependencies). In many applications, the only direct dependency is a BSP. The BSP will include everything that it needs to work with the device such as the HAL and PDL. In other applications there will be additional direct dependencies such as Wi-Fi libraries or Bluetooth libraries.

Fixed vs. Dynamic Versions

You can specify fixed version of a library to use in your application (e.g. 1.1.0), or you can specify a major release version with the intent that you will get the latest compatible version (e.g. Latest v1.X). By default, when you create an application the libraries will be fixed versions so that versions of libraries in a given application will never change unless you specifically request a change.

5a.6.2 Library Management Flows

Beginning with the ModusToolbox 2.2 release, we've developed a new way of structuring applications, called the MTB flow. Using this flow, applications can share Board Support Packages (BSPs) and libraries. If necessary, different applications can use different versions of the same shared library. Sharing resources reduces the number of files on your computer and speeds up subsequent application creation time. Shared libraries are stored in a new *mtb_shared* directory adjacent to your application directories.

You can easily switch a shared library to become local to a specific application, or back to being shared.

Looking ahead, most example applications will use the new MTB flow. However, there are still various applications that use the previous flow, now called the LIB flow, and these applications generally do not share libraries. ModusToolbox fully supports both flows.

Note that the flow selection for a single application is a binary choice. If an application uses the MTB flow, only *mtb* files will be processed, and any *lib* files will be ignored.

MTB flow

First let's discuss the flow using *mtb* files. In this flow, the source code for all libraries except BSPs will be put in a shared directory by default. (You'll see how to make them local using in the [Library Manager](#) section.) The default directory name is *mtb_shared* and its default location is parallel to the application directories (i.e. in the same application root path). The name and location of the shared directory can be customized using the Makefile variables `CY_GETLIBS_SHARED_NAME` and `CY_GETLIBS_SHARED_PATH`.

The `CY_GETLIBS_SHARED_PATH` variable will most commonly be changed for bundled apps. For most applications, the path is set to `../` to locate the directory one level up from the application directory (i.e. parallel to it). In the case of bundled applications, you will have one or more additional levels of hierarchy. If you have one extra level of hierarchy, the path would typically be set to `../../` so that the shared directory is in the usual place in the workspace.

Source code for local libraries will be placed in `libs` directory inside the application.

ModusToolbox knows about a library in your project in one of two ways depending on whether the library is a direct dependency or an indirect dependency that is included by another library.

For direct dependencies, there will be one or more *mtb* files somewhere in the directories of your project (typically in the `deps` directory but could be anywhere except the `libs` directory). An *mtb* file is simply a text file with the extension `.mtb` that has three fields separated by `#`:

- A URL to a Git repository somewhere that is accessible by your computer such as GitHub
- A Git Commit Hash or Tag that tells which version of the library that you want
- A path to where the library should be stored in the shared location (i.e. the directory path underneath *mtb_shared*).

A typical *mtb* file looks like this:

```
https://github.com/cypresssemiconductorco/retarget-io/#latest-  
v1.X##$ASSET_REPO$/retarget-io/latest-v1.X
```

The variable `$$ASSET_REPO$$` points to the root of the shared location - it is specified in the application's Makefile. If you want a library to be local to the app instead of shared you can use `$$LOCAL$$` instead of `$$ASSET_REPO$$` in the *mtb* file before downloading the libraries. Typically, the version is excluded from the path for local libraries since there can only be one local version used in a given application. Using the above example, a library local to the app would normally be specified like this:

```
https://github.com/cypresssemiconductorco/TARGET_CY8CKIT-062S2-43012/#latest-  
v1.X##$LOCAL$/TARGET_CY8CKIT-062S2-43012
```

Indirect dependencies for each library are found using information that is stored in a manifest file (more on that in the [ModusToolbox](#) Configurators

ModusToolbox software provides graphical applications called configurators that make it easier to configure a hardware block. For example, instead of having to search through all the documentation to configure a serial communication block as a UART with a desired configuration, open the appropriate

configurator to set the baud rate, parity, stop bits, etc. Upon saving the hardware configuration, the tool generates the C code to initialize the hardware with the desired configuration.

Many configurators do not apply to all types of projects. So, the available configurators depend on the project/application you have selected in the Project Explorer. Configurators are independent of each other, but they can be used together to provide flexible configuration options. They can be used stand alone, in conjunction with other configurators, or within a complete IDE. Everything is bundled together as part of the installation. Each configurator provides a separate guide, available from the configurator's Help menu. Configurators perform tasks such as:

- Displaying a user interface for editing parameters
- Setting up connections such as pins and clocks for a peripheral
- Generating code to configure middleware


Configurators are divided into two types: Board Support Package (BSP) Configurators and Library Configurators.

5a.6.3 BSP Configurators

BSP Configurators are closely related to the hardware resources on the board such as CapSense sensors, external Flash memory, etc. As described earlier, since these files are often part of the BSP, if you use a configurator to modify them you will be modifying them for all applications that use the BSP (if it is shared). In addition, your changes will cause the BSP's repo to become dirty which means it cannot be updated to newer versions. Therefore, it is not recommended that you change any settings that are in the BSP. Instead, you can create a custom configuration for a single application (see [Modifying the BSP Configuration \(e.g. design.modus\) for an Application](#)) or you can create a custom BSP (see [Creating your Own BSP](#)).

Device Configurator


Set up the system (platform) functions such as pins, interrupts, clocks, and DMA, as well as the basic peripherals, including UART, Timer, etc.

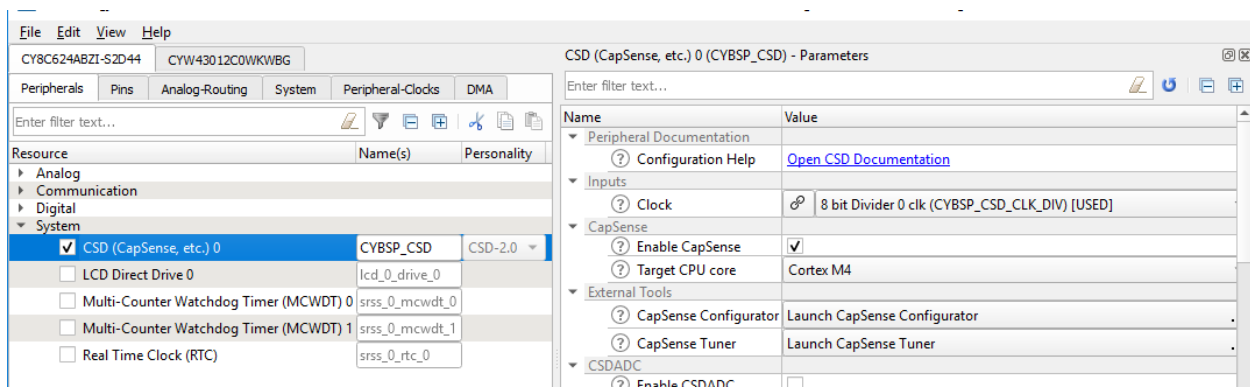

Hint: The + and - buttons can be used to expand/contract all categories and the filter button can be used to show only items that are selected. This is particularly useful on the Pins tab since the list of pins is sometimes quite long.

CapSense Configurator/Tuner

Configure CapSense hardware and generate the required firmware. This includes tasks such as mapping pins to sensors and how the sensors are scanned.

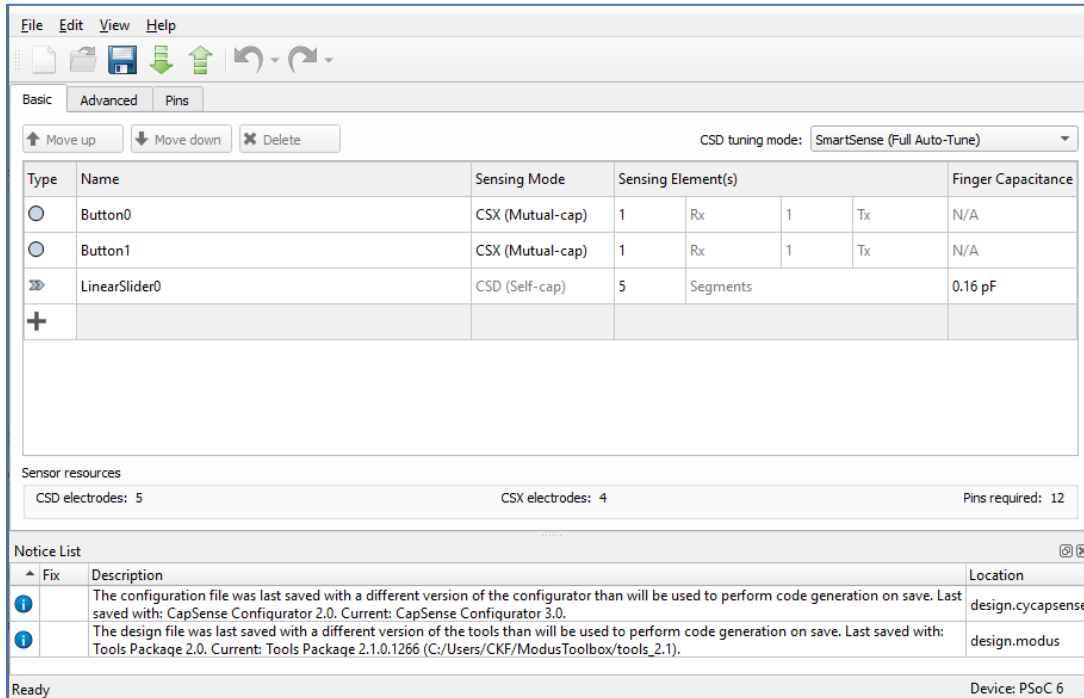

The Basic tab of the CapSense Configurator/Tuner shows the following configuration:

Type	Name	Sensing Mode	Sensing Element(s)				Finger Capacitance
<input type="radio"/>	Button0	CSX (Mutual-cap)	1	Rx	1	Tx	N/A
<input type="radio"/>	Button1	CSX (Mutual-cap)	1	Rx	1	Tx	N/A
<input checked="" type="radio"/>	LinearSlider0	CSD (Self-cap)	5	Segments			0.16 pF


Buttons: Move up, Move down, Delete. CSD tuning mode: SmartSense (Full Auto-Tune).

Sensor resources: CSD electrodes: 5, CSX electrodes: 4, Pins required: 12.

Notice List:

Fix	Description	Location
	The configuration file was last saved with a different version of the configurator than will be used to perform code generation on save. Last saved with: CapSense Configurator 2.0. Current: CapSense Configurator 3.0.	design.cypcapsense
	The design file was last saved with a different version of the tools than will be used to perform code generation on save. Last saved with: Tools Package 2.0. Current: Tools Package 2.1.0.1266 (C:/Users/CKF/ModusToolbox/tools_2.1).	design.modus

Ready Device: PSoC 6

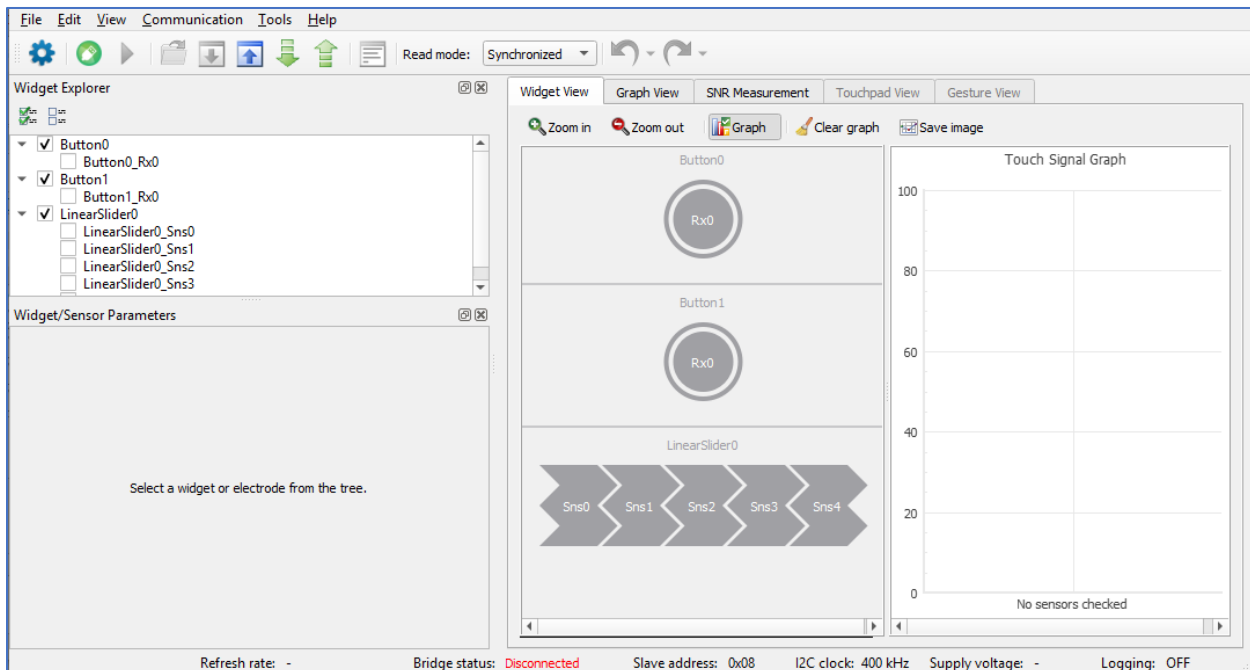

The Widget View of the CapSense Configurator/Tuner shows the following configuration:

Widget Explorer:

- ☒ Button0
 - ☐ Button0_Rx0
- ☒ Button1
 - ☐ Button1_Rx0
- ☒ LinearSlider0
 - ☐ LinearSlider0_Sns0
 - ☐ LinearSlider0_Sns1
 - ☐ LinearSlider0_Sns2
 - ☐ LinearSlider0_Sns3

Widget/Sensor Parameters: Select a widget or electrode from the tree.


Widget View: Shows a diagram of the widgets and their sensing elements. Button0 and Button1 are shown with Rx0. LinearSlider0 is shown with Sns0, Sns1, Sns2, Sns3, and Sns4.

Touch Signal Graph: A graph showing the touch signal over time. The y-axis ranges from 0 to 100. The x-axis is labeled "No sensors checked".

Read mode: Synchronized. Bridge status: Disconnected. Slave address: 0x08. I2C clock: 400 kHz. Supply voltage: -. Logging: OFF.

Smart I/O™ Configurator

Configure the Smart I/O block, which adds programmable logic to an I/O port. There are usually only a few ports on a PSoC with Smart I/O capability, so it is important to consider that up front. On the PSoC from the CY8CKIT-062S2-43012, ports 8 and 9 have Smart I/O. Each port operates independently - that is, signals from port 8 cannot interact with signals from port 9.

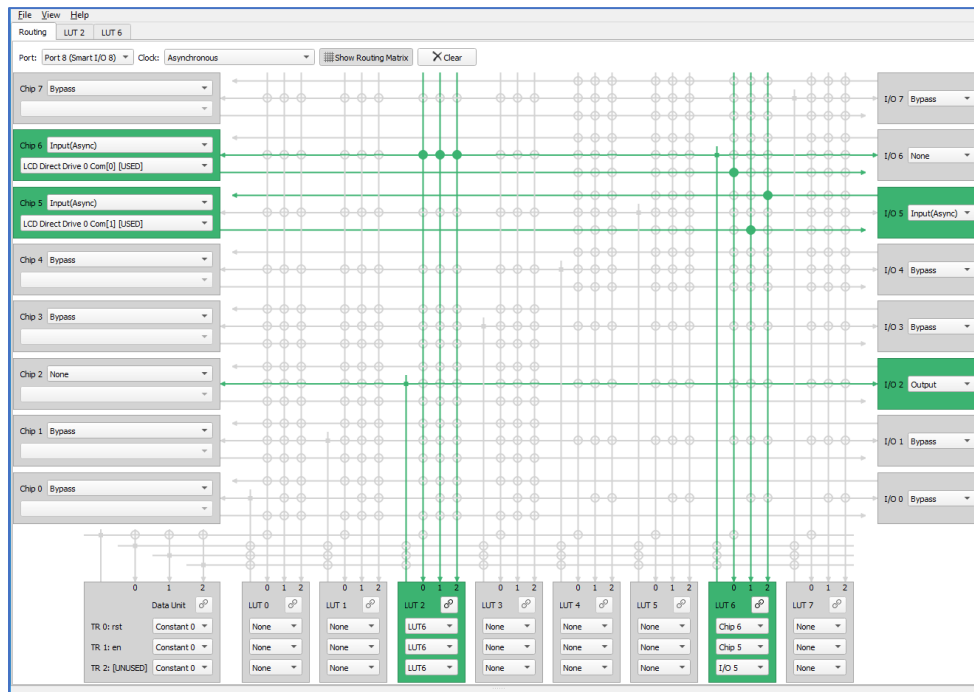

The port is chosen via a drop-down along the top of the window. Also selected at the top of the window is the clocking scheme. It can be asynchronous, or a variety of clock sources can be selected.

Along the left edge you will see a set of 8 chip connection points. These can be inputs to Smart I/O from chip peripheral outputs such as TCPWM signals or they can be outputs from Smart I/O to chip peripheral inputs such as SCB inputs.

The right edge allows connections to the chip's pins for that port - in our case, P8[7:0] and P9[7:0].


The bottom edge contains LUTs which can be used to combine and route signals to/from the chip's peripherals and to/from the chip's pins. The LUT inputs can come from peripherals, I/O pins, or from another LUT. Once you enable a LUT by selecting its inputs, a tab along the top appears for you to setup the truth table for the LUT. Note that if you don't need 3 inputs to a LUT, you can assign more than one input to the same signal.

The final section is the 8-bit Data Unit at the lower left corner. It allows you to setup trigger conditions that perform operations such as increment, decrement, and shift which are specified on the Data Unit tab once it is enabled by selecting one or more inputs.

Additional information is available in the Smart I/O user guide which can be found from the Help menu. You can also search for Smart I/O code examples in the usual places (In the Project Creator starter application list or on the Cypress GitHub site).


QSPI Configurator

Configure external memory and generate the required firmware. This includes defining and configuring what external memories are being communicated with.

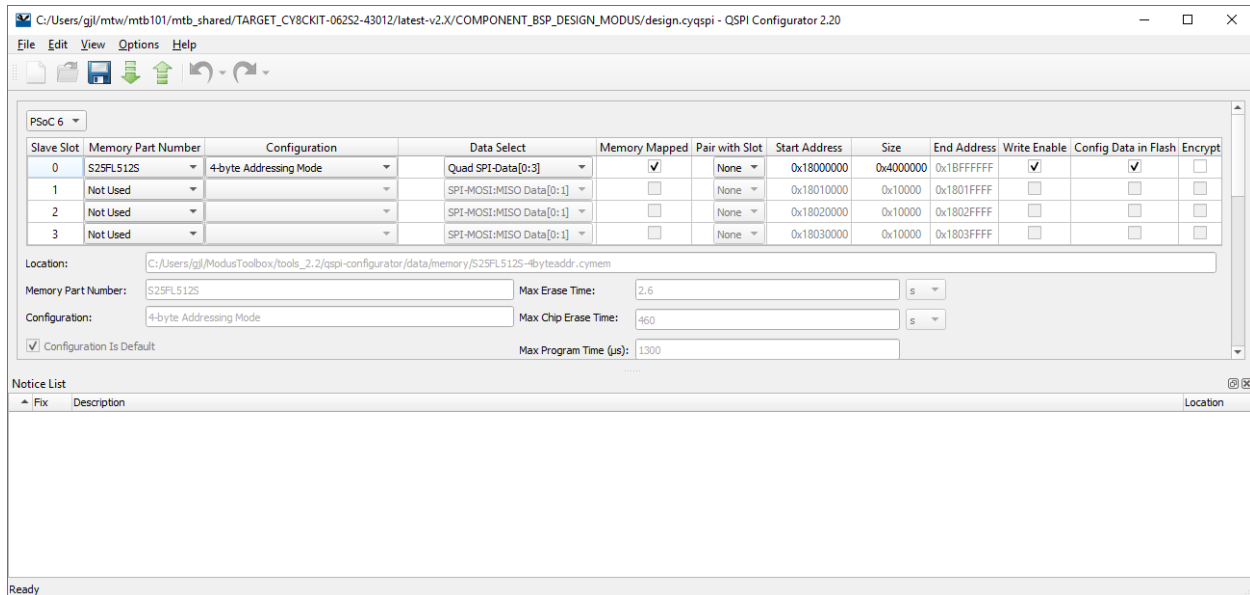

SegLCD Configurator

Configure LCD displays. This configuration defines a matrix Seg LCD connection and allows you to setup the connections and easily write to the display.

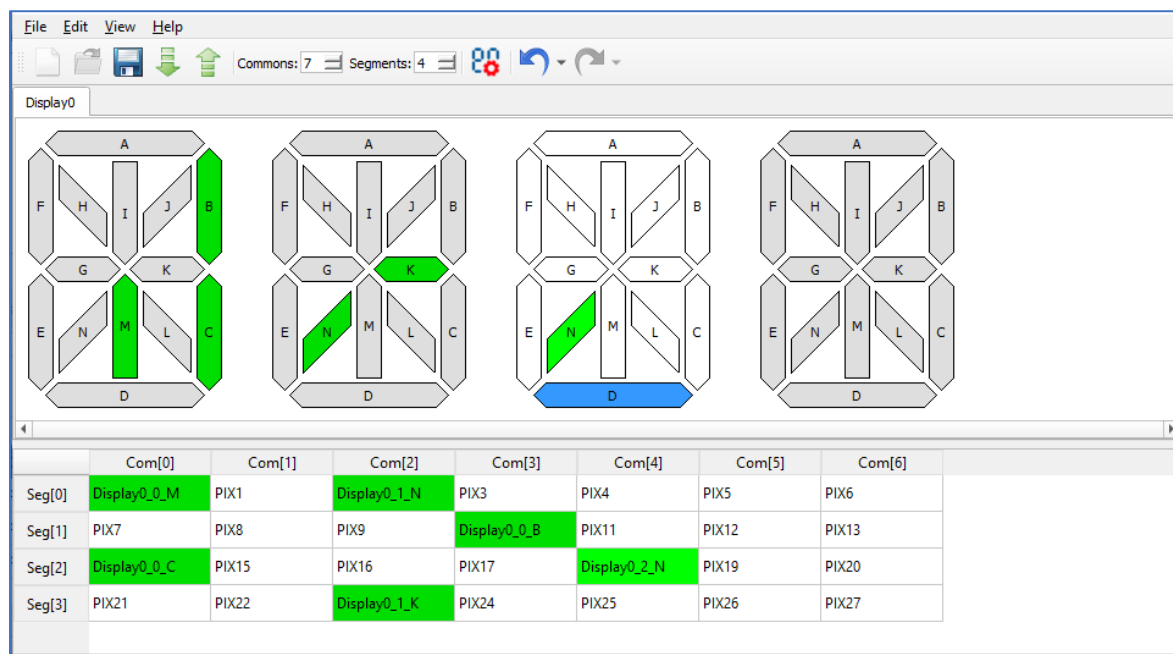


5a.6.4 Library configurators

Library Configurators are used to setup and configure middleware libraries. The files for these are contained in the project hierarchy rather than inside the BSP.


Bluetooth Configurator

Configure Bluetooth settings. This includes options for specifying what services and profiles to use and what features to offer by creating GATT databases in generated code.

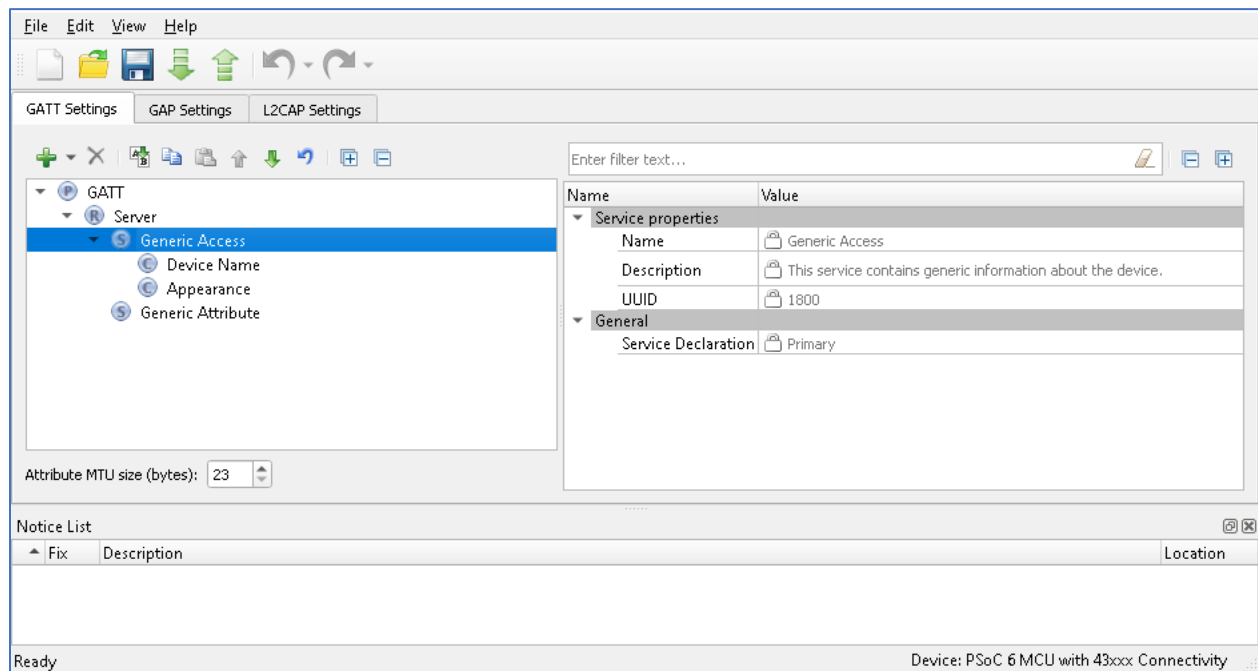

USB Configurator

Configure USB settings and generate the required firmware. This includes options for defining the 'Device' Descriptor and Settings.

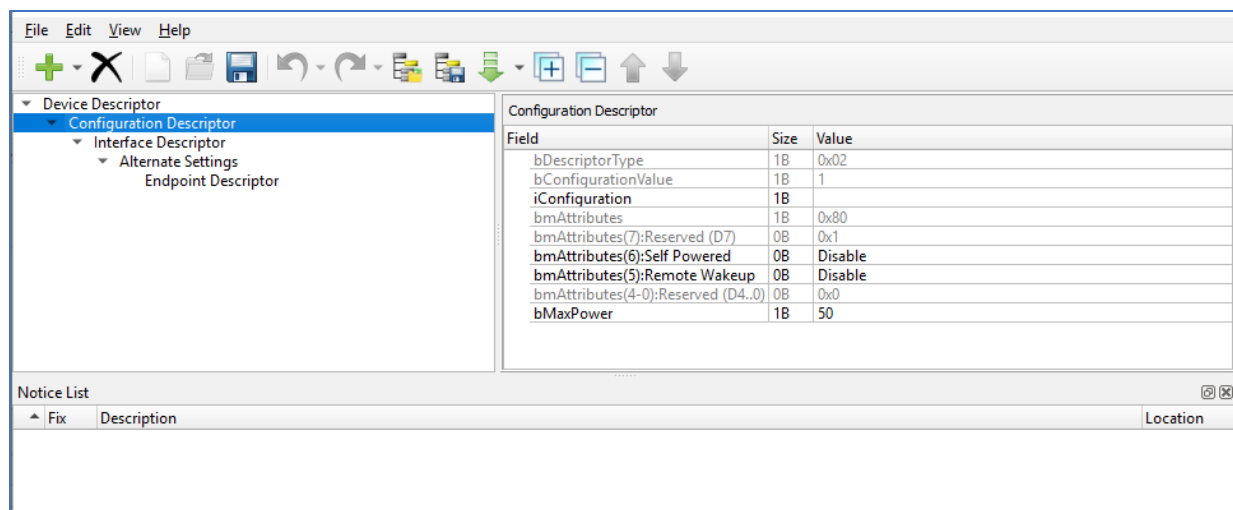

Manifests section). For each indirect dependency found, the Library Manager places an *mtb* file in the *libs* directory in the application.

Once all the *mtb* files are in the application, the `make getlibs` process (either called directly from the command line or by the Library Manager) finds the *mtb* files, pulls the libraries from the specified Git repos and stores them in the specified location (i.e. *mtb_shared/* for shared libraries and *libs/* for local libraries). Finally, a file called *mtb.mk* is created in the application's *libs* directory. That file is what the build system uses to find all the shared libraries required by the application.

Since the libraries are all pulled in using `make getlibs`, you don't typically need to check them in to a revision control system - they can be recreated at any time from the *mtb* files by re-running `make getlibs`. This includes both shared libraries (in *mtb_shared*) and local libraries (in *libs*) - they all get pulled from Git when you run `make getlibs`.

The same is true for the *mtb* files for indirect references and the *mtb.mk* file which are also stored in the *libs* directory. In fact, the default *.gitignore* file in our code examples excludes the entire *libs* directory since you should not need to check in any files from that directory.

In summary, the default locations of files relative to the application root directory for the MTB flow are:

	direct / shared	direct / local	indirect / shared
.mtb file	<code>./deps/</code>	<code>./deps/</code>	<code>./libs/</code>
library source code	<code>../mtb_shared/</code>	<code>./libs/</code>	<code>../mtb_shared/</code>

LIB flow

Now, let's discuss the flow using *lib* files for completeness since there are still some applications that use this flow. In the LIB flow, all libraries are local to the app by default. ModusToolbox knows about a library in your project by having a *lib* file somewhere in the directories of your project (typically in the *deps* directory).

A *lib* file looks just like an *mtb* file except that the file extension is *.lib* and the path to the shared location is not specified. Instead it just has 2 fields:

- A URL to a Git repository somewhere that is accessible by your computer such as GitHub
- A Git Commit Hash or Tag that tells which version of the library that you want

A typical library file will look something like this:

```
https://github.com/cypresssemiconductorco/retarget-io/#latest-v1.X
```

The `make getlibs` process (either called directly from the command line or by the Library Manager) pulls the libraries from the specified Git repo, but in this case, it searches for *lib* files instead of *mtb* files. The other difference is that all the library source code goes in the *libs* directory in the application itself instead of in a shared location. The *lib* files are found and processed recursively so that if a library that gets pulled in has dependencies, those dependencies are pulled in during the next pass.

Again, since the libraries are all pulled in using `make getlibs`, you don't typically need to check them in to a revision control system - they can be recreated at any time from the lib files by re-running `make getlibs`.



5a.6.5 Library Manager

ModusToolbox provides a GUI for helping you manage library files. You can run this from the Quick panel link “Library Manager”. It is available outside the IDE from *ModusToolbox/tools_<version>/library-manager*, from the Windows Start menu, or by entering `library-manager` in the Windows search box. If you are using the command line, you can launch it from an application directory using the command `make modlibs`.

The Library Manager knows where to find libraries and their dependencies by using manifest files, which will be discussed in the [Manifests](#) section. Therefore, *mtb* (or *lib* files for the LIB flow) included in your application that are not in the manifest file will NOT show up in the Library Manager. This may include your own custom libraries or libraries that you got from another source. You can create and include one or more custom manifest files for your custom libraries so that you can use the Library Manager, or you can manage them manually.

If, for some reason, you don't want to use the Library Manager GUI for a library that is in a manifest file, you can create an *mtb* file (or a *lib* file for the LIB flow) in the *deps* directory of your application and then run `make getlibs` from the root directory of your application. This will do the exact same thing that the Library Manager does.

The Library Manager GUI looks like this when using the MTB flow. The tabs and windows will be slightly different for the LIB flow, but we will focus on the MTB flow here.

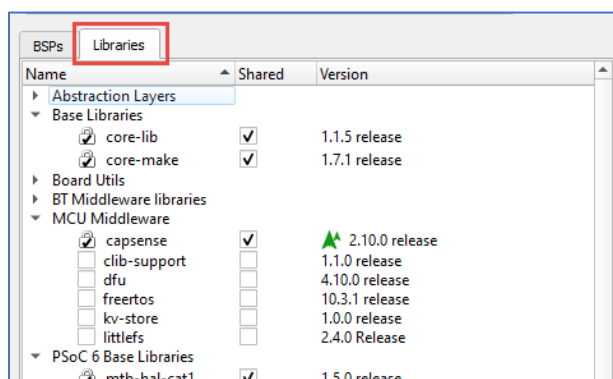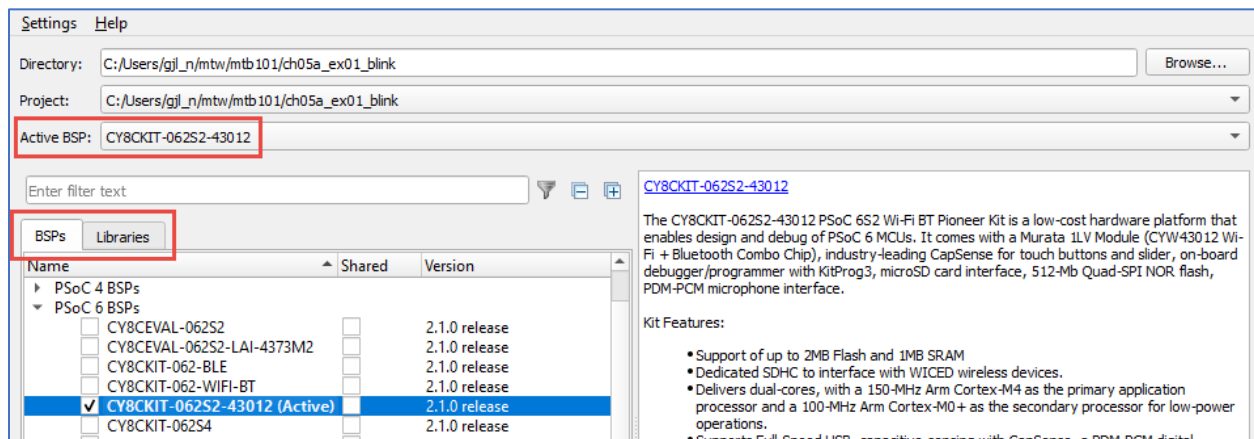

As you can see, the Library Manager has two tabs: *BSPs* (Board Support Packages) and *Libraries*.

The BSPs tab provides a mechanism to add/remove BSPs from the application and to specify which BSP (and version) should be used when building the application. An application can contain multiple BSPs, but a build from either the IDE or command line will build for and program to the “Active BSP” selected in the Library Manager. The Libraries tab allows you to add and remove libraries, as well as change their versions.

Shared Column: Both BSPs and Libraries can be "Shared" or not (i.e. "Local"). By default, most libraries are shared, meaning that the source code for the libraries is placed in the workspace's shared location (e.g. *mtb_shared*). The main exception is BSPs which are usually local by default. If you uncheck the Shared box for a given library, its source code will be copied to the *libs* directory in the application itself. Note that this column only exists for the MTB flow.

Version Column: You can select a specific fixed version of a library for your application or choose a dynamic tag that points to a major version but allows `make getlibs` to fetch the latest minor version (e.g. Latest 1.X). The drop-down will list all available versions of the library. If you have a specific version of a library selected and there's a newer one available, one of the following symbols will appear next to the version number:

 1.1.0 release  2.10.0 release

The single green arrow indicates that there is a new minor version of the library available, while two green arrows indicates that there is a new major release of the library available.

Locked Items: A library shown with a "lock" symbol is an indirect dependency (meaning its *mtb* file is in the *libs* directory). An indirect dependency is included because another library requires it, so you cannot remove it from your application unless you first remove the library that requires it. You can change an indirect dependency from shared to local or you can change its version, but if you do it is converted to a direct dependency (meaning its *mtb* file is moved to the *deps* folder). This allows the local/version information to be retained by the application even if the *libs* directory is removed or is not checked into version control.

Behind the scenes, the Library Manager reads/creates/modifies *mtb* and *lib* files, creates/modifies the *mtb.mk* file, and then runs `make getlibs`. For example, when you change a library version and click *Update*, the Library Manager modifies the version specified in the corresponding *mtb* or *lib* file and then runs `make getlibs` to get the specified version. You can always do this for yourself from the command line.

Active BSP: When you change the Active BSP, the Library Manager edits the TARGET variable in the Makefile, creates the *deps/<bsp>.mtb* file if it is a newly added library, updates the *libs/mtb.mk* file and then updates any Eclipse launch configs so that they point to the new BSP.

Eclipse IDE

Manually changing the TARGET in the Makefile will change project being built by the IDE, but it will **NOT** update the Eclipse launch configs, so it does not affect which hex file is copied to the kit. Therefore, it is recommended to use the Library Manager's Active BSP selection to change the target board if you are using the IDE to program/debug. If you do edit the Makefile manually, there is a link in the Quick Panel that says "Generate Launches for <app-name>" that you can use to fix them.

VSCode

In the case of VSCode, after updating the Active BSP or after manually editing the TARGET in the Makefile, you must update the appropriate launch configurations. You can re-run `make vscode` to regenerate the launch configurations, but keep in mind that this may over-write other VSCode settings, so it is safer to update them manually. When it is re-run, the `make vscode` process will create a backup copy of the previous files in `.vscode/backup`.

5a.6.6 Manual Library Management

If a library is not in a manifest file, it will not appear in the Library Manager and will need to be managed manually. Regardless of the library management flow, this is a two-step process:

1. Acquire the library
2. Acquire the library's dependencies

These steps can be done several different ways depending on the construction of the library and the library management flow being used by the application. Note that for (custom) BSPs, the Project Creator tool simplifies this process greatly. You can still use the other methods on BSPs if you want to include a custom BSP into an existing application. We will discuss how to create a custom BSP in [Creating your Own BSP](#).

Note that by manually managing libraries, all dependencies will be included directly in the application. Indirect dependencies only occur in the MTB flow when libraries and dependencies are included in manifest files as described in the [Library Management Flows](#) section.

Acquiring a Library (MTB flow)

There are three basic ways to get a library that isn't in a manifest file using the MTB flow:

Requirements	Method
<ul style="list-style-type: none"> - Library is hosted in a Git repo 	<ul style="list-style-type: none"> - Create an <i>mtb</i> file for the library in the application's deps directory. Run <code>make getlibs</code> from the application's root directory. - The library can be local or shared based on the <i>mtb</i> file contents.
<ul style="list-style-type: none"> - Any library - Library is local to app 	<ul style="list-style-type: none"> - Use copy, git clone, or use some other revision control system to pull the library into the application. It can be located anywhere except the <i>libs</i> directory.
<ul style="list-style-type: none"> - Any library - Library is in a shared location 	<ul style="list-style-type: none"> - Use copy, git clone, or use some other revision control system to pull the library into a shared location. - Edit the SEARCH variable in the application's Makefile to point to the library.
<ul style="list-style-type: none"> - Custom BSP 	<ul style="list-style-type: none"> - Use copy, git clone, or use some other revision control system to get the BSP somewhere on disk if it isn't already. The location is not important. It will be copied into the application folder during project creation. - Use the Import function to select the BSP in Project Creator. The custom BSP will be copied into the application.

Once you have a library, the next step is to get its dependencies. The methods used depend on whether you are using the MTB flow or the LIB flow.

Acquiring Dependencies (MTB flow)

There are several ways to acquire dependencies:

Requirements	Method
<ul style="list-style-type: none"> - Library contains <i>mtbx</i> files for its dependencies - Dependencies can be local or shared 	<ul style="list-style-type: none"> - Run <code>make import_deps</code> followed by <code>make getlibs</code> from the application's root directory. - (See <code>import_deps</code> details below)
<ul style="list-style-type: none"> - Library does not contain <i>mtbx</i> files but does contain <i>lib</i> files for its dependencies - Dependencies will be local 	<ul style="list-style-type: none"> - Run <code>make lib2mtbx</code>, then <code>make import_deps</code> and finally <code>make getlibs</code> from the application's root directory. - (See <code>lib2mtbx</code> and <code>import_deps</code> details below)
<ul style="list-style-type: none"> - Dependencies are in a manifest 	<ul style="list-style-type: none"> - Use the Library Manager.
<ul style="list-style-type: none"> - Dependencies are hosted in Git repos 	<ul style="list-style-type: none"> - Create an <i>mtb</i> file for each dependency in the application's <code>deps</code> directory. - Run <code>make getlibs</code> from the application's root directory. - The dependencies can be local or shared based on the <i>mtb</i> file contents.
<ul style="list-style-type: none"> - Any Dependency - Dependency is local to app 	<ul style="list-style-type: none"> - Use copy, git clone, or use some other revision control system to pull the library into the application. It can be located anywhere except the <i>libs</i> directory.
<ul style="list-style-type: none"> - Any dependency - Dependency is in a shared location 	<ul style="list-style-type: none"> - Use copy, git clone, or use some other revision control system to pull the library into a shared location. - Edit the <code>SEARCH</code> variable in the application's Makefile to point to the library.
<ul style="list-style-type: none"> - Custom BSP 	<ul style="list-style-type: none"> - Dependencies are pulled automatically by Project Creator.

The `make import_deps` target is intended specifically to acquire dependencies in MTB flow applications for libraries that don't have their dependencies specified manifest files. To use it, you need an *mtbx* file in the library for each dependency. The format of *mtbx* files is identical to *mtb* files. When you run `make import_deps`, it will copy the *mtbx* files from the library into the application's `deps` folder while also changing the extension to *mtb*. This results in the dependencies being direct to the application which are then pulled in when `make getlibs` is run. The libraries can either be local or shared depending on the contents of the *mtbx* files.

Usage: `make import_deps IMPORT_PATH=<path_to_library>`

The `lib2mtbx` target is mainly intended for libraries (or BSPs) that were created for ModusToolbox 2.0 or 2.1 that do not contain *mtbx* files but do contain *lib* files for their dependencies. When you run `make lib2mtbx`, it will create *mtbx* files in the library based on the *lib* files in the library. The *mtbx* files will be created to place the dependencies local to the app unless the optional argument "shared" is specified. You can save the *mtbx* files to the library's source control so that you don't need to do this step the next time the library is included into an application.

Usage: `make lib2mtbx CONVERSION_PATH=<path_to_library> [CONVERSION_TYPE="shared"]`

Acquiring a Library (LIB flow)

There are two basic ways to get a library that isn't in a manifest file using the LIB flow.

Requirements	Method
- Library is hosted in a Git repo	<ul style="list-style-type: none"> Create a <i>lib</i> file for the library in the application's deps directory. Run <code>make getlibs</code> from the application's root directory.
- Any library	<ul style="list-style-type: none"> Use copy, git clone, or use some other revision control system to pull the library into the application. It can be located anywhere except the <i>libs</i> directory.
- Custom BSP	<ul style="list-style-type: none"> Use copy, git clone, or use some other revision control system to get the BSP somewhere on disk if it isn't already. The location is not important. It will be copied into the application folder during project creation. Use the Import function to select the BSP in Project Creator. The custom BSP will be copied into the application.

Acquiring Dependencies (LIB flow)

Again, there are several ways to acquire dependencies depending on the library's structure:


Requirements	Method
- Library contains lib files for its dependencies	<ul style="list-style-type: none"> Run <code>make getlibs</code> (this step is already done if you used <code>make getlibs</code> to acquire the library).
- Dependencies are listed in a manifest	<ul style="list-style-type: none"> Use the Library Manager.
- Dependencies are hosted in a Git repo	<ul style="list-style-type: none"> Create a <i>lib</i> file for each dependency in the application's deps directory. Run <code>make getlibs</code> from the application's root directory.
- Any dependency	<ul style="list-style-type: none"> Use copy, git clone, or use some other revision control system to pull the library into the application. It can be located anywhere except the <i>libs</i> directory.
- Custom BSP	<ul style="list-style-type: none"> Dependencies are pulled automatically by Project Creator.

5a.6.7 Re-Downloading Libraries

The local library directory (`libs`) and shared library repo (`mtb_shared`) can be deleted at any time since they can be re-created using either `make getlibs` from the command line or using **Update** in the Library Manager. Typically, those directories should NOT be checked into a revision control system since they should only contain libraries that are already controlled and versioned.

If you delete the `mtb_shared` directory from disk, you can easily re-acquire the libraries by using the Library Manager update function or by using `make getlibs` on an application, but the `mtb_shared` directory will not have Eclipse project information, so it may not be possible to open it from inside the Eclipse IDE and it may not work properly for Intellisense. To fix, follow these steps from inside Eclipse after regenerating `mtb_shared` using `make getlibs` or the Library Manager Update function.

1. From the Project Explorer window, right-click on `mtb_shared` and select **Delete**. Do NOT select the check box "Delete project contents on disk" (if you do, you will have to regenerate it again).
2. Select **File > Import > C/C++ > Existing Code as Makefile Project** and click **Next**.
3. **Browse** to the `mtb_shared` directory and click **Select Folder**.
4. The **Project Name** will be filled in automatically.
5. Select **ARM Cross GCC** for the toolchain and click **Finish**.

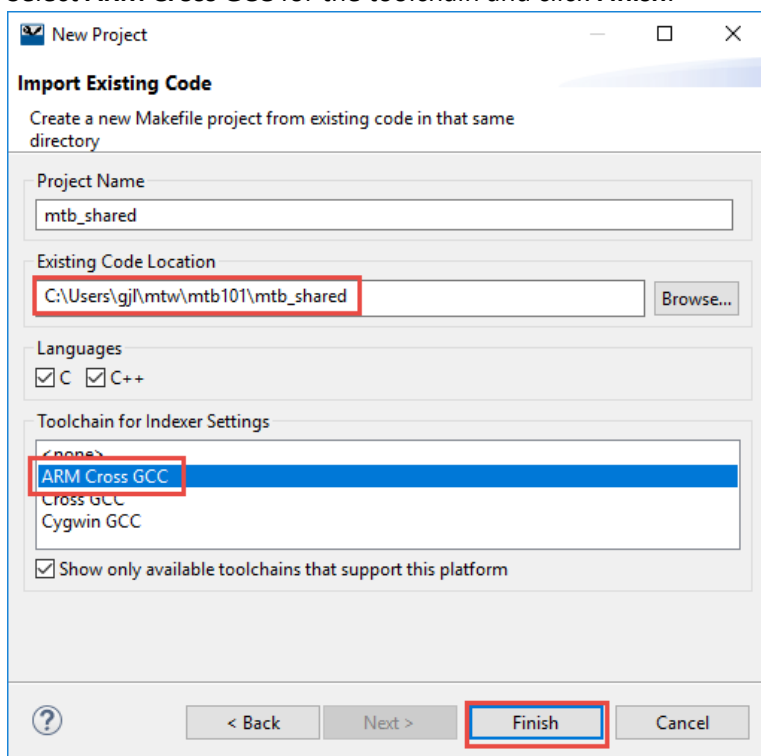


6. To get IntelliSense to work again for an application you must re-build it first.

5a.7 Board Support Packages

Each project is based on a target set of hardware. This target is called a “Board Support Package” (BSP). It contains information about the chip(s) on the board, how they are programmed, how they are connected, what peripherals are on the board, how the device pins are connected, etc. A BSP directory starts with the keyword “TARGET” and can be seen in the *libs* directory (by default) because the BSP is local to the application. This allows you to modify the BSP configuration for an application without affecting all other applications in the same workspace.

5a.7.1 BSP Directory Structure

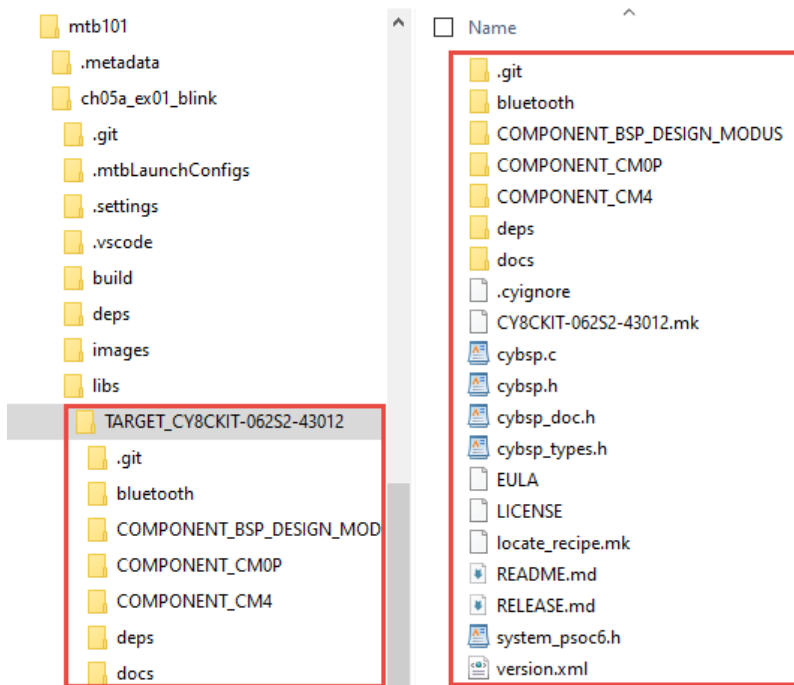


COMPONENT_BSP_DESIGN_MODUS

This directory contains the configuration files (such as *design.modus*) for use with various BSP configurator tools, including the Device Configurator, QSPI Configurator, and CapSense Configurator. At the start of a build, the build system invokes these tools to generate the source files in the *GeneratedSource* directory.

Note that since these files are part of the BSP, if you use a configurator to modify them you will be modifying them for all applications that use the BSP (if it is shared). In addition, your changes will cause the BSP's repo to become dirty which means it cannot be updated to newer versions. Therefore, it is not recommended that you change any settings that are in the BSP. Instead, you can create a custom configuration for a single application (see [Modifying the BSP Configuration \(e.g. design.modus\) for an Application](#)) or you can create a custom BSP (see [Creating your Own BSP](#)).

A typical COMPONENT_BSP_DESIGN_MODUS directory looks like this:

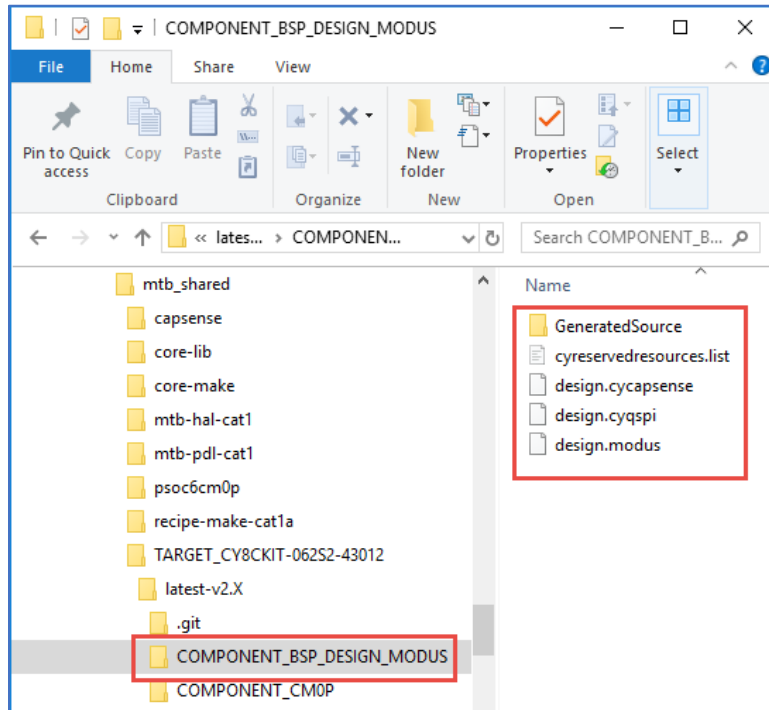

COMPONENT_CM4 and COMPONENT_CM0P

These directories contain startup code and linker scripts for all supported toolchains for each of the two cores - the CM4 and the CM0+.

docs

The *docs* directory contains the HTML based documentation for the BSP. See [BSP Documentation](#).

deps

The *deps* directory contains *lib* files for libraries that the BSP requires as dependencies. These are only used for the application flow that uses *lib* files. For the flow that uses *mtb* files, the dependency information is contained in a manifest file and the *lib* files are ignored.

cybsp_types.h

The *cybsp_types.h* file contains the aliases (macro definitions) for the board resources. It also contains comments for standard pin names so that they show up in the BSP documentation.

cybsp.h / cybsp.c

These files contain the API interface to the board's resources.

You need to include only *cybsp.h* in your application to use all the features of a BSP. Call the `cybsp_init` function from your code to initialize the board (that function is defined in *cybsp.c*).

<targetname>.mk

This file defines the DEVICE and other BSP-specific make variables such as COMPONENTS.

locate_recipe.mk



This file provides the path to the core and recipe make files that are needed by the build system.

system_psoc6.h

This file contains device system header information.

5a.7.2 BSP Documentation

Each BSP provides HTML documentation that is specific to the selected board. It also includes an API Reference and the BSP Overview. After creating a project, there is a link to the BSP documentation in the IDE Quick Panel. As mentioned previously, this documentation is located in the BSP's “docs” directory.

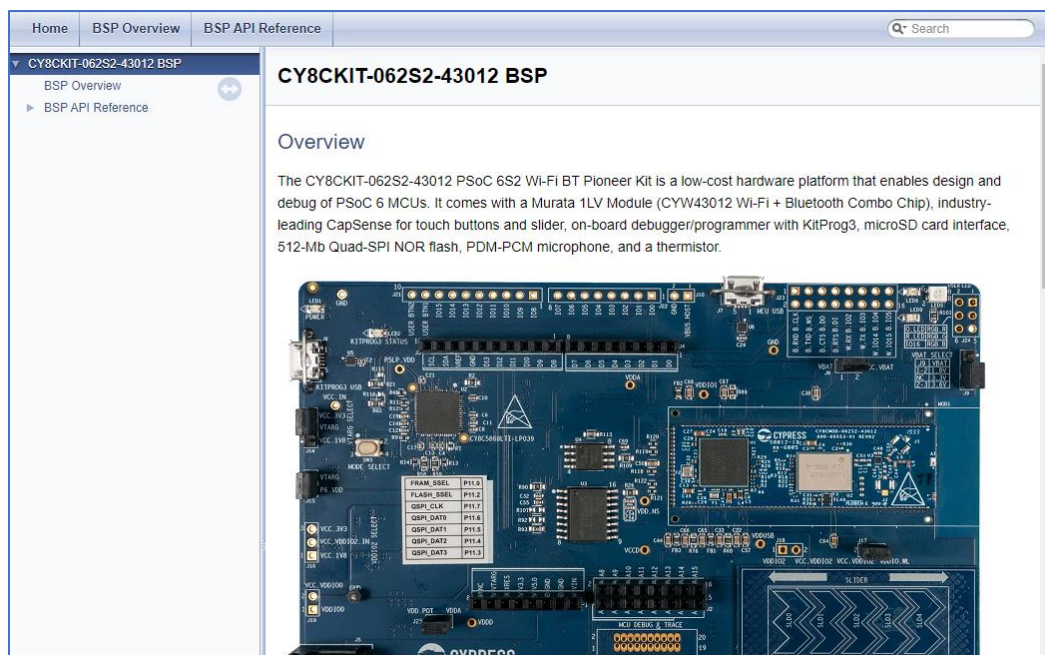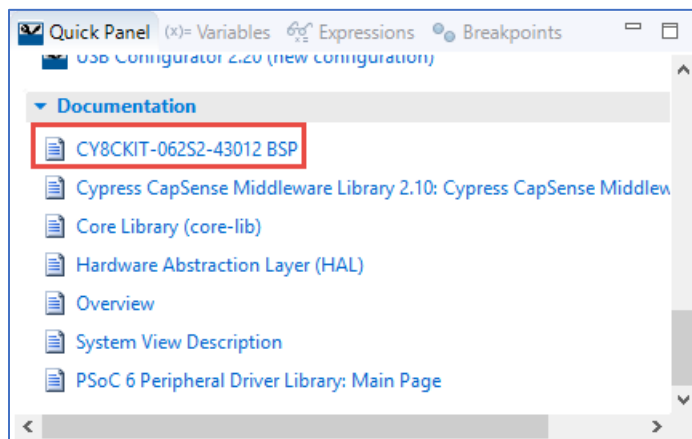

5a.7.3 Modifying the BSP Configuration (e.g. `design.modus`) for an Application

If you want to modify the BSP configuration for an application (such as different pin or peripheral settings), you can modify the BSP, but if you are using a standard BSP that means you are dirtying the Git repo. If the BSP happens to be shared among multiple applications, any changes will affect all of the applications. If you don't want to do that, you can use the following process to create a custom set of configuration files for a specific application. This process is used for code examples that need to modify the default BSP configuration so you will see is show up in some example applications.

1. Create a directory at the root of the application to hold any custom BSP configuration files. For example:

`Hello_World/COMPONENT_CUSTOM_DESIGN_MODUS`


This is a recommended best practice. In an upcoming step, you will modify the Makefile to include files from that directory instead of the directory containing the default configuration files in the BSP.

2. Create a subdirectory for each target that you want to support in your application. For example:

`Hello_World/COMPONENT_CUSTOM_DESIGN_MODUS/TARGET_CY8CKIT-062S2-43012`

The subdirectory name must be `TARGET_<board name>`. Again, this is a recommended best practice. If you only ever build with one BSP, this directory is not required, but it is safer to include it.

The build system automatically includes all source files inside a directory that begins with `TARGET_`, followed by the target name for compilation, when that target is specified in the application's makefile. The file structure appears as follows. In this example, the `COMPONENT_BSP_DESIGN_MODUS` directory for this application is overridden for just one target: `CY8CKIT-062S2-43012`.

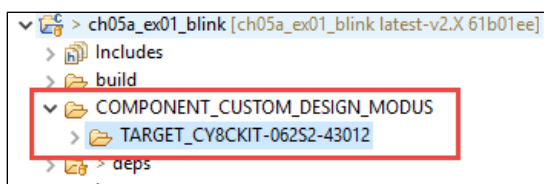

3. Copy the `design.modus` file and other configuration files (that is, everything from inside the original BSP's `COMPONENT_BSP_DESIGN_MODUS` directory), and paste them into the new directory for the target.
4. In the application's Makefile, add the following lines:

```
DISABLE_COMPONENTS += BSP_DESIGN_MODUS
```

```
COMPONENTS += CUSTOM_DESIGN_MODUS
```

Note The Makefile already contains blank `DISABLE_COMPONENTS` and `COMPONENTS` lines where you can add the appropriate names.


The first line disables the configuration files from the original BSP since they are now in different directory.

The second line is required to specify the new directory and include your custom configuration files so that the `init_cycfg_all` function is still called from the `cybsp_init` function. The `init_cycfg_all` function is used to initialize the hardware that was set up in the configuration files.

5. Customize the configuration files as required, such as using the Device Configurator to open the *design.modus* file and modify appropriate settings.

Note When you first create a custom configuration for an application, the Eclipse IDE Quick Panel entry to launch the Device Configurator may still open the *design.modus* file from the original BSP instead of the custom file. To fix this, click the **Refresh Quick Panel** link.

When you save the changes in the *design.modus* file, the source files are generated and placed under the *GeneratedSource* directory. The file structure appears as follows:

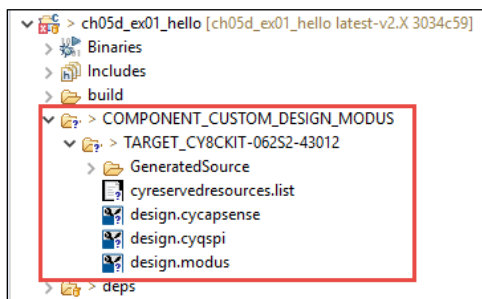

6. When finished customizing the configuration settings, you can build the application and program the device as usual.

5a.7.4 Creating your Own BSP

If you want to change more than just the configuration from the *COMPONENT_BSP_DESIGN_MODUS* directory (such as for your own custom hardware or for different linker options), you can create a full BSP based on an existing one. To create your own custom BSP, do the following:

1. Locate the closest-matching BSP to your intended custom BSP and set that as the default `TARGET` for the application in the Makefile.
2. In the application directory, run the `make bsp` target.

Specify the new board name by passing the value to the `TARGET_GEN` variable. Optionally you may specify a new device (`DEVICE_GEN`) if it is different from the BSP that you started from. For example:

```
make bsp TARGET_GEN=MyBSP DEVICE_GEN=CY8C624ABZI-S2D44
```

This command creates a new BSP with the provided name at the top of the application project. It automatically copies the relevant startup and linker scripts into the newly created BSP, based on the device specified by the `DEVICE_GEN` option.

It also creates *.mtbx* files for all the BSP's dependences. The Project Creator tool uses these files when you import your custom BSP into that tool. These files can also be used with the `make import_deps` command if you manually include the custom BSP in a new application (see [Manual Library Management](#)).

Note The BSP used as your starting point may have library references (for example, *capsense.lib* or *udb-sdio-whd.lib*) that are not needed by your custom BSP. You can delete these from the BSP. Be sure to remove the corresponding *.mtbx* files as well.

Note If you want your custom BSP to support only the LIB flow, then you should manually remove the *.mtbx* files from the BSP after creating it.

3. Open the Device Configurator to customize settings in the new device's *design.modus* file for pin names, clocks, power supplies, and peripherals as required. Address any issues that arise.
4. Update the application's Makefile `TARGET` variable to point to your new BSP.
5. If using an IDE, regenerate the configuration settings to reflect the new BSP. Use the appropriate command(s) for the IDE(s) that are being used. For example: `make vscode`.
6. When you want to use a custom BSP in a new application, the easiest method to include it is to use the Import functionality in Project Creator. You can also use other manual library management techniques if you prefer - see [Manual Library Management](#).

If you want to re-use a custom BSP on multiple applications, you can copy it into each application or you can put it into a version control system such as Git.

for information on how to create a manifest to include your custom BSPs and their dependencies if you want them to show up as standard BSPs in the Project Creator and Library Manager. Note that if you put your custom BSP in a shared location instead of local to the application, it will need to be included in the `SEARCH` path in the *makefile* unless it is included in a manifest to get it to show up as a standard BSP.

5a.7.5 Updating the MCU Device in a BSP

Based on project requirements, you may need to change the MCU device on an existing custom BSP. That can be done using `make update_bsp`. You must specify the BSP to update and the new MCU device to use. For example:

```
make update_bsp TARGET_GEN=MyBSP DEVICE_GEN=CY8C624ABZI-S2D44
```

If using an IDE, regenerate the configuration settings to reflect the new BSP. Use the appropriate command(s) for the IDE(s) that are being used. For example: `make vscode`. This step must be done whenever the target device is changed since the launch configurations may change from device to device.


5a.7.6 Updating the Connectivity Device in a BSP

If you want to change the connectivity (WiFi/Bluetooth) companion device in a BSP, you must make the changes manually. The required changes are:

1. Open the *design.modus* file in a text editor, find the line that contains `Device mpn=<connectivity device>` and update to the new connectivity device's name. This is usually near the end of the file.
2. Open the *<bsp>.mk* file in a text editor and:
 - a. Find the line that contains `ADDITIONAL_DEVICES:=<connectivity device>` and update to the new connectivity device's name.
 - b. Find the `COMPONENTS` line that specifies the connectivity device family and update as necessary. For example, you may need to change `COMPONENTS+=43013` to `COMPONENTS+=4343W`.
 - c. You may need to make changes to other `COMPONENTS` settings to get the proper WiFi and Bluetooth firmware from the *wifi-host-driver* and *bluetooth-freertos* libraries, respectively. The exact changes will depend on the construction of the BSP.

5a.8 Application Layers

There are four distinct ways for an application to interact with the hardware as shown in the following diagram:

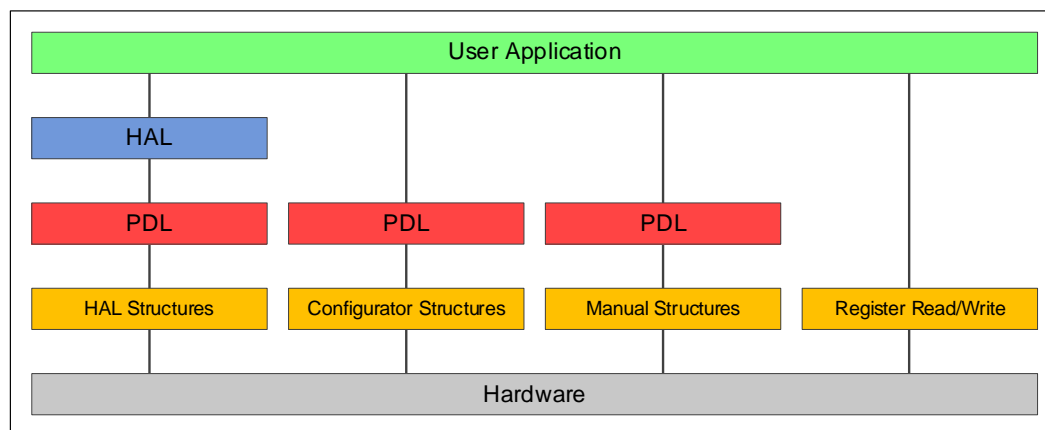

- **HAL Structures:** Application code uses the HAL, which interacts with the PDL through structures created by the HAL.
- **Configurator Structures:** Application code uses PDL via structures created by a Configurator.
- **Manual Structures:** Application code uses PDL through structures created manually.
- **Register Read/Write:** Application code uses direct register read and writes.

Note that a single application may use different methods for different peripherals.

5a.8.1 HAL

Using the HAL is more portable than the other methods. It is the preferred method for simpler functions and those that don't have extremely strict flash size limitations. It is a high-level interface to the hardware that allows many common functions to be done quickly and easily. This allows the same code to be used even if there are changes to pin assignments, different devices in the same family, or even to a different family that may have radically different underlying architectures.


The advantages include:

- Easy hardware changes. Just change the pin assignment in the BSP and the code remains the same. For example, if LED1 changes from P0_0 to P0_1, the code remains the same as long as the code uses the name LED1 with the HAL. The only change is to the BSP pin assignment.
- Easy migration to a different device as product requirements change.
- Ability to use the same code base across multiple projects and generations, even if underlying architectures are different.

The disadvantages include:

- The HAL may not support every feature that the hardware has. It supports the most common features but not all of them to maintain simplicity.
- The HAL will use additional flash space. The additional flash depends on which HAL APIs are used.

After creating a PSoC 6 project, there is a link to the HAL documentation in the Quick Panel under “Documentation.”

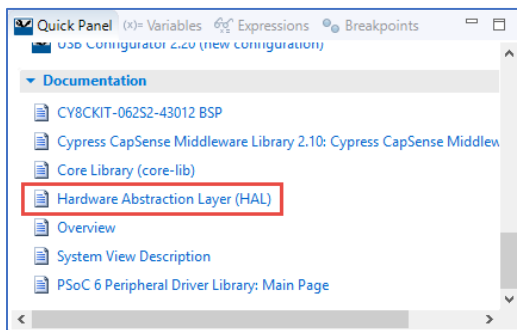



Note that many of the libraries provided by Infineon take advantage of the HAL so that they can work seamlessly with a wide variety of Infineon products.

5a.8.2 PDL

The PDL is a lower-level interface to the hardware (but still simpler than direct register access) that supports all hardware features. Usually the PDL goes hand-in-hand with Configurators, which will be described next. Since the PDL interacts with the hardware at a lower level it is less portable between devices, especially those with different architectures.

The advantages/disadvantages are the exact opposite of those for the HAL. The main advantage is that it provides access to every hardware feature.

After creating a PSoC 6 project, there is a link to the PDL documentation in the Quick Panel under “Documentation.”

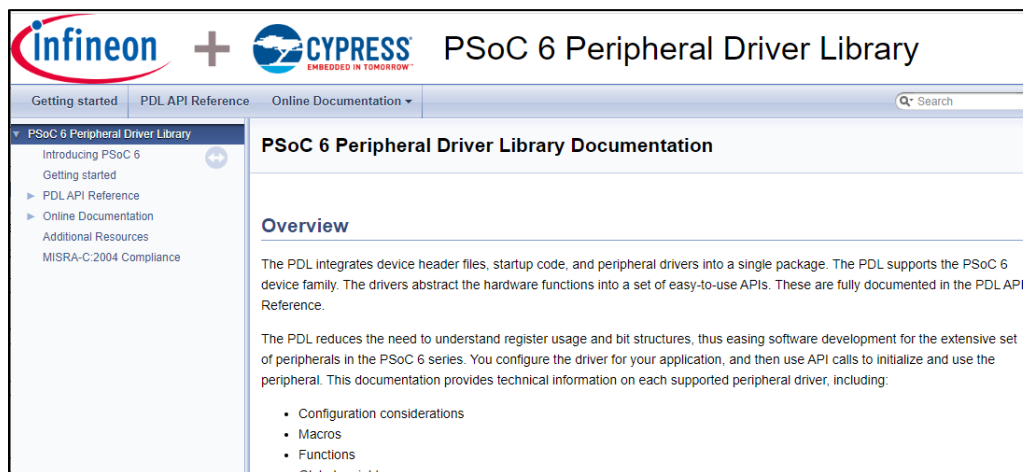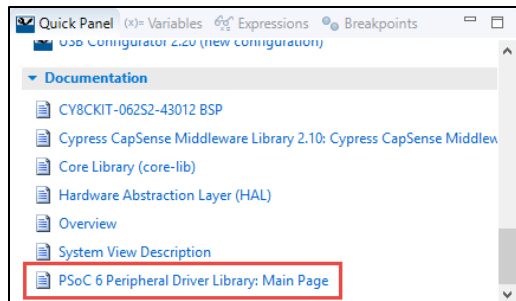

5a.8.3 Configurators

Configurators make initial setup easier for hardware accessed using the PDL. The Configurators create structures that the PDL requires without you needing to know the exact composition of each structure, and they create the proper structure based on your selections. Configurators will be discussed in more detail in the next section.

If you use the HAL for a peripheral, it will create the necessary structures for you, so you should NOT use a Configurator to set them up. The HAL structure is accessible, and once you initialize a peripheral with the HAL you can view and even modify that structure (that is, a HAL object). Keep in mind that the underlying structures are hardware-specific, so you may be sacrificing portability if you modify the structure manually. There are a few exceptions. For example, it is reasonable to configure system items (such as clocks) and use them with the HAL.

5a.9 ModusToolbox Configurators

ModusToolbox software provides graphical applications called configurators that make it easier to configure a hardware block. For example, instead of having to search through all the documentation to configure a serial communication block as a UART with a desired configuration, open the appropriate configurator to set the baud rate, parity, stop bits, etc. Upon saving the hardware configuration, the tool generates the C code to initialize the hardware with the desired configuration.

Many configurators do not apply to all types of projects. So, the available configurators depend on the project/application you have selected in the Project Explorer. Configurators are independent of each other, but they can be used together to provide flexible configuration options. They can be used stand alone, in conjunction with other configurators, or within a complete IDE. Everything is bundled together as part of the installation. Each configurator provides a separate guide, available from the configurator's Help menu. Configurators perform tasks such as:

- Displaying a user interface for editing parameters
- Setting up connections such as pins and clocks for a peripheral
- Generating code to configure middleware


Configurators are divided into two types: Board Support Package (BSP) Configurators and Library Configurators.

5a.9.1 BSP Configurators

BSP Configurators are closely related to the hardware resources on the board such as CapSense sensors, external Flash memory, etc. As described earlier, since these files are often part of the BSP, if you use a configurator to modify them you will be modifying them for all applications that use the BSP (if it is shared). In addition, your changes will cause the BSP's repo to become dirty which means it cannot be updated to newer versions. Therefore, it is not recommended that you change any settings that are in the BSP. Instead, you can create a custom configuration for a single application (see [Modifying the BSP Configuration \(e.g. design.modus\) for an Application](#)) or you can create a custom BSP (see [Creating your Own BSP](#)).

Device Configurator



Set up the system (platform) functions such as pins, interrupts, clocks, and DMA, as well as the basic peripherals, including UART, Timer, etc.

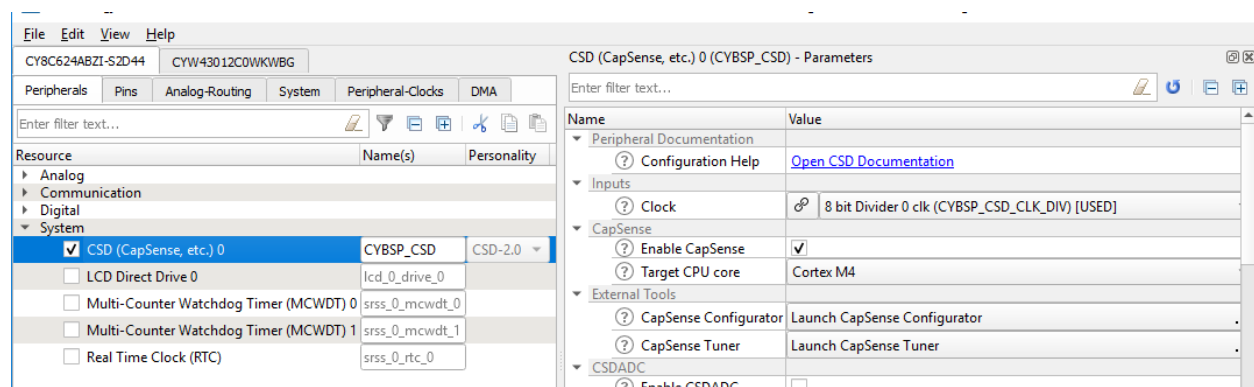

Hint: The + and - buttons can be used to expand/contract all categories and the filter button can be used to show only items that are selected. This is particularly useful on the Pins tab since the list of pins is sometimes quite long.


CapSense Configurator/Tuner

Configure CapSense hardware and generate the required firmware. This includes tasks such as mapping pins to sensors and how the sensors are scanned.

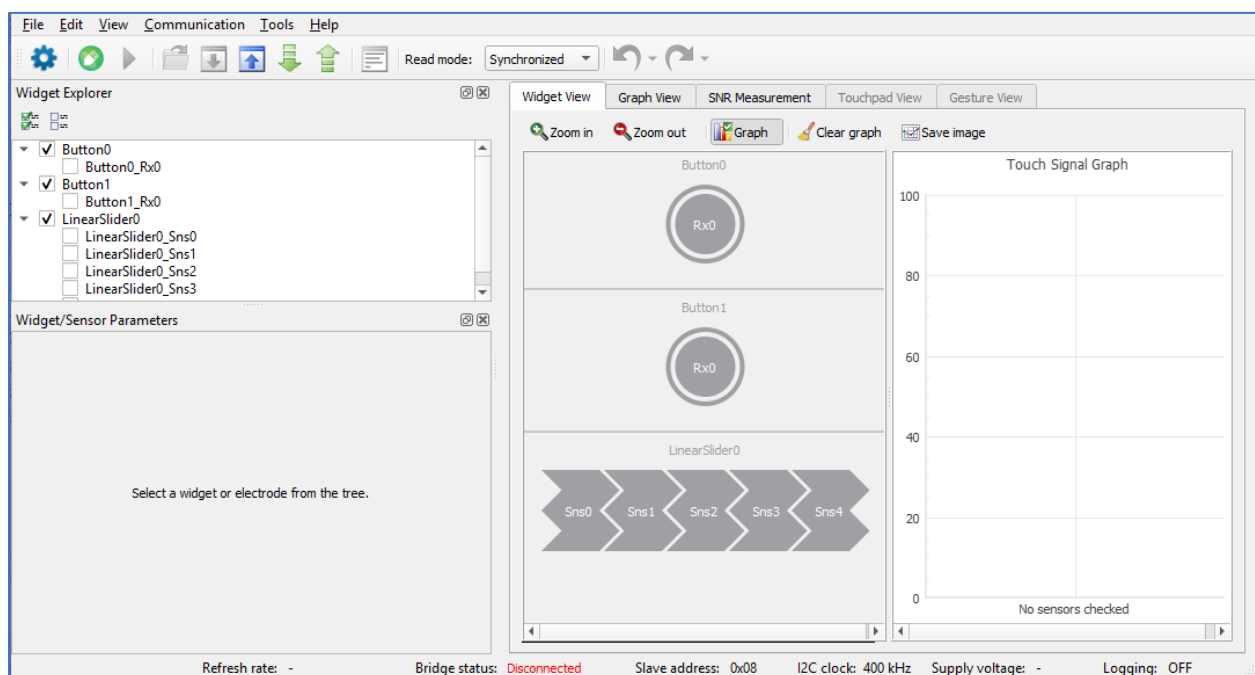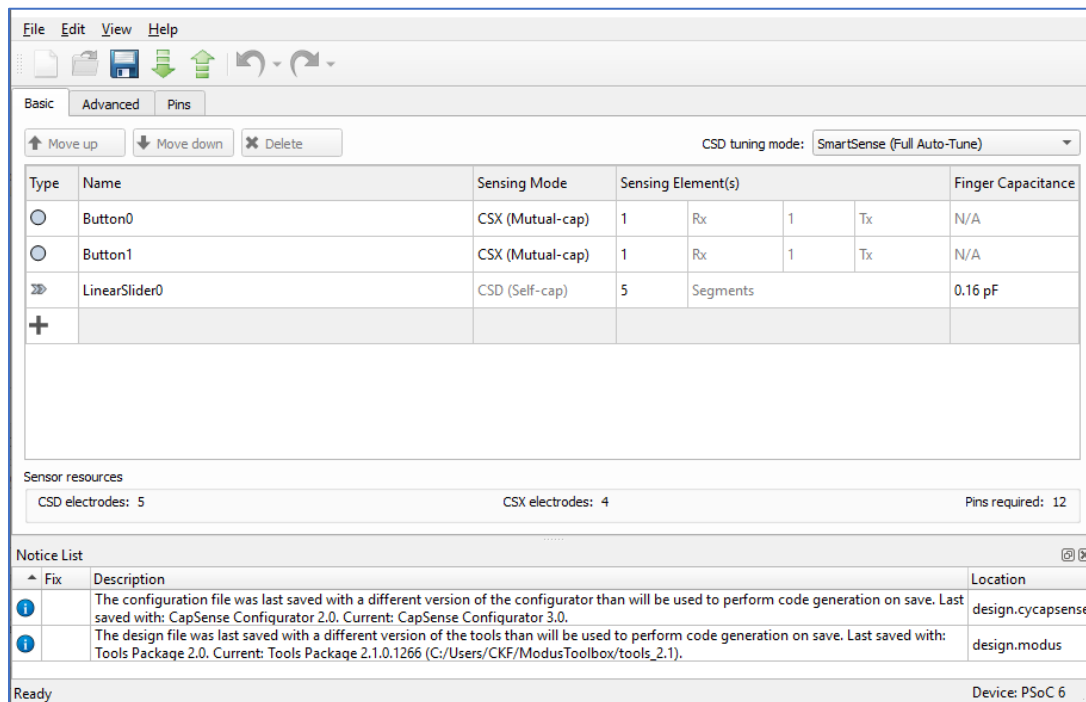

Smart I/O™ Configurator

Configure the Smart I/O block, which adds programmable logic to an I/O port. There are usually only a few ports on a PSoC with Smart I/O capability, so it is important to consider that up front. On the PSoC from the CY8CKIT-062S2-43012, ports 8 and 9 have Smart I/O. Each port operates independently - that is, signals from port 8 cannot interact with signals from port 9.

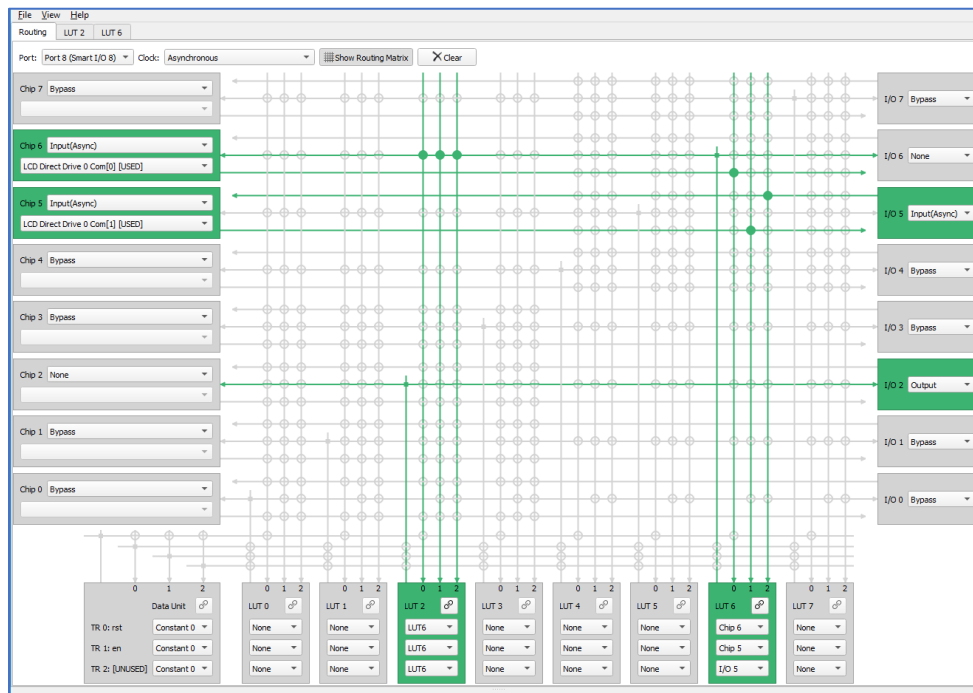

The port is chosen via a drop-down along the top of the window. Also selected at the top of the window is the clocking scheme. It can be asynchronous, or a variety of clock sources can be selected.

Along the left edge you will see a set of 8 chip connection points. These can be inputs to Smart I/O from chip peripheral outputs such as TCPWM signals or they can be outputs from Smart I/O to chip peripheral inputs such as SCB inputs.

The right edge allows connections to the chip's pins for that port - in our case, P8[7:0] and P9[7:0].


The bottom edge contains LUTs which can be used to combine and route signals to/from the chip's peripherals and to/from the chip's pins. The LUT inputs can come from peripherals, I/O pins, or from another LUT. Once you enable a LUT by selecting its inputs, a tab along the top appears for you to setup the truth table for the LUT. Note that if you don't need 3 inputs to a LUT, you can assign more than one input to the same signal.

The final section is the 8-bit Data Unit at the lower left corner. It allows you to setup trigger conditions that perform operations such as increment, decrement, and shift which are specified on the Data Unit tab once it is enabled by selecting one or more inputs.

Additional information is available in the Smart I/O user guide which can be found from the Help menu. You can also search for Smart I/O code examples in the usual places (In the Project Creator starter application list or on the Cypress GitHub site).

QSPI Configurator

Configure external memory and generate the required firmware. This includes defining and configuring what external memories are being communicated with.

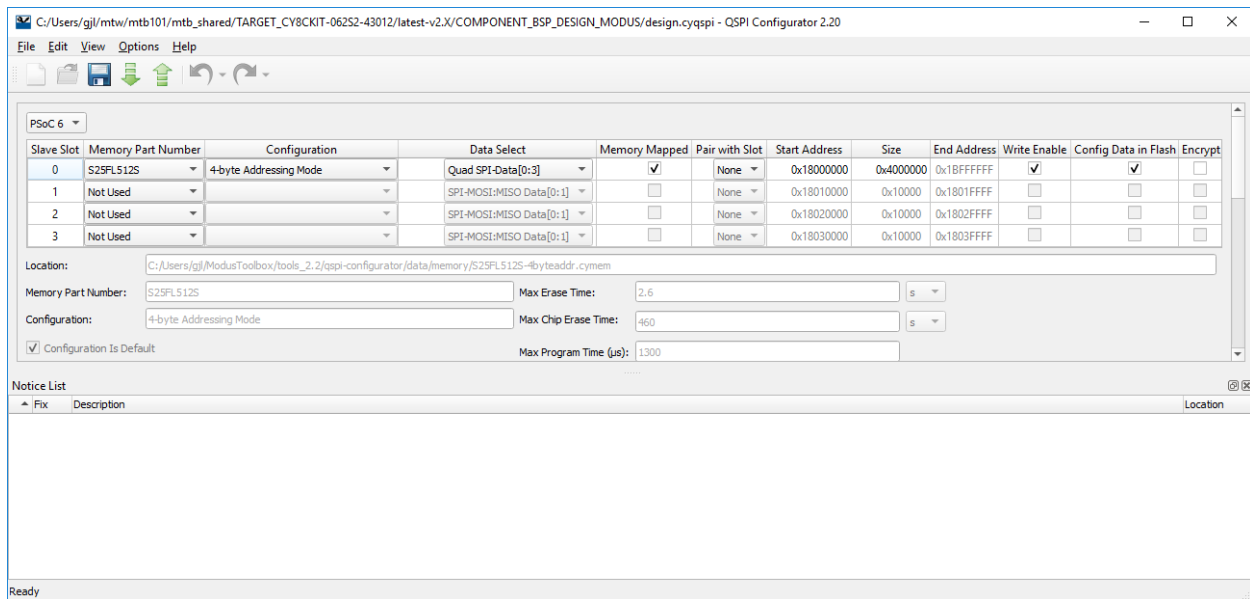

The screenshot shows the QSPI Configurator 2.20 application window. The title bar indicates the path: C:/Users/gjl/mtw/mtb101/mtb_shared/TARGET_CY8CKIT-06252-43012/latest-v2.X/COMPONENT_BSP_DESIGN_MODUS/design.cyqspi - QSPI Configurator 2.20. The application has a menu bar (File, Edit, View, Options, Help) and a toolbar with icons for file operations and configuration. The main interface features a dropdown for 'PSoC 6' and a table for configuring memory slots. Below the table, there are fields for 'Location', 'Memory Part Number', 'Configuration', and timing parameters like 'Max Erase Time', 'Max Chip Erase Time', and 'Max Program Time'. A 'Notice List' section is at the bottom, and the status bar shows 'Ready'.

Slave Slot	Memory Part Number	Configuration	Data Select	Memory Mapped	Pair with Slot	Start Address	Size	End Address	Write Enable	Config Data in Flash	Encrypt
0	S25FL512S	4-byte Addressing Mode	Quad SPI-Data[0:3]	<input checked="" type="checkbox"/>	None	0x18000000	0x4000000	0x1BFFFFFF	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
1	Not Used		SPI-MOSI-MISO Data[0:1]	<input type="checkbox"/>	None	0x18010000	0x10000	0x1801FFFF	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	Not Used		SPI-MOSI-MISO Data[0:1]	<input type="checkbox"/>	None	0x18020000	0x10000	0x1802FFFF	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	Not Used		SPI-MOSI-MISO Data[0:1]	<input type="checkbox"/>	None	0x18030000	0x10000	0x1803FFFF	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Location: C:/Users/gjl/ModusToolbox/tools_2.2/qspi-configurator/data/memory/S25FL512S-4byteaddr.cymem

Memory Part Number: S25FL512S Max Erase Time: 2.6 s

Configuration: 4-byte Addressing Mode Max Chip Erase Time: 460 s

☒ Configuration Is Default Max Program Time (μs): 1300


Notice List

Fix	Description	Location
-----	-------------	----------

Ready

SegLCD Configurator

Configure LCD displays. This configuration defines a matrix Seg LCD connection and allows you to setup the connections and easily write to the display.

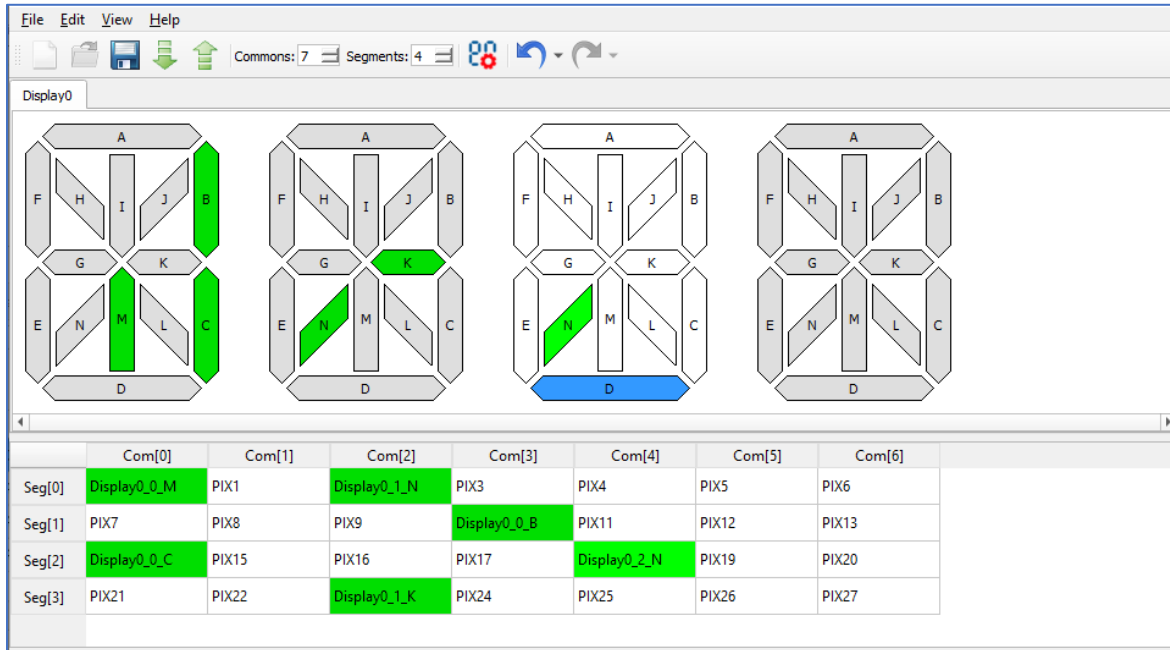

The SegLCD Configurator interface displays four diagrams of a 16-segment LCD (segments A through P). The segments are arranged in a 4x4 grid. The diagrams show different segment configurations: the first has segments A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P; the second has segments A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P; the third has segments A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P; and the fourth has segments A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P.


	Com[0]	Com[1]	Com[2]	Com[3]	Com[4]	Com[5]	Com[6]
Seg[0]	Display0_0_M	PIX1	Display0_1_N	PIX3	PIX4	PIX5	PIX6
Seg[1]	PIX7	PIX8	PIX9	Display0_0_B	PIX11	PIX12	PIX13
Seg[2]	Display0_0_C	PIX15	PIX16	PIX17	Display0_2_N	PIX19	PIX20
Seg[3]	PIX21	PIX22	Display0_1_K	PIX24	PIX25	PIX26	PIX27

5a.9.2 Library configurators

Library Configurators are used to setup and configure middleware libraries. The files for these are contained in the project hierarchy rather than inside the BSP.


Bluetooth Configurator

Configure Bluetooth settings. This includes options for specifying what services and profiles to use and what features to offer by creating GATT databases in generated code.

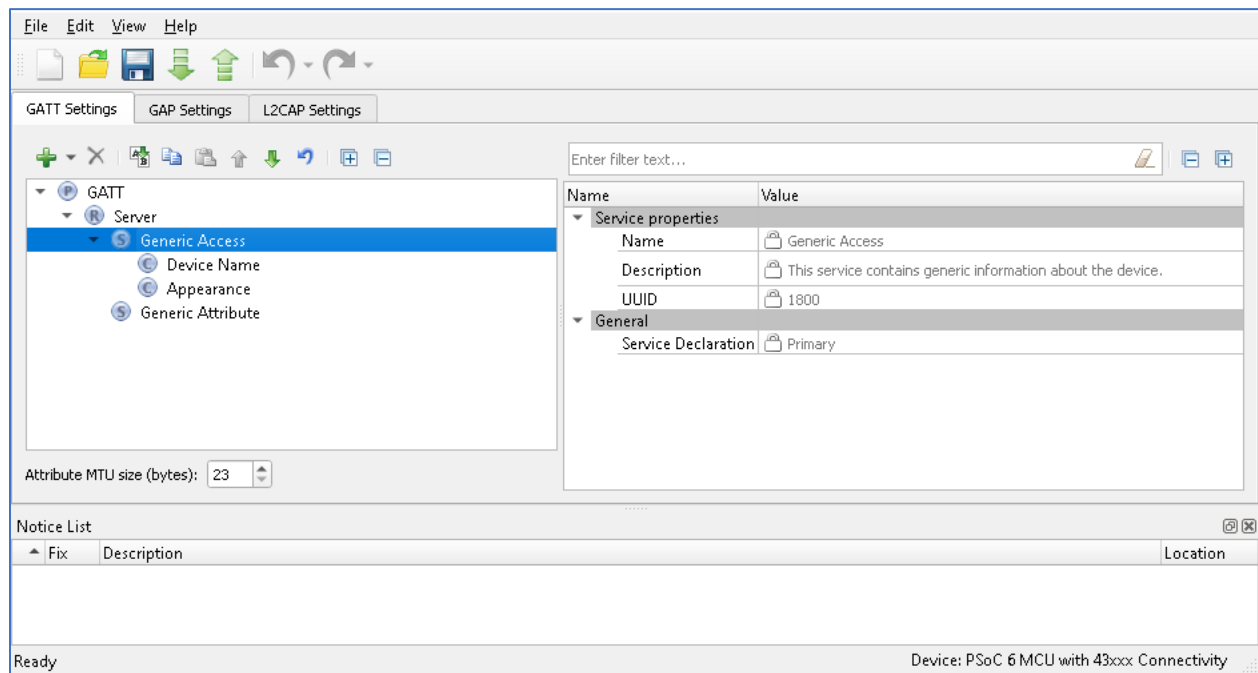

USB Configurator

Configure USB settings and generate the required firmware. This includes options for defining the 'Device' Descriptor and Settings.

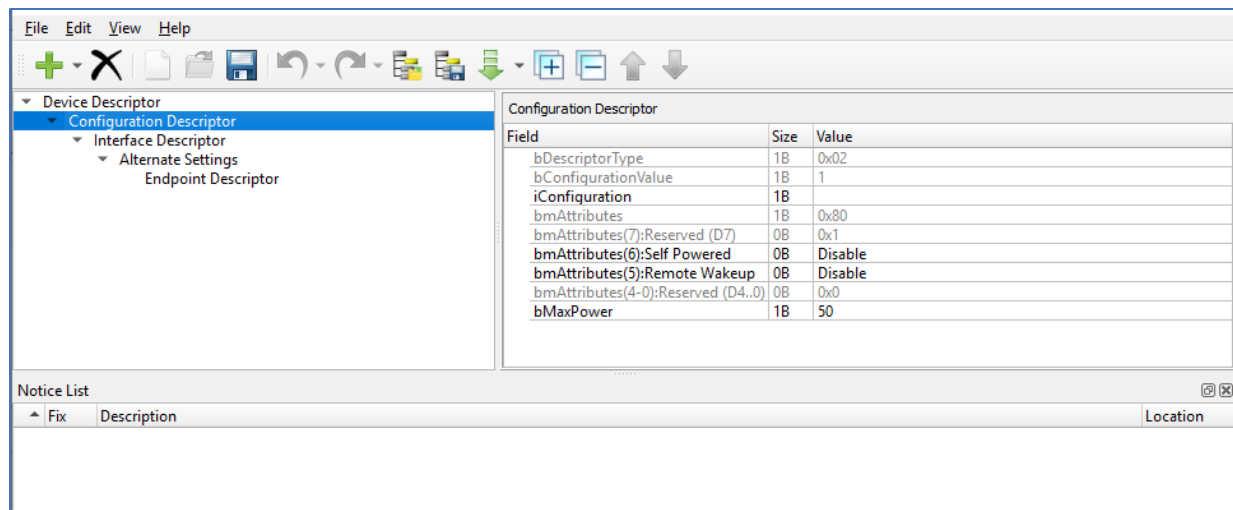

5a.10 Manifests

Manifests are XML files that tell the Project Creator and Library Manager how to discover the list of available boards, example projects, libraries and library dependencies. There are several manifest files.

- The “super manifest” file contains a list of URLs that software uses to find the board, code example, and middleware manifest files.
- The “app-manifest” file contains a list of all code examples that should be made available to the user.
- The “board-manifest” file contains a list of the boards that should be presented to the user in the new project creation tool as well as the list of BSP packages that are presented in the Library Manager tool. There is also a separate BSP dependencies manifest that lists the dependent libraries associated with each BSP.
- The “middleware-manifest” file contains a list of the available middleware (libraries). Each middleware item can have one or more versions of that middleware available. There is also a separate middleware dependencies manifest that lists the dependent libraries associated with each middleware library.

To use your own examples, BSPs, and middleware, you need to create manifest files for your content and a super-manifest that points to your manifest files.

Once you have the files created in a Git repo, place a *manifest.loc* file in your `<user_home>/modustoolbox` directory that specifies the location of your custom super-manifest file (which in turn points to your custom manifest files). For example, a *manifest.loc* file may have:

```
# This points to the IOT Expert template set
https://github.com/iotexpert/mtb2-iotexpert-manifests/raw/master/iotexpert-super-manifest.xml
```

Note that you can point to local super-manifest and manifest files by using *file:///* with the path instead of *https://*. For example:

```
file:///C:/MyManifests/my-super-manifest.xml
```

To see examples of the syntax of super-manifest and manifest files, you can look at the Cypress provided files on GitHub. The following is a subset of the full set of manifest repos that exist. Each repo may also contain multiple manifests.

- Super Manifest: <https://github.com/cypresssemiconductorco/mtb-super-manifest>
- Code Example Manifest: <https://github.com/cypresssemiconductorco/mtb-ce-manifest>
- BSP Manifest: <https://github.com/cypresssemiconductorco/mtb-bsp-manifest>
- Middleware Manifest: <https://github.com/cypresssemiconductorco/mtb-mw-manifest>
- Wi-Fi Middleware Manifest: <https://github.com/cypresssemiconductorco/mtb-wifi-mw-manifest>

5a.11 Network Considerations

The Project Creator and Library Manager tools both require internet access. Specifically, GitHub.com. Depending on your network and location, you may need to change proxy settings or otherwise work around access limitations.

5a.11.1 Network Proxy Settings


If you have environment variables for *http_proxy* and *https_proxy* (for example, to get Mbed to work), those same variables will work for ModusToolbox. However, there is a simpler way to enable/disable the proxy settings in the Project Creator and Library Manager tools that doesn't require you to create/delete the environment variables whenever you want to switch between a network that requires a proxy and a second network that does not require a proxy.

When you run the Project Creator or Library Manager, the first thing it does is look for a remote manifest file. If that file isn't found, you will not be able to go forward. In some cases, it may find the manifest but then fail during the project creation step (during git clone). If either of those errors occur, it is likely due to one of these reasons:

- You are not connected to the internet. In this case, you can choose to use offline content if you have previously downloaded it. Offline content is discussed in the next section.
- You may have incorrect proxy settings (or no proxy settings).

To view/set proxy settings in the Project Creator or Library Manager, use the menu option **Settings > Proxy Settings...**

If your network doesn't require a proxy, choose "Direct". If your network requires a proxy choose "Manual". Enter the server name and port in the format `http://hostname:port/`.

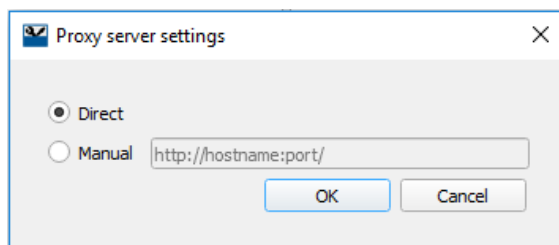

Once you set a proxy server, you can enable/disable it just by selecting Manual or Direct. There is no need to re-enter the proxy server every time you connect to a network requiring that proxy server. The tool will remember your last server name.

Note that "Direct" will also work if you have the *http_proxy* and *https_proxy* environment variables set so if you prefer to use the environment variables, just use "Direct" and create/delete the variables depending on whether your site needs the proxy or not.

The settings made in either the Project Creator or Library Manager apply to the other.

5a.11.2 Offloading Manifest Files

In some locations, git clone operations from GitHub may be allowed but raw file access may be restricted. This prevents manifest files from being loaded. In that case, the manifest files can be offloaded either to an alternate server or a local location on disk. For details on how to do this, see the following knowledge base article:


<https://community.cypress.com/t5/Knowledge-Base-Articles/Offloading-the-Manifest-Files-of-ModusToolbox-KBA230953/ta-p/252973>

5a.11.3 Offline Content


In the case where network access is just not possible, Infineon provides a zipped-up bundle with all of our GitHub repos to allow you to work offline, such as on an airplane or if for some reason you don't have access to GitHub. To set this up, you must have access to cypress.com in order to download the zip file. After that, you can work offline.

Go to <https://community.cypress.com/t5/Resource-Library/ModusToolbox-offline-libraries/ta-p/252265> and follow the instructions to download and extract the offline content.

To use the offline content, toggle the setting in the Project Creator and Library Manager tools, as follows:

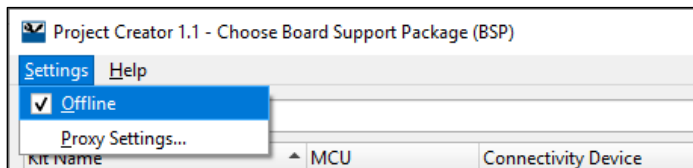

If you try to open these tools without a connection, a message will ask you to switch to Offline Mode.

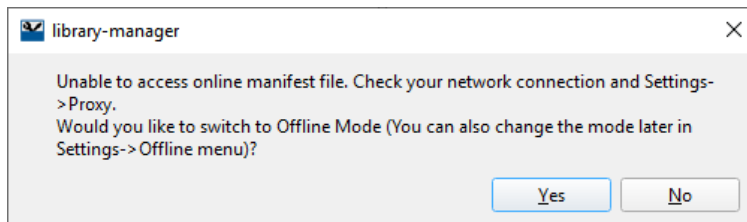

5a.12 FreeRTOS

Information on how to include FreeRTOS in an application can be found in the RTOS chapter. The short summary is:

1. Add the *freertos* library using the Library Manager. This will also add the dependencies *clib-support* and *abstraction-rtos*.
2. Add FREERTOS to the COMPONENTS variable in the Makefile.
3. Copy the file *FreeRTOSConfig.h* from the directory `../mtb_shared/freertos/<version>/Source/portable/COMPONENT_<core>` to your application's root directory.
4. Edit the settings in *FreeRTOSConfig.h* to suit your application's needs. At a minimum, you will remove the line that says `#Warning this is a template`.
5. In *main.c*, include *cyhal.h*, *cybsp.h*, *FreeRTOS.h* and *task.h*. Other includes may be necessary depending on what FreeRTOS functions you are using.

Information on using low power in FreeRTOS designs can be found in the PSoC 6 Low Power chapter.

5a.13 Compiler Optimization

The default compiler setting is "Debug". If you want to change this to "Release" to increase the optimization that is done, you must do 2 things:

1. Change the value of the variable `CONFIG` in the Makefile to "Release".
2. Regenerate or update any IDE launch configurations. This is necessary because the build output files go in a directory that has the `CONFIG` setting in the path. Therefore, if you don't update the configurations, the program and debug step will use the old build output files.

Note that the definition of Debug and Release are compiler dependent. For GCC_ARM, you can find the settings in *recipe-make-cat1a/<version>/make/toolchains/GCC_ARM.mk*:

```

ifeq ($(CONFIG), Debug)
CY_TOOLCHAIN_DEBUG_FLAG=-DDEBUG
CY_TOOLCHAIN_OPTIMIZATION=-Og
else ifeq ($(CONFIG), Release)
CY_TOOLCHAIN_DEBUG_FLAG=-DNDEBUG
CY_TOOLCHAIN_OPTIMIZATION=-Os
else
CY_TOOLCHAIN_DEBUG_FLAG=
CY_TOOLCHAIN_OPTIMIZATION=
endif


```

You can also set the value of `CONFIG` to a custom name (e.g. "Custom") and then use the `CFLAGS` variable in the Makefile to set the optimization parameters as you wish.

5a.14 Dual CPU Designs


Many PSoC 6 devices contain 2 CPUs - a Cortex M4 and a Cortex M0+. Most code examples just use the M4 but the M0+ can also be used when necessary to offload the M4 or to achieve lower power. Since both CPUs use many of the same resources (AHB, Flash, Ram, etc.), it is critically important to consider how an application running on one CPU may affect the other.

Dual-CPU designs are accomplished using two separate projects that are bundled into a single application. When you create an application based on a dual-CPU design, on disk you will have a top-level application directory that contains the projects for each individual CPU. For example, the Dual-CPU Empty PSoC 6 application will look like this:

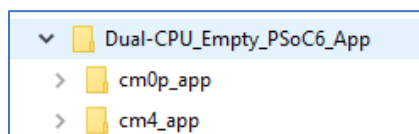

Each application specifies its `CY_GETLIBS_SHARED_PATH` as `../..` (two levels up) instead of `../` (one level up). This accounts for the extra level of directory hierarchy so that the shared location is the same as for any other applications in the same workspace. (**Note** The above is true for Dual-CPU applications that use the MTB flow. Dual-CPU applications using the LIB flow include shared libraries using a different method.)

Inside the Eclipse IDE, each project will appear separately, but the hierarchy will be reflected in the project names:

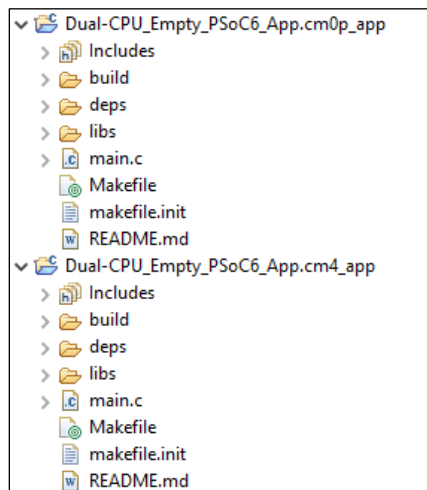

The Makefiles are set up so that if you build the CM4 project, it will build the CM0+ project as a dependency and will include it in the resulting build artifacts. Therefore, building/programming the CM4 project is all that is necessary to build and program both projects into the device.

See AN215656 (PSoC 6 Dual-CPU System Design) for much more information on Dual-CPU designs including inter-processor communication (IPC), interrupts and debugging.

Several Dual-CPU code examples are available in the usual places (In the Project Creator starter application list or on the Cypress GitHub site) to demonstrate using IPC for sharing data, semaphores for synchronization, etc.

5a.15 Exercises (Part 2)

The following exercises can be completed from the command line or within the IDE. Feel free to use the method that feels most natural, interesting, educational, challenging (or easy) – it's your choice! You can also change your mind half-way through if you wish to practice using both approaches.

5a.15.1 Exercise 3: Modify the blinking LED to use the Green LED



1. Open the *main.c* file from your previous project in an editor.
2. Locate this line of code:

```
cyhal_gpio_init(CYBSP_USER_LED1, CYHAL_GPIO_DIR_OUTPUT, CYHAL_GPIO_DRIVE_STRONG, CYBSP_LED_STATE_OFF);
```



3. Change the LED that you want to blink from *CYBSP_USER_LED1* to *CYBSP_LED_RGB_GREEN*, which is the green LED in the RGB LED.

If you don't remember a pin name, they are defined in the Device Configurator Pins tab under the Name(s) column. Use the filter text box at the top of the screen to filter the list.

CY8C624ABZI-S2D44		CYW43012C0WKWBG	
Peripherals	Pins	Analog-Routing	System
Peripheral-Clocks		DMA	
CYBSP_USER			
Resource	Name(s)	Personality	
▼ Port 0			
<input type="checkbox"/> P0[4]	CYBSP_SW2,CYBSP_USER_BTN1,CYBSP_USER_BTN		
<input type="checkbox"/> P0[5]	CYBSP_LED_RGB_GREEN,CYBSP_USER_LED4		
▼ Port 1			
<input type="checkbox"/> P1[1]	CYBSP_LED_RGB_RED,CYBSP_USER_LED3		
<input type="checkbox"/> P1[4]	CYBSP_SW4,CYBSP_USER_BTN2		
<input type="checkbox"/> P1[5]	CYBSP_LED8,CYBSP_USER_LED1,CYBSP_USER_LED		
▼ Port 7			
<input type="checkbox"/> P7[3]	CYBSP_LED_RGB_BLUE,CYBSP_USER_LED5		
▼ Port 11			
<input type="checkbox"/> P11[1]	CYBSP_LED9,CYBSP_USER_LED2		

You can also find comments with the BSP pin names in the file *cybsp_types.h*.



4. Locate this line of code and make the same change so that the LED will blink:

```
cyhal_gpio_toggle(CYBSP_LED_RGB_GREEN);
```



5. Build the project and program the board.

5a.15.2 Exercise 4: Modify the project to Blink Green/Red using the HAL



1. Make a copy of the line of code that initializes the `CYBSP_LED_RGB_GREEN`.
2. Change the LED to `CYBSP_LED_RGB_RED` so you are initializing the red LED from the RGB LED as well as the green LED.
3. Change the final argument to `cyhal_gpio_init` so that `CYBSP_LED_RGB_RED` is initialized in the ON state while `CYBSP_LED_RGB_GREEN` is OFF.
4. Make a copy of the line of code that toggles the green LED and edit it to toggle the red LED.
5. Build the project program the board.


5a.15.3 Exercise 5: Print a message using the `retarget-io` library



1. Create a new project for the CY8CKIT-062S2-43012 kit with the "Empty PSoC6 App" template. Name the project **ch05a_ex05_print**.
2. Now let's use the Library Manager to add a library to our application.
 - In the IDE, you can launch the Library Manager from the Quick Panel (Tools) or use the right-mouse menu on the project root node and go to **ModusToolbox > Library Manager**.
 - From the command line, just use `make modlibs`.



3. Switch to the **Libraries** tab.
4. Find the `retarget-io` library, check the box, and click **Update** to add the library to your application.

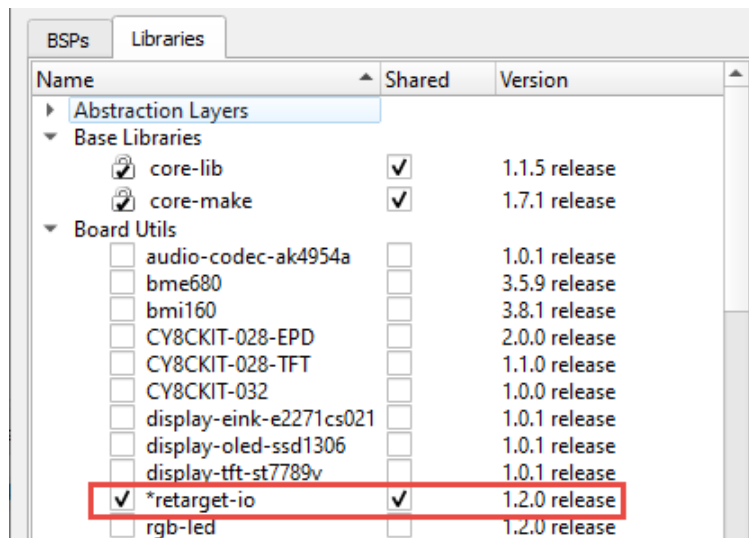

5. Back in the IDE (or using your favorite editor from the command line), open `main.c` and add the following include file to tell the compiler you wish to use the `retarget-io` functions:

```
#include "cy_retarget_io.h"
```




6. Add the following include file to tell the compiler you wish to use the `printf` function.

```
#include <stdio.h>
```



7. In the `main` function, add the following code to initialize the UART and associate with the *retarget-io* library.

```
result = cy_retarget_io_init(CYBSP_DEBUG_UART_TX,  
CYBSP_DEBUG_UART_RX,  
CY_RETARGET_IO_BAUDRATE);  
CY_ASSERT(result == CY_RSLT_SUCCESS);
```

Make sure you put this AFTER the `cybsp_init` function has been called. The BSP init should just about always be the first thing you do.




8. Before the forever loop, use `printf` to write "PSoC Rocks!\r\n" to the UART.

If you don't want to include `\r\n` every time, you can just use `\n`. In that case, you can either setup your terminal window to automatically add a `\r` for every `\n` or you can use a handy feature in the *retarget-io* library to do add it for you. Look at the *retarget-io* library API documentation to learn how to do that.

If you forget to put `\n`, the message won't be printed until the buffer fills up. In this example that will never happen, so don't forget to include `\n`.




9. From the Windows Search, type "device manager" and launch that utility.
10. Look in the "Ports (COM&LPT)" directory for your board's KitProg3. Note the COM port number.

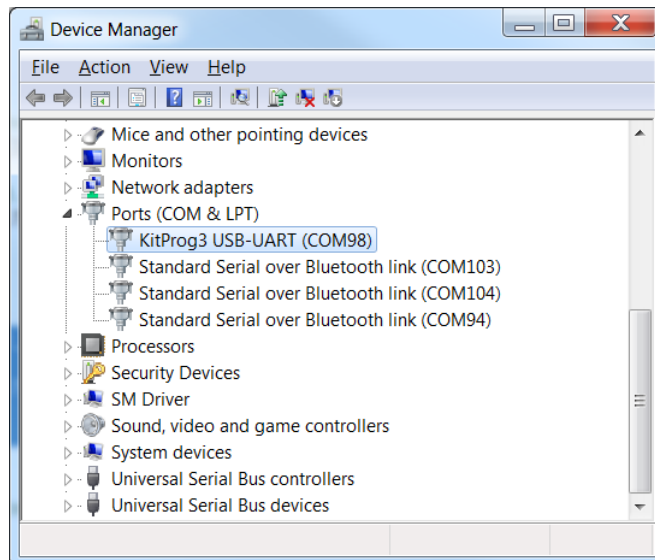

11. From Windows, launch the PuTTY application (or your favorite terminal emulator).

12. Specify a Serial session, at a Speed of 115200 (baud rate), using the Serial Line from the device Manager (COM PORT).

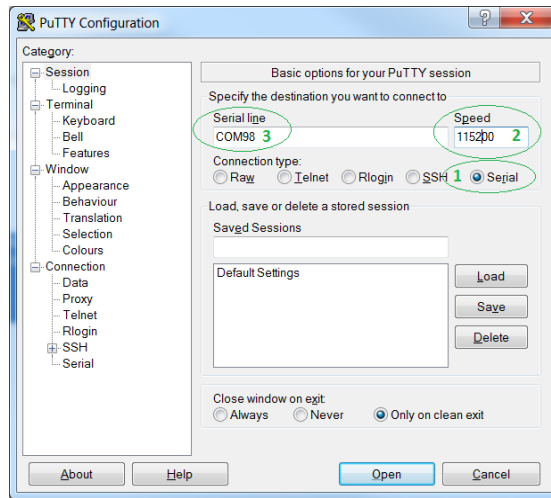

13. Build the project and program the board. Observe the on the terminal window when programming completes.

5a.15.4 Exercise 6: Control the RGB LED with a Library

1. Return to the Library Manager and follow the same process to add the *rgb-led* library to your project.
2. In the IDE, at the top of *main.c*, and add the following include file to tell the compiler you wish to use the *rgb_led* functions:

```
#include "cy_rgb_led.h"
```
3. Add this macro – it translates the name of a *#define* into a string:

```
#define DEFINE_TO_STRING(macro) (#macro)
```
4. In the main function, add this code to initialize the RGB LED. It defines the LED pins (defined for you in the BSP) and sets the polarity:

```
result = cy_rgb_led_init(CYBSP_LED_RGB_RED, CYBSP_LED_RGB_GREEN,  
CYBSP_LED_RGB_BLUE, CY_RGB_LED_ACTIVE_LOW);  
  
if (result != CY_RSLT_SUCCESS)  
{  
CY_ASSERT(0);  
}
```

5. In the forever loop add this code to make the LED yellow for a second.

```
printf( "Color is %s\r\n",  
DEFINE_TO_STRING(CY_RGB_LED_COLOR_YELLOW));  
cy_rgb_led_on(CY_RGB_LED_COLOR_YELLOW, CY_RGB_LED_MAX_BRIGHTNESS);  
cyhal_system_delay_ms( 1000 );
```

6. Make copies of those three lines and turn the LED PURPLE and CYAN.
7. Build the project program the board. Observe the printed output in the terminal and the LED behavior.

5a.15.5 Exercise 7: CapSense Buttons and Slider

Build the example code

1. Create the CapSense Buttons and Slider starter application using the IDE or command line. Name the application **ch05a_ex07_capsense**.
Note If you are working from the command line you will need to add the BSP for your kit.
2. Build the project and program the board.

 
Run the CapSense Tuner

1. Launch the CapSense Tuner through the IDE or in stand-alone mode. Note that, in the latter case, you will need to manually open the CapSense configuration file:
libs/TARGET_CY8CKIT-062S2-43012/COMPONENT_BSP_DESIGN_MODUS/design.cycapsense

If you are using the command line, you can start the CapSense Tuner with this command:


```
make open CY_OPEN_TYPE=capsense-tuner
```

2. In the Tuner, click **Tools > Tuner Communication Setup** or press [F10].




Note If you have a terminal emulator connected to the serial port this will interfere with the tuner connection so close the terminal window if you have connection difficulties.

3. In the dialog, select I2C under KitProg and configure as follows:

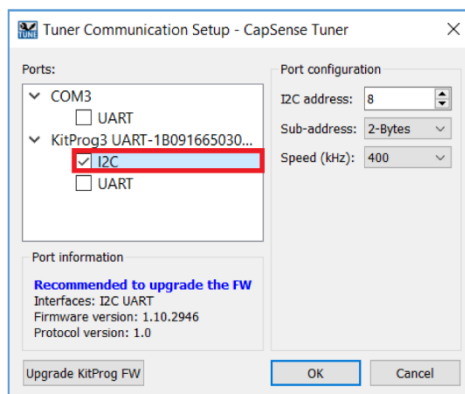

- ☐ 4. Check the parameters and close the dialog.
 - I2C Address: 8
 - Sub-address: 2-Bytes
 - Speed (kHz): 400
- ☐ 5. In the Tuner, click the **Connect** button to establish communication with the target (F4).
- ☐ 6. Click the **Start** button to begin collecting tuning data (F5).
- ☐ 7. Verify that tuning is operational by touching widgets and observing the data in the Widget and Graph view.

Note You must enable each sensor in the Widget Explorer window to use the graph view.

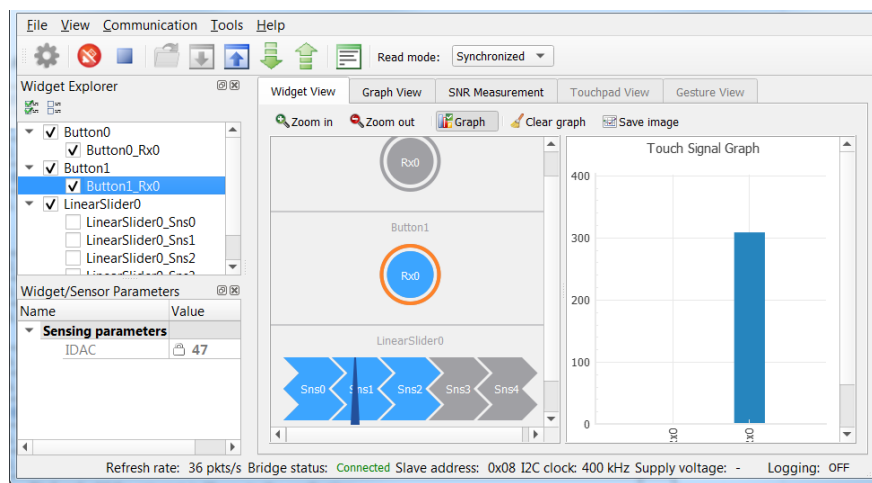

- ☐ 8. Stop collecting data (Shift+F5).
- ☐ 9. Close the connection (Shift+F4).

5a.15.6 Exercise 8: Write a message to the TFT shield

This project displays a message on the CY8CKIT-028-TFT shield when it is attached to the CY8CKIT-062S2-43012 board.

- ☐ 1. Create an Empty_PSoC6_App project for the CY8CKIT-062S2-43012 kit. Name the application **ch05a_ex08_tft**.

Note If you are working from the command line, you will need to add the BSP for your kit.
- ☐ 2. Using the Library Manager, add the CY8CKIT-028-TFT library from **Board Utils** and the *emwin* library from **PSoc 6 Middleware**.
- ☐ 3. Click **Update**. Once updates are done, close the Library Manager.
- ☐ 4. Open the project Makefile to add emwin configuration for bare metal without touchscreen:

COMPONENTS+=EMWIN_NOSNTS



5. In the *main.c* file, change the code to match the following:

```
#include "cy_pdl.h"
#include "cyhal.h"
#include "cybsp.h"
#include "GUI.h"
#include "cy8ckit_028_tft.h"

int main(void)
{
    cy_rslt_t result;

    /* Initialize the device and board peripherals */
    result = cybsp_init() ;
    if (result != CY_RSLT_SUCCESS)
    {
        CY_ASSERT(0);
    }

    __enable_irq();

    /* Initialize the CY8CKIT_028_TFT board */
    cy8ckit_028_tft_init (NULL, NULL, NULL, NULL);


    GUI_Init();
    GUI_SetColor(GUI_WHITE);
    GUI_SetBkColor(GUI_BLACK);
    GUI_SetFont(GUI_FONT_32B_1);
    GUI_SetTextAlign(GUI_TA_CENTER);
    /* Change this text as appropriate */
    GUI_DispStringAt("I feel good!",
        GUI_GetScreenSizeX()/2, GUI_GetScreenSizeY()/2 - GUI_GetFontSizeY()/2);

    for(;;)
    {
    }
}
```




6. Build and program your project.

Observe the message displayed on TFT.

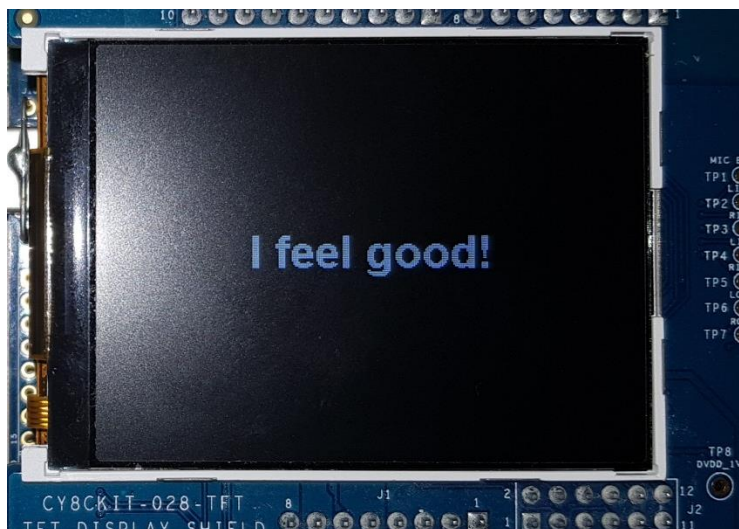


 5a.15.7 Exercise 9: Use an RTOS to Blink LEDs



1. Create another new project for the CY8CKIT-062S2-43012 kit with the “Empty PSoC6 App” template and call it **ch05a_ex09_blink_rtos**.

 Note If you are working from the command line you will need to add the BSP for your kit.



2. Use the Library Manager to add the *freertos* library. After updating, close the Library Manager.



3. Open the Makefile and add FREERTOS to the COMPONENTS variable. Save the file when done.

 
```
COMPONENTS= FREERTOS
```



4. Open *main.c* and add the FreeRTOS headers.

```
#include "FreeRTOS.h"
#include "task.h"
```


Note FreeRTOS.h is needed in all files that make RTOS calls and tasks.h, mutex.h, semphr.h, and so on are used when code accesses resources of that type.



5. Copy the file **FreeRTOSConfig.h** from *../mtb_shared/freertos/<version>/Source/portable/COMPONENT_CM4* to the top directory of your application.


This file contains application specific FreeRTOS configuration information. The build system will automatically include the file that is found at the top of directory hierarchy.

 Note If you want to put the file in a different location, you must specify the path to the directory relative to the application's top-level directory in the INCLUDES variable in the Makefile.



6. Open the *FreeRTOSConfig.h* file from the top application directory and remove the line that says:

#warning This is a template. Copy this file to your project and remove this line. Refer to FreeRTOS README.md for usage details.

 

7. Write a function to blink an LED that will be called by the RTOS when the task starts. Make sure to add a function declaration if you define the function after main.

```
void LED1_Task(void *arg)
{
    cyhal_gpio_init(CYBSP_USER_LED1, CYHAL_GPIO_DIR_OUTPUT,
                    CYHAL_GPIO_DRIVE_STRONG, CYBSP_LED_STATE_OFF);
    for(;;)
    {
        cyhal_gpio_toggle(CYBSP_USER_LED1);
        vTaskDelay(200);
    }
}
```

Note Do not use *cyhal_system_delay_ms* in a task because it will not do what you want - use *vTaskDelay* instead.



8. In `main` after the initialization code, create the task and start the task scheduler.

```
xTaskCreate(LED1_Task, "LED1", configMINIMAL_STACK_SIZE, 0 /* args */, 0 /*  
priority */, NULL /* handle */);  
vTaskStartScheduler();
```

Note You can remove the `for(;;)` loop since the call to `vTaskStartScheduler` will never return.



9. Build the project and program the kit. Observe the LED blinking.



10. Make a copy of the `LED1_Task` and update it to use `LED2`. Change the delay value so the LEDs blink asynchronously.



11. In `main` create this task with the same priority and stack size.



12. Build the program and program the kit. Observe the LEDs blinking at different rates.

5a.15.8 Exercise 10: Use the IoT Expert FreeRTOS Template

There is a set of manifest files located at: <https://github.com/iotexpert/mtb2-iotexpert-manifests>. Use these manifest files to create the IoT Expert FreeRTOS Template project.

☐
☐
☐
☐

1. Copy just the manifest.loc file to your home directory in ~/.modustoolbox.
2. Create a new project using the “IoT Expert FreeRTOS Template” that gets picked up by the Project Creator from the iotexpert manifests. Name the project **ch05a_ex10_freertos**.
3. Build and Program.
4. What does the project do?

☐

5. Does this application use the MTB flow or the LIB flow?

☐
☐

6. Make the LED blink faster.
7. Add the ntshell library.

It is in the iotexpert GitHub site. It will show up in the Library Manager under the category **IoT Expert** because of the manifest files that we added.

☐

8. Follow the instructions in the mtb_shared/middleware-ntshell/<version>/README.md file to create the ntshell task.

Look in the section entitled “Get the source templates”.

☐
☐
☐

9. Build and Program.
10. Open a terminal emulator to test the shell. Type `help` and press enter to see a list of available commands. These are defined in the file `usrcmd.c` in the `cmdlist` array.
11. Add a new command to `usrcmd.c` to change the LED blink rate.

 
Look in the README.md file in the section “Adding Commands”.

One suggested implementation:


1. Create a global variable for the led rate in `usrcmd.c` and initialize its value. Add your variable as an extern in `usrcmd.h`.
2. Include `<stdio.h>` in `usrcmd.h` to get variable type definitions.
3. When implementing the function, you can use `atoi` to convert the first argument (`argv[1]`) to an integer. You will need to include `<stdlib.h>` to use `atoi`.
4. Use your variable in `main.c` as the value for `vTaskDelay`.

5a.15.9 Exercise 11: Create a Custom Device Configuration

In this exercise, you will copy the configuration files from the BSP to the application and will over-ride the configuration for that single application. This is useful if you want to set custom pin, peripheral, or clock settings for an application using the Device Configurator rather than the HAL but you don't want to modify the BSP itself. This method is frequently used in code examples that need to make a change in the configuration.



 1. Run the project creator tool to create a new Hello World application for your kit. Name it **ch05a_ex11_custom_config**.



2. Build and program the kit and observe the LED that pauses/resumes blinking when you press the return key in your terminal emulator.

```
make program
```




3. Create a directory and sub-directory inside the root folder of your application as follows:

```
COMPONENT_CUSTOM_DESIGN_MODUS/TARGET_CY8CKIT-062S2-43012
```



4. Copy the contents of *libs/TARGET_CY8CKIT-062S2-43012/<version>/COMPONENT_BSP_DESIGN_MODUS* to the subdirectory you created. It should look like this when you are done:

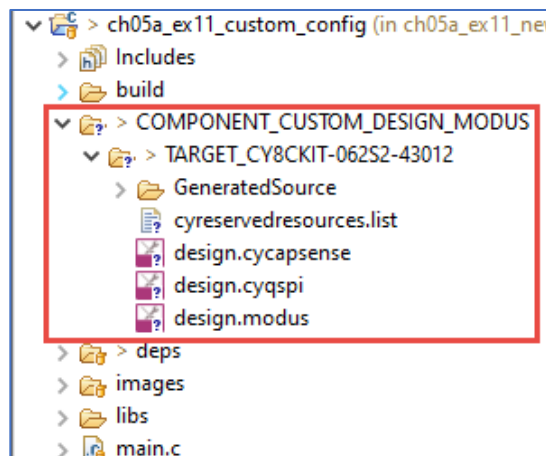

5. Edit the Makefile to disable the configuration from the BSP and enable your custom configuration:

Add *CUSTOM_DESIGN_MODUS* to the *COMPONENTS* variable.

```
COMPONENTS+=CUSTOM_DESIGN_MODUS
```

Add *BSP_DESIGN_MODUS* to the *DISABLE_COMPONENTS* variable.

```
DISABLE_COMPONENTS+=BSP_DESIGN_MODUS
```



6. Run the device configurator.

```
make config
```

If you are using the Eclipse IDE, don't forget to refresh the Quick Panel first to get the correct file.

—

In either case (command line or IDE) it is worth looking at the banner in the configurator to be sure the correct file is opened.



7. Move the definition for `CYBSP_USER_LED` to the pin that has `CYBSP_USER_LED2`. Save and close the device configurator when done.

Hint: Enter LED into the search box to see only pins with LED in their name.

Hint: Do not use any spaces between names (just a comma) since spaces will be converted to underscores.



8. Build and program the kit with your new BSP and observe a different LED blinking.

5a.15.10 Exercise 12: Create and Use a Custom BSP

In this exercise, we will do the same thing but with a complete new custom BSP to use. This is useful if you are building your own hardware and need to make more changes than just the configuration.

1. Run the project creator tool to create a new Hello World application for your kit. Name it **ch05a_ex12_custom_bsp**.

2. Build and program the kit and observe the LED that pauses/resumes blinking when you press the return key in your terminal emulator.

```
make program
```

3. Now create a new BSP called "MYKIT". We won't specify a different PSoC 6 device in this case. From the command line:

```
make bsp TARGET_GEN=MYKIT
```

4. Edit the Makefile to use to specify the new BSP as the target.

```
TARGET=MYKIT
```

5. Open the Device Configurator.

```
make config
```

If you are using the Eclipse IDE to open the configurator, don't forget to refresh the Quick Panel first to get the correct file.

In either case (command line or IDE) it is worth looking at the banner in the configurator to be sure the correct file is opened.

6. Move the definition for `CYBSP_USER_LED` to the pin that has `CYBSP_USER_LED2`. Save and close the device configurator when done.

Hint: Enter "LED" in the text filter box to see only pins with LED in their name.

Hint: Put a comma between names but do NOT put any spaces in the Name(s) field since they will be converted to underscores.

7. Build and program the kit with your new BSP and observe a different LED blinking.

```
make program
```