




Quick Start Guide

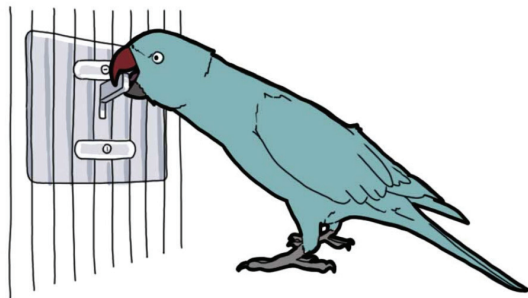

Questions?
Visit mybeakbox.com/help or
email us at contact@mybeakbox.com



BeakBox comes with:

- 1 x BeakBox
- 1 x microSD card + adapter
- 1 x USB cable
- 2 x Wingnuts
- 2 x Washers
- 2 x Bolts

You will need:

- 1x Bird
- 1x Cage

Setting Up Your BeakBox

1. Install

Hold your BeakBox up to the **OUTSIDE** of your bird cage with the lever sticking inside through the cage bars. Use the provided screws, wingnuts, and washers to secure the box to the cage bars.

2. Take a microSD card out of the adapter and insert it into the slot

Your microSD card comes with some pre-loaded songs, but you can use your own music. Follow instructions on mybeakbox.com/help#customise-playlist to customise your playlist.

3. Plug in

Plug your BeakBox in using the cable provided. One cable end plugs into your BeakBox while the other plugs into a USB port (e.g., your phone charger brick, computer, or any USB power bank).

IMPORTANT!

Your bird should not have access to the wooden part of the box.



How It Works

- Songs play in alphabetical order.
- One lever press begins the first song.
- If the lever is pressed while music is playing, the current track will be skipped and the next song will begin playing.
- Once a track has finished the next song will not play until the lever is pressed again.

Connecting Your BeakBox to Wi-Fi

Connecting keeps your BeakBox up-to-date with our latest software. Your BeakBox will still work fine without a web connection — although you won't get software updates or access to new features when they are released. Follow our instructions on mybeakbox.com/help#connect-to-wifi to connect your your BeakBox to Wi-Fi.

BeakBox Troubleshooting

If your BeakBox stopped working, please check our troubleshooting guide first at mybeakbox.com/help#beakbox-troubleshooting. If you tried all the troubleshooting tips and your BeakBox still doesn't work, please send us an email at contact@mybeakbox.com