

Epilog Mini 24 Laser Cutting Machine

1. POWERING UP – *(Turn ON all four main switches)*

- 1.1 Laser Cutting Machine
- 1.2 Fume Extractor
- 1.3 Air Compressor
- 1.4 Computer

2. ARTWORK SETUP

- 2.1 Turn on PC, run Coral Draw 2018 (64-Bit) and create/load your document.
- 2.2 On the Coral Draw application, click on File > Print > Printing Preferences.
- 2.3 Adjust the appropriate settings in the Laser Dashboard.
(Refer to the guide on the working table)
Ensure “Auto Focus” is not ticked.
Click on “OK” button to continue.
- 2.4 Click on “Apply” and then “Print” to send the job to the laser cutting machine.

3. CUTTING/ENGRAVING

- 3.1 Enter manual focus mode. *(The focusing lens will move)*
- 3.2 Click the down arrow cursor keys to lower the cutting table *(approx. 30mm)*
- 3.3 Place your acrylic on the cutting table.
- 3.4 Place the Manual Focus Gauge on the carriage.
- 3.5 Remove the Manual Focus Gauge and click on Reset key.
- 3.6 Click on Play key to start.

- ***More details, refer to the Standard Operating Procedure (SOP)***