


BITWIG STUDIO CONTROLLER EXTENSION

NOVATION  
**Launchpad Mini Mk3**



# NOVATION LAUNCHPAD MINI MK3

## Mix Panel Layout

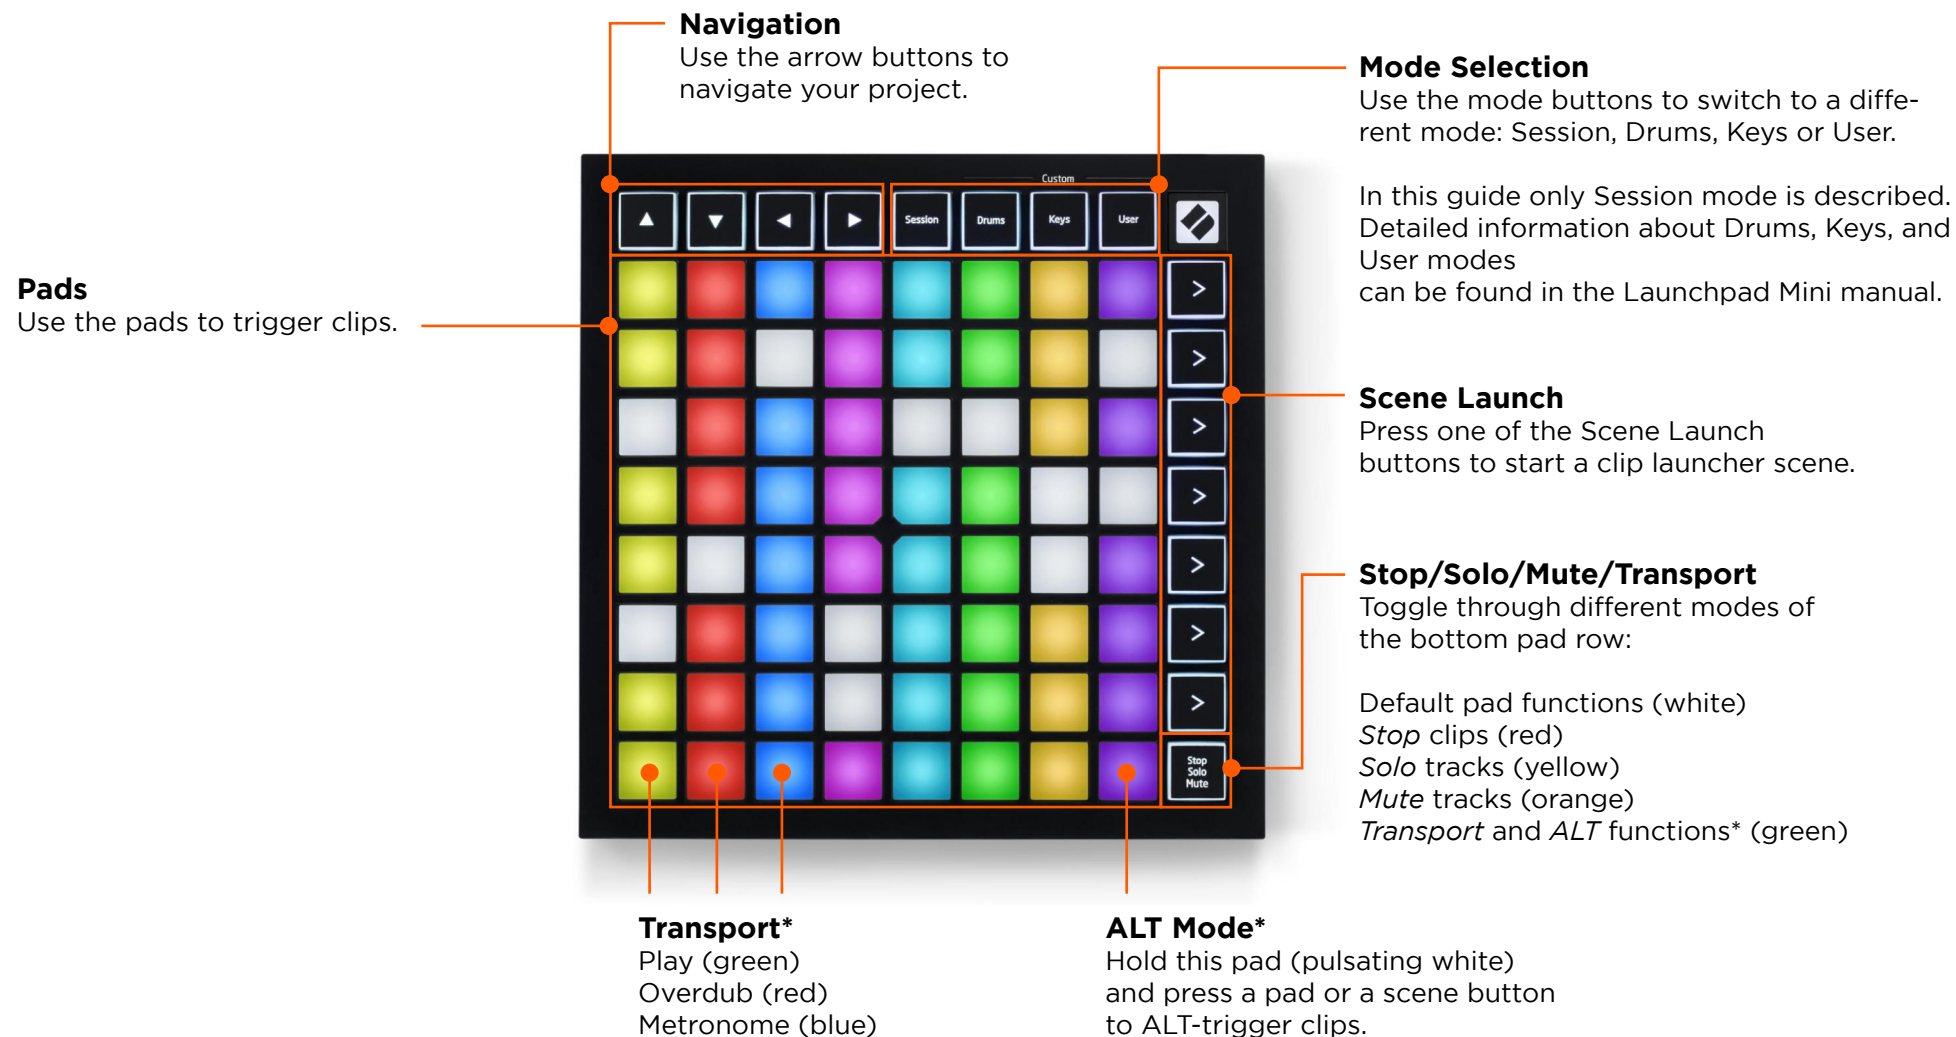

# NOVATION LAUNCHPAD MINI MK3


## Arrange Panel Layout

### Differences in the Arrange Panel Layout

When the Launchpad Mini is used in Arrange Panel Layout, the pads in the bottom row turn white and become Scene Launch buttons.

The vertical row of buttons on the right can be used to select tracks.

When Stop/Solo/Mute/Transport Mode is active, pad row 8 can be used to toggle these parameters.

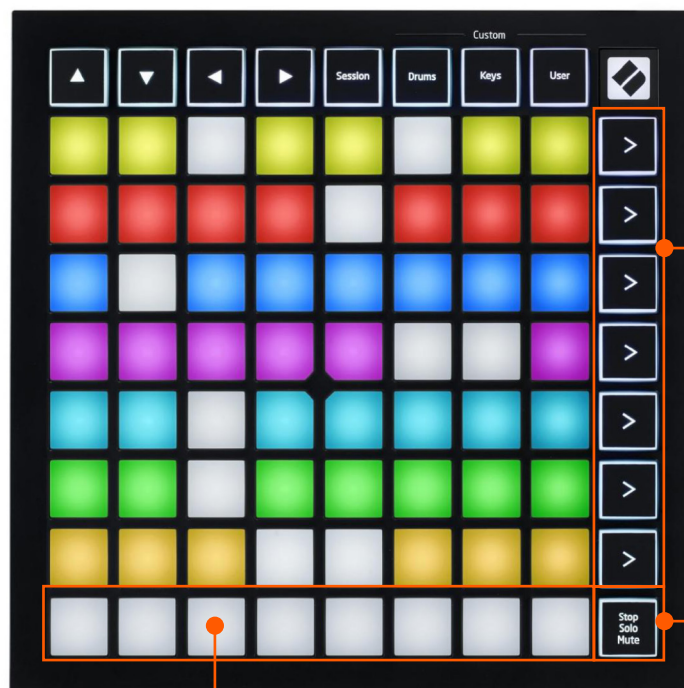

### Scene Launch

Press one of the white pads in the bottom row to start a clip launcher scene.

### Track Select

Press one of the buttons to select a track.

### Stop/Solo/Mute/Transport

Toggle through different modes of pad row 8:

Default pad functions (white)

*Stop* clips (red)

*Solo* tracks (yellow)

*Mute* tracks (orange)

*Transport* and *ALT* functions\* (green)

# NOVATION LAUNCHKEY MINI MK3

## Setup and Options

### Setup

Important: Make sure your Launchpad Mini MK3 firmware is version 0341 (App / Boot) or higher. Please go to [components.novationmusic.com](https://components.novationmusic.com) to install the latest firmware.

The Launchpad Mini should be detected and set up automatically when it is connected. If you add the controller manually, make sure the MIDI ports are selected in the correct order:

In 1: Launchpad Mini MK3 LPMiniMK3 DAW Out  
In 2: Launchpad Mini MK3 LPMiniMK3 MIDI Out  
Out: Launchpad Mini MK3 LPMiniMK3 DAW In

### Options

In Bitwig Studio, go to Dashboard > Settings > Controllers > Launchpad Mini Mk3 to select various options.

#### Grid Layout

You can determine the orientation of the grid layout to match the Clip Launcher either in the Mix Panel (vertical tracks) or Arrange Panel (horizontal tracks).

When set to Automatic, the Launchpad Mini follows the currently displayed layout in Bitwig Studio.

