

All Modes

Clip Launcher

When pressed: occupied slots are triggered, and empty slots start recording.

Clip Launcher Overdub

As labeled

Select Track

Current Track Volume



Transport Controls

Toggle Controller Mode

Device Mode

Select Track

Press wheel to browse
Presets/Devices

Previous/Next
Device Page

Remote
Controls

Device
Faders


Current
Track
Volume

Previous/Next
Device

Select
Device
Pages

Toggle
Controller
Mode

Multi Mode

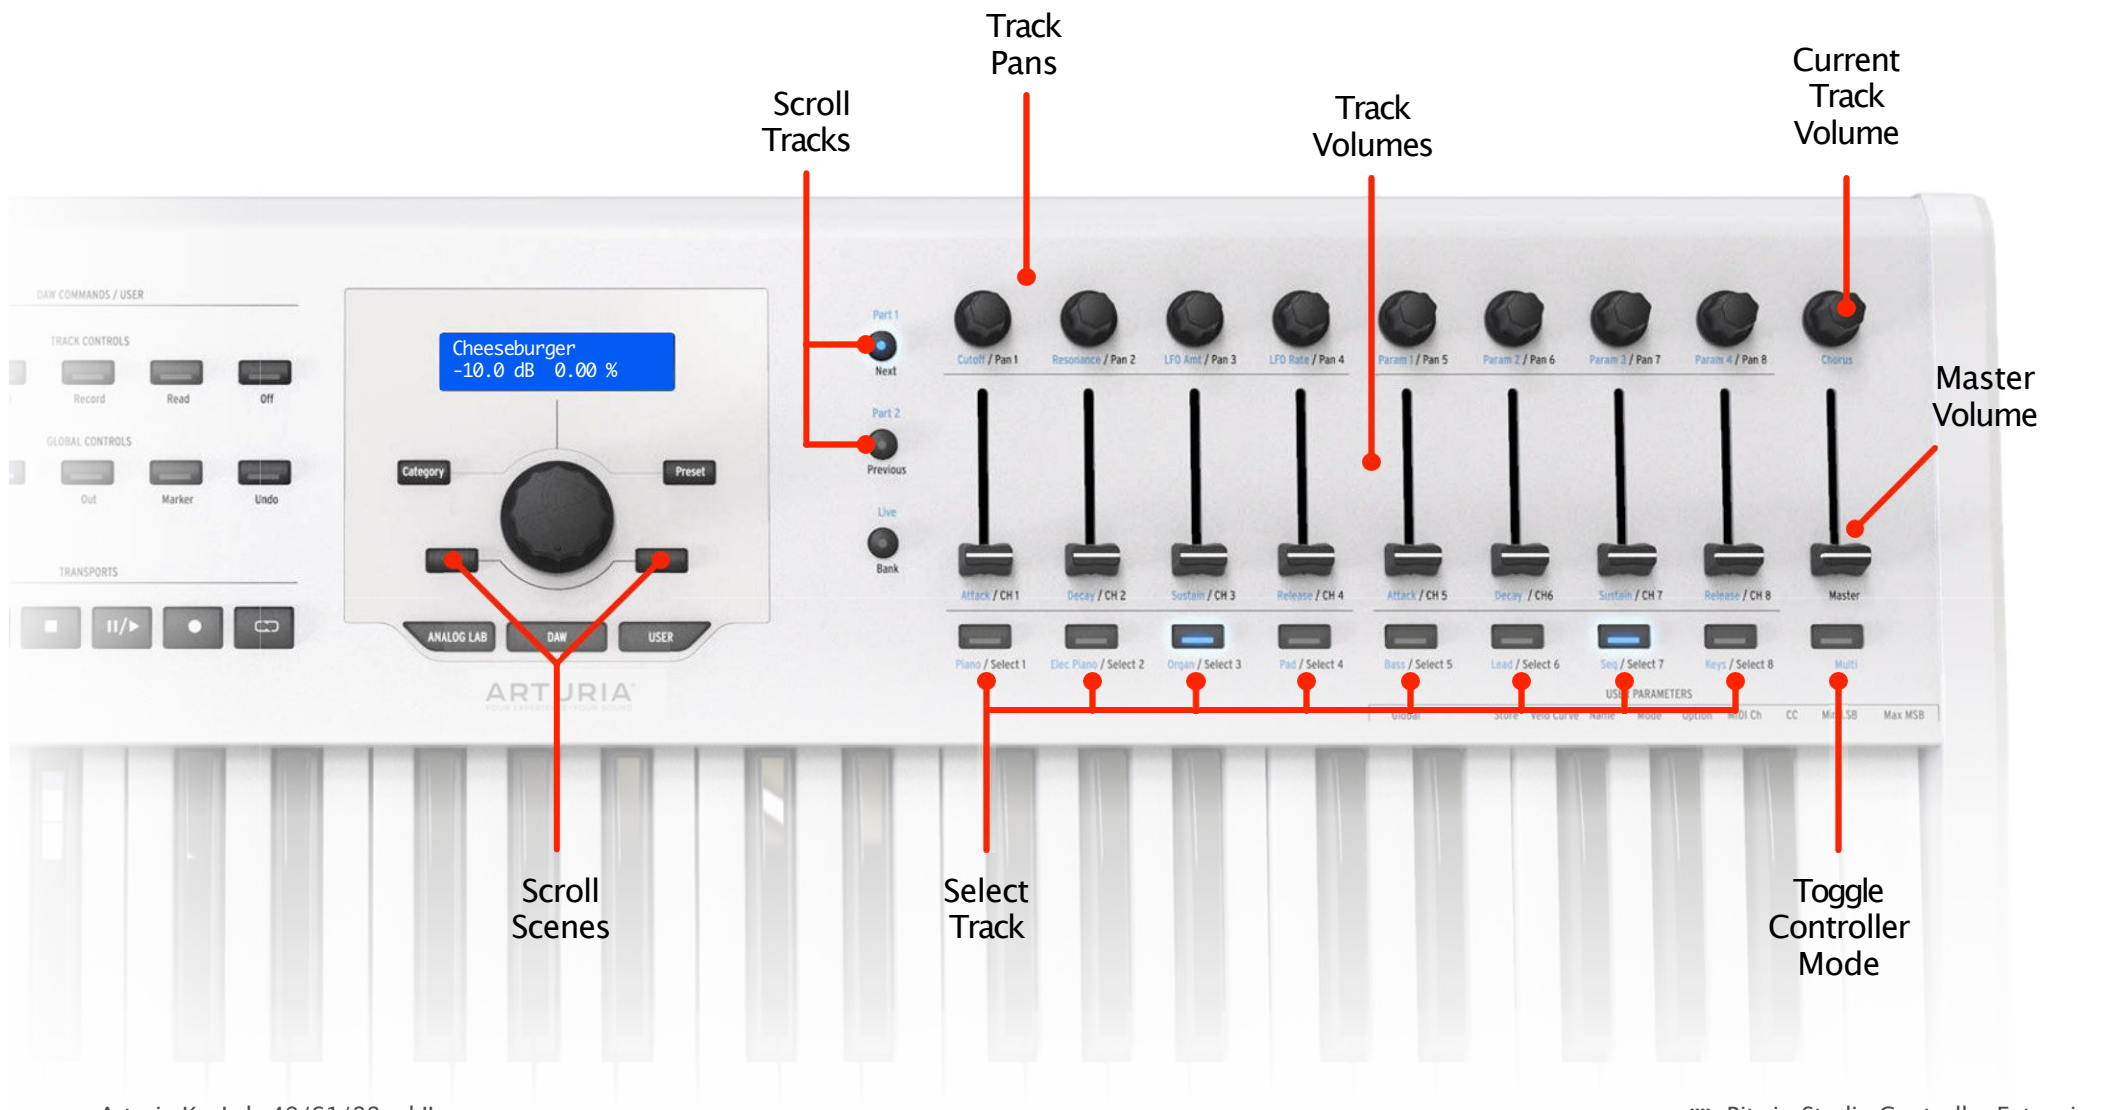

Browsing Presets

Select Preset to audition

Press wheel to confirm

