

BITWIG STUDIO CONTROLLER EXTENSION

M-Audio
Oxygen Pro 25



M-Audio Oxygen Pro 25

Transport Section

Use the buttons in this section to control the transport of Bitwig Studio. Hold SHIFT and press the METRO button to enable the metronom. Press the BANK buttons to shift the note range of the pads.

Fader

Use the fader to control the volume of a selected track.

Navigation

You can navigate through tracks, scenes and devices by using the PUSH ENCODER and BACK button. Turn the ENCODER to cycle through different tracks. Hold the BACK button while turning the ENCODER to browse through scenes in the clip launcher. Press the ENCODER to enter the device mode of the selected track. Press again to exit.

Knobs

This controller extension offers 4 different modes: Volume, Pan, Device and Sends. Change the mode by holding SHIFT and pressing the corresponding DAW KNOB CONTROL pad. The 8 knobs control the volume or pan of a bank of 8 tracks. In device and sends mode the knobs control the 8 device remote controls respectively the sends of a selected track.



Pads

The pads can be used for note input or clip launching, depending on the currently selected mode. In Device Mode the pads can be used for note input. Use the BANK buttons to shift the note range of the pads.

In Volume, Pan or Sends Mode the pads can be used to control the clip launcher. Yellow indicates that a clip is present in a slot, green indicates that a clip is playing and red indicates that a clip is recording. Press a pad of an empty slot on a record-ready track to record a new clip. Press a pad of a currently playing clip to stop it. Press one of the ARROW buttons on the right to launch a scene.

Additional Functions

Hold SHIFT and press one of the four DAW SHORTCUT buttons to save a project, quantize a selected clip, toggle between the arrangement and clip launcher view or undo the latest actions.