
 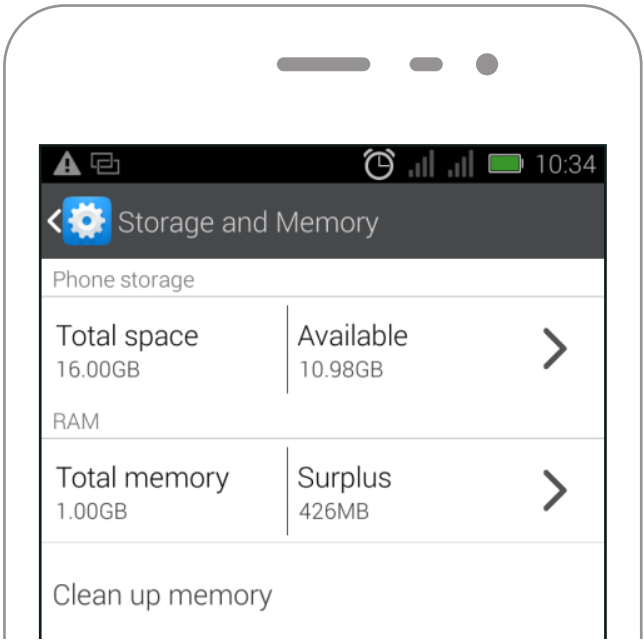


MEMORY SPECIFICATION

1 Settings->All -> Storage and Memory (see picture 01), to access Storage & Memory interface (see picture 02).



2 How to distinguish memory capacity via the interface for Storage & Memory. Please continue reading for additional info. See picture 03 for reference.

Total space 16.00GB	Available 10.98GB	>
RAM		
Total memory 1.00GB	Surplus 426MB	>

From the picture we can tell
ROM: 16GB RAM: 1GB
This indicates the available memory on this device is 16GB+1GB;
Similarly: If ROM displays 32GB and RAM displays 1GB,
then the available memory is 32GB+1GB.

3 After confirming memory specification, the user can and upgrade to the corresponding version.