



OPEN
Compute Project

Usage Guide for Ethernet NIC

Date: 2025-04-20

Version: 1.0.0

Supersedes: None

Document Class: Informational

Document Status: Draft

Document Language: en-US

Copyright Notice

Copyright © 2025 OCP. All rights reserved.

NOTWITHSTANDING THE ENCLOSED LICENSES, THIS SPECIFICATION IS PROVIDED BY OCP "AS IS" AND OCP EXPRESSLY DISCLAIMS ANY WARRANTIES (EXPRESS, IMPLIED, OR OTHERWISE), INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR TITLE, RELATED TO THE SPECIFICATION. NOTICE IS HEREBY GIVEN, THAT OTHER RIGHTS NOT GRANTED AS SET FORTH ABOVE, INCLUDING WITHOUT LIMITATION, RIGHTS OF THIRD PARTIES WHO DID NOT EXECUTE THE ABOVE LICENSES, MAY BE IMPLICATED BY THE IMPLEMENTATION OF OR COMPLIANCE WITH THIS SPECIFICATION.

OCP IS NOT RESPONSIBLE FOR IDENTIFYING RIGHTS FOR WHICH A LICENSE MAY BE REQUIRED IN ORDER TO IMPLEMENT THIS SPECIFICATION. THE ENTIRE RISK AS TO IMPLEMENTING OR OTHERWISE USING THE SPECIFICATION IS ASSUMED BY YOU.

IN NO EVENT WILL OCP BE LIABLE TO YOU FOR ANY MONETARY DAMAGES WITH RESPECT TO ANY CLAIMS RELATED TO, OR ARISING OUT OF YOUR USE OF THIS SPECIFICATION, INCLUDING BUT NOT LIMITED TO ANY LIABILITY FOR LOST PROFITS OR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL OR PUNITIVE DAMAGES OF ANY CHARACTER FROM ANY CAUSES OF ACTION OF ANY KIND WITH RESPECT TO THIS SPECIFICATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), OR OTHERWISE, AND EVEN IF OCP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

CONTENTS

1 Scope	4
2 Requirements	5
2.1 Validating conformance	5
3 Redfish Model for NICs	6
3.1 Setting Information	7
3.2 Metrics	7
4 Management Tasks	8
4.1 Get Network Adapter Information	8
4.2 Get Device Function Information	10
4.3 Get Port Information	12
4.4 Get PCIe Information	14
4.5 Get PCIe Function Information	15
4.6 Get System NIC information	16
4.7 Set NIC Information	17
4.8 Set Device Function Information	17
4.9 Set Port Information	18
4.10 Get NIC Metrics	18
4.11 Get Device Function Metrics	19
4.12 Get Port Metrics	19
4.13 Set NIC Settings To Default	20
4.14 Get FRU Information	21
4.15 Get Firmware Version	21
4.16 Update Firmware	21
5 References	23
6 Revision	24

1 Scope

This document contains requirements and provide usage examples for the OCP Ethernet NIC Hardware Management API v1.0.

2 Requirements

The required Redfish interface model elements are specified in a corresponding profile document - OCP Ethernet NIC Profile v1.0 [4].

The Profile Reference Guide includes the resources which are part of this profile.

2.1 Validating conformance

The conformance of an implementation can be validated by executing the Redfish Interop Validator [3] and specifying the Ethernet NIC Profile as input. The following command executes the validator.

```
$> python RedfishInteropValidator.py <profileName> \--ip <host:port>
```

The Redfish Interop Validator is an open-source conformance test which is supported by DMTF (dmtof.org). The validator reads the input profile, auto-generates tests, executes the tests against an implementation, and creates a test report. Issues with the validator can be filed on the Redfish discussion board (redfishforum.com) in the Issues with the profile can be filed on the OCP Profile repository.

3 Redfish Model for NICs

Some aspects of the Redfish model should be comprehend before the interaction with the Redfish model shown below is understood.

Redfish models a managed node in terms of its physical & logical aspects:

- The physical aspect is modeled via the Chassis resource. This includes NetworkAdapter, NetworkDeviceFunction, Ports, PCIeDevice and PCIeFunction. Some of these resources have subordinate metrics resources as well.
- The logical aspect is modeled via the ComputerSystem. This is done using EthernetInterface and represents the System view, or logical or OS view, of the NIC.

The relationship between the above resources are specified by the Links property.

- On the Chassis resource, there are links to the resources that together describe the NIC. This includes NetworkAdapter, NetworkDeviceFunction, Ports, PCIeDevice and PCIeFunction.
- On the ComputerSystem resource, there are links to the NetworkDeviceFunction that describes the NIC.

The following diagram helps to show the relationships between these Redfish resources:

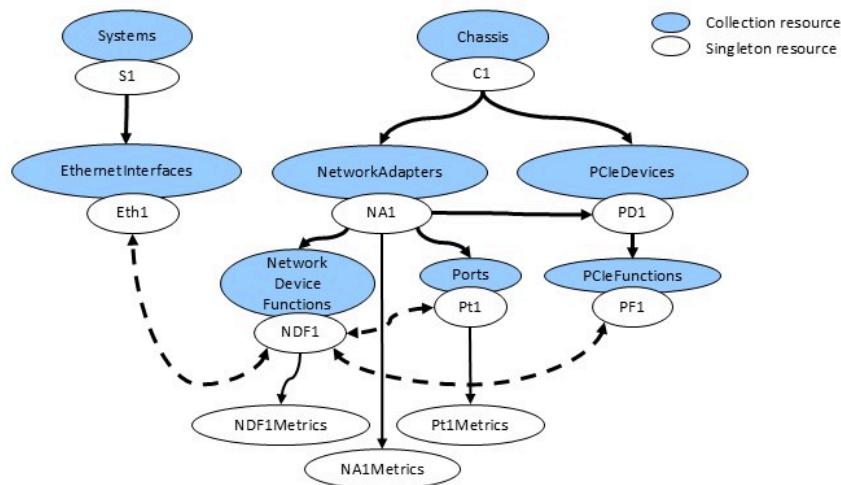


Figure 1: Redfish NIC Hierarchy

Many NICs are multi-function devices. It is important to discover the state of the physical card, the number of Ports and their information, how many functions are on the card and PCIe information for the card and the functions. This is begun by finding the NetworkAdapter under the Chassis.

3.1 Setting Information

Setting live network information is not required. If the implementation supports setting any of the properties at the next system reset, those settings are exposed through a `Settings` object in each resource.

3.2 Metrics

There are metrics objects on the NetworkAdapter, NetworkDeviceFunction and the Port.

4 Management Tasks

The following table lists the management tasks supported by an implementation which is conformant to the profile.

Use Case	Management Task	Requirement
NIC Configuration	Get NIC information	Mandatory
	Get device function information	Mandatory
	Get port information	Mandatory
	Get PCIe information	Mandatory
	Get PCIe function information	Mandatory
	Set NIC information	Mandatory
	Set port information	Mandatory
	Set NIC settings to default	Mandatory
NIC Hardware	Get FRU Information	Mandatory
System NIC	Get system NIC information	Mandatory
Telemetry	Get NIC metrics	Mandatory
	Get device function metrics	Mandatory
	Get port metrics	Mandatory
Firmware Update	Get firmware version	Mandatory
	Update firmware	Mandatory

The section below describes the interaction with the Redfish interface to fulfill the management tasks. In the example responses, a fragment of the full response or resource may be shown.

4.1 Get Network Adapter Information

The following illustrates how to get the NetworkAdapter resource.

```
GET /redfish/v1/Chassis/1/NetworkAdapter/DE07A000
```



```
{
  "@odata.type": "#NetworkAdapter.v1_9_0.NetworkAdapter",
  "Id": "DE07A000",
  "Name": "Network Adapter",
  "Manufacturer": "Contoso",
  "Model": "Contoso 2",
  "SKU": "Contoso 2 function adapter",
  "SerialNumber": "LMNOP4279",
  "PartNumber": "ABCDEFGG2",
  "Status": {
    "Health": "OK",
    "State": "Enabled"
  },
  "Ports": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports"
  },
  "NetworkDeviceFunctions": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions"
  },
  "Metrics": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Metrics"
  },
  "Controllers": [
    {
      "FirmwarePackageVersion": "229.1.123.0",
      "Links": {
        "PCIeDevices": [
          {
            "@odata.id": "/redfish/v1/Chassis/1/PCIeDevices/DE07A000"
          }
        ]
      },
      "ControllerCapabilities": {
        "NetworkPortCount": 4,
        "NetworkDeviceFunctionCount": 16,
        "DataCenterBridging": {
          "Capable": true
        },
        "NPAR": {
          "NparCapable": true,
          "NparEnabled": true
        },
        "VirtualizationOffload": {
          "SRIOV": {
            "SRIOVVEPACapable": true
          },
          "VirtualFunction": {
            "DeviceMaxCount": 256,
            "MinAssignmentGroupSize": 8,
            "NetworkPortMaxCount": 256
          }
        }
      }
    }
  ]
}
```

```

    }
  },
  "PCIEInterface": {
    "LanesInUse": 8,
    "MaxLanes": 16,
    "MaxPCIEType": "Gen4",
    "PCIEType": "Gen4"
  }
},
"LLDPEnabled": true,
"Actions": {
  "#NetworkAdapter.ResetSettingsToDefault": {
    "target": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Actions/NetworkAdapter.ResetSettingsToDefault",
    "@Redfish.OperationApplyTimeSupport": {
      "@odata.type": "#Settings.v1_3_3.OperationApplyTimeSupport",
      "SupportedValues": [
        "OnReset"
      ]
    }
  }
},
"@odata.context": "/redfish/v1/$metadata#NetworkAdapter.NetworkAdapter",
"@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000",
"@odata.etag": "W/\"4DFAAF27\"",
"@Redfish.Settings": {
  "@odata.type": "#Settings.v1_3_3.Settings",
  "SettingsObject": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Settings"
  },
  "SupportedApplyTimes": [
    "OnReset"
  ]
}
}

```

4.2 Get Device Function Information

Also found in the Network Adapter are the NetworkDeviceFunctions and the Ports, so retrieving those are needed. First we will get the NetworkDeviceFunction. Note that the NetDevFuncType must equal Ethernet for this profile to apply.

```
GET /redfish/v1/Chassis/1/NetworkAdapter/DE07A000/NetworkDeviceFunctions/1
```

```

{
  "@odata.type": "#NetworkDeviceFunction.v1_8_0.NetworkDeviceFunction",
  "Id": "1",
  "Name": "Network Device Function 1",
  "Status": {
    "Health": "OK",
    "State": "Enabled"
  },
  "Metrics": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions/1/Metrics"
  },
  "NetDevFuncType": "Ethernet",
  "DeviceEnabled": true,
  "NetDevFuncCapabilities": [
    "Ethernet"
  ],
  "Ethernet": {
    "MACAddress": "9c:dc:71:c3:bb:0a",
    "PermanentMACAddress": "9c:dc:71:c3:bb:0a",
    "MTUSizeMaximum": 9600
  },
  "BootMode": "PXE",
  "VirtualFunctionsEnabled": true,
  "MaxVirtualFunctions": 8,
  "AssignablePhysicalNetworkPorts": [
    {
      "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1"
    }
  ],
  "Links": {
    "PCIeFunction": {
      "@odata.id": "/redfish/v1/Chassis/1/PCIeDevices/DE07A000/PCIeFunctions/1"
    },
    "PhysicalNetworkPortAssignment": {
      "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1"
    },
    "EthernetInterfaces": [
      {
        "@odata.id": "/redfish/v1/Systems/1/EthernetInterfaces/5"
      }
    ]
  },
  "@odata.context": "/redfish/v1/$metadata#NetworkDeviceFunction.NetworkDeviceFunction",
  "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions/1",
  "@odata.etag": "W/\"80212509\""
}

```

4.3 Get Port Information

This is an example of retrieving a Port object

```
GET /redfish/v1/Chassis/1/NetworkAdapter/DE07A000/Ports/1
```

```
{
  "@odata.type": "#Port.v1_6_0.Port",
  "Id": "1",
  "Name": "Ethernet Port 1",
  "Status": {
    "Health": "OK",
    "State": "Enabled"
  },
  "Metrics": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1/Metrics"
  },
  "PortId": "1",
  "PortProtocol": "Ethernet",
  "PortType": "BidirectionalPort",
  "Enabled": true,
  "Ethernet": {
    "SupportedEthernetCapabilities": [
      "WakeOnLAN"
    ],
    "AssociatedMACAddresses": [
      "9c:dc:71:c3:bb:0a",
      "9c:dc:71:c3:bb:0e",
      "9c:dc:71:c3:bb:12",
      "9c:dc:71:c3:bb:16"
    ],
    "FlowControlConfiguration": "None",
    "FlowControlStatus": "None",
    "WakeOnLANEnabled": true,
    "LLDPEnabled": true,
    "LLDPReceive": {
      "ChassisId": "2c:23:3a:48:2f:5d",
      "ChassisIdSubtype": "MacAddr",
      "ManagementAddressIPv4": "",
      "ManagementAddressIPv6": "",
      "ManagementAddressMAC": "2c:23:3a:48:2f:ae",
      "ManagementVlanId": 4095,
      "PortId": "54:65:6E:2D:47:69:67:61:62:69:74:45:74:68:65:72:6E:65:74:31:2F:32:2F:39",
      "PortIdSubtype": "IfName"
    },
    "LLDPTransmit": {
```

```

        "ChassisId": "9c:dc:71:c3:bb:16",
        "ChassisIdSubtype": "MacAddr",
        "ManagementAddressIPv4": "",
        "ManagementAddressIPv6": "",
        "ManagementAddressMAC": "9c:dc:71:c3:bb:16",
        "ManagementVlanId": 4095,
        "PortId": "9C:DC:71:C3:BB:16",
        "PortIdSubtype": "MacAddr"
    }
},
"LinkConfiguration": [
    {
        "AutoSpeedNegotiationCapable": true,
        "AutoSpeedNegotiationEnabled": true,
        "CapableLinkSpeedGbps": [
            25.0,
            10.0
        ],
        "ConfiguredNetworkLinks": [
            {
                "ConfiguredLinkSpeedGbps": 25.0,
                "ConfiguredWidth": 1
            },
            {
                "ConfiguredLinkSpeedGbps": 10.0,
                "ConfiguredWidth": 1
            }
        ]
    }
],
"LinkNetworkTechnology": "Ethernet",
"MaxFrameSize": 9622,
"MaxSpeedGbps": 25.0,
"Width": 1,
"InterfaceEnabled": true,
"SignalDetected": true,
"PortMedium": "Optical",
"LinkState": "Enabled",
"LinkStatus": "LinkUp",
"LinkTransitionIndicator": 1,
"CurrentSpeedGbps": 10.0,
"ActiveWidth": 1,
"SFP": {
    "SupportedSFPTypes": [
        "SFP",
        "SFPPlus",
        "SFP28"
    ],
    "Status": {
        "Health": "OK",

```

```

        "State": "Enabled"
    },
    "Manufacturer": "Contoso",
    "PartNumber": "844483-B21",
    "SerialNumber": "THY1020240",
    "MediumType": "FiberOptic",
    "FiberConnectionType": "SingleMode",
    "Type": "SFP28"
},
"@odata.context": "/redfish/v1/$metadata#Port.Port",
"@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1",
"@odata.etag": "W/\"B40342B6\"",
"@Redfish.Settings": {
    "@odata.type": "#Settings.v1_3_3.Settings",
    "SettingsObject": {
        "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1/Settings"
    },
    "SupportedApplyTimes": [
        "OnReset"
    ]
}
}
}

```

4.4 Get PCIe Information

The Network Adapter is analogous to a PCIe Device, so this next retrieval gets the PCIeDevice information for the link we found in the Network Adapter.

```
GET /redfish/v1/Chassis/1/PCIeDevices/DE07A000
```

```

{
    "@odata.type": "#PCIeDevice.v1_9_0.PCIeDevice",
    "Id": "DE07A000",
    "Name": "PCIe Device",
    "Manufacturer": "Contoso",
    "Model": "Contoso 2",
    "SKU": "Contoso 2 function adapter",
    "SerialNumber": "LMNOP4279",
    "PartNumber": "ABCDEFG2",
    "UUID": "00000000-0000-1000-8000-9cdc71c3bb0a",
    "DeviceType": "MultiFunction",
    "FirmwareVersion": "192.168.59.0",
    "Status": {
        "Health": "OK",
    }
}

```

```

    "State": "Enabled"
  },
  "PCIEFunctions": {
    "@odata.id": "/redfish/v1/Chassis/1/PCIEDevices/DE07A000/PCIEFunctions"
  },
  "PCIEInterface": {
    "LanesInUse": 8,
    "MaxLanes": 16,
    "MaxPCIEType": "Gen4",
    "PCIEType": "Gen4"
  },
  "@odata.context": "/redfish/v1/$metadata#PCIEDevice.PCIEDevice",
  "@odata.id": "/redfish/v1/Chassis/1/PCIEDevices/DE07A000",
  "@odata.etag": "W/\"70C0367C\""
}

```

4.5 Get PCIe Function Information

The PCIeFunction information is linked to the PCIeDevice as well as the NetworkDeviceFunction so we must retrieve that information.

```
GET /redfish/v1/Chassis/1/PCIEDevices/DE07A000/PCIEFunctions/1
```

```

{
  "@odata.type": "#PCIEFunction.v1_3_0.PCIEFunction",
  "Id": "1",
  "Name": "PCIe Function 1",
  "FunctionType": "Physical",
  "DeviceClass": "NetworkController",
  "FunctionId": 1,
  "DeviceId": "0x1801",
  "VendorId": "0x14e4",
  "ClassCode": "0x020000",
  "RevisionId": "0x11",
  "SubsystemId": "0x1598",
  "SubsystemVendorId": "0x14e4",
  "Status": {
    "Health": "OK",
    "State": "Enabled"
  },
  "Links": {
    "NetworkDeviceFunctions": [
      {
        "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions/1"
      }
    ]
  }
}

```

```

    }
  ],
  "PCIEDevice": {
    "@odata.id": "/redfish/v1/Chassis/1/PCIEDevices/DE07A000"
  }
},
"@odata.context": "/redfish/v1/$metadata#PCIEFunction.PCIEFunction",
"@odata.id": "/redfish/v1/Chassis/1/PCIEDevices/DE07A000/PCIEFunctions/1",
"@odata.etag": "W/\"2D186009\""
}

```

4.6 Get System NIC information

EthernetInterface is the System's view of the NIC and will have constructs of what is traditionally the software stack, such as IPv4/IPv6 addresses.

```
GET /redfish/v1/Systems/1/EthernetInterfaces/5
```

```

{
  "@odata.type": "#EthernetInterface.v1_4_1.EthernetInterface",
  "Id": "5",
  "FullDuplex": false,
  "IPv4Addresses": [],
  "IPv4StaticAddresses": [],
  "IPv6AddressPolicyTable": [],
  "IPv6Addresses": [],
  "IPv6StaticAddresses": [],
  "IPv6StaticDefaultGateways": [],
  "InterfaceEnabled": null,
  "LinkStatus": "LinkUp",
  "MACAddress": "9c:dc:71:c3:bb:0a",
  "Name": "",
  "NameServers": [],
  "SpeedMbps": null,
  "StaticNameServers": [],
  "Status": {
    "Health": "OK",
    "State": "Enabled"
  },
  "Links": {
    "NetworkDeviceFunctions": [
      {
        "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions/1"
      }
    ]
  }
}

```



```

    ]
  },
  "UefiDevicePath": "PciRoot(0x3)/Pci(0x1,0x1)/Pci(0x0,0x0)",
  "@odata.context": "/redfish/v1/$metadata#EthernetInterface.EthernetInterface",
  "@odata.etag": "W/\"C4D4ADE7\"",
  "@odata.id": "/redfish/v1/Systems/1/EthernetInterfaces/5"
}

```

4.7 Set NIC Information

The previous GETs returned the following properties. By performing a GET operation on that URI, the client can determine what properties can be changed and can set them by performing a PUT or PATCH operation on that resource.

```

"@Redfish.Settings": {
  "@odata.type": "#Settings.v1_3_3.Settings",
  "SettingsObject": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Settings"
  },
  "SupportedApplyTimes": [
    "OnReset"
  ]
}

```

4.8 Set Device Function Information

The previous GETs returned the following properties. By performing a GET operation on that URI, the client can determine what properties can be changed and can set them by performing a PUT or PATCH operation on that resource.

```

"@Redfish.Settings": {
  "@odata.type": "#Settings.v1_3_3.Settings",
  "SettingsObject": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions/1/Settings"
  },
  "SupportedApplyTimes": [
    "OnReset"
  ]
}

```

4.9 Set Port Information

The previous GETs returned the following properties. By performing a GET operation on that URI, the client can determine what properties can be changed and can set them by performing a PUT or PATCH operation on that resource.

```
"@Redfish.Settings": {
  "@odata.type": "#Settings.v1_3_3.Settings",
  "SettingsObject": {
    "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1/Settings"
  },
  "SupportedApplyTimes": [
    "OnReset"
  ]
}
```

4.10 Get NIC Metrics

As the NetworkAdapter resource represents the card, or PCIe device, it will have some global metrics that correspond to the device.

```
GET /redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Metrics
```

```
{
  "@odata.type": "#NetworkAdapterMetrics.v1_0_0.NetworkAdapterMetrics",
  "Id": "Metrics",
  "Name": "Network Adapter Metrics",
  "NCSIRXBytes": 20250,
  "NCSIRXFrames": 450,
  "NCSITXBytes": 16168,
  "NCSITXFrames": 450,
  "RXBytes": 1411160,
  "RXUnicastFrames": 9,
  "RXMulticastFrames": 6506,
  "TXBytes": 12179,
  "TXUnicastFrames": 0,
  "TXMulticastFrames": 69,
  "@odata.context": "/redfish/v1/$metadata#NetworkAdapterMetrics.NetworkAdapterMetrics",
  "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Metrics",
  "@odata.etag": "W/\"B85BFB25\""
}
```

4.11 Get Device Function Metrics

For any individual PCIe or virtual function, those metrics can be found on the NetworkDeviceFunctionMetrics.

```
GET /redfish/v1/Chassis/1/NetworkAdapters/DE082000/NetworkDeviceFunctions/0/Metrics
```

```
{
  "@odata.type": "#NetworkDeviceFunctionMetrics.v1_1_0.NetworkDeviceFunctionMetrics",
  "Id": "Metrics",
  "Name": "Network Device Function 1 Metrics",
  "RXBytes": 286683,
  "RXFrames": 1867,
  "RXUnicastFrames": 0,
  "RXMulticastFrames": 1,
  "TXBytes": 0,
  "TXFrames": 0,
  "TXUnicastFrames": 0,
  "TXMulticastFrames": 0,
  "@odata.context": "/redfish/v1/$metadata#NetworkDeviceFunctionMetrics.NetworkDeviceFunctionMetrics",
  "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/NetworkDeviceFunctions/1/Metrics",
  "@odata.etag": "W/\"7BD1348E\""
}
```

4.12 Get Port Metrics

Any metrics on the port itself are represented by the PortMetrics object.

```
GET /redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1/Metrics
```

```
{
  "@odata.type": "#PortMetrics.v1_2_0.PortMetrics",
  "Id": "Metrics",
  "Name": "Ethernet Port 1 Metrics",
  "Networking": {
    "RXFrames": 8519,
    "RXUnicastFrames": 9,
    "RXMulticastFrames": 6467,
    "RXBroadcastFrames": 2043,
  }
}
```

```

    "RXPFCEFrames": 0,
    "RXDiscards": 0,
    "RXFalseCarrierErrors": 0,
    "RXFCSErrors": 0,
    "RXFrameAlignmentErrors": 0,
    "RXOversizeFrames": 0,
    "RXUndersizeFrames": 0,
    "TXFrames": 69,
    "TXUnicastFrames": 0,
    "TXMulticastFrames": 69,
    "TXBroadcastFrames": 0,
    "TXPFCEFrames": 0,
    "TXDiscards": 0,
    "TXExcessiveCollisions": 0,
    "TXLateCollisions": 0,
    "TXMultipleCollisions": 0,
    "TXSingleCollisions": 0
  },
  "RXBytes": 1401596,
  "RXErrors": 169,
  "TXBytes": 12179,
  "TXErrors": 0,
  "Transceivers": [
    {
      "RXInputPowerMilliWatts": 6985.0,
      "SupplyVoltage": 52096.0,
      "TXBiasCurrentMilliAmps": 3375.0,
      "TXOutputPowerMilliWatts": 7108.0
    }
  ],
  "@odata.context": "/redfish/v1/$metadata#PortMetrics.PortMetrics",
  "@odata.id": "/redfish/v1/Chassis/1/NetworkAdapters/DE07A000/Ports/1/Metrics",
  "@odata.etag": "W/\"4E6105EA\""
}

```

4.13 Set NIC Settings To Default

In order to reset the settings to default, there is a required action called `ResetSettingsToDefault`. This action takes no parameters. It is invoked as follows:

```
POST /redfish/v1/Chassis/1/NetworkAdapter/DE07A000/Actions/NetworkAdapter.ResetSettingsToDefault
```

4.14 Get FRU Information

FRU information is found on the NetworkAdapter. The properties Manufacturer, Model, SKU and SerialNumber are all required properties. For more information, see [GET NetworkAdapter](#).

```
GET /redfish/v1/Chassis/1/NetworkAdapter/DE07A000
```

```
{
  "Manufacturer": "Contoso",
  "Model": "Contoso 2",
  "SKU": "Contoso 2 function adapter",
  "SerialNumber": "LMNOP4279",
  "PartNumber": "ABCDEFG2"
}
```

4.15 Get Firmware Version

Like FRU, the firmware version can be found on the NetworkAdapter object under the FirmwarePackageVersion property. This is a required property. For more information, see [GET NetworkAdapter](#).

```
GET /redfish/v1/Chassis/1/NetworkAdapter/DE07A000
```

```
{
  "FirmwarePackageVersion": "1.2.3"
}
```

4.16 Update Firmware

Updating firmware is done via the Redfish UpdateService. The following is an example of how to update firmware on a NetworkAdapter using HTTP multipart. The Redfish Firmware Update White Paper [5] describes the firmware update process and options.

```
POST /redfish/v1/UpdateService/upload HTTP/1.1
```

```
Host: <host-path>
Content-Type: multipart/form-data; boundary=-----e67f97b6546ac967b
Content-Length: <computed-length>
Connection: keep-alive
X-Auth-Token: <session-auth-token>

-----e67f97b6546ac967b
Content-Disposition: form-data; name="UpdateParameters"
Content-Type: application/json

{
  "Targets": ["/redfish/v1/Chassis/1/NetworkAdapter/DE07A000"],
  "@Redfish.OperationApplyTime": "OnReset"
}

-----e67f97b6546ac967b
Content-Disposition: form-data; name="UpdateFile"; filename="firmwareimage.bin"
Content-Type: application/octet-stream

<software image binary>
```

5 References

- [1] "[Redfish API Specification](#)"
- [2] "[Redfish Data Model Specification](#)"
- [3] "[Redfish Interop Validator](#)"
- [4] "[Ethernet NIC Profile v1.0](#)"
- [5] "[Redfish Firmware Update White Paper](#)"

6 Revision

Revision	Date	Description
1.0	4/20/2025	Initial contribution