



VIDEO\_MODE (default FBAS)

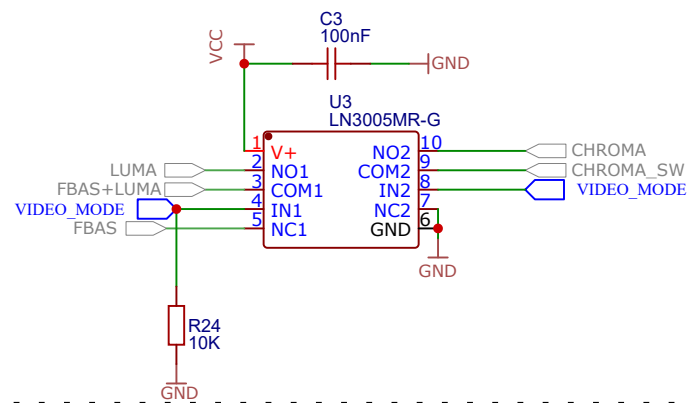


FBAS/LUMA/CHROMA  
switched for FBAS only  
or S-Video signal.

40/80\_COL\_MODE (default 40 col.)

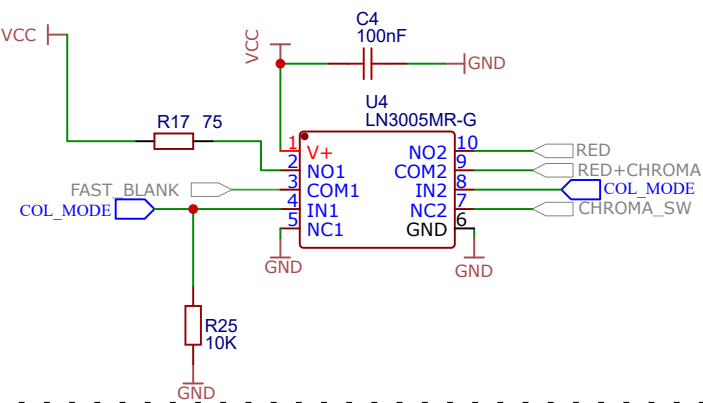


FastBlanking/RED/CHROMA  
switched for  
40/80 COL MODE

40/80\_COL\_MODE (default 40 col.)  
SYNC\_MODE (default Monochrome)

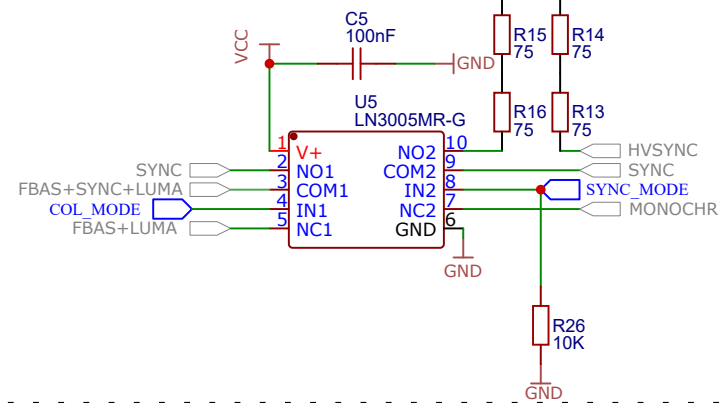





SYNC/FBAS+LUMA  
switched for  
40/80 COL MODE  
HVSYN/MONOCHROME  
switched for SYNC MODE

LED switching DIP switch

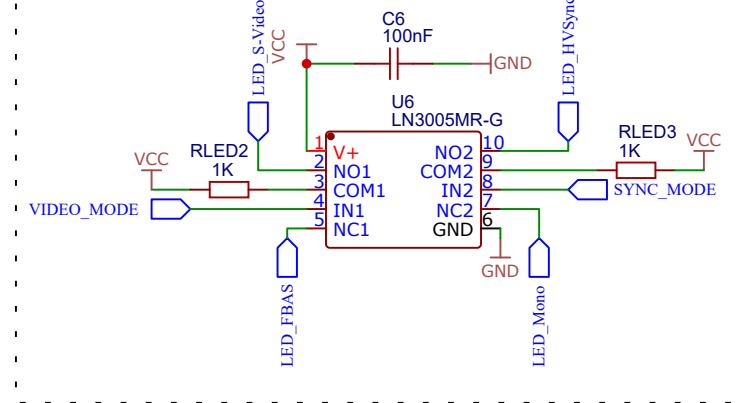

switching the RGB-LED  
for CSync- / Video-Mode

The SWITCHING section. All the signal that have to be switched to the SCART female connector.  
The CONTROL section is responsible for the 40 col. or 80 col. mode or composite / s-video mode.

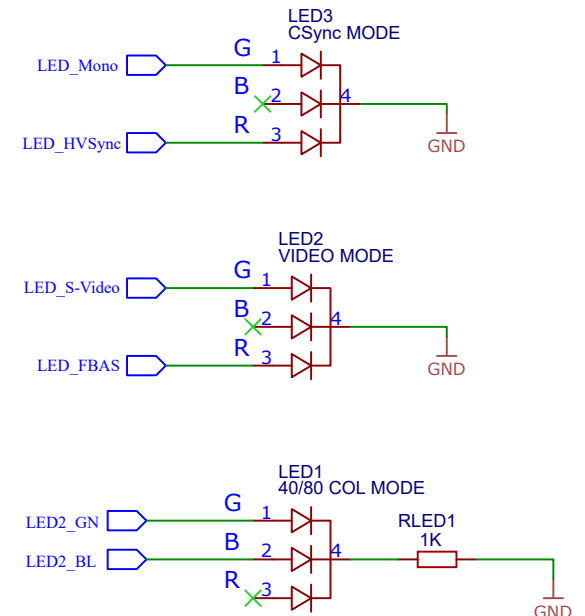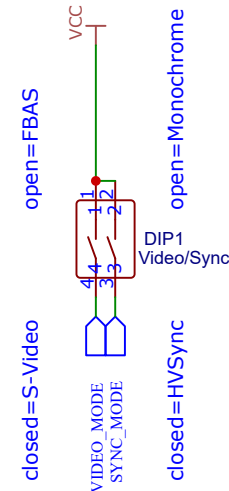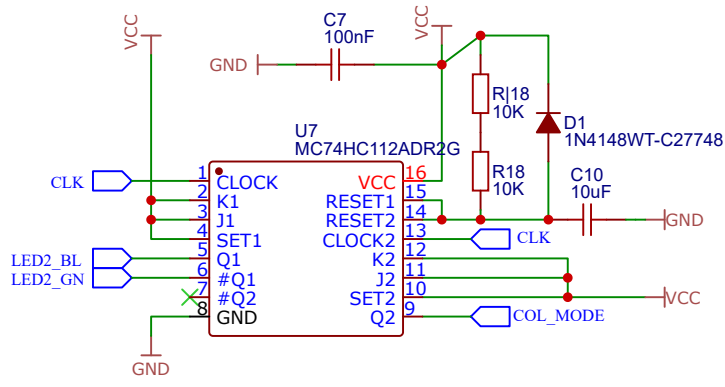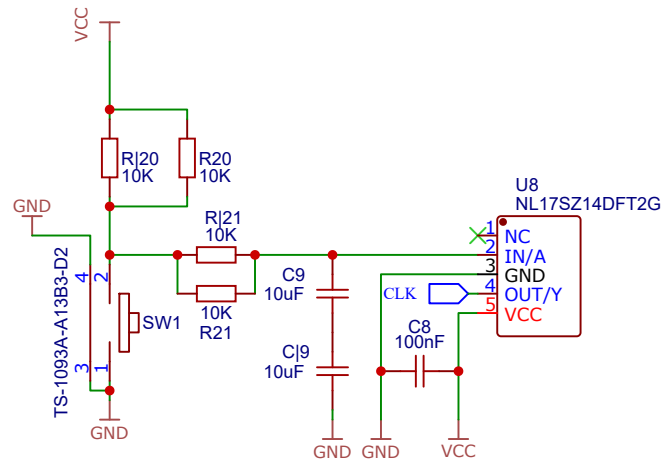

For the LEDs should be used MENTOR light guides  
Art.# 1293.1500

