

# AP2DX Manual

Wadie Assal  
6398693

Jasper Timmer  
5995140

Maarten de Waard  
5894883

Maarten Inja (vz)  
5872464

July 1, 2011

## 1 Intro

This manual describes how to run and configure the complete AP2DX package. The simulated P2DX robot now maps its environment and has three behaviors:

- Curiously driving through holes in the sensor data. If it detects a hallway, why should not the robot enter and explore it?
- Cautiously drive away from walls it might bump into. Of course, we would not want the robot to mess up the odometry sensor data by slipping its wheels, trying to drive through a wall it can't. Instead it stops, turns and wanders some other way.
- Sometimes even the best of us can't avoid ending up stuck inside a corpse. Reverse direction and get out of there! Afterwards, when P2DX is once again in the clear.

## 2 Requirements

To Run AP2DX Software you need Java Runtime Environment 1.6. If one wants to map the robot's environment on the go the mapper module should be run on a Linux system. If the mapper is not run on a Linux system no map will be created and the mapper module's window will remain creepy white.

## 3 How to configure

A module consists of a folder with in this folder four files: a .jar file, a .json file and two "start" scripts to run it on Windows and Linux. The .json file is the configuration file where one should change IP addresses of other modules (or the simulator) and ports.

## 4 How to build

The build.xml contains an ant script that compiles to source code. One optional argument can be given: “debug” which only compiles and creates .jar files, without the javadoc compilation and the junit testing phases.

## 5 How to run

To start the AP2DX Software, you first need to run an USARsim Server. Before running the AP2DX software be sure the configuration files correctly list the IP addresses and the ports of the other modules and, very importantly, the USARsim Server.

Next, the modules have to be run. If one runs all the modules on one computer one can run start\_all.bat or if one runs Linux: start\_all.sh. If one runs the modules separately run the start.bat or start.sh files next to the jar files in the following order.

- Coordinator
- Motor
- Reflex
- Planner
- Mapper
- Sensor