

How to use this Software

Getting Started

1. Get all header file information into the code.
 - a. If you look at the example, this is lines 1-94
2. Run PIC_Configure() to setup the I/O on your device
 - a. You should have a similar routine on setting up all the pins for use. Check the datasheet for this microcontroller to see what pins are represented by what lines.
 - b. At the very end of PIC_Configure, you will need to run the LCD_Init() function. This will setup the LCD and get it ready to display.

How to Display Text

1. Create a char array 21 characters long
 - a. 20 characters for the LCD and 1 for the NULL at the end
2. Use the sprintf command to put the string into the char array
3. Call LCD_Write_XY(ROW, COLUMN, TEXT)
4. Your new text should be on the display