 
 


# HOPR Node PC


## Your Quickstart Manual

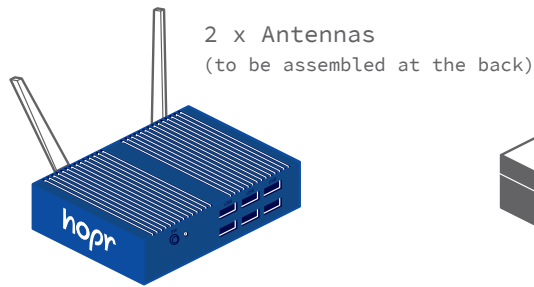

1 x HOPR Node PC

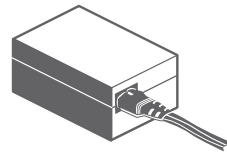

1 x Power Adapter

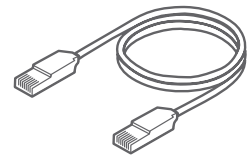

1 x Ethernet Cable

### Unpack + Check



1

2

## Connect to Your Router

Use the ethernet cable to connect your HOPR Node PC to your router.

(Router: make sure you use one of the numbered slots / usually yellow)

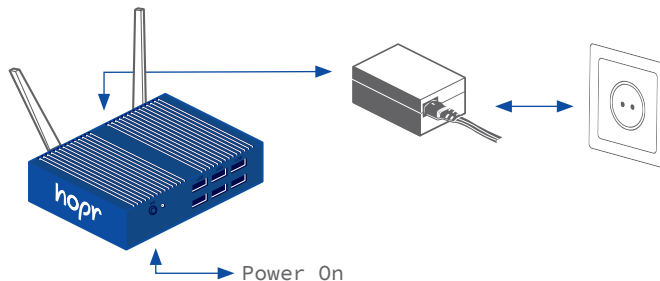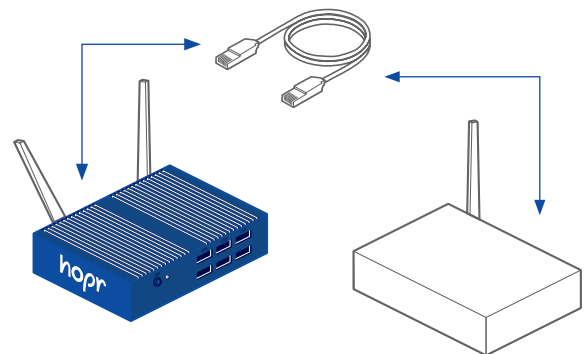

### Power On

3

Connect your HOPR Node PC to an electrical outlet. Press the power button.

(Please wait up to 2 minutes for your HOPR node to fully start. A light will blink to indicate the node is on.)

4

## Manage Your HOPR Node PC

- 4.1 Connect to the WiFi your HOPR Node PC creates: **AVADO**
- 4.2 Use the password for the WiFi network: **avado123**
- 4.3 Afterwards, go to: **[ava.do/start](https://ava.do/start)**
- 4.4 Wait a minimum of 3-4 days for the Ethereum Node to sync
- 4.5 Go to **[HOPRnet.org/setup](https://HOPRnet.org/setup)** to read further instructions. Congratulations! Now you can manage your HOPR node PC.