

# Smart bike usual manual

## 1. All state

### 1) New bike mode

- a. CPU sleep
- b. Press any button to wake up into Login in mode

### 2) Login in mode(BLE device name: Smart\_Bike199999)

- a. With advertising(advertising interval: 100ms)
- b. Connect and go to on station when disconnect(Bonded)
- c. No connect and time out in 30s(back to new bike mode)

### 3) On station mode(BLE device name: Smart\_Bike2999999)


- a. With advertising(advertising interval: 5s)
- b. Press password to go to Loan mode



- c. Option 1: use password to get a bike.
  - a) Password format: Password+ 'OK'
  - b) Password length: 1~13
- d. Option 2: use NFC card to get a bike. Press 'OK' and use a NFC card close the antenna.

#### 4) Loan mode(BLE device name: Smart\_Bike399999)

- a. With advertising(advertising interval: 100ms)
- b. No connect and time out in 30s(back to On station mode)
- c. Connected

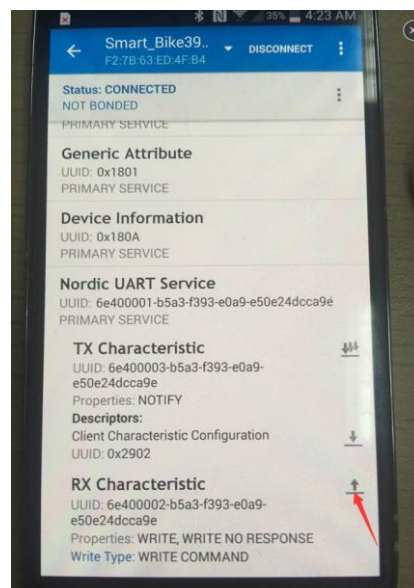

- a) Check key ok: Write '0' to RX Characteristic, it will unlock the bike and go to Out station mode when disconnect.
- b) Key wrong: Disconnect to go back to On station mode.

## **5) Out station mode**

- a. Option 1: Press password to unlock the bike.
- b. Option 2: Press 'OK' button to unlock the bike with read a NFC card.
- c. Press 888+'ok' to go to return mode.

## **6) Return mode(Smart\_Bike599999)**


- a. With advertising(advertising interval: 100ms)
- b. No connect and time out in 30s(back to Out station mode)
- c. Connected
  - a) Check key ok: Write '00' to RX Characteristic, it will unlock the bike and go to Out station mode when disconnect.
  - b) Key wrong: Disconnect to go back to Out station mode.

## **2. Quick start**

- a. Press 888+'ok' to go to Back mode because the sample is in Out station mode now.
- b. Connect "Smart\_Bike599999" and write "00" to RX Characteristic, it will unlock the bike and go to on station mode when disconnect.
- c. Disconnect to go to On station mode and choose how to unlock the bike (NFC or Password).
  - a) Option 1: press password+ 'OK'.
  - b) Option 2: press 'OK' and put the NFC card close the antenna.

- d. Into Loan mode and connect to "Smart\_Bike399999" .
- e. Write '0' to RX Characteristic, it will unlock the bike and go to Out station mode when disconnect.
- f. Disconnect to go to out station mode
- g. Press your password before or Press 'OK' button to read NFC to unlock your bike.

### 3. Debug wiring

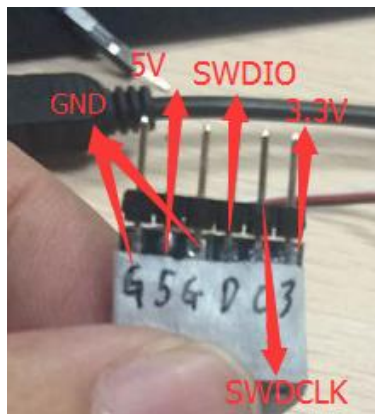

### 4. BLE test app

IOS: lightBlue

Android: nRF Master control Panel

### 5. BLE service: Nordic UART Service

TX Characteristic(notify): receive BLE device data from notify.

RX Characteristic(write): send data to BLE device with write this characteristic.