


一. Software


1. easyboard: (version V178 or above)
2. Download link: [http://sysolution.net/download/EasyBoard-win\(v181\).zip](http://sysolution.net/download/EasyBoard-win(v181).zip)
Easyboard software for configure controller.

二. operations


1. Connect controller with laptop via Ethernet cable directly
2. Open Easyboard, click Detect IP on the left top and click ok, ok and then detect controller.

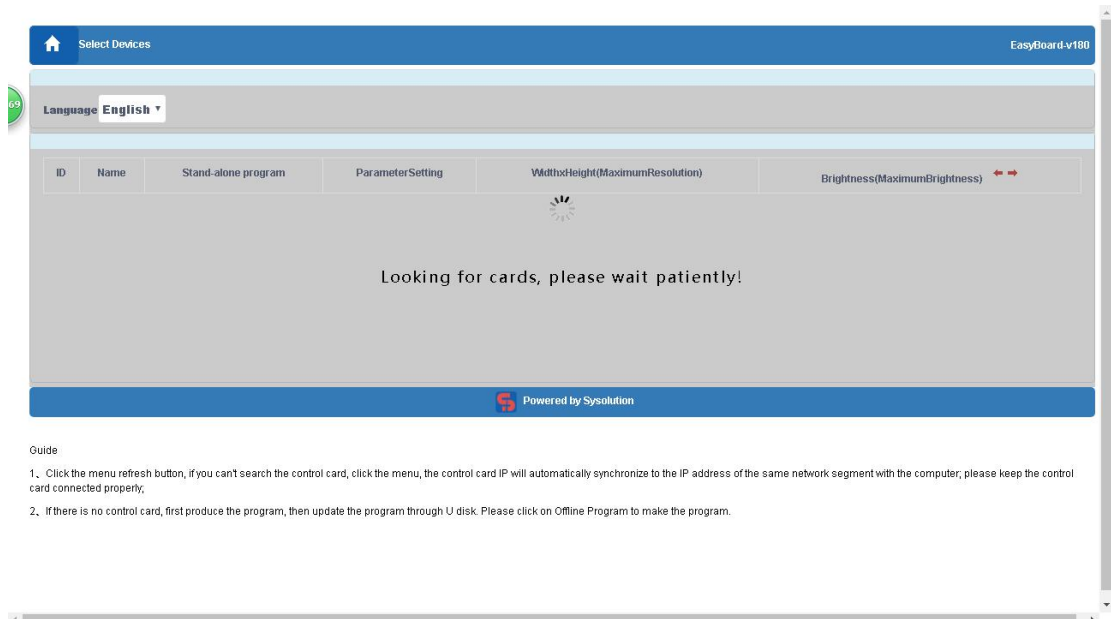

Detect controller success:

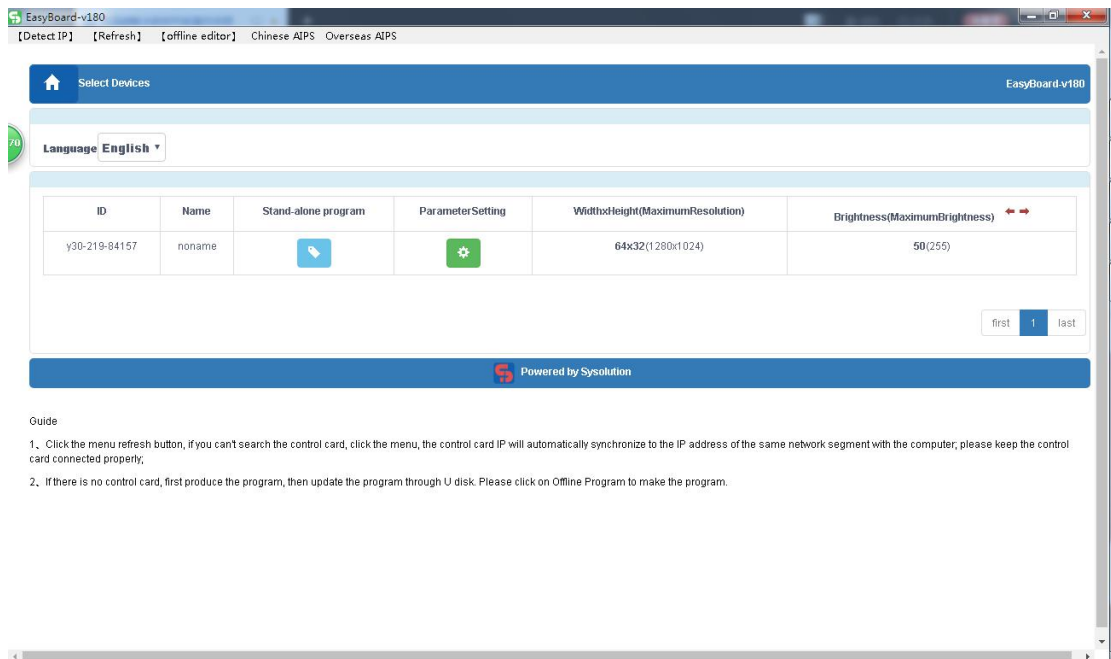

Click

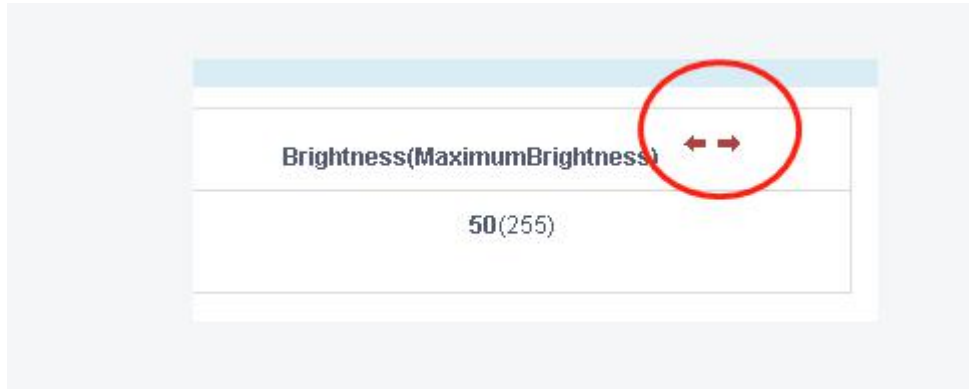


then

will see controller android version and IP address and other information.


NOTES: after detect controller IP, please double check the resolution has been setup, Hardware version is normal, if not, please refresh or restart the Easyboard software.

3. Stand alone program in Easyboard for sending image, video or Text to test screen display.


4. Parameter setting, default password 888 to enter configuration interface:

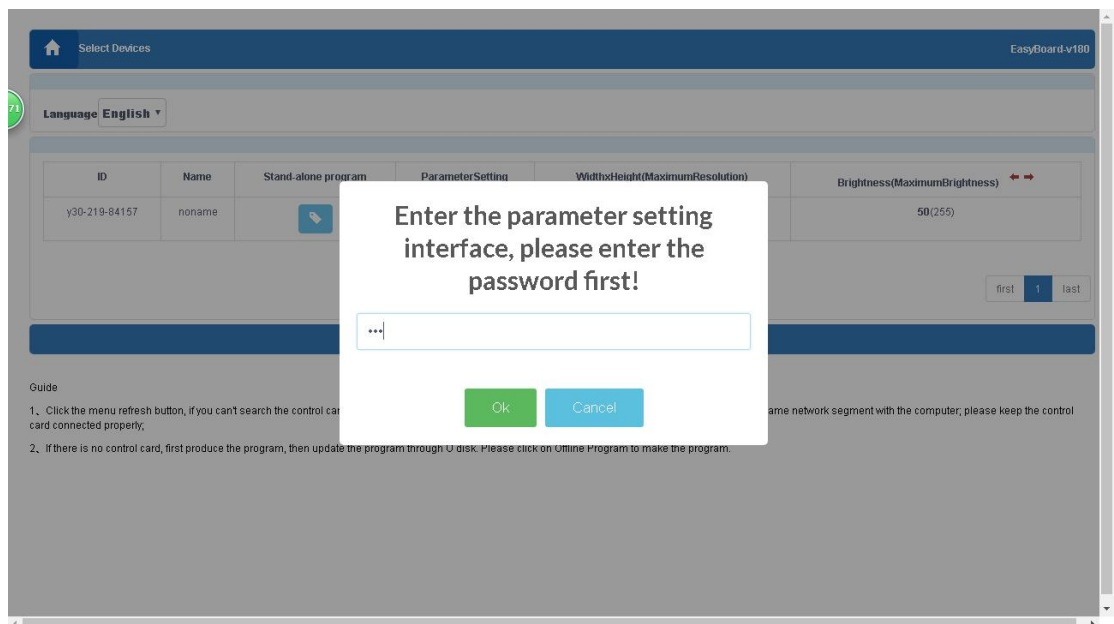

5.

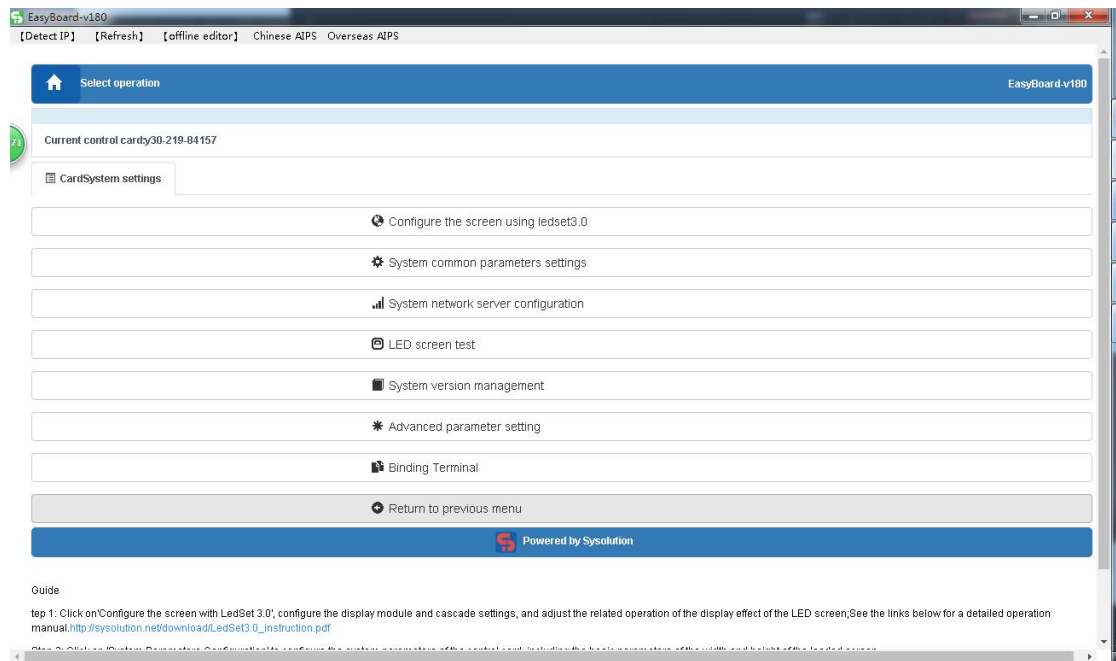

6. Go to system version management, query software version, will see following information

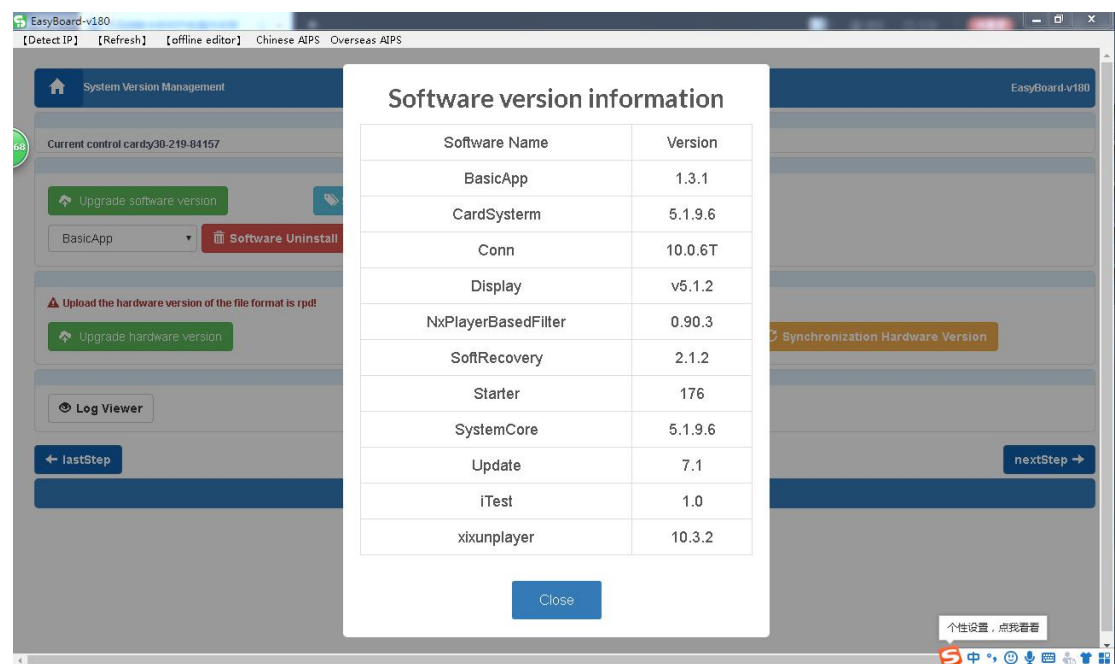

Y30 series controller has Display APK.


Y10 series controller do not has Display APK.

NOTES: If controller 's starter 176 and xixunplayer10.3.2 version or above, then no need update. If not, please do update.

Software version update:

System version management---> software update

Select the zip file and waiting for updating itself,

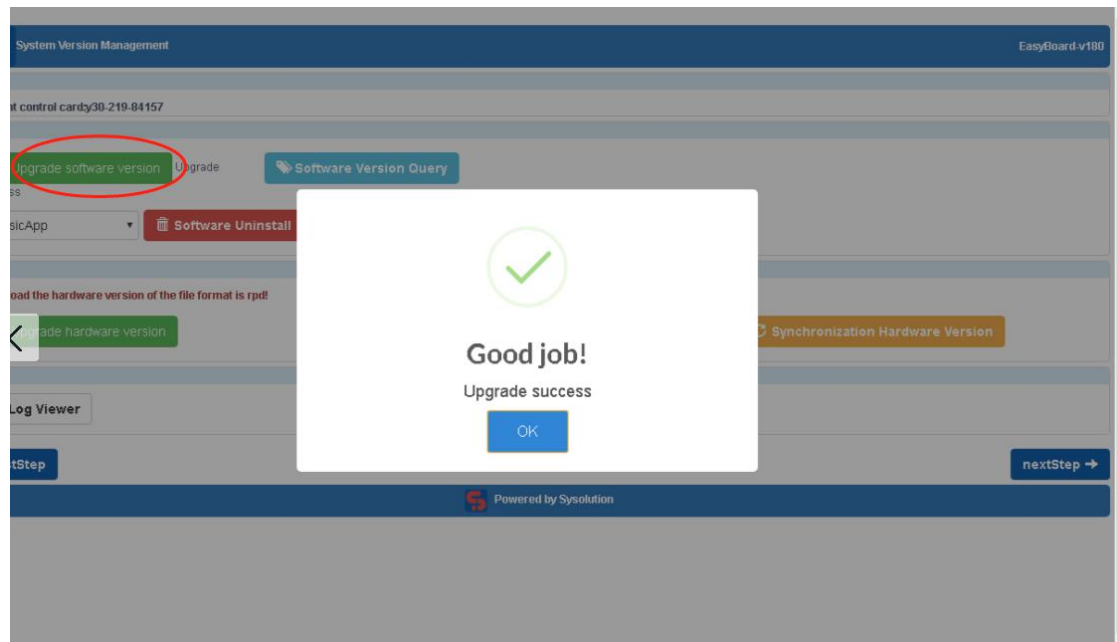

Network gateway setup:

Please follow the image to setup to make sure the controller has been setup with correct gateway and subnet mask

The screenshot displays the 'Network Settings' configuration page. Red arrows and text annotations highlight specific fields and actions:

- 'Web Server Address' and 'Company ID' fields are marked as 'empty'.
- 'WIFI switch' is set to 'OFF' and labeled 'WIFI off'.
- '3G switch' and '4G switch' are both set to 'OFF'.
- The 'Network port IP parameter settings' section includes a table for IP configuration:

	Automatic acquisition
Ip address	169 . 254 . 255 . 254
Default gateway	169 . 254 . 0 . 1
Subnet mask	255 . 255 . 0 . 0
DNS server	169 . 254 . 0 . 1

Annotations for the IP settings include '3G 4G off' and 'Set fixed IP and SAVE' with an arrow pointing to the 'Save' button. At the bottom, the 'RealTimeServer' field is annotated with 'Set realtime server address and Save' and an arrow pointing to its 'Save' button. Navigation buttons 'lastStep' and 'nextStep' are visible at the bottom.

After set like this, it should be finished.

But for the IP address and gateway, subnet mask and DNS server, should be different for

different users.

Other TIPS:

1. Use separate power supply for sending controller like Y30 or Y10, 5V 3A.
2. After update software version, please restart controller by power off and on.