 


Procedure to install the last patch LeddarVU8 Updater 1.5

It's important to follow this procedure until the last step

- 1- Connect your LeddarVU8 to your computer
- 2- Click on this [link](#) to download the patch files. Please note that you must register to our support portal (if you don't already have an account) to access the patch files.
- 3- Choose the location where you want to download the ZIP file on your computer
- 4- Unzip the **LeddarUpdater-1_5.zip** folder
- 5- A new folder **LeddarUpdater-1_5** will be created with 3 files as shown below
- 6- Click on the **LeddarUpdater.exe** file



- 7- This command window will pop-up:

```
xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
x  LeddarUu 8 Updater 1.5  x
xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

Select device to update:
1 - \\.\COM3
2 - \\.\COM7
3 - \\.\COM17
4 - FTDI : C232HM-DDHSL-0 : FTYXFGZ7
>
```

- 8- Select the number that corresponds to your connection interface:
 - FTDI: SPI connection
 - \COMx USB connection
 - Modbus address: 1
- 9- The update will start and the window will close automatically
- 10- A .txt file will be generated inside the **LeddarUpdater-1_5** folder
- 11- Please send this .txt file to support@leddartech.com. It contains the serial and the confirmation numbers that corresponds to your unit

It is crucial that LeddarTech receives this .txt file to allow us to:

- Confirm the successful installation of the patch (You will receive a confirmation email within 48 h)
- Assure the continuous technical support of your Vu8 unit.
- Send you the latest updates/patches for your unit when available.

- 12- Download the latest LeddarConfigurator software by clicking on this [link](#)
- 13- Click on the .exe file and follow the instructions to finalize the installation
- 14- Connect the LeddarVu8 sensor to your computer if it's not already connected
- 15- Open the LeddarConfigurator software and follow the update process if prompted

For any question/assistance please contact our support team at support@leddartech.com