


# Manual camera control

## Mode A

In this mode the previously saved camera positions including the zoom level (positions 1 - 8) can be approached again.


Button 1: Position 1  
Button 2: Position 2  
Button 3: Position 3  
Button 4: Position 4  
Button 5: Position 5  
Button 6: Position 6  
Button 7: Position 7  
Button 8: Position 8

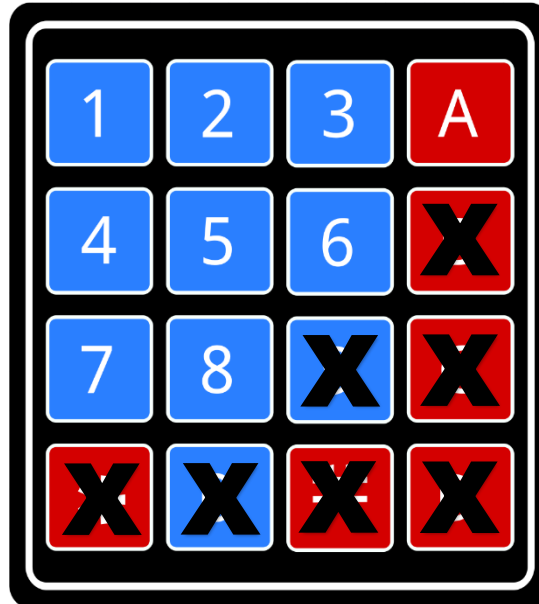

## Mode B

In this mode, the camera can be moved **step by step** in the selected direction. It is also possible to use the zoom function **step by step**.

Button 2: Up  
Button 4: Left  
Button 6: Right  
Button 8: Down  
Button \*: Zoom in  
Button #: Zoom out

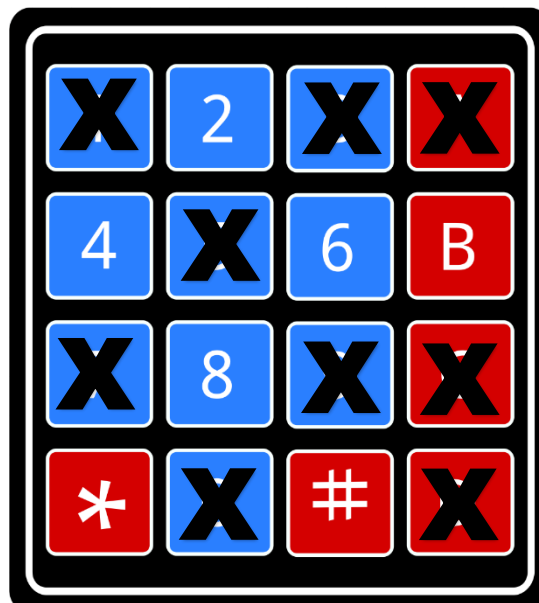


# Manual camera control

## Mode C

In this mode, the camera can be moved **continuously** in the selected direction. It is also possible to use the zoom function **continuously**. Each camera movement must be **stopped manually**.

Button 2: Up  
Button 4: Left  
Button 5: Stop  
Button 6: Right  
Button 8: Down  
Button \*: Zoom in  
Button #: Zoom out

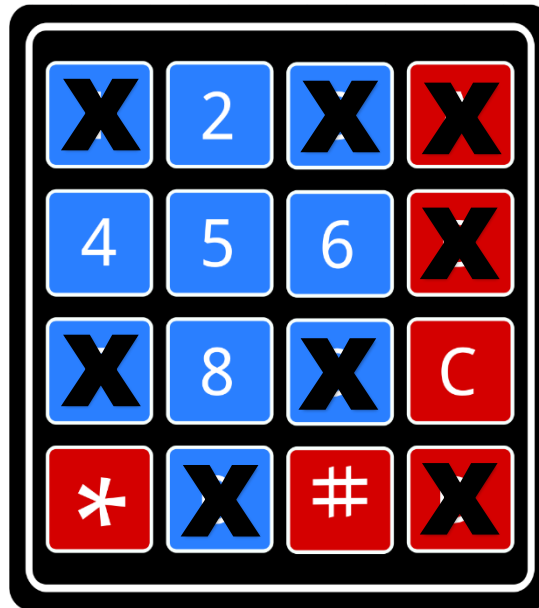

## Mode D

In this mode the current camera position including the existing zoom level can be saved. Possible positions are 1 - 8.

Button 1: Position 1  
Button 2: Position 2  
Button 3: Position 3  
Button 4: Position 4  
Button 5: Position 5  
Button 6: Position 6  
Button 7: Position 7  
Button 8: Position 8

