



PiSofa API

[@sofald](#)

Refers to the position of the sofa been controlled.

1 = Left, 2 = Middle, 3 = Right, 0 = All

[/moveToUp/@sofald](#)

Moves the sofa to the vertical up position.

<http://192.168.0.10/moveToUp/0>

[/moveToFeet/@sofald](#)

Moves the sofa so the foot rest is horizontal

<http://192.168.0.10/moveToFeet/0>

[/moveToFlat/@sofald](#)

Moves the sofa to the furthest horizontal position.

<http://192.168.0.10/moveToFlat/0>

[/manUpPress/@sofald](#)

Starts the sofa manually moving towards the vertical up position.

<http://192.168.0.10/manUpPress/0>

[/manUpRelease/@sofald](#)

Stops the sofa manually moving towards the vertical up position.

<http://192.168.0.10/manUpRelease/0>

[/manDownPress/@sofald](#)

Starts the sofa manually moving towards the horizontal flat position.

<http://192.168.0.10/manDownPress/0>

[/manDownRelease/@sofald](#)

Stops the sofa manually moving towards the horizontal flat position.

<http://192.168.0.10/manDownRelease/@sofald>

[/stopAll](#)

Switches off all relays and kills any running threads in the API.

<http://192.168.0.10/stopAll>

[/crazyMode](#)

Toggles which sofa and direction the switches control.

<http://192.168.0.10/crazyMode>

[/parentalMode](#)

Toggles the relay controlling power to the switches on the sofa.

<http://192.168.0.10/parentalMode>