



VANIN

Quick Start Guide RX4-1500 Wi-Fi6 Router Other Setting

Before Setting

To customize your wireless network connection and other advanced repeater settings, please go to

www.Juplink.com/Support/

to download RX4-1500 updated Firmware and User Guide for more information.

Operating Conditions

Working Temperature: 0~45°C / 32~113°F (No condensation)

 
Working Humidity: 10%~90% RH

Storage Temperature:-40~85°C / -40~185°F

Storage Humidity: 5%~95% RH (No condensation)

Step 2 : Login Web UI

1. Connect your Wi-Fi device to the repeater's Wi-Fi network **Juplink-RX4-1500_5G** or **Juplink-RX4-1500**.



Ensure that Mobile Data (if any) is disabled.

2. Launch a web browser on the device which has been connected to the repeater. Enter **192.168.0.1** in the address bar to log in.

<http://192.168.0.1>

3. Username: **admin** / Password: **admin**


Login 192.168.0.1* Juplink RX4-1500 router

Username

Password


1 Repeater Mode

 Step 1 : Common Connection

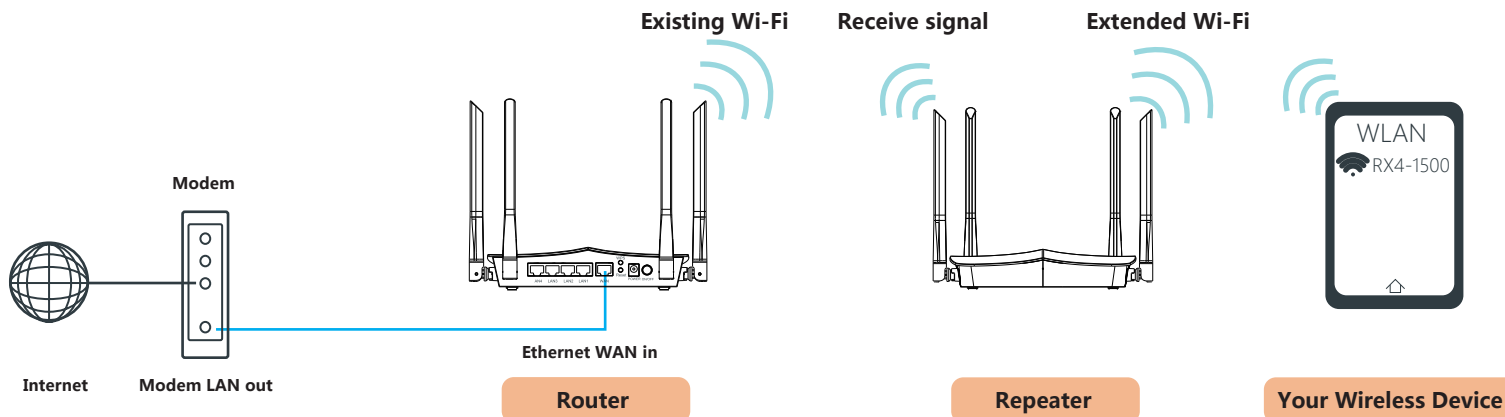


Step 3 : Setup Your Repeater

 
1. Click on Application and go to the Repeater interface.
2. Click the **Scan WiFi** button, Then wait about 5 seconds.
3. Select Enable & Sync with gateway (suggest)

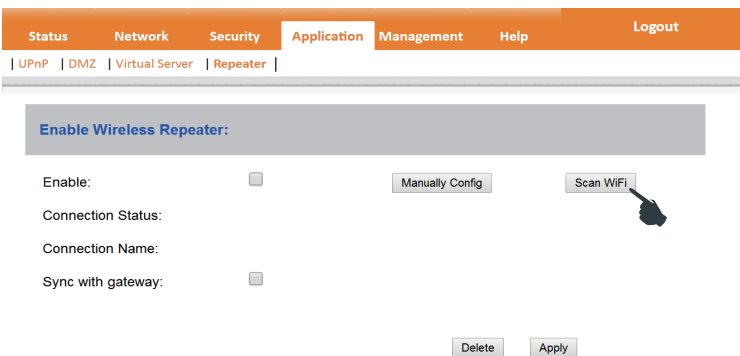

 4. Enter the password of the Wi-Fi that will be extended in Key blank
5. Click Connect button

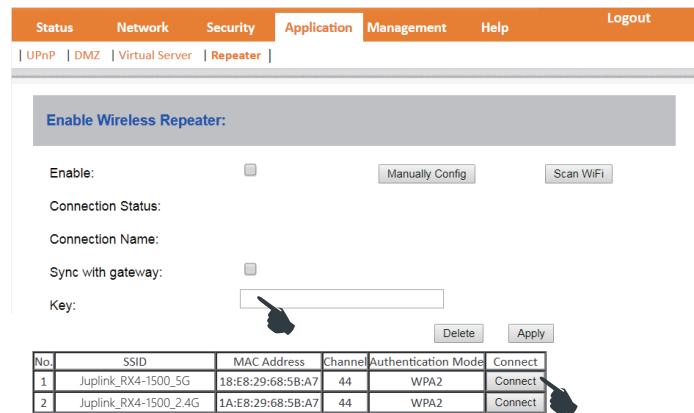

2 Repeater Mode - Client

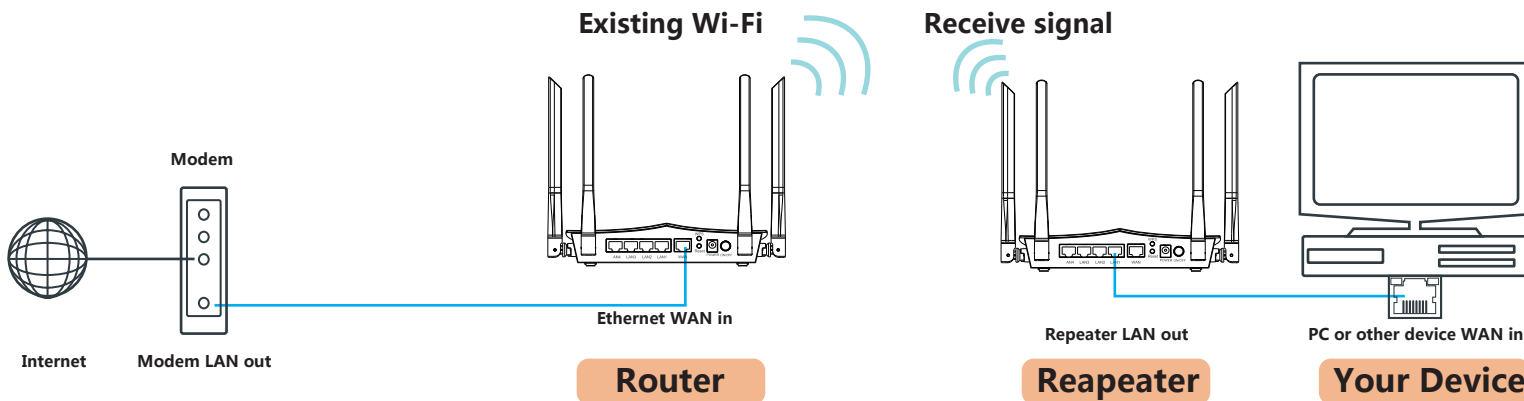 

Step 1 : Setup Your Repeater

Follow the instructions to complete the setup of repeater

Step 2 : Connect Your Device

Connect the LAN port of repeater to the WAN port of wired device

3 AP (Access Point) Mode

Step 1: AP Mode Setting

 
Before Installation Please complete the following settings:

1. Connect a computer to the Juplink router and launch a web browser.

2. Visit <http://192.168.0.1> you are prompted to enter a username (admin) and password (admin) .

3. Select Network and click LAN
Manually set IP address as the following format 192.168.0.XXX (XXX is any number of 2~254)
Then you need to enter this address to log in to the web UI instead of the default 192.168.0.1

Note:
If the default login credentials do not work, you might have changed the admin password. If you cannot remember your new password, you must perform a factory reset to restore the router to its factory default settings. For more information, see Restoring a Juplink home router to the factory default settings.

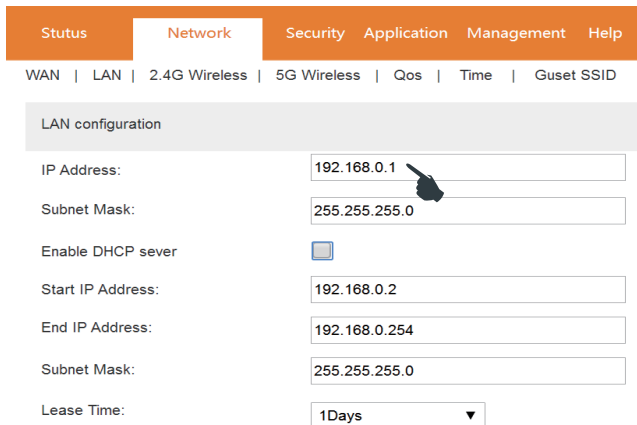

Step 2 : AP mode Connection

