

KEY	I	ii	iii	IV	V	vi	vii°	I
	1	2m	3m	4	5	6m	7°	1
C	C	Dm	Em	F	G	Am	B°	C
D	D	Em	F#m	G	A	Bm	C#°	D
E	E	F#m	G#m	A	B	C#m	D#°	E
F	F	Gm	Am	Bb	C	Dm	E°	F
G	G	Am	Bm	C	D	Em	F#°	G
A	A	Bm	C#m	D	E	F#m	G#°	A
B	B	C#m	D#m	E	F#	G#m	A#°	B



Next Music Style / Music Style Selector with Chord Buttons Green (A), Red (B) Yellow (C), Blue (D)

Strumbar

Fill Drumbeat

Transpose
UP / DOWN

Previous Music Style / Guitar Style Selector

Chord Buttons / Selector

Start/Stop

Break Drumbeat

Application Selection

Green – Ketron, Red – Ample Guitar. Yellow – Midi Drummer

Basic

Chord	Green	Red	Yellow	Blue	Orange
1			X		
2m				X	
3m	X			X	
4					X
5	X				
6m		X			

Advanced

Chord	Green	Red	Yellow	Blue	Orange
1sus			X		X
1/3			X	X	
2		X		X	
3b		X		X	X
3	X		X	X	
4min		X	X	X	X
4/5			X	X	X
4/6				X	X
5sus	X		X		
5min	X				X
5/7	X	X			
5b	X	X	X		
6		X	X	X	
7b		X	X		

Whammy Bar (prev)	Green	Red	Yellow	Blue	Orange
Strum Up/Down	X				
Strum Up/ Bass Down		X			
Arpeggio Type 1			X		
Arpeggio Type 2				X	
Arpeggio Type 3					X
Bass Guitar	X	X			
Alto Guitar		X	X		
Tenor Guitar			X	X	
Mute Guitar (No Sound)				X	X