



Music Style Selector with **Green** (A), **Red** (B) **Yellow** (C), **Blue** (D), **Orange** (Previous), **None** (Next)

Strumbar

Fill Drumbeat

Transpose  
UP / DOWN

Chord Buttons / Selector

Guitar Style Selector with **Green** (Strum), **Red** (Strum/Bass), **Yellow/Blue/Orange** (Arpeggios)

Start/Stop

Break Drumbeat

Application Selection

**Green** – Arranger (Ketron/Yamaha), **Red** – Ample Guitar. **Yellow** – Midi Drummer, **Blue** – SeqTrak, **Orange** – MODX/Montage M

## Basic

Chord	Green	Red	Yellow	Blue	Orange
1			X		
2m				X	
3m	X			X	
4					X
5	X				
6m		X			

Advanced

Chord	Green	Red	Yellow	Blue	Orange
1sus			X		X
1/3			X	X	
2		X		X	
3b		X		X	X
3	X		X	X	
4min		X	X	X	X
4/5			X	X	X
4/6				X	X
5sus	X		X		
5min	X				X
5/7	X	X			
5b	X	X	X		
6		X	X	X	
7b		X	X		

Whammy Bar (prev)	Green	Red	Yellow	Blue	Orange
Strum Up/Down	X				
Strum Up/ Bass Down		X			
Arpeggio Type 1			X		
Arpeggio Type 2				X	
Arpeggio Type 3					X
Bass Guitar	X	X			
Alto Guitar		X	X		
Tenor Guitar			X	X	
Mute Guitar				X	X
Mute Style			X		X
Mute Bass Track		X		X	
Mute Chord Track	X		X		
Auto Hold		X	X	X	

KEY	I 1	ii 2m	iii 3m	IV 4	V 5	vi 6m	vii° 7°	I 1
C	C	Dm	Em	F	G	Am	B°	C
D	D	Em	F#m	G	A	Bm	C#°	D
E	E	F#m	G#m	A	B	C#m	D#°	E
F	F	Gm	Am	Bb	C	Dm	E°	F
G	G	Am	Bm	C	D	Em	F#°	G
A	A	Bm	C#m	D	E	F#m	G#°	A
B	B	C#m	D#m	E	F#	G#m	A#°	B