

step-by-step command list to set up Mosquitto MQTT Broker on Raspberry Pi

Update & Upgrade Raspberry Pi

```
sudo apt update  
sudo apt upgrade
```

Install Mosquitto Broker and Clients

```
sudo apt-get install mosquitto mosquitto-clients
```

Enable Mosquitto to Auto-Start on Boot

```
sudo systemctl enable mosquitto.service
```

Check Mosquitto Version (to verify installation)

```
mosquitto -v
```

Allow External MQTT Connections

Edit configuration file:

```
sudo nano /etc/mosquitto/mosquitto.conf
```

At the end of the file, add these lines:

```
listener 1883  
allow_anonymous true
```

Then save & exit:

```
Ctrl + O → Enter → Ctrl + X
```

Reboot Raspberry Pi

```
sudo reboot
```

Test MQTT Publish/Subscribe (using terminals)

Terminal 1 (Subscriber):

```
mosquitto_sub -d -t "example/integer"
```

Terminal 2 (Publisher):

```
mosquitto_pub -d -t "example/integer" -m " this is the message 1 2 2 3 4 5 "
```