

 
UI/UX Requirement in Monitor

2017.07.11

BYROBOT




Menu Tree

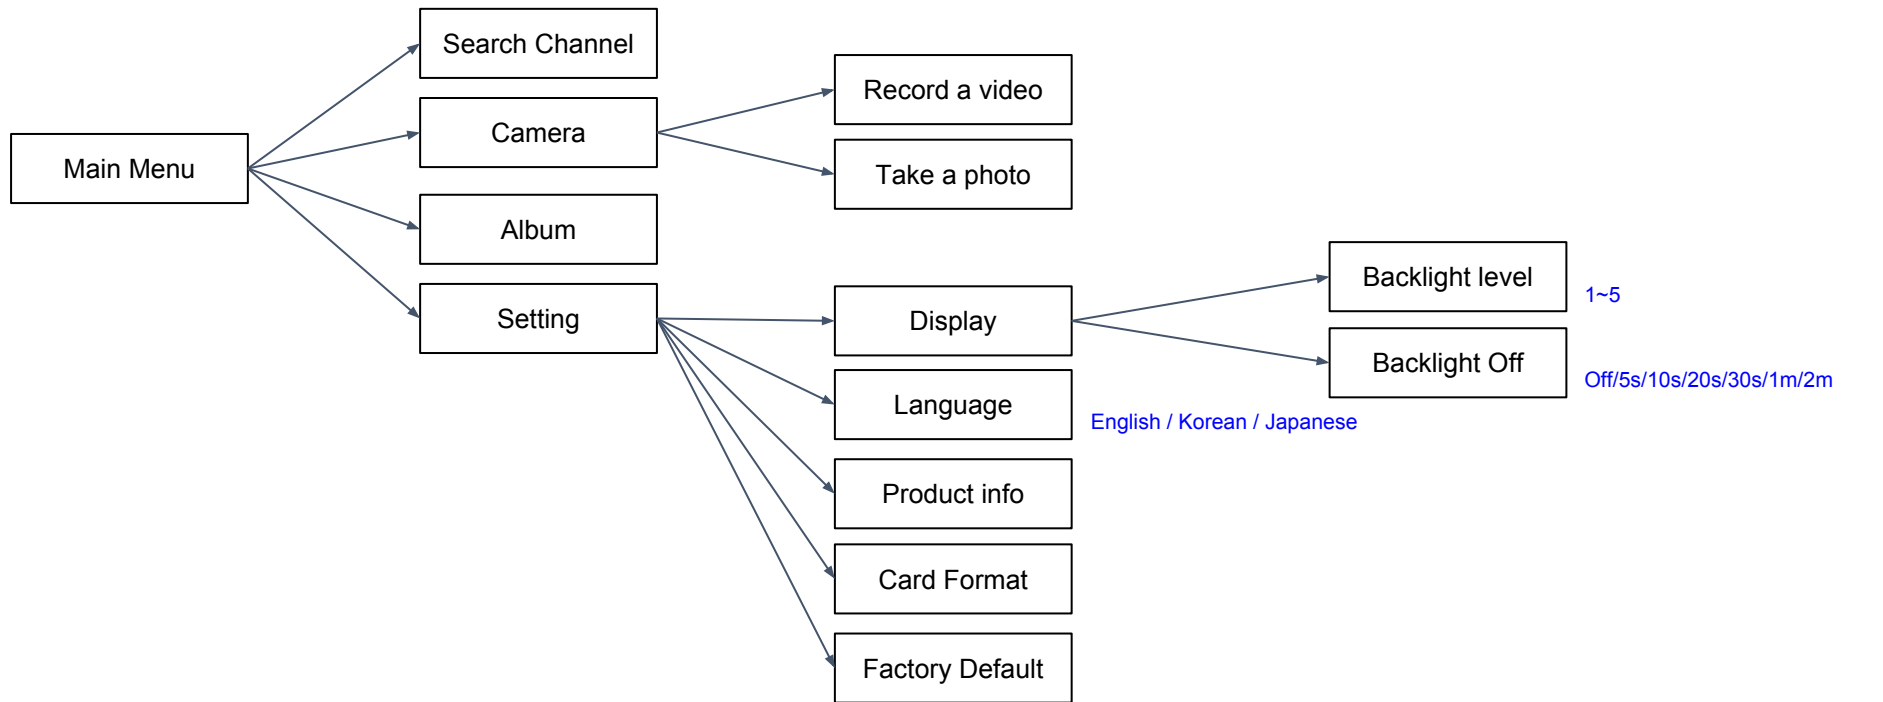


Main Menu: Starting Screen

 
(When power on, it starts with manu screen, not camera screen.)

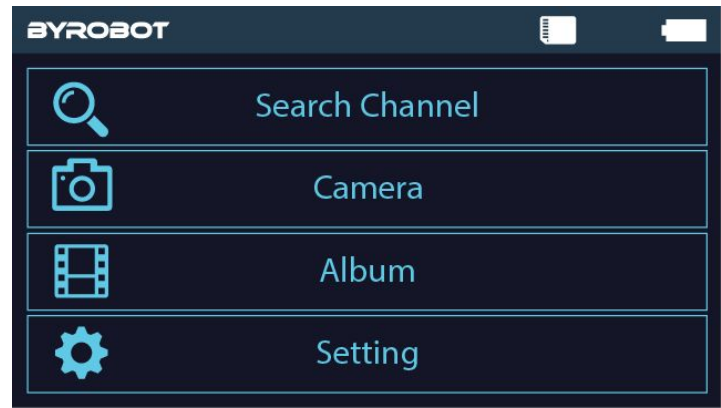

 
<Image File>
main_info_bar.png
sd_card_o.png
sd_card_x.png
battery_icon_full.png
battery_icon_3.png
battery_icon_2.png
battery_icon_1.png
battery_icon_empty.png
background.png
menu_box_search_channel.png
menu_box_camera.png
menu_box_album.png
menu_box_setting.png
byrobot_logo.png

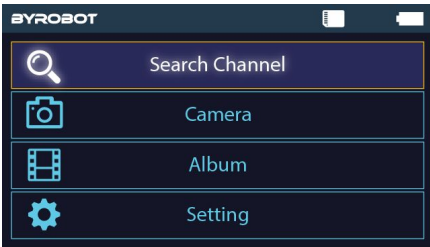

 
<Image File>
menu_box_search_channel_select.png

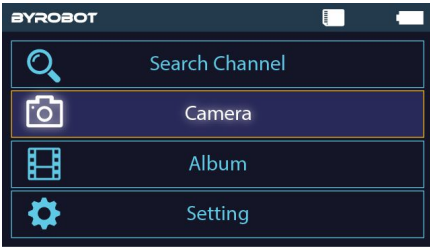

<Image File>
menu_box_camera_select.png


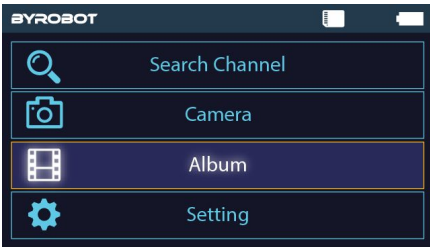 


<Image File>
menu_box_album_select.png

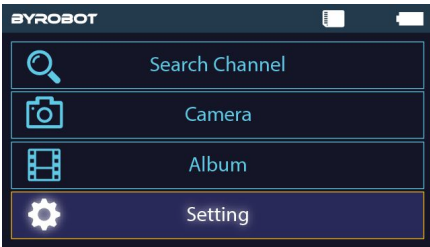 

<Image File>
menu_box_setting_select.png

  
Main Menu → Search Channel

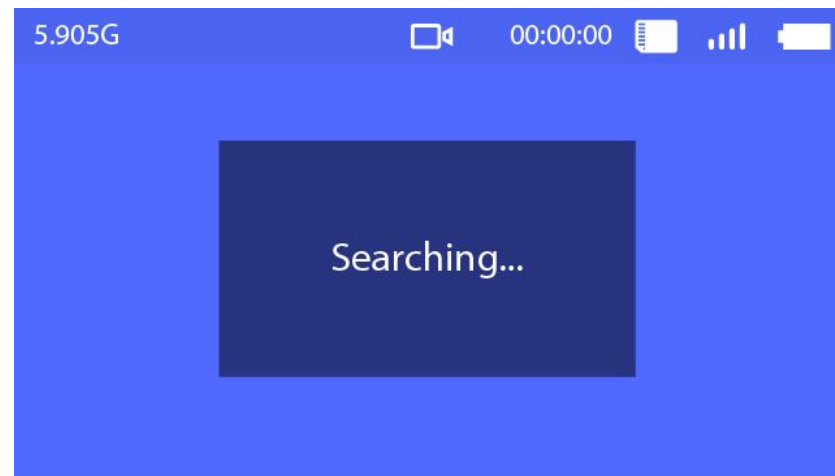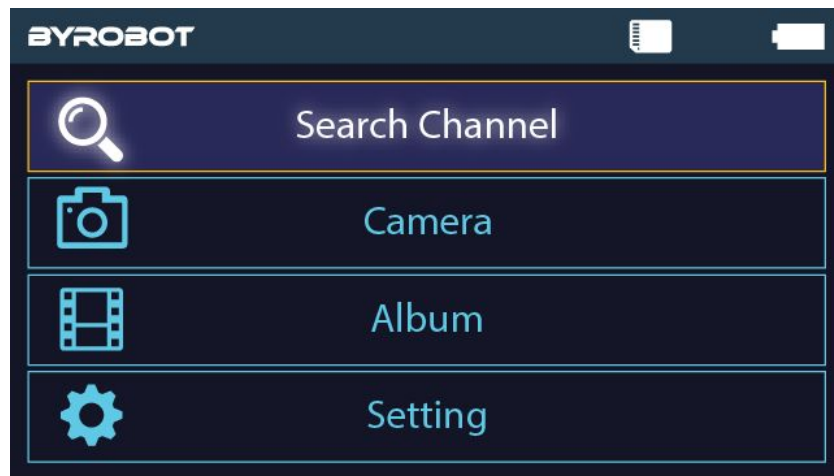

<Image File>
bluescreen.png
camera_info_bar.png
antena_full.png
antena_3.png
antena_2.png
antena_1.png
pop_up_small.png
camera_video_mode_small.png

※ Please maintain the function that makes to search the channel automatically using “ch+” and “ch-” buttons.

 Main Menu → Camera(Video Mode)


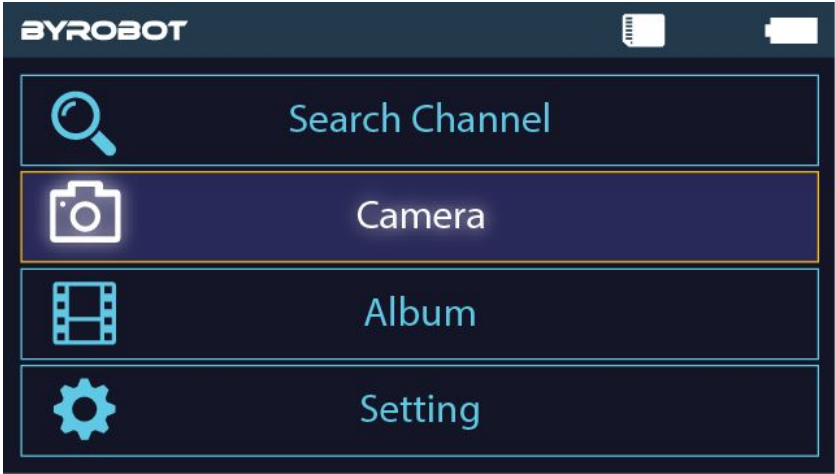


Blinking during recording the video



<Image File>
record_sign_red_dot.png

  Main Menu → Camera(Photo Mode)

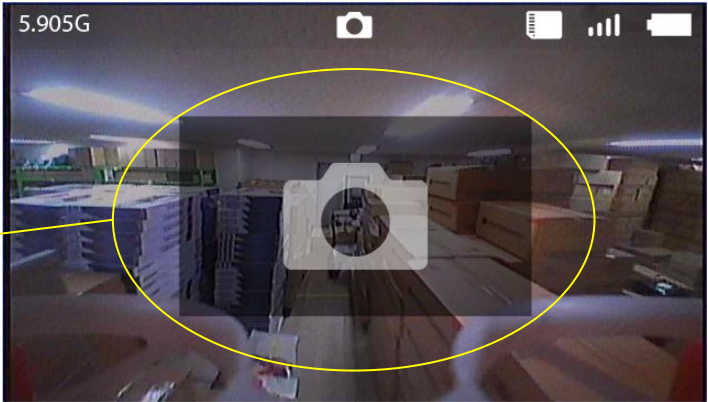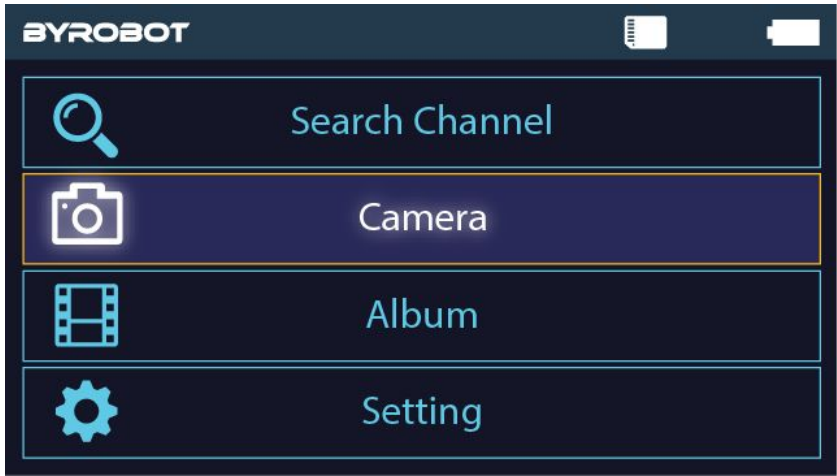


Blinking one time when taking a photo

<Image File>
pop_up_small.png
camera_photo_mode_small.png
camera_photo_mode_bog.png


Main Menu → Camera(No SD Card)




 start
recording a video

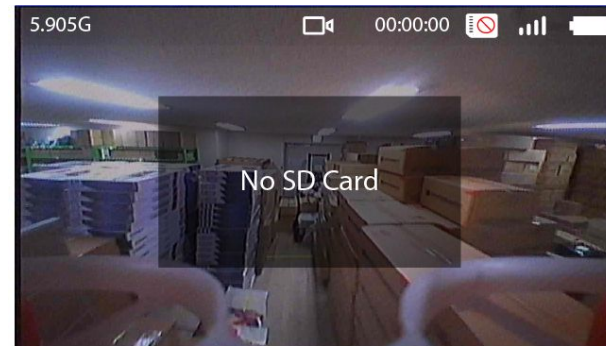


start
taking a photo

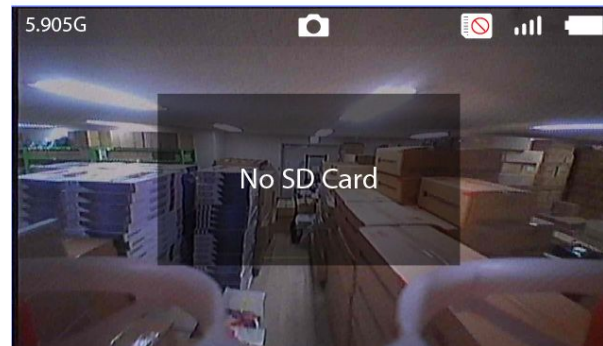 

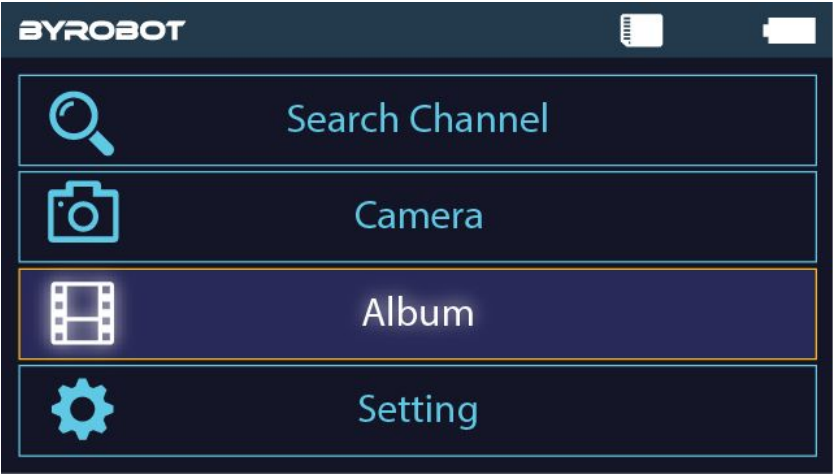 

<Image File>
album_video_file.png
album_photo_file.png
album_scroll_bar.png


 
Main Menu → Album(delete single file)

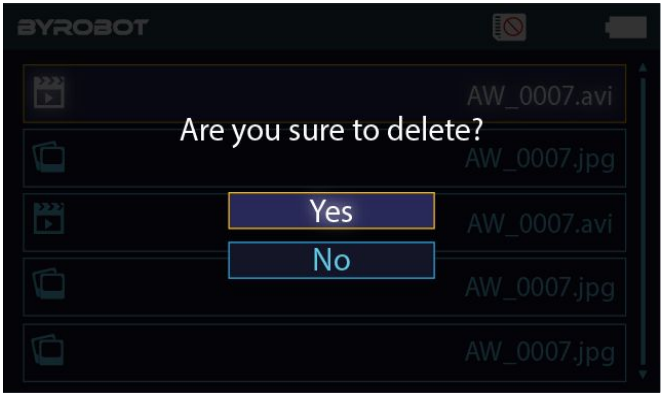

Finished

<image file>
menu_box_7x1.png
Menu_box_7x1_select.png
pop_up_big_png

  Main Menu → Setting

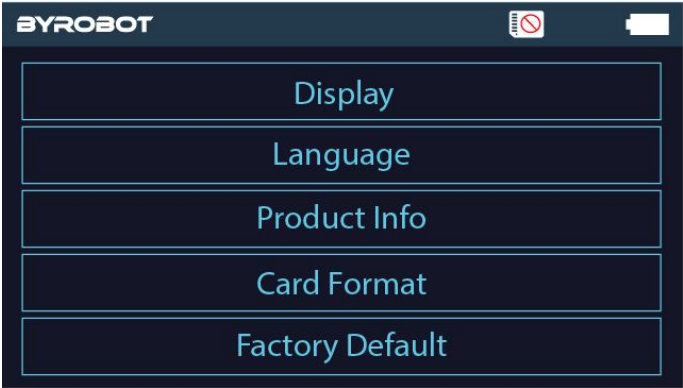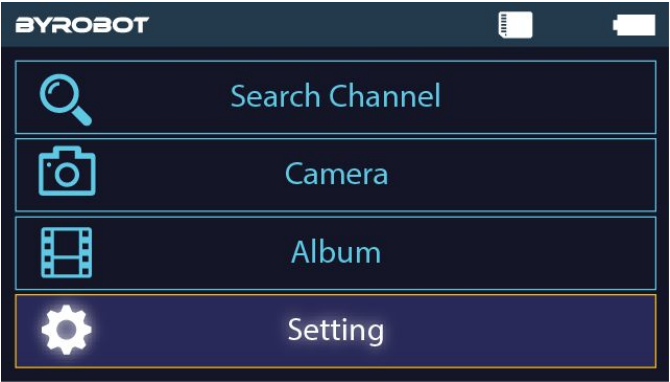

<Image File>
menu_box_5x1.png
menu_box_5x1_select.png





 
<Image File>
menu_box_4x1.png
menu_box_4x1_select.png

Main Menu → Setting → Display → Backlight Level



<Image File>
pop_up_big.png
menu_box_7x1.png
menu_box_7x1_select.png

Main Menu → Setting → Display → Backlight Off

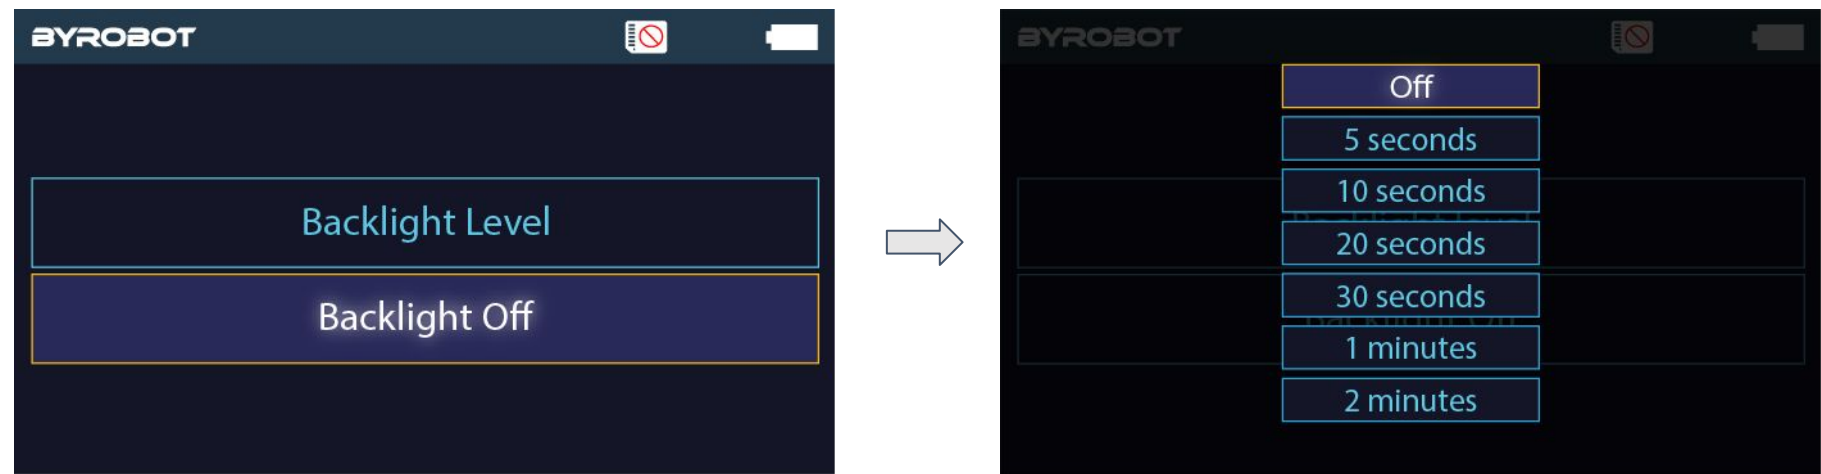


<Image File>
pop_up_big.png
menu_box_7x1.png
menu_box_7x1_select.png

Main Menu → Setting → Language


 
<Image File>
menu_box_5x1.png
menu_box_5x1_select.png

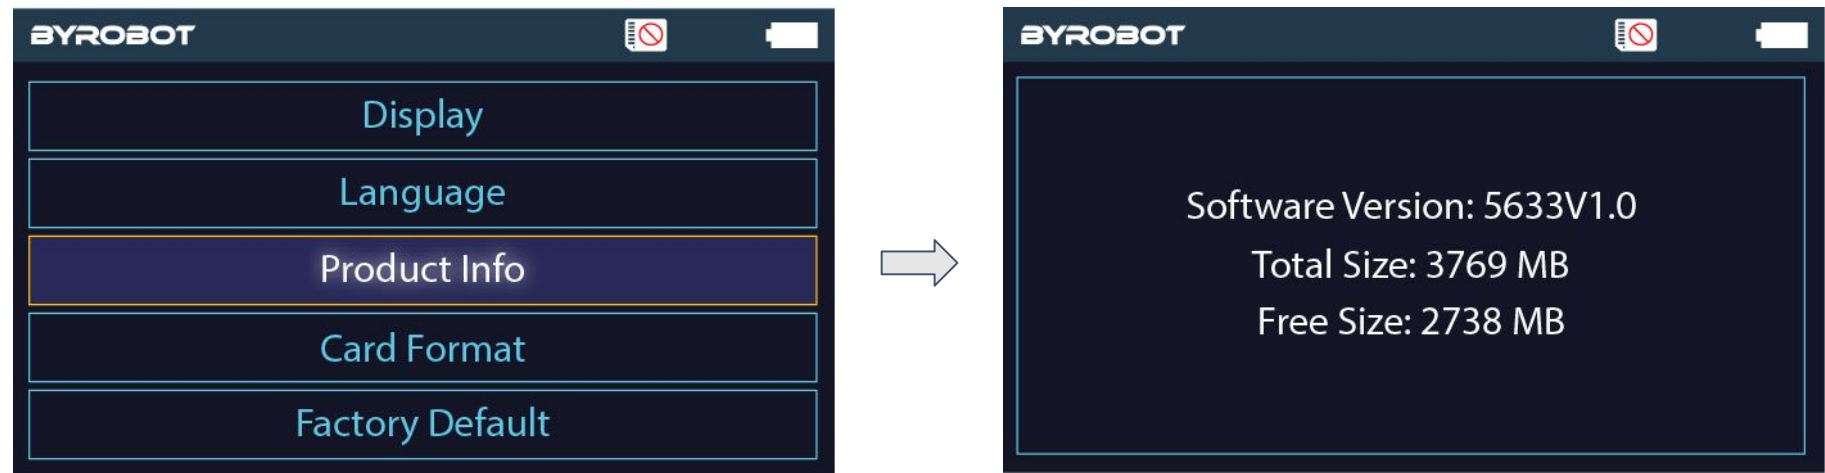


<image file>
product_info_box.png

Main Menu → Setting → Card Format(No SD card)


 
<image file>
pop_up_small.png

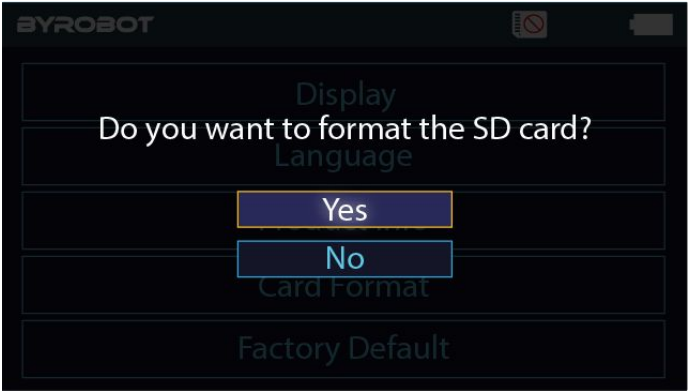

Finished

<image file>
menu_box_7x1.png
Menu_box_7x1_select.png
pop_up_big_png

Main Menu → Setting → Factory Default



Finished

<image file>
menu_box_7x1.png
Menu_box_7x1_select.png
pop_up_big_png