

## FloorSubsystem

Send Scheduler Elevator Event

Idle



## Scheduler

### Send Request to Elevator

Receive Request from Floor Subsystem

Idle



### Elevator

Move

Close Doors


## Open Doors

### Alert FaultHandler of Successful State Change

Request Work

Idle

Exit

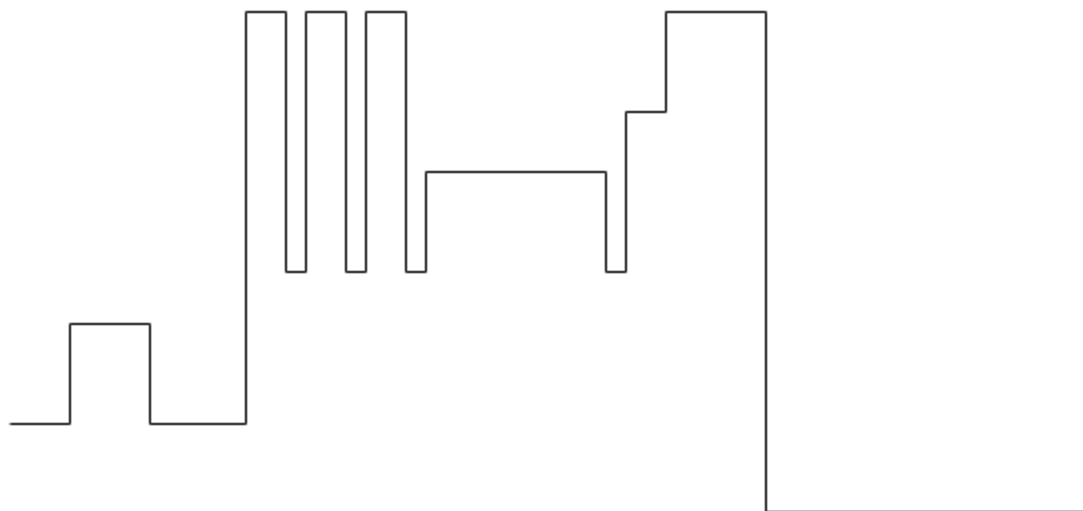

## FaultHandler

Send Error Alert to Elevator

### Time Elevator States

Idle

