

Basic Setup - No USB

Note: Use care. The VIN pin on the Arduino is routed directly to the external power supply. Wire colors vary - see manufacturer's documents.

