

Varmilo

VA68M

Key combinations

Fn	+	Esc	=	~
		1		F1
		2		F2
		3		F3
		4		F4
		5		F5
		6		F6
		7		F7
		8		F8
		9		F9
		0		F10
		-		F11
		=		F12
		J		Print Screen
		K		Scroll Lock
		L		Pause
		, <		Home
		. >		End
		Ctrl (Right)		Application Key
		→		Switch Backlight mode Breathing ⇄ Fix Brightness
		↑		Breathing mode*1 Decelerate breathing*2
		↑		Fix Brightness mode*1 Lighting strength up*3
		↓		Breathing mode*1 Accelerate breathing*2
		↓		Fix Brightness mode*1 Lighting strength down*3
		Windows key		Windows key ON/OFF
		Windows key Holding for 3 seconds Flashes for 3 times		Swap Fn key and Left windows key
		Left Ctrl Key Holding for 3 seconds Flashes for 3 times		Swap Left Ctrl key and Caps Lock key
		Page Down		Top row number keys act as function keys (F1 – F12) (Page Down key LED on)
		Page Up		Restore default setting for Top row number keys (Page Up key LED on)
Shift		Esc		~

*1 Not including Page Up key, Page Down key and Caps Lock key

*2 4 levels

*3 5 levels (0%, 25%, 50%, 75%, 100%)