



Battery level from Power UI for A000002A286CCA

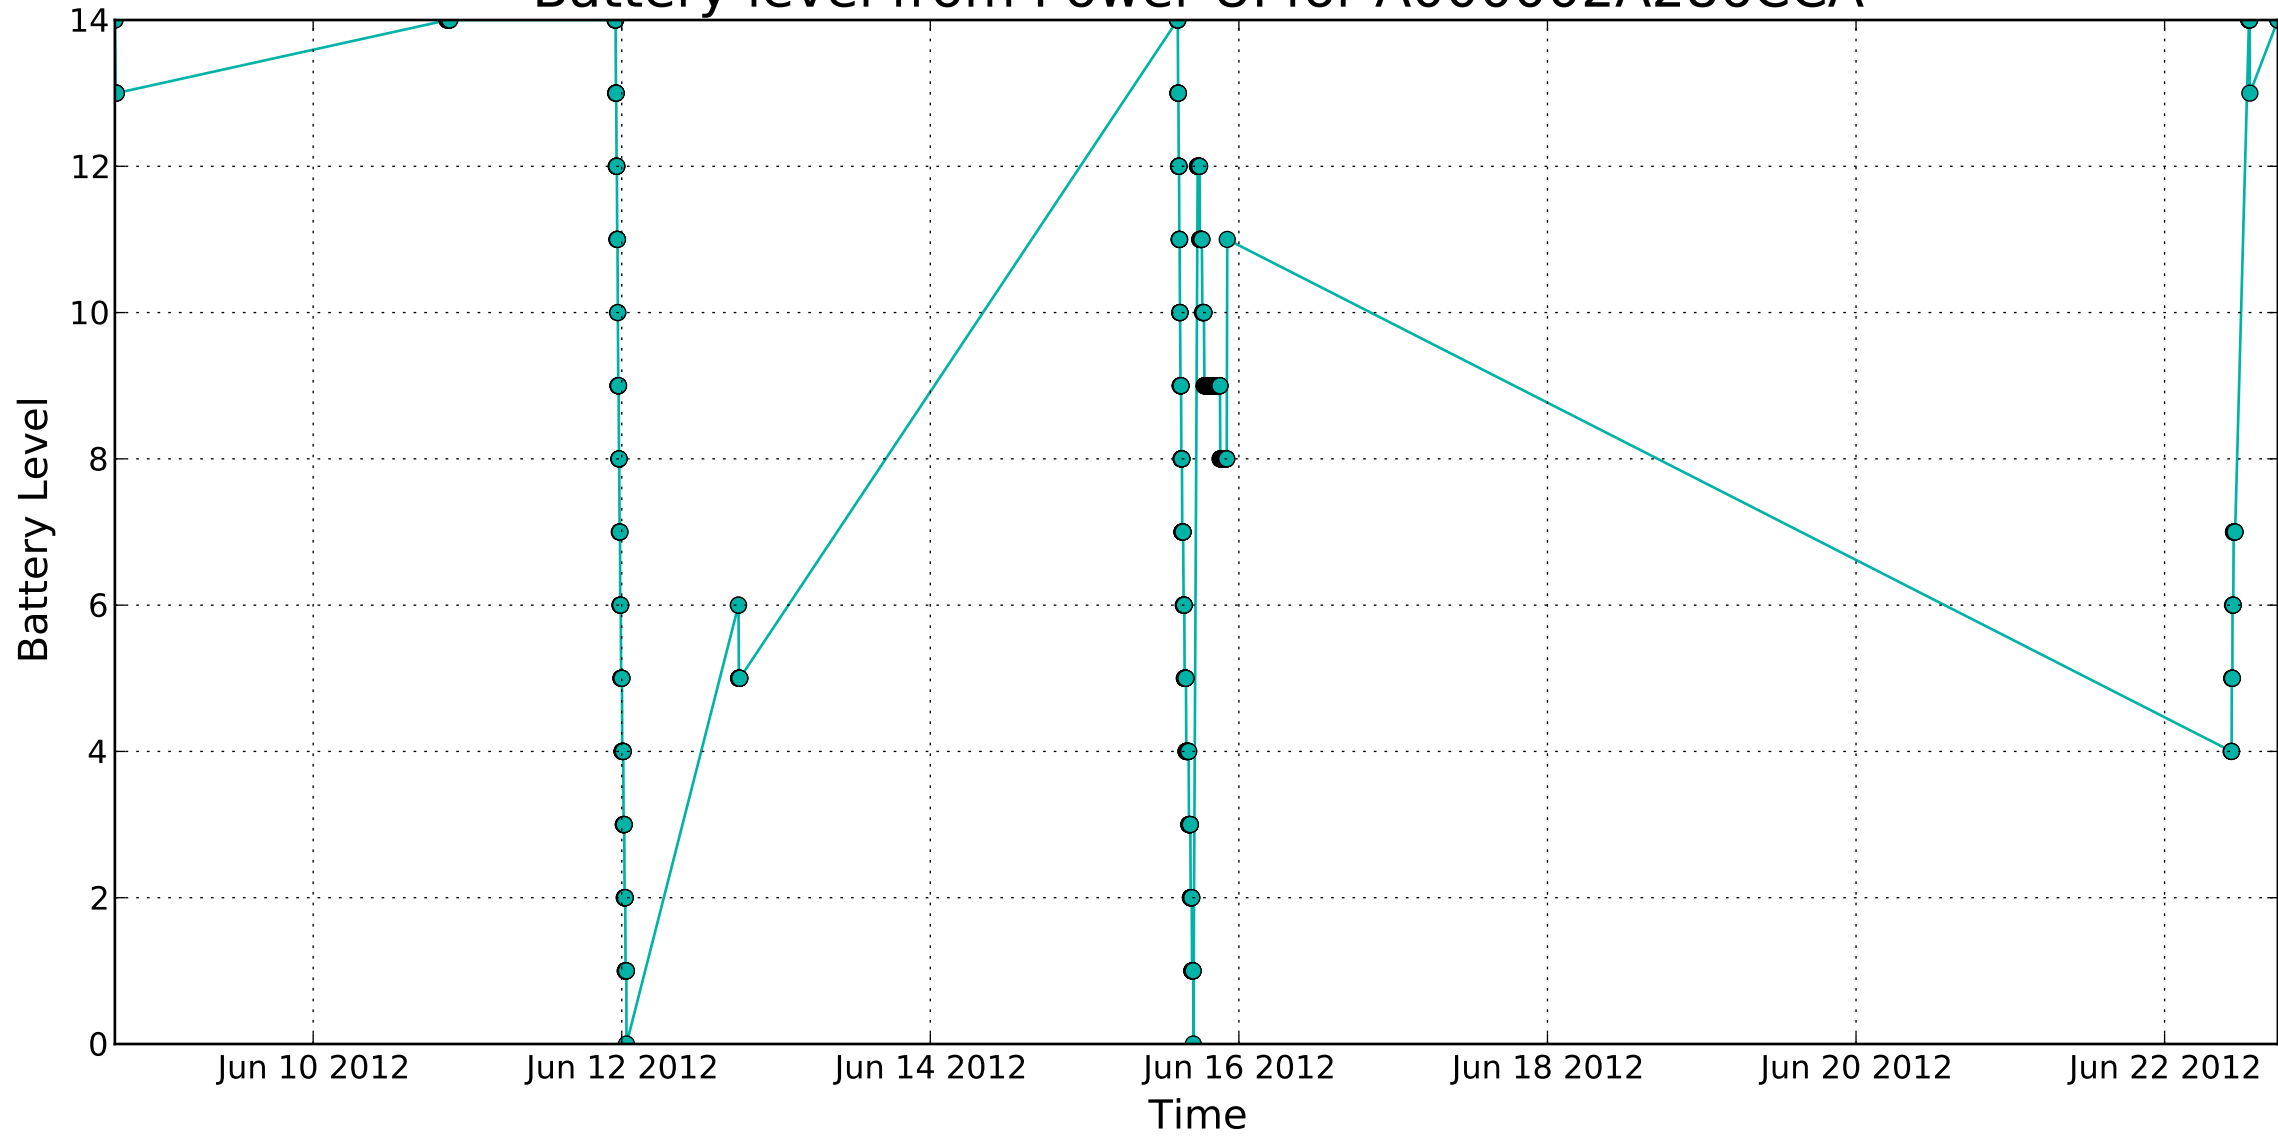


Battery level from Power UI for A000002A28E207

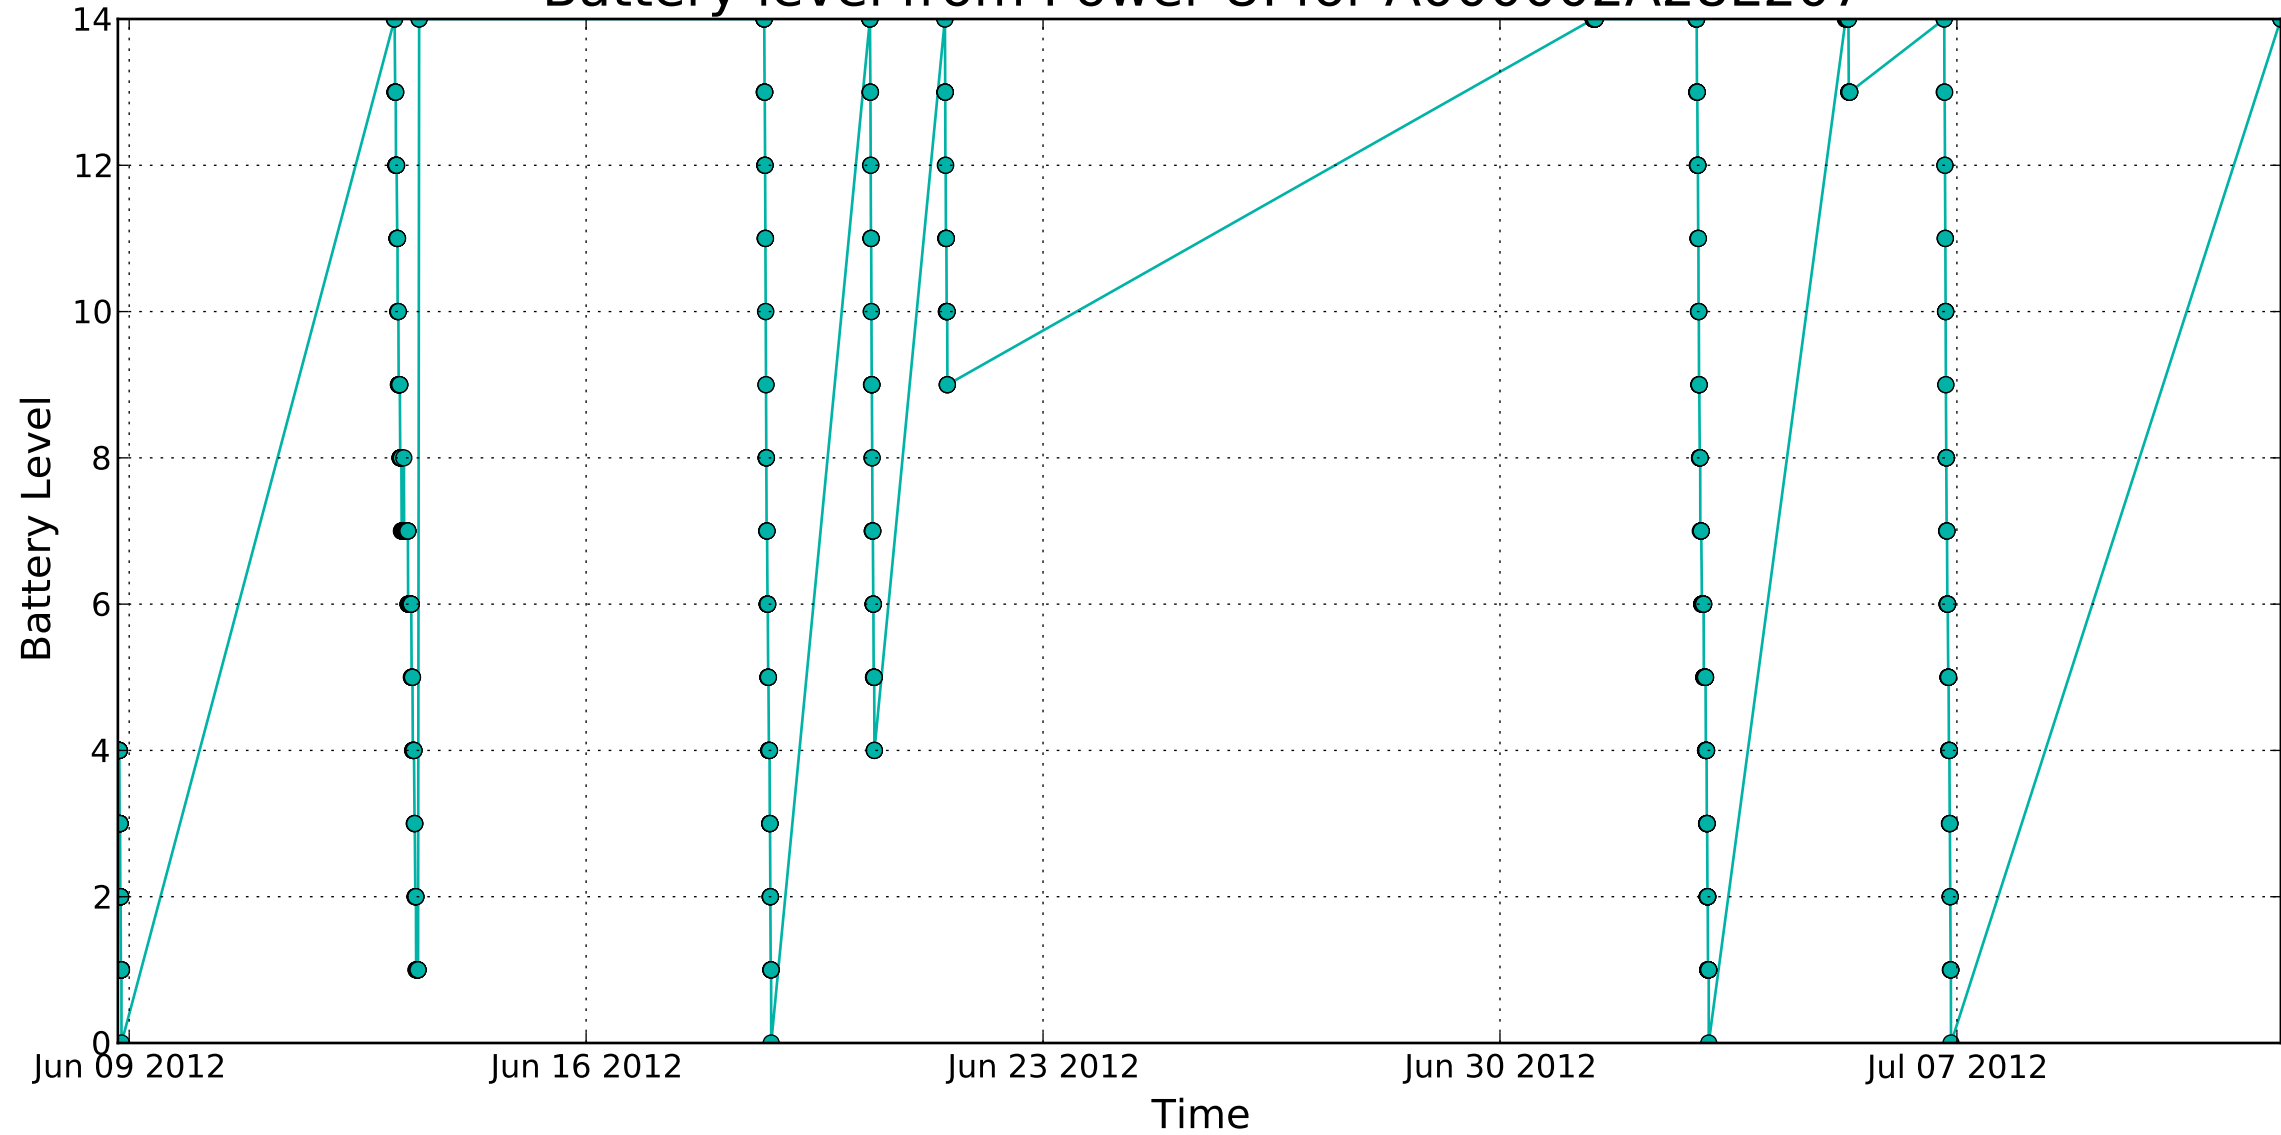


Battery level from Power UI for A000002A2866B6




Battery level from Power UI for A000002A28660B

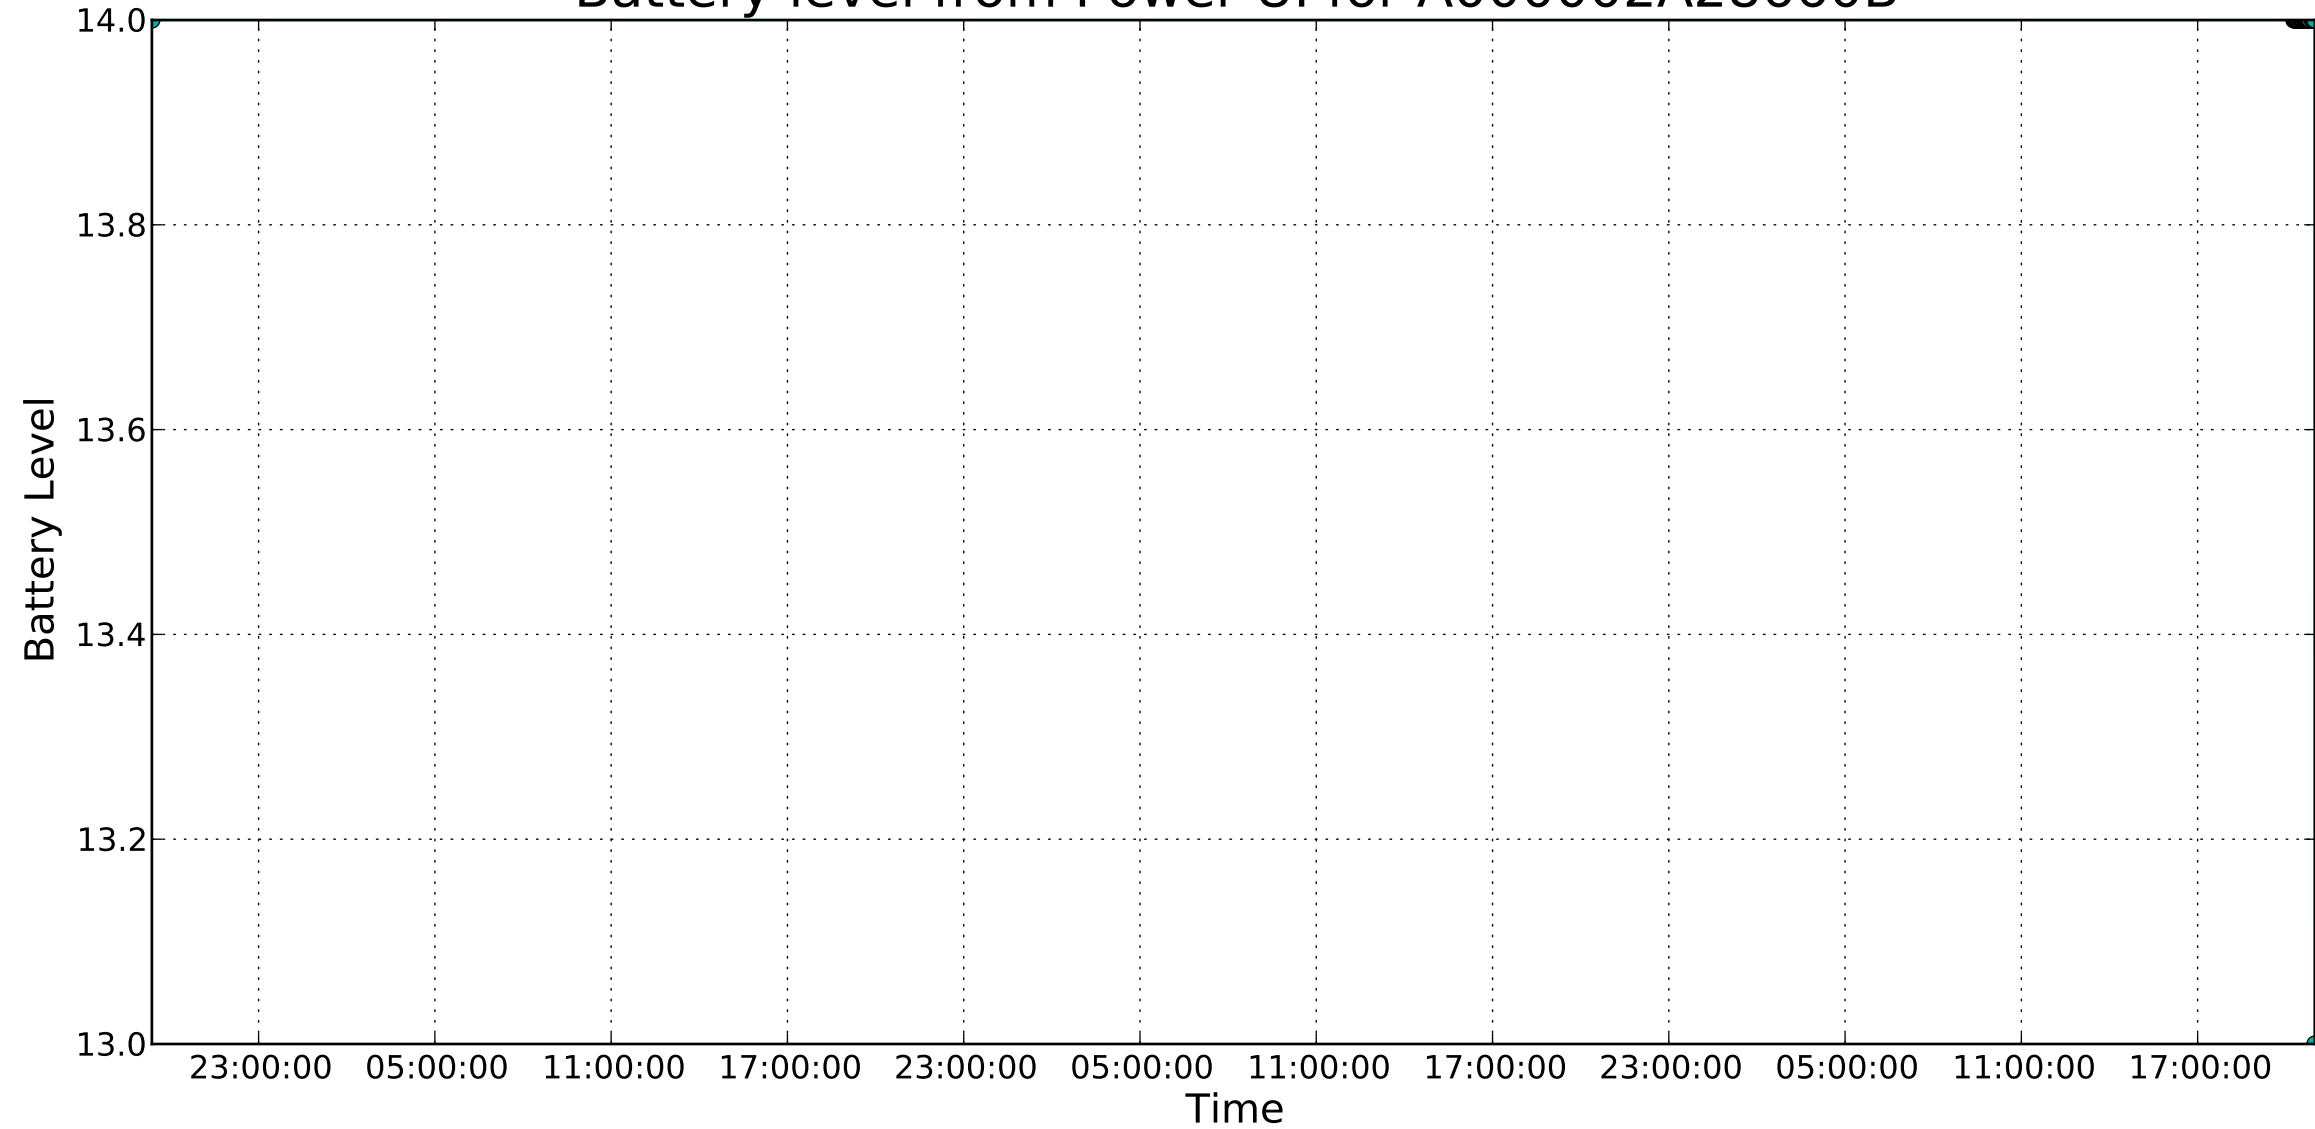


Battery level from Power UI for A000002A28021D

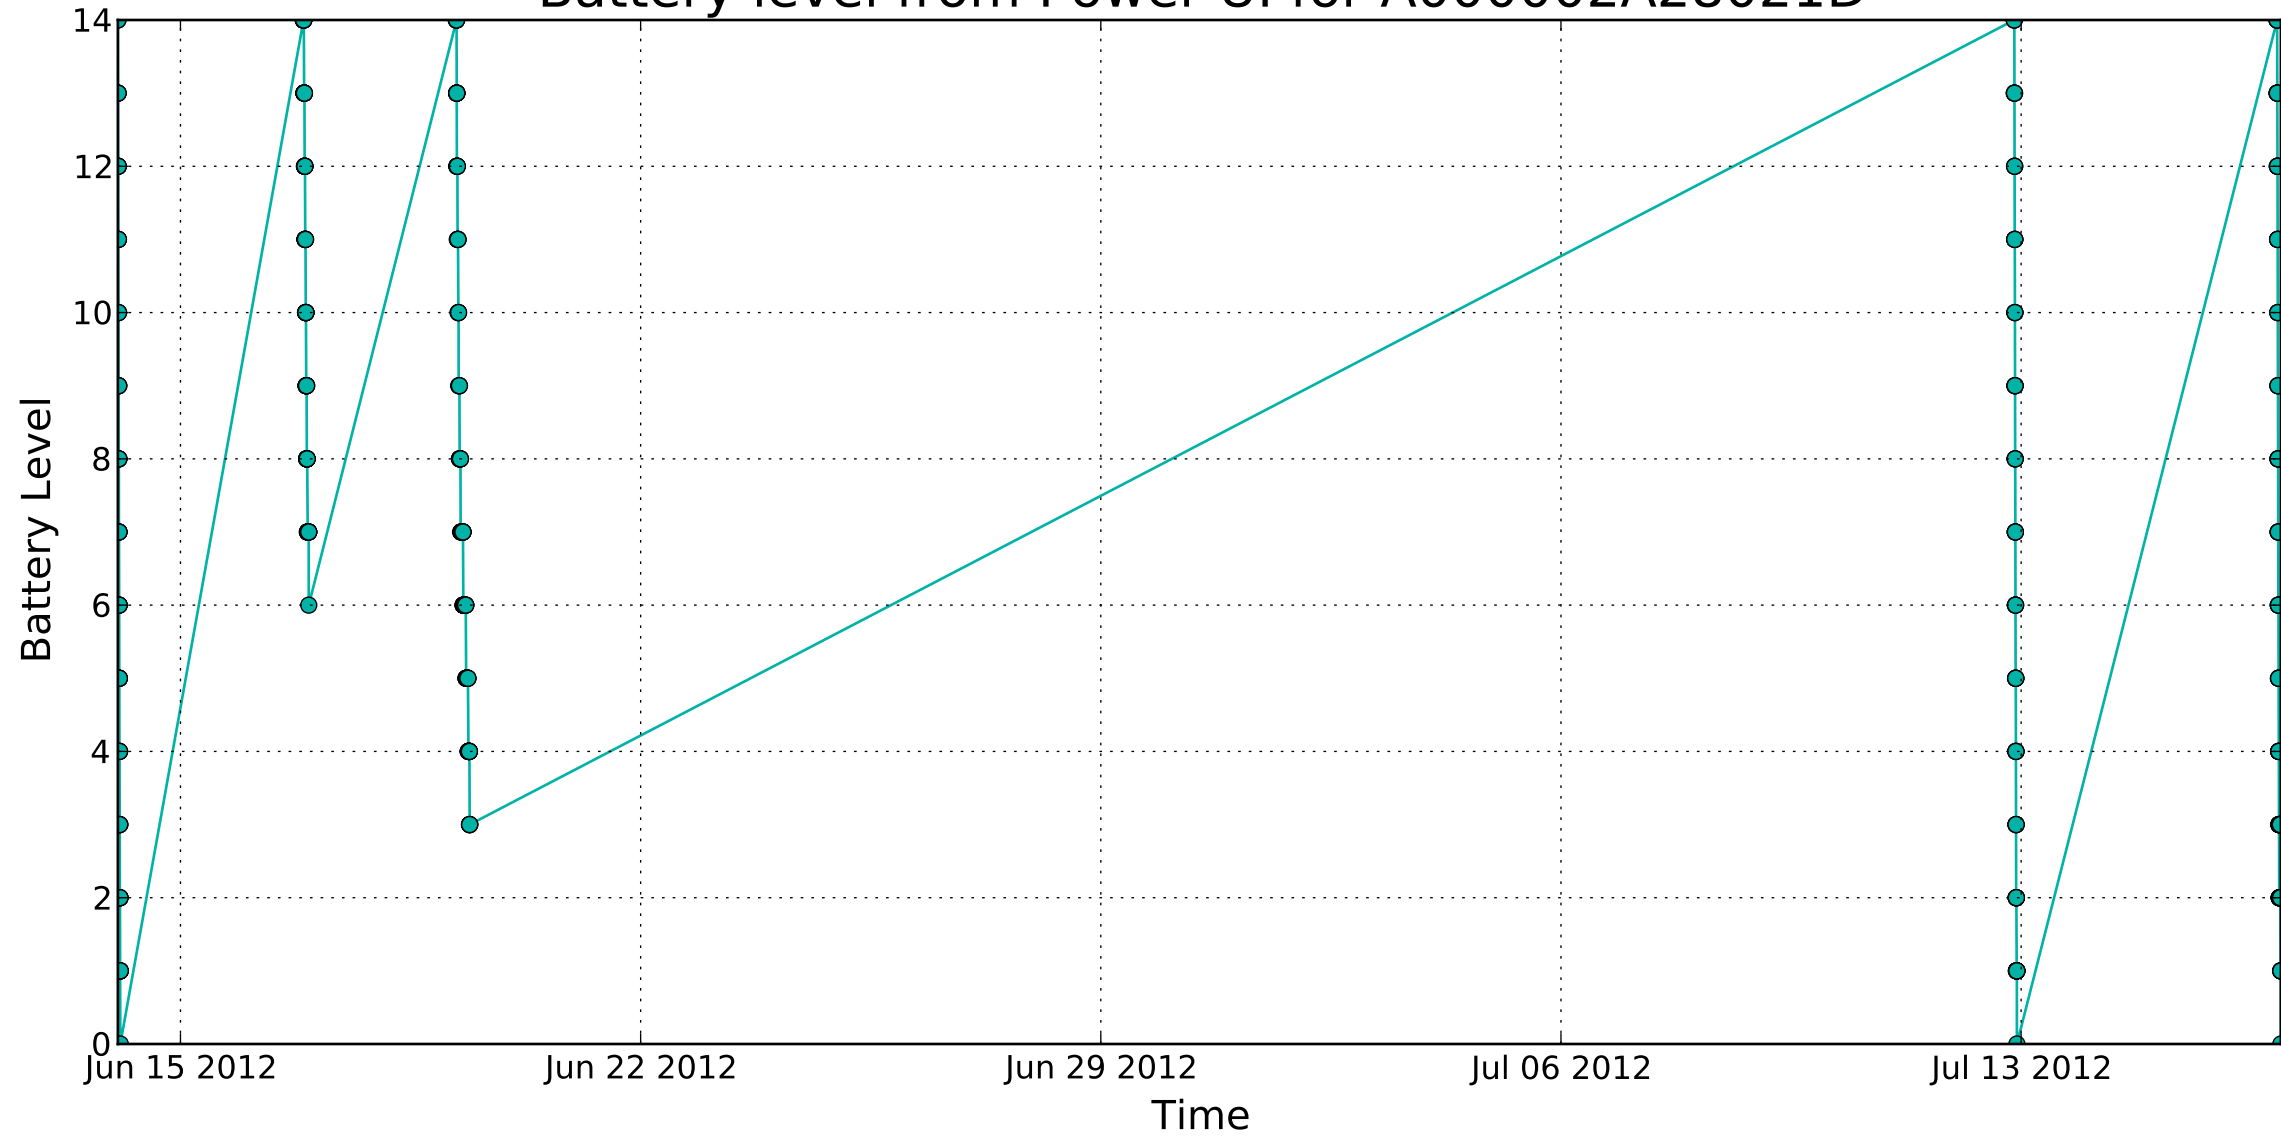


Battery level from Power UI for A000002A2714A6

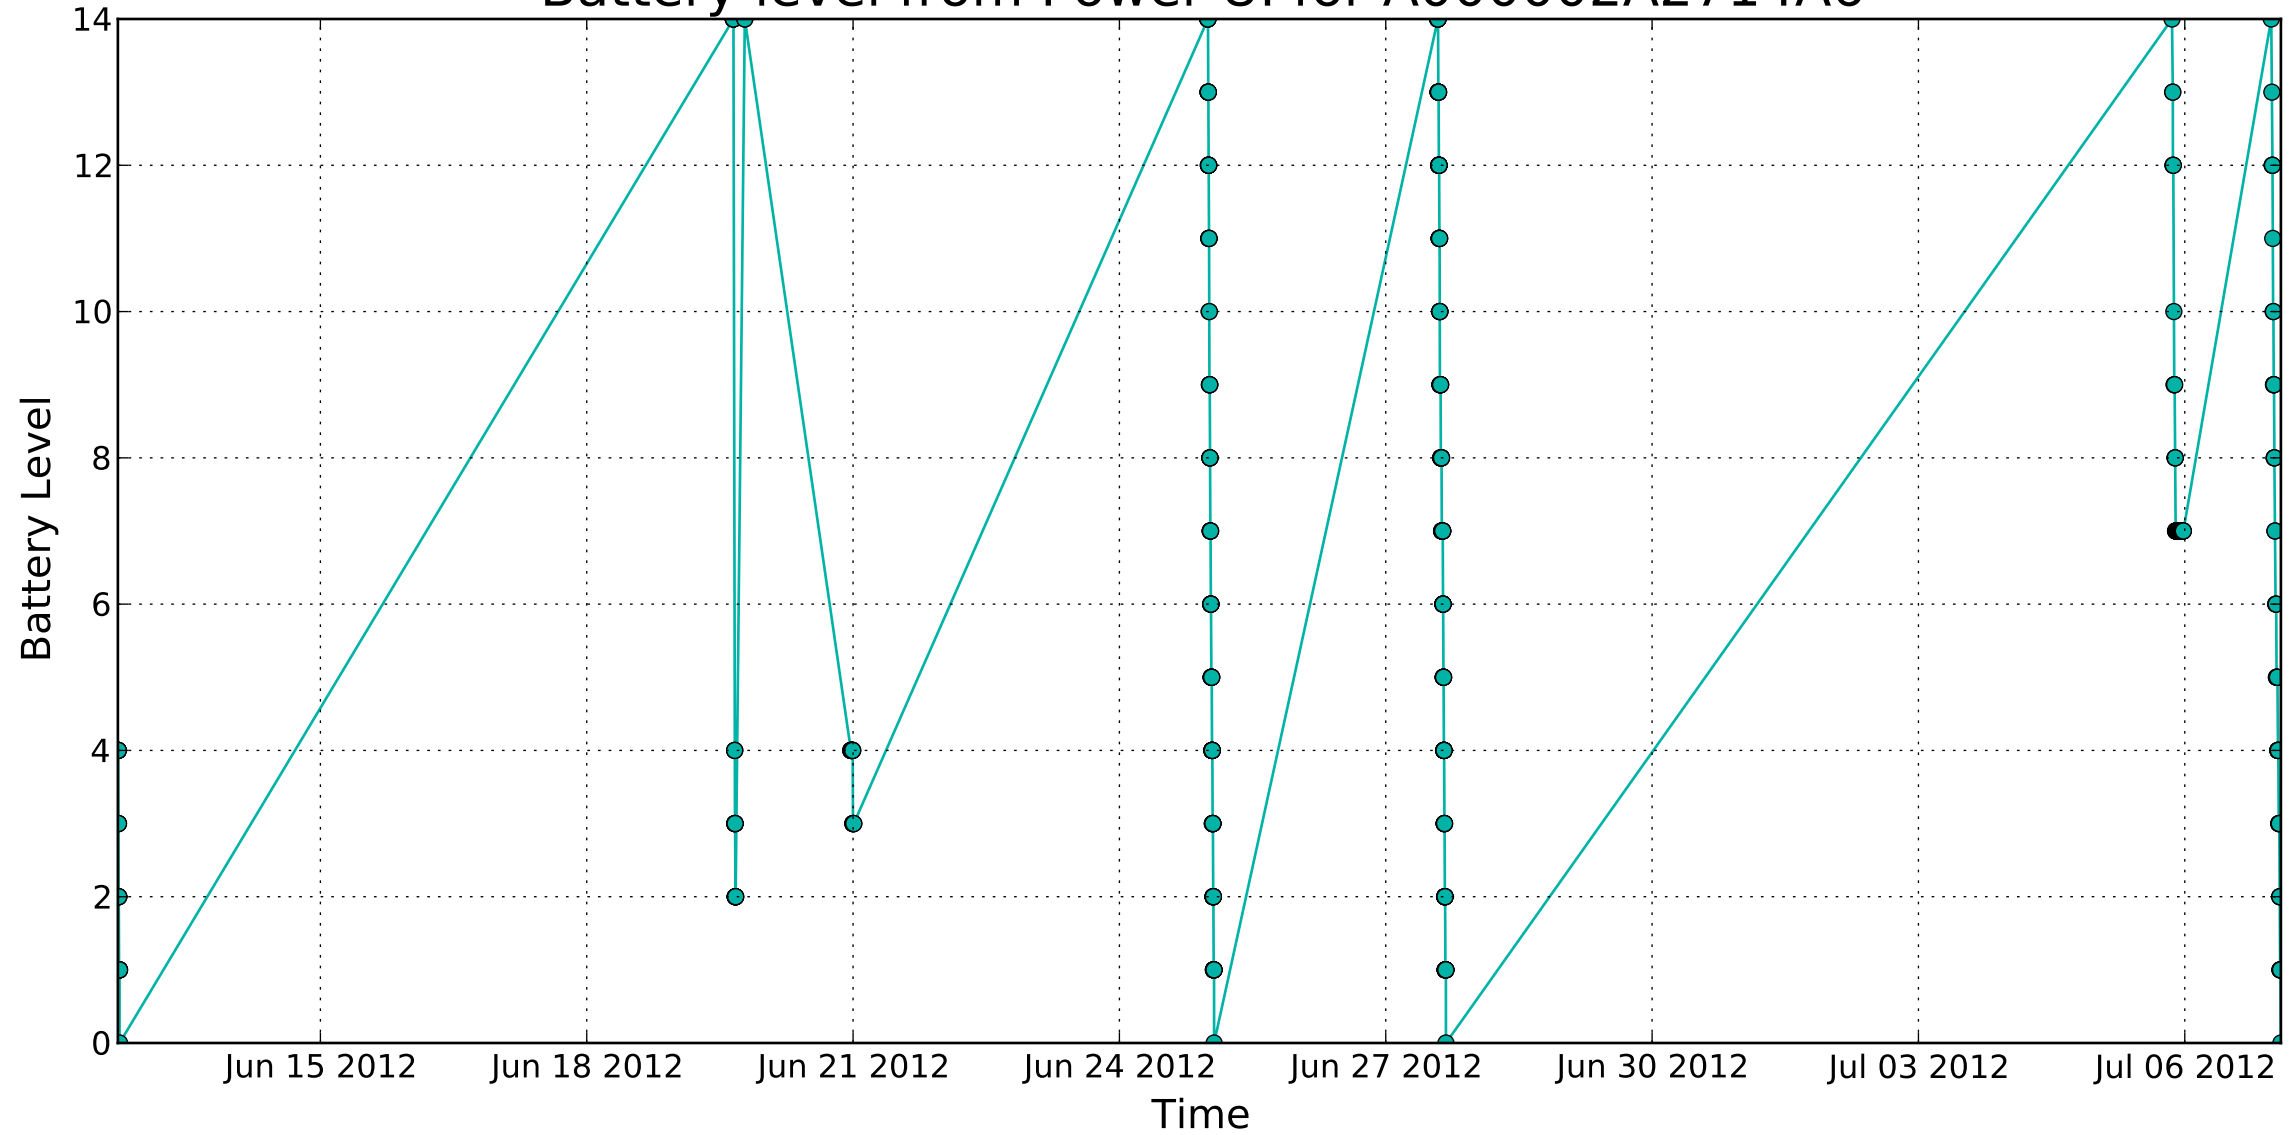


Battery level from Power UI for A000002A280141

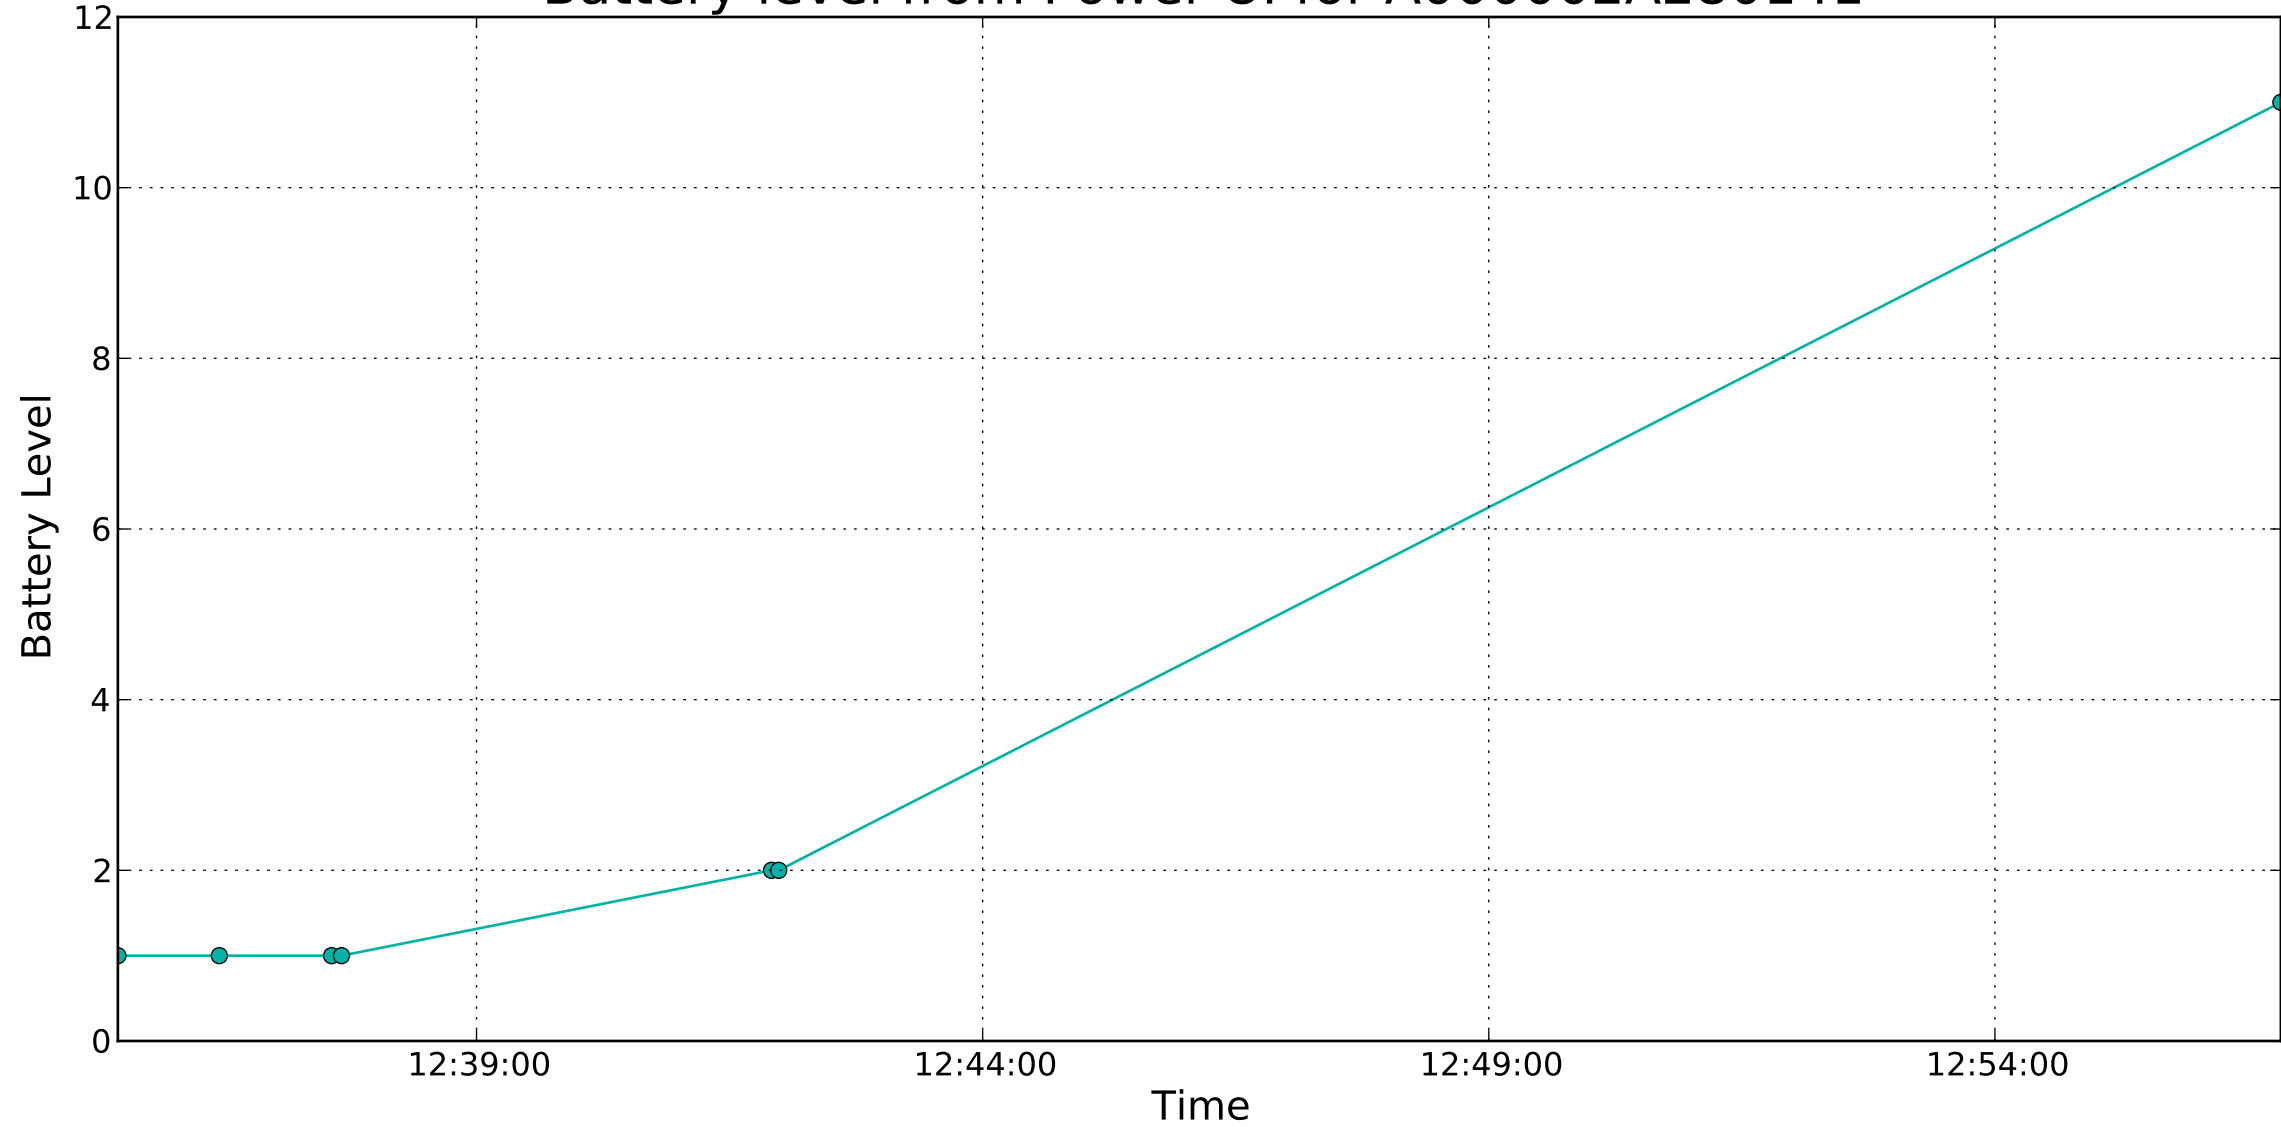


Battery level from Power UI for A000002A27FB17

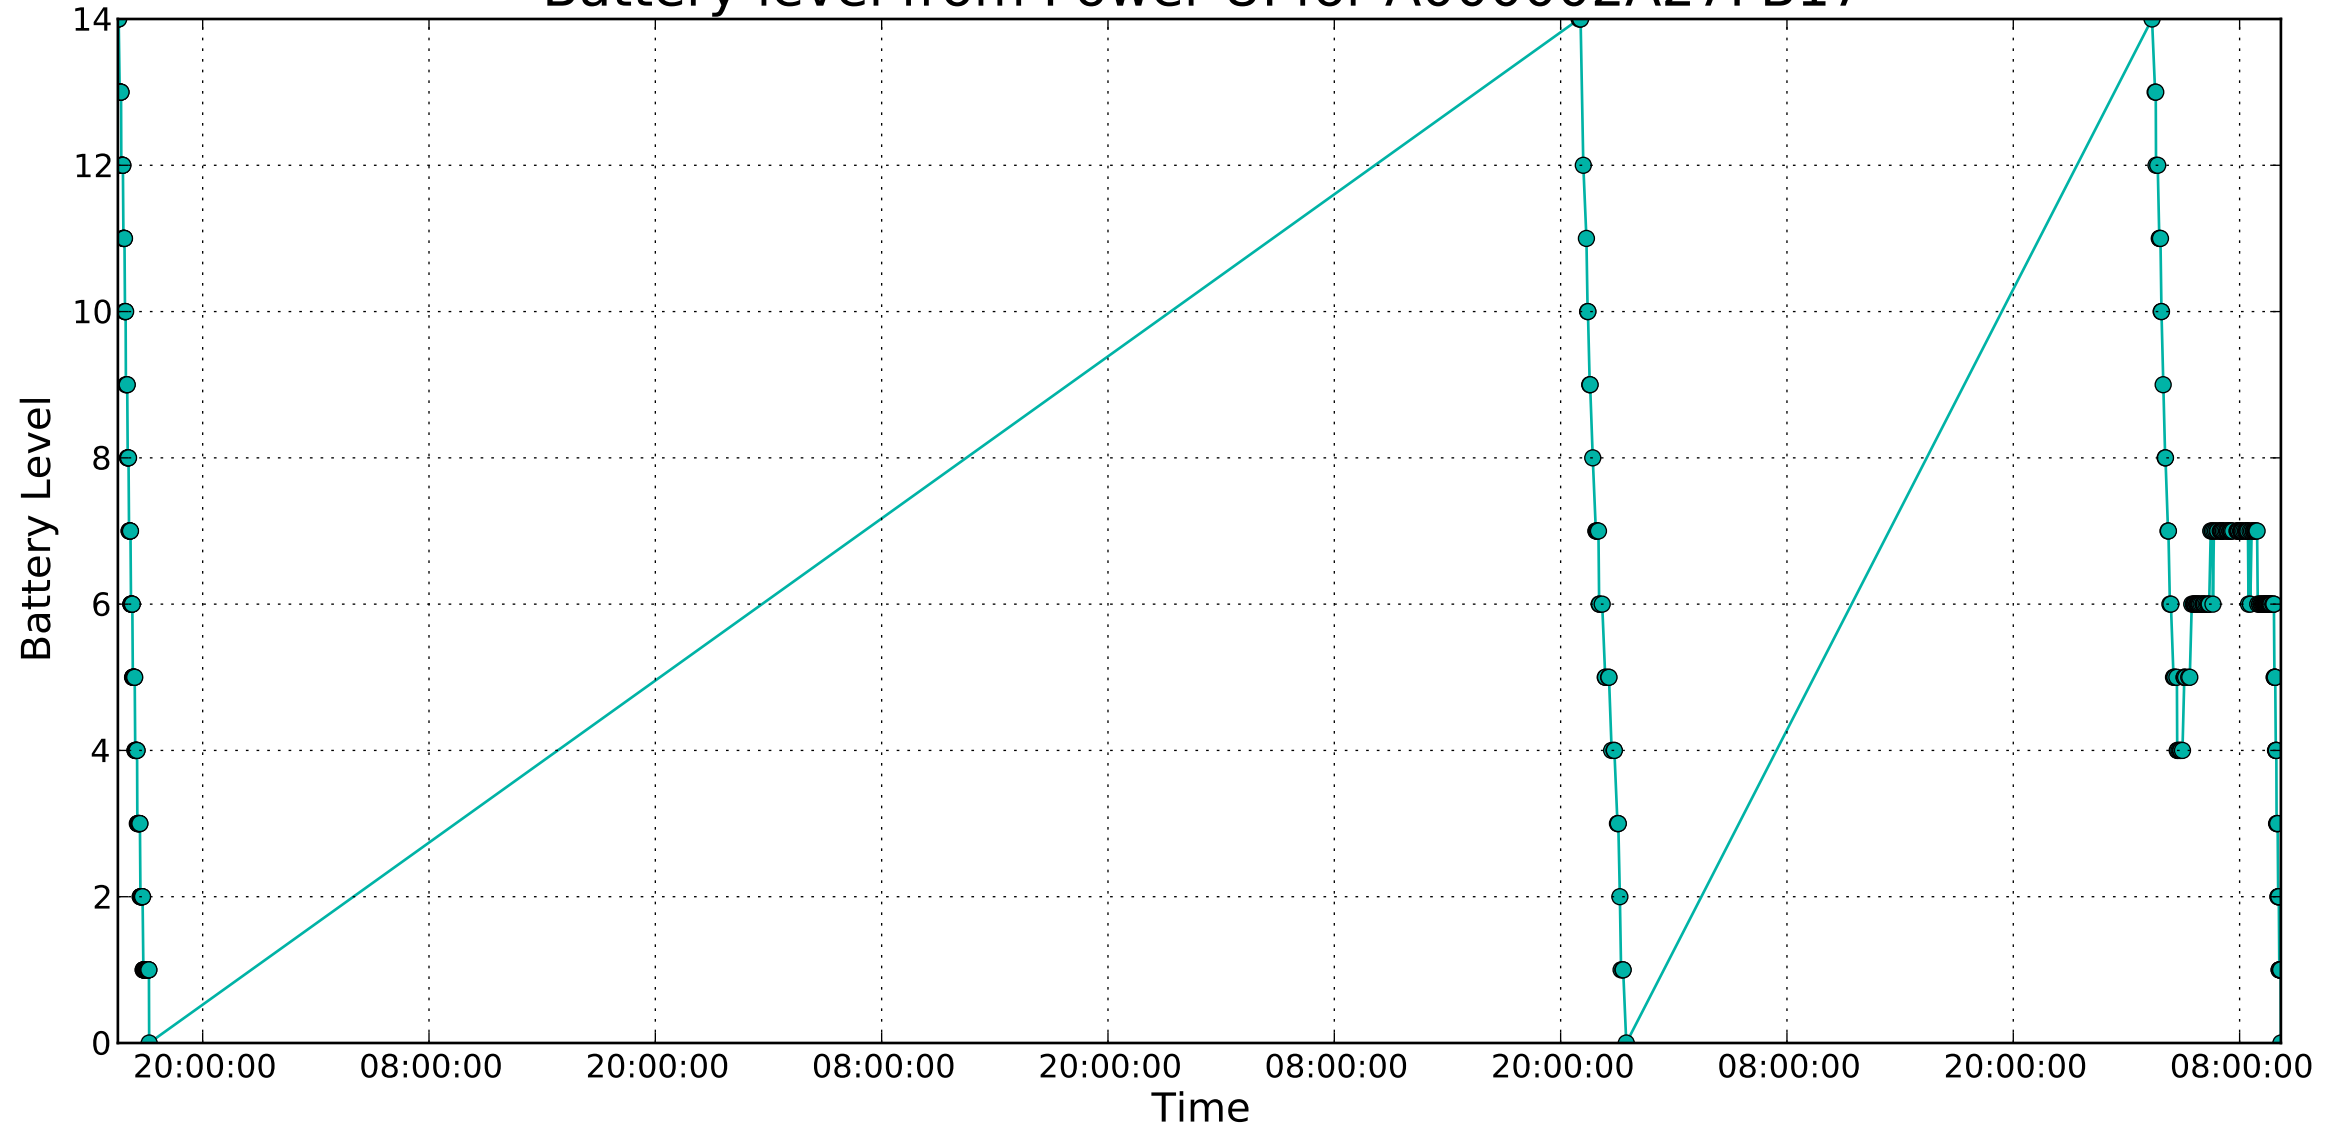


Battery level from Power UI for A000002A28C4A1

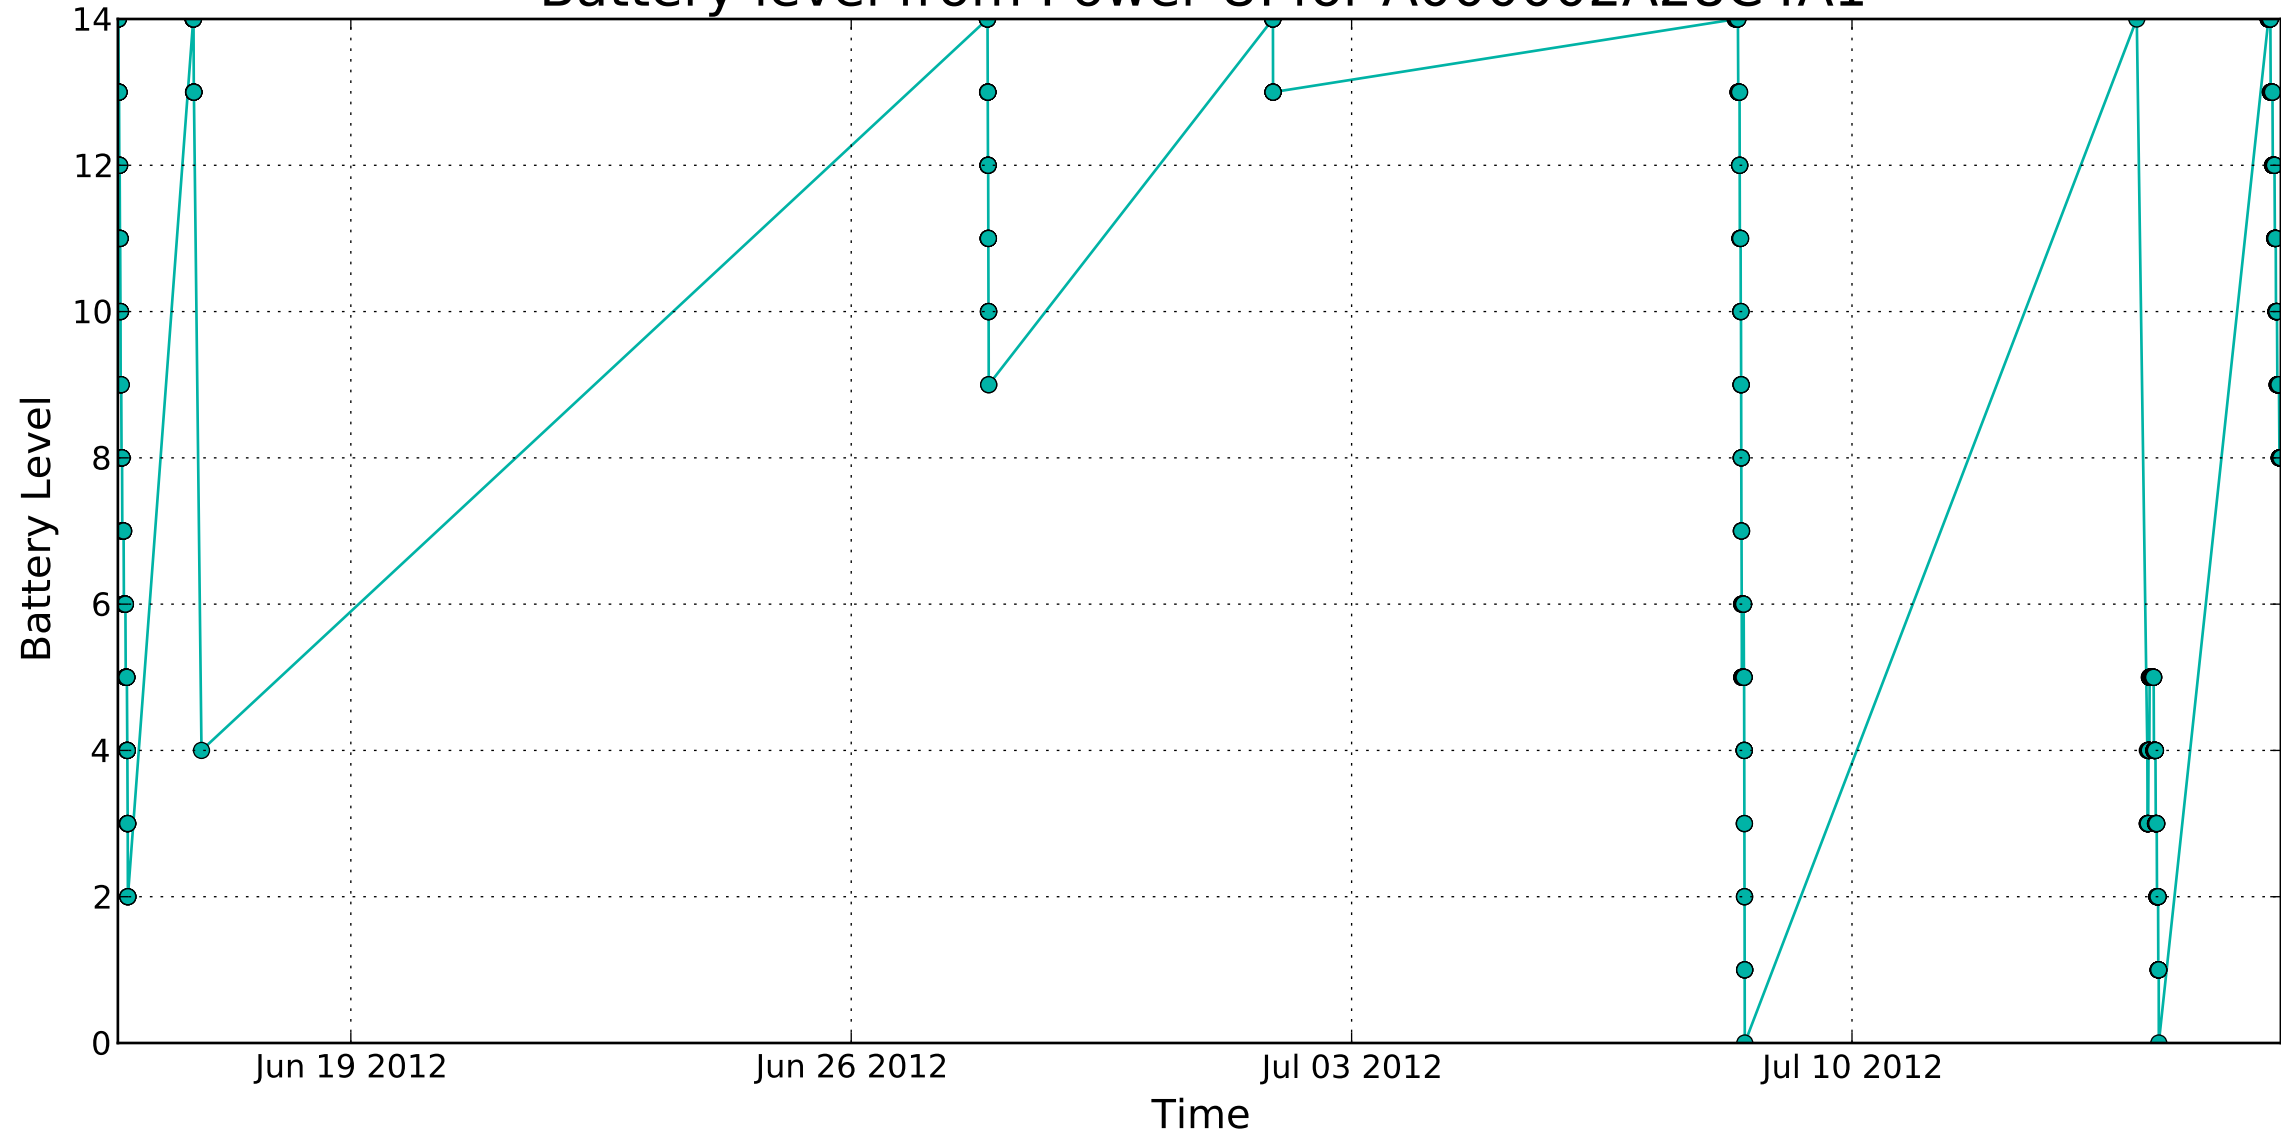


Battery level from Power UI for A000002A28C4AB

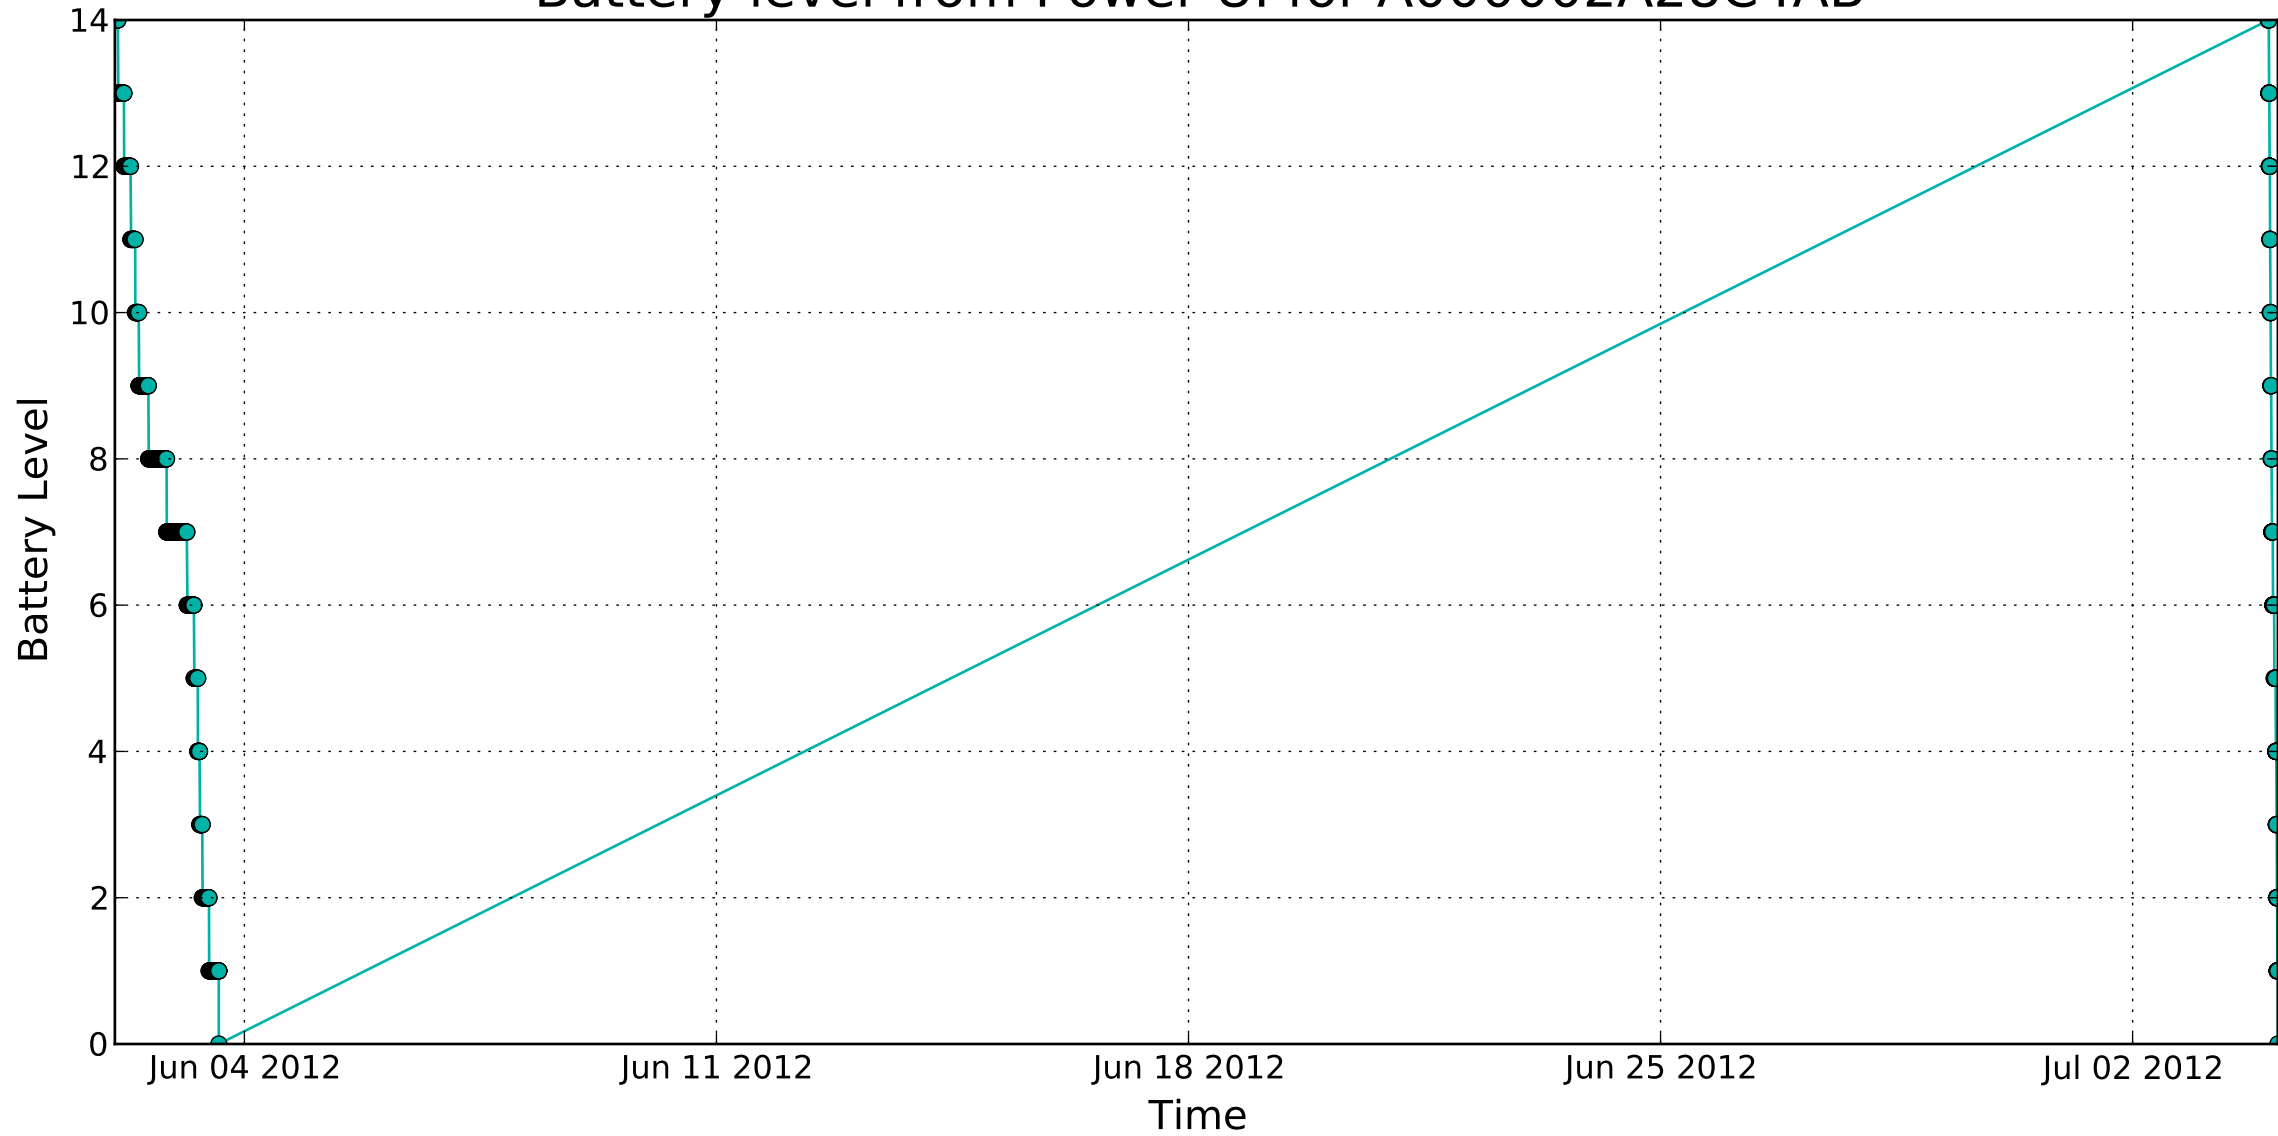


Battery level from Power UI for A000002A28D8AC

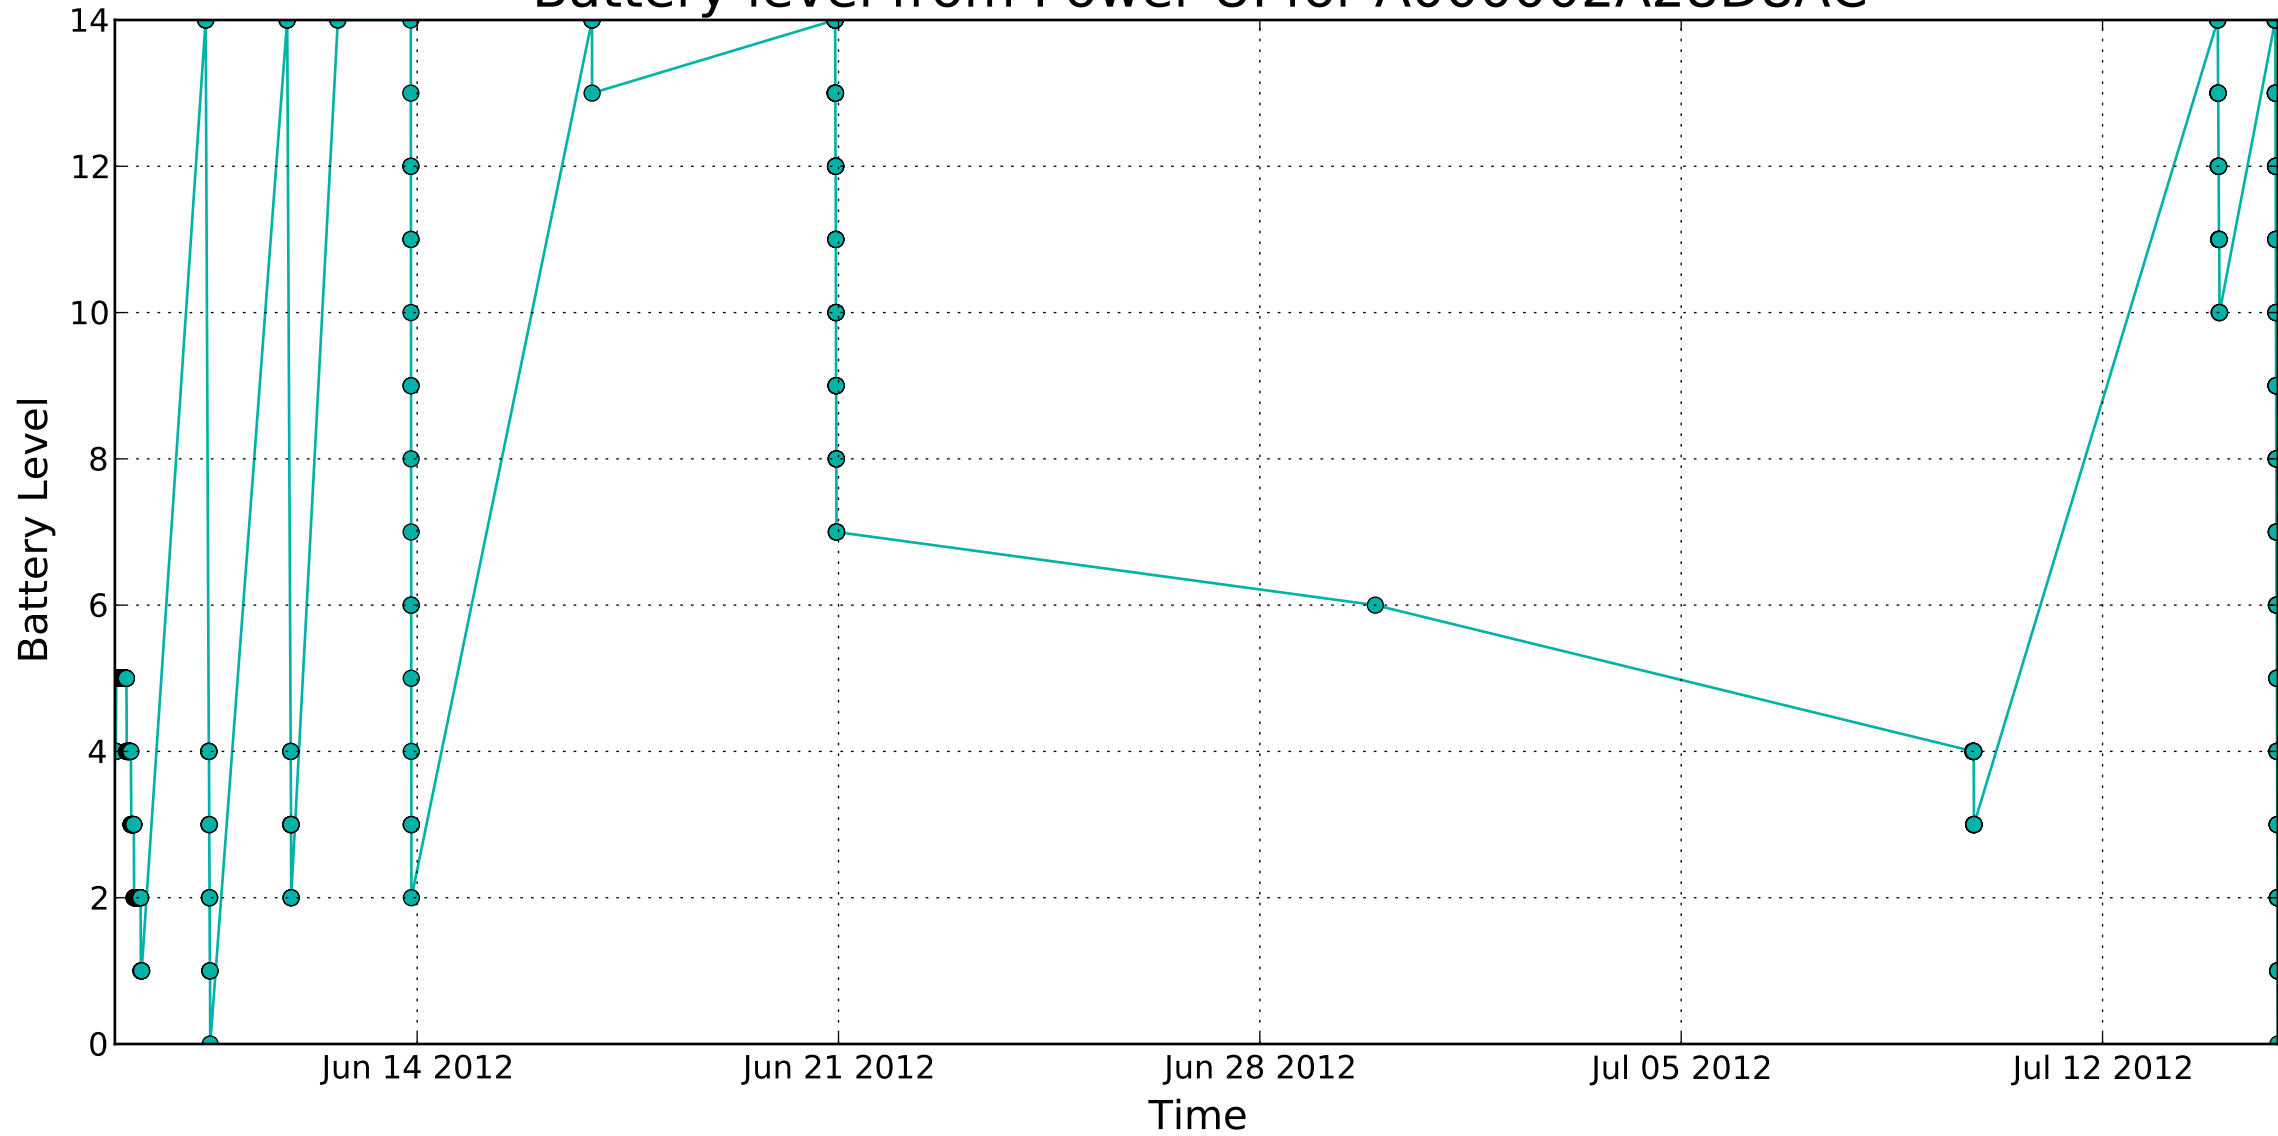

Battery level from Power UI for A000002A27881D

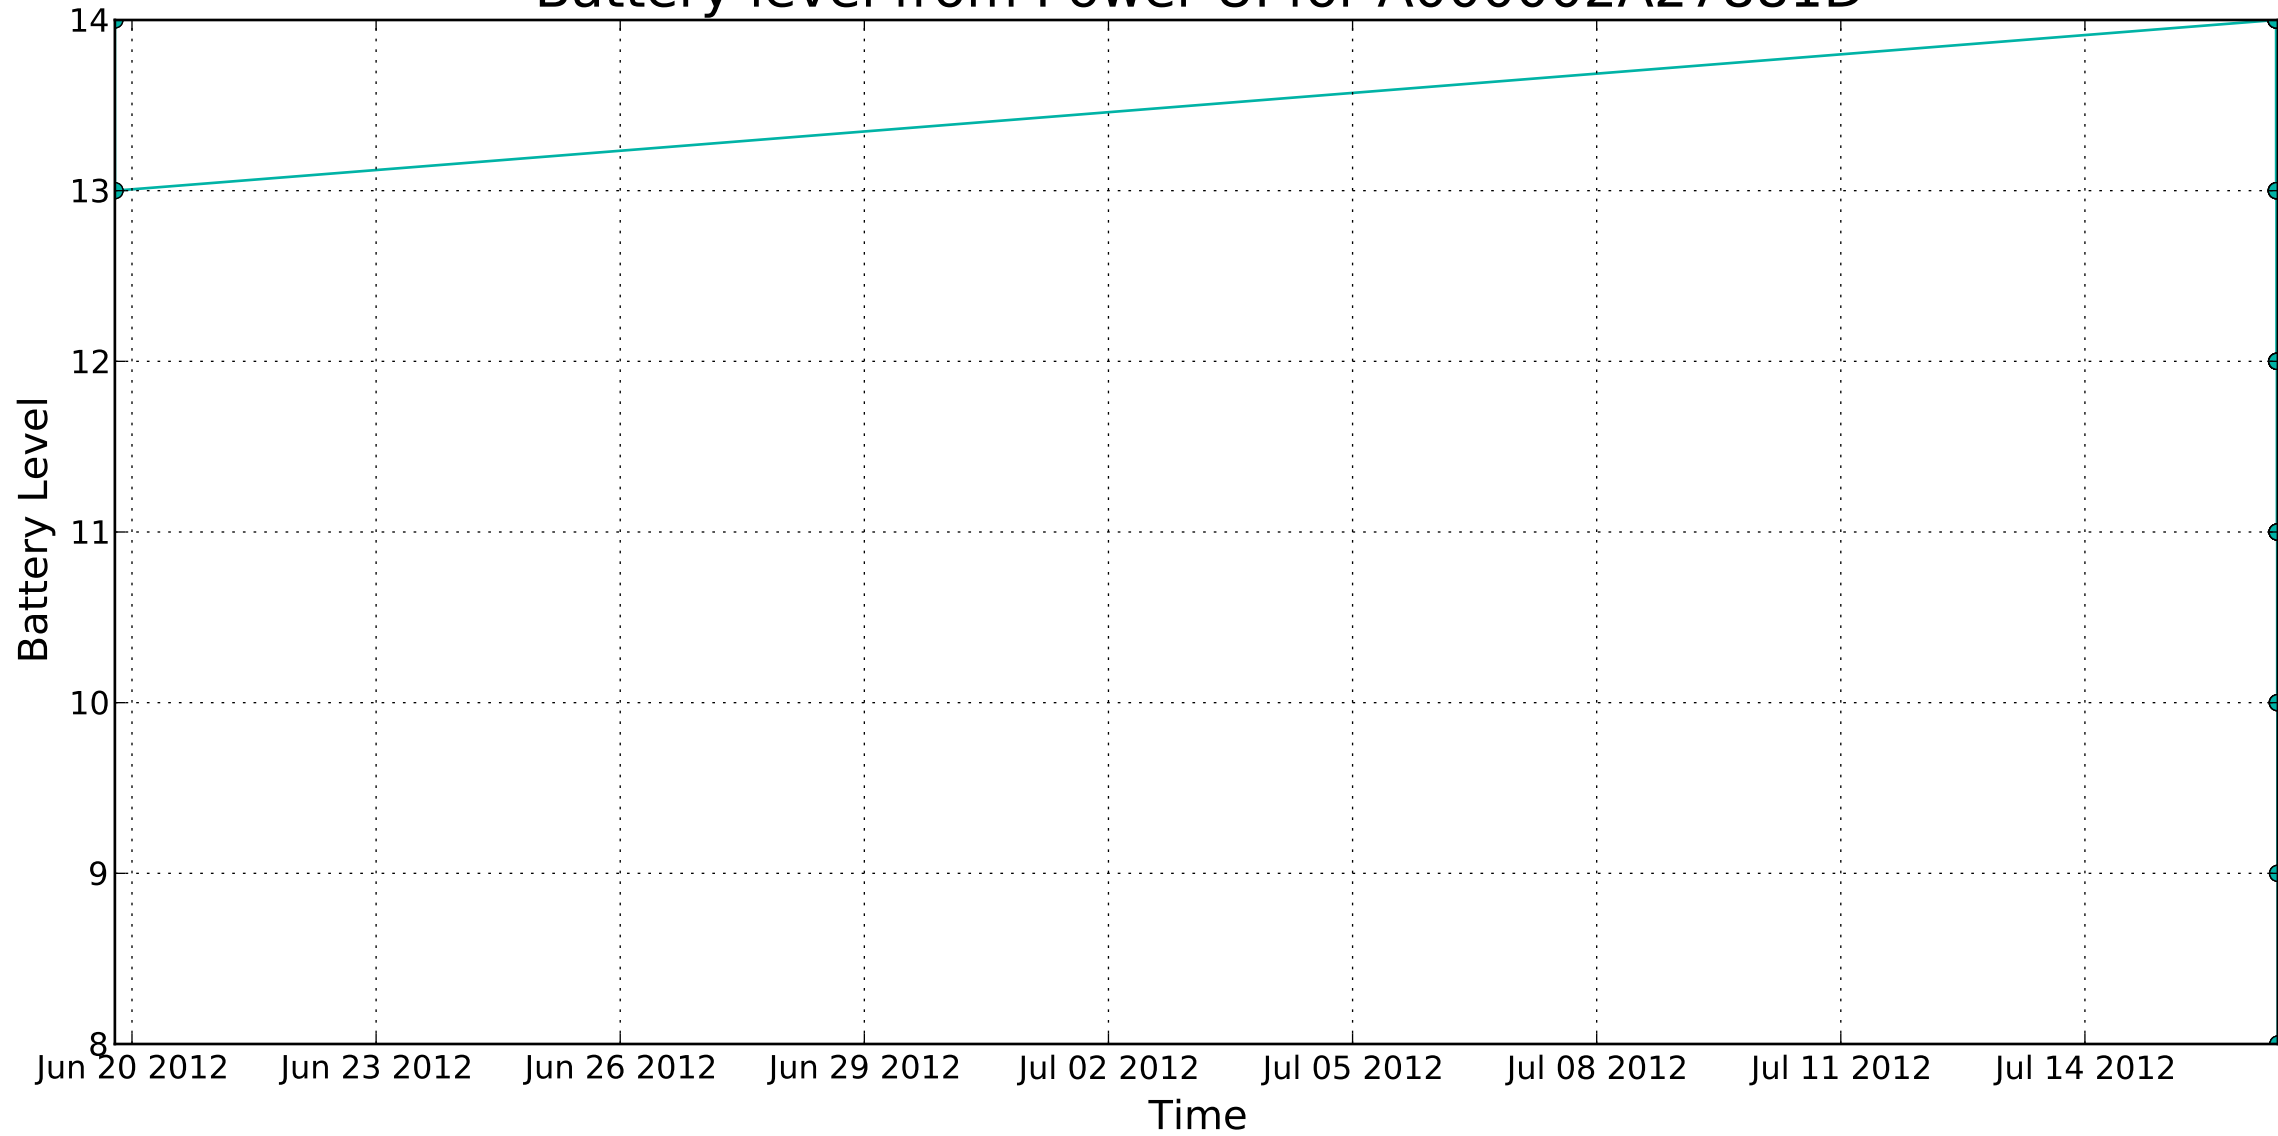

Battery level from Power UI for A000002A28E17B

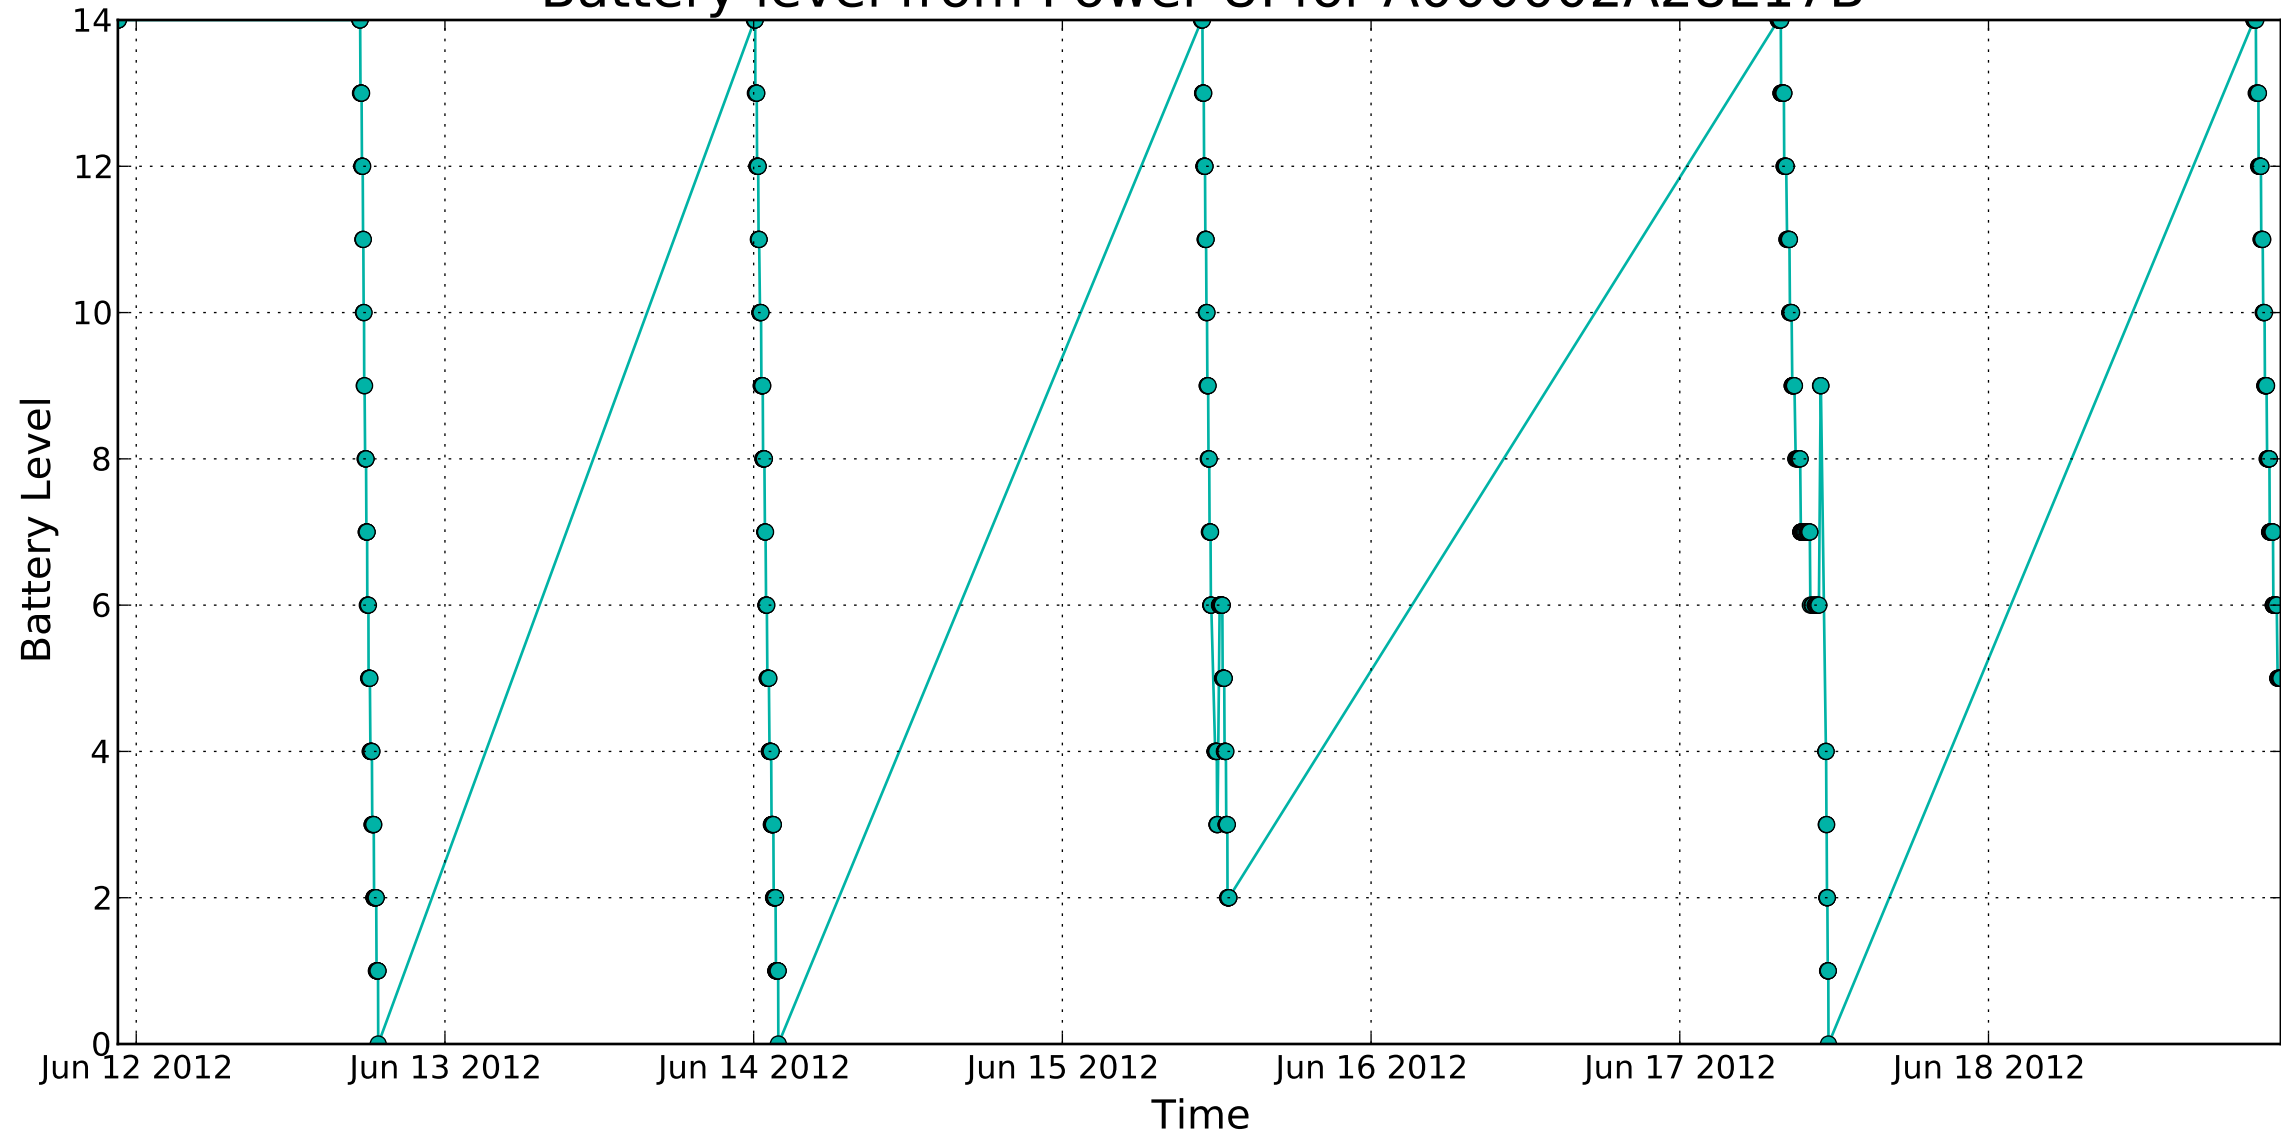

Battery level from Power UI for A000002A2864F1

