

# 1、包名

```
cn.manstep.phonemirrorBox
```

# 2、广播的消息

```
//Action Name
public final static String AUTO_BOX_MODE_CHANGE_EVT =
    "cn.manstep.phonemirrorBox.AUTO_BOX_MODE_CHANGE_EVT";

//Extra Name
public final static String AUTO_BOX_MODE_CHANGE_DATA =
    "cn.manstep.phonemirrorBox.AUTO_BOX_MODE_CHANGE_DATA";

//AndroidAuto 开始工作
public final static int AUTO_BOX_MODE_ANDROIDAUTO_WORK_START    = 1;

//carplay 或 AndroidAuto 结束工作
public final static int AUTO_BOX_MODE_WORK_STOP                  = 2;

//carplay 开始打电话
public final static int AUTO_BOX_MODE_PHONECALL_START            = 3;

//carplay 结束打电话
public final static int AUTO_BOX_MODE_PHONECALL_STOP              = 4;

//carplay 开始工作 需要关闭蓝牙
public final static int AUTO_BOX_MODE_CARPLAY_WORK_START          = 5;

//开始导航播报
public final static int AUTO_BOX_MODE_NAVI_REPORT_START           = 6;

//结束导航播报
public final static int AUTO_BOX_MODE_NAVI_REPORT_STOP            = 7;

//AutoPlay 应用切换到前台
public final static int AUTO_BOX_MODE_FOREGROUND                  = 8;

//AutoPlay 应用切换到后台
public final static int AUTO_BOX_MODE_BACKGROUND                  = 9;

//返回车机的UI
public final static int AUTO_BOX_MODE_BACKCAR                      = 10;

//AutoPlay正在连接手机
public final static int AUTO_BOX_MODE_CONNECTING_PHONE            = 11;
```

```

//请求使用MIC
public final static int AUTO_BOX_MODE_REQUEST_MIC = 12;

//释放MIC
public final static int AUTO_BOX_MODE_RELEASE_MIC = 13;

//请求蓝牙地址
public final static int AUTO_BOX_MODE_REQUEST_BLUETOOTH_MAC = 14;

//Android镜像开始工作
public final static int AUTO_BOX_MODE_ANDROID_MIRROR_START = 15;

//Android镜像结束工作
public final static int AUTO_BOX_MODE_ANDROID_MIRROR_STOP = 16;

//iPhone镜像开始工作
public final static int AUTO_BOX_MODE_IPHONE_MIRROR_START = 17;

//iPhone镜像结束工作
public final static int AUTO_BOX_MODE_IPHONE_MIRROR_STOP = 18;

//开始播放音乐
public final static int AUTO_BOX_MODE_MUSIC_START = 19;

//结束播放音乐, carplay中此消息会在音乐结束后7-8秒才会到来
public final static int AUTO_BOX_MODE_MUSIC_STOP = 20;

//请求车机蓝牙Pin码
public final static int AUTO_BOX_MODE_REQUEST_BLUETOOTH_PIN_CODE = 21;

```

### 3、接收的消息

```

//Action Name
public final static String AUTO_BOX_CONTROL_CMD_EVT =
    "cn.manstep.phonemirrorBox.AUTO_BOX_CONTROL_CMD_EVT";

//Extra Name, 整型
public final static String AUTO_BOX_CONTROL_CMD_DATA =
    "cn.manstep.phonemirrorBox.AUTO_BOX_CONTROL_CMD_DATA";

//Extra Name, 字符串型
public final static String AUTO_BOX_CONTROL_CMD_DATA_STRING =
    "cn.manstep.phonemirrorBox.AUTO_BOX_CONTROL_CMD_DATA_STRING";

//Siri按钮, 需成对发送
public static final int AUTO_BOX_CONTROL_CMD_SIRI_DOWN = 1; //Siri按钮按下
public static final int AUTO_BOX_CONTROL_CMD_SIRI_UP = 2; //Siri按钮弹起

public static final int AUTO_BOX_CONTROL_CMD_LEFT = 3; //左旋 或者 向左
public static final int AUTO_BOX_CONTROL_CMD_RIGHT = 4; //右旋 或者 向右

//上下按钮仅能用于主界面的菜单选择, 不建议使用

```

```
public static final int AUTO_BOX_CONTROL_CMD_UP = 5; //向上
public static final int AUTO_BOX_CONTROL_CMD_DOWN = 6; //向下

//选中按钮，需成对发送
public static final int AUTO_BOX_CONTROL_CMD_ENTER_DOWN = 7; //按下
public static final int AUTO_BOX_CONTROL_CMD_ENTER_RELEASE = 8; //弹起

//回到Carplay主界面，相当于iPhone的Home键
public static final int AUTO_BOX_CONTROL_CMD_ACHOME = 9;

public static final int AUTO_BOX_CONTROL_CMD_PLAY = 10; //播放音乐
public static final int AUTO_BOX_CONTROL_CMD_PAUSE = 11; //暂停
public static final int AUTO_BOX_CONTROL_CMD_PLAYORPAUSE = 12; //播放或暂停
public static final int AUTO_BOX_CONTROL_CMD_NEXT = 13; //下一曲
public static final int AUTO_BOX_CONTROL_CMD_PREV = 14; //上一曲

//电话方控仅在Carplay处于拨号或来电页面有效
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_ANSWER = 15; //接电话
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_HUNGUP = 16; //挂电话
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_0 = 17; //拨号键0
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_1 = 18; //拨号键1
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_2 = 19; //拨号键2
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_3 = 20; //拨号键3
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_4 = 21; //拨号键4
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_5 = 22; //拨号键5
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_6 = 23; //拨号键6
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_7 = 24; //拨号键7
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_8 = 25; //拨号键8
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_9 = 26; //拨号键9
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_STAR = 27; //拨号键*
public static final int AUTO_BOX_CONTROL_CMD_PHONEKEY_POUND = 28; //拨号键#

public static final int AUTO_BOX_CONTROL_CMD_BACK = 29; //返回键
public static final int AUTO_BOX_CONTROL_CMD_LAUNCH_MAPS = 30; //启动自带地图
public static final int AUTO_BOX_CONTROL_CMD_LAUNCH_PHONE = 31; //启动自带电话
public static final int AUTO_BOX_CONTROL_CMD_LAUNCH_MUSIC = 32; //启动自带音乐
public static final int AUTO_BOX_CONTROL_CMD_LAUNCH_NOWPLAYING = 33; //启动正在播放

//接收车机蓝牙MAC地址
public static final int AUTO_BOX_CONTROL_CMD_BLUETOOTH_MAC = 100;
//收到消息后才开始录音
public static final int AUTO_BOX_CONTROL_CMD_RECORD_START = 101;
//接收车机蓝牙Pin码
public static final int AUTO_BOX_CONTROL_CMD_BLUETOOTH_PIN_CODE = 102;
```