

If you wrap your pen, apply grip tape covering the pen's button rocker/cover, or make similar modifications, you must remove the button rocker/cover first. Issues that could occur from improper modifications are not noted in this guide.

[illegible]

Kuuube's Info

Amazon links provided for tablets are affiliate links. I earn a small commission if you purchase through them.

All money from affiliate commissions will be put back into improving the buying guide.

Tablet Sheets and Guides

[Kuuube's Tablet Buying Guide](#)

[Kuuube's Wacom Tablet Mastersheet](#)

[Kuuube's Wacom Tablet Pen Compatibility Mastersheet](#)

[Kuuube's Wacom Pen Nib Guide](#)

[Kuuube's Wacom Pen Nib Compatibility Mastersheet](#)

Info

If you need to contact me personally, join my discord. I may not reply elsewhere.

[osu! Profile](#)

[Discord Server](#)

[Github](#)

[Youtube](#)

[1] (PTZ-430, PTZ-431W, PTZ-630, PTZ-631W, PTZ-930, PTZ-1230, PTZ-1231W)

[2] (XD-0405-U, XD-0608-U, XD-0912-U, XD-1212-U, XD-1218-U)

[3] (GD-0405-U, GD-0608-U, GD-0912-U, GD-1212-U, GD-1218-U)

[4] (CTE-460, CTE-660)

[5] (CTE-450, CTE-650)

[6] (CTE-440, CTE-640)

[7] (CTE-430, CTE-630)

[8] (FW-300, FB-630)

[9] (CTF-430, CTF-221, CTF-420)

[10] (FT-0203-U, FT-0405-U)

[11] (ET-0405A-U, ET-0507A-U)