

# Kuuube's Wacom Tablet Mastersheet

[illegible]

[1] (Intuos S) (Wacom Intuos, Pen Only Small)

[2] (Wacom Pen 4K)

[3] (Wacom Pen 4K)

[4] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[5] BAMBOO FUN CORDLESS MOUSE

[6] (Intuos BT S) (Wacom Intuos, Pen & Bluetooth Small)

[7] (Wacom Pen 4K)

[8] (Wacom Pen 2K)

[9] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[10] Graphire4 cordless mouse

[11] (Intuos M) (Wacom Intuos, Pen Only Medium)

[12] (Wacom Pen 4K)

[13] (Wacom Pen 2K)

[14] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[15] GRAPHIRE3 CORDLESS MOUSE

[16] (Intuos BT M) (Wacom Intuos, Pen & Bluetooth Medium)

[17] (Wacom Pen 4K)

[18] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[19] GRAPHIRE2 CORDLESS MOUSE

[20] (Intuos Draw Small) (Intuos Small)

[21] (Wacom Pen 2K)

[22] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[23] GRAPHIRE CORDLESS MOUSE

[24] (Intuos Art Small) (Intuos Photo Small) (Intuos Comic Small) (Intuos Touch Small)

[25] (Wacom Pen 2K)

[26] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[27] (Intuos Draw Medium) (Intuos Medium)

[28] (Wacom Pen 2K)

[29] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[30] INTUOS4 MOUSE

[31] (Intuos Art Medium) (Intuos Touch Medium)

[32] (Wacom Pen 2K)

[33] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[34] INTUOS4 LENS CURSOR

[35] (Intuos Pen (S)) (Intuos Small) (Intuos Creative Pen Tablet - Small)

[36] (Bamboo Fun CTH Pen)

[37] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[38] Intuos3 mouse

[39] (Intuos Pen & Touch (S)) (Intuos Touch Small) (Intuos Creative Pen & Touch Tablet - Small)

[40] (Bamboo CTL Pen)

[41] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[42] Intuos3 lens cursor

[43] (Intuos Pen & Touch (M)) (Intuos Medium)

[44] (Bamboo CTH Pen)

[45] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[46] INTUOS2 2D MOUSE

[47] (Intuos Pen (M)) (Intuos Touch Medium) (Intuos Creative Pen & Touch Tablet - Medium)

[48] (Bamboo One Pen)

[49] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[50] INTUOS2 4D MOUSE

[51] (One by Wacom (S)) (One by Wacom small) (One by Wacom pen tablet)

[52] (Wacom Pen 2K)

[53] (Bamboo Pen)

[54] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[55] INTUOS2 LENS CURSOR

[56] (One by Wacom (M)) (One by Wacom medium) (One by Wacom pen tablet)

[57] (Wacom Pen 2K)

[58] (Bamboo Fun Pen)

[59] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[60] INTUOS 4D MOUSE

[61] (Bamboo Splash) (One by Wacom (S))

[62] (Graphire4 Pen)

[63] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[64] INTUOS LENS CURSOR

[65] (One by Wacom (M))

[66] (Bamboo One Pen)

[67] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[68] 4-button cursor

[69] (Bamboo Connect) (Bamboo Pen Tablet)

[70] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[71] 16 button cursor

[72] (Bamboo Capture) (Bamboo Manga) (Bamboo Comic)

[73] (Graphire3 Inking Pen) (Graphire2 Inking Pen) (Graphire Inking Pen)

[74] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[75] Four-Button Cursor

[76] (Bamboo Create) (Bamboo Fun) (Bamboo Comic)

[77] (Graphire Pen)

[78] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[79] Four-Button Cursor

[80] (Bamboo One Pen (S)) (Bamboo One, Small Tablet)

[81] (Bamboo One Pen)

[82] (Graphire3 Pen)

[83] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[84] Four-Button Cursor

[85] (Bamboo One Pen (M)) (Bamboo One, Medium Tablet)

[86] (Bamboo One Pen)

[87] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[88] Sixteen-Button Cursor

[89] (Bamboo Fun (S)) (Bamboo Craft (S)) (Bamboo Comic Pen & Touch (S)) (Bamboo Pen & Touch Special Edition (S)) (Bamboo Fun Small Tablet) (Bamboo Fun Pen & Touch) (Bamboo Comic Pen & Touch) (Bamboo Tablet)

[90] (Bamboo Fun CTH Pen)

[91] (LLC Pen)

[92] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[93] (Bamboo Fun (M)) (Bamboo Comic Pen & Touch (M)) (Bamboo Pen & Touch Special Edition (M)) (Bamboo Fun Medium Tablet) (Bamboo Tablet)

[94] (Bamboo Fun CTH Pen)

[95] (Graphire2 Pen)

[96] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[97] (Bamboo Pen (S)) (Bamboo Pen Tablet)

[98] (Bamboo CTL Pen)

[99] (Graphire Pen)

[100] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[101] (Bamboo Pen & Touch) (Bamboo Pen & Touch) (Bamboo Tablet)

[102] (Bamboo CTH Pen)

[103] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[104] (Bamboo Touch) (Bamboo Touch Tablet) [no emr digitizer]

[105] (PenPartner Pen) (UltraPen)

[106] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[107] (Bamboo Pen (M)) (Bamboo Pen Tablet)

[108] (Bamboo) (Bamboo Tablet)

[109] (Bamboo Pen)

[110] (Wacom Pro Pen 2)

[111] (Bamboo Fun (4x5)) (Small Bamboo Fun Tablet)

[112] (Bamboo Fun Pen)

[113] (Wacom Pro Pen Slim)

[114] (Bamboo Fun (6x8)) (Medium Bamboo Fun Tablet)

[115] (Bamboo Fun Pen)

[116] (Wacom Pro Pen 3d)

[117] (Wacom FAVO Wireless FW-300USB)

[118] (Wacom Finetip Pen)

[119] (Graphire4 (4x5))

[120] (Graphire4 Pen)

[121] (Wacom Ballpoint Pen)

[122] (Graphire4 (6x8))

[123] (Graphire4 Pen)

[124] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[125] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[126] (Bamboo Pad USB model, Bamboo Pad Light)

[127] (Intuos4 Grip Pen)

[128] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[129] (Bamboo Pad wireless model)

[130] (Wacom Pro Pen)

[131] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[132] (Graphire3 Pen)

[133] (Intuos4 Airbrush) (Intuos5 Airbrush) (Wacom Airbrush)



[134] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[135] (Graphire3 (4x5)) (Graphire3 4x5 / A6 Tablet) (F-430)

[136] (Graphire3 Pen)

[137] (Intuos4 Inking Pen) (Intuos5 Inking Pen) (Wacom Inking Pen)

[138] (Graphire Bluetooth Pen Tablet)

[139] (Graphire Pen)

[140] (Intuos4 Art Pen) (Intuos5 Art Pen) (Wacom Art Pen)

[141] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[142] (Graphire3 (6x8)) (Graphire3 6x8 / A5 Tablet) (F-630)

[143] (Graphire3 Pen)

[144] (Intuos4 Classic Pen) (Intuos5 Classic Pen) (Wacom Classic Pen)

[145] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[146] (Bamboo One) (Bamboo One Tablet)

[147] (Intuos3 Grip Pen)

[148] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[149] (PenPartner2)

[150] (Intuos3 Airbrush)

[151] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[152] (Volito 2 A6)

[153] (Intuos3 Art Pen)

[154] (Volito) (PenPartner) (PenStation (2x3))

[155] (Intuos3 Ink Pen)

[156] (Volito) (PenPartner) (PenStation (4x5)) (LLC Tablet)

[157] (LLC Pen)

[158] (Intuos3 Classic Pen)

[159] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[160] (Graphire2 (4x5)) (Graphire2 Tablet) (Graphire2 USB Tablet) (F-410)

[161] (Graphire2 Pen)

[162] (Intuos2 Grip Pen)

[163] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[164] (Graphire2 (5x7)) (F-510)

[165] (Intuos2 Airbrush)

[166] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[167] (Graphire) (Graphire Tablet) (F-401U) (Wacom FAVO USB)

[168] (Graphire Pen)

[169] (Intuos2 Classic Pen)

[170] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[171] (Graphire) (Graphire Tablet)

[172] (Graphire Pen)

[173] (Intuos2 Ink Pen)

[174] (ARTPAD FAN) (PenParter Tablet)

[175] (PenPartner Pen) (UltraPen)

[176] (Intuos2 Stroke Pen)

[177] (ARTPAD FAN) (PenParter Tablet)

[178] (PenPartner Pen) (UltraPen)

[179] (Intuos Pen)

[180] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[181] (ARTPAD FAN) (PenParter Tablet)

[182] (PenPartner Pen) (UltraPen)

[183] (Intuos Airbrush)

[184] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[185] (ART Z)

[186] (UltraPen Eraser) (Erasing UltraPen)

[187] (Intuos Inking Pen)

[188] (ART Z II)

[189] (UltraPen Eraser) (Erasing UltraPen)

[190] (Intuos Stroke Pen)

[191] (ARTPAD II Serial) (ArtPad II A6 Serial)

[192] (UltraPen Eraser) (Erasing UltraPen)

[193] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[194] (ARTPAD II ADB) (ArtPad II A6 ADB)

[195] (UltraPen Eraser) (Erasing UltraPen)

[196] (UltraPen Eraser) (Erasing UltraPen)

[197] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[198] (ARTPAD)

[199] (UltraPen Eraser) (Erasing UltraPen)

[200] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[201] (ARTPAD)

[202] (UltraPen Eraser) (Erasing UltraPen)

[203] Click pen

[204] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[205] (UltraPen Brush)

[206] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[207] (UltraPen Pencil)

[208] (Intuos Pro Small) (Wacom Intuos Pro)

[209] (Wacom Pro Pen 2)

[210] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007,

PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[211] (Intuos Pro Medium) (Wacom Intuos Pro)

[212] (Wacom Pro Pen 2)

[213] (Grip Pen)

[214] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[215] (Intuos Pro Large) (Wacom Intuos Pro)

[216] (Wacom Pro Pen 2)

[217] (Grip Pen)

[218] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[219] (Intuos pro (S)) (Intuos Pro Professional Pen & Touch Tablet - Small) (Intuos Pro Touch S Tablet) (Intuos Pro Small)

[220] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[221] (UltraPen 813E)

[222] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[223] (Intuos pro (M)) (Intuos Pro Professional Pen & Touch Tablet - Medium) (Intuos Pro Touch M Tablet) (Intuos Pro Medium) (Intuos Pro Medium Special Edition)

[224] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[225] (UltraPen Write)

[226] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[227] (Intuos pro (L)) (Intuos Pro Professional Pen & Touch Tablet - Large) (Intuos Pro Touch L Tablet) (Intuos Pro Large)

[228] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[229] (UltraPen Write)

[230] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[231] (Intuos5 touch (S)) (Wacom Intuos5 Touch (Small))

[232] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[233] (UltraPen Ink)

[234] (ACK-20401K, ACK-20101W, ACK-20014, FUZ-A141, FUZ-A010, FUZ-A010-03, FUZ-A121, FUZ-A154, FUZ-A120, PSI-A034, PSI-A007, PSI-A043, PSI-A042, PSI-A066, PSI-A011, PSI-A021)

[235] (Intuos5 (S)) (Wacom Intuos5 (Small))

[236] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[237] (Standard Stylus Gray)

[238] (Intuos5 touch (M)) (Wacom Intuos5 Touch (Medium))

[239] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[240] (Standard Stylus Red)

[241] (Intuos5 (M)) (Wacom Intuos5 (Medium))

[242] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[243] (Slim Stylus Gray)

[244] (Intuos5 touch (L)) (Wacom Intuos5 Touch (Large))

[245] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[246] (Slim Stylus Magenta)

[247] (Intuos4 (4x6)) (Intuos4 S Tablet) (Intuos4 Small) (Intuos4 Special Edition) (Intuos 4 Comic Edition)

[248] (Intuos4 Grip Pen)

[249] (Pressure Stylus Blue)

[250] (Intuos4 Wireless) (Intuos4 Wireless Tablet)

[251] (Intuos4 Grip Pen) (Intuos5 Grip Pen) (Wacom Grip Pen)

[252] (Pressure Stylus Red)

[253] (Intuos4 (6x9)) (Intuos4 M Tablet) (Intuos4 Medium) (Intuos4 Special Edition) (Intuos 4 Comic Edition)

[254] (Intuos4 Grip Pen)

[255] (Intuos4 (8x13)) (Intuos4 L Tablet) (Intuos4 Large)

[256] (Intuos4 Grip Pen)

[257] (Intuos4 (12x19)) (Intuos4 XL Tablet) (Intuos4 Extra Large)

[258] (Intuos4 Grip Pen)

[259] (Intuos3 (4x5)) (Intuos3 4x5 / A6 Tablet)

[260] (Intuos3 Grip Pen)

[261] (Intuos3 (4x6)) (Intuos3 4x6 / A6 Wide Tablet)

[262] (Intuos3 Grip Pen)

[263] (Intuos3 (6x8)) (Intuos3 6x8 / A5 Tablet)

[264] (Intuos3 Grip Pen)

[265] (Intuos3 (6x11)) (Intuos3 6x11 / A5 Wide Tablet)

[266] (Intuos3 Grip Pen)

[267] (Intuos3 (9x12)) (Intuos3 9x12 / A4-Regular Tablet)

[268] (Intuos3 Grip Pen)

[269] (Intuos3 (12x12)) (Intuos3 12x12 / A4 Oversize Tablet)

[270] (Intuos3 Grip Pen)

[271] (Intuos3 (12x19)) (Intuos3 12x19 / A3 Wide Tablet)

[272] (Intuos3 Grip Pen)

[273] Cintiq Partner

[274] (Intuos2 (4x5)) (Intuos2 4x5 / A6 Tablet) (I-420USB)

[275] (Intuos2 Grip Pen)

[276] (Intuos2 (4x5)) (Intuos2 4x5 / A6 Tablet) (I-420Serial)

[277] (Intuos2 Grip Pen)

[278] (Intuos2 (6x8)) (Intuos2 6x8 / A5 Tablet) (I-620USB)

[279] (Intuos2 Grip Pen)

[280] (Intuos2 (6x8)) (Intuos2 6x8 / A5 Tablet) (I-620Serial)

[281] (Intuos2 Grip Pen)

[282] (Intuos2 (9x12)) (Intuos2 9x12 / A4-Regular Tablet) (I-920USB)

[283] (Intuos2 Grip Pen)

[284] (Intuos2 (9x12)) (Intuos2 9x12 / A4-Regular Tablet) (I-920Serial)

[285] (Intuos2 Grip Pen)

[286] (Intuos2 (12x12)) (Intuos2 12x12 / A4-Oversize Tablet) (I-1220USB)

[287] (Intuos2 Grip Pen)

[288] (Intuos2 (12x12)) (Intuos2 12x12 / A4-Oversize Tablet) (I-1220Serial)

[289] (Intuos2 Grip Pen)

[290] (Intuos2 (12x18)) (Intuos2 12x18 / A3 Tablet) (I-1820USB)



[291] (Intuos2 Grip Pen)

[292] (Intuos2 (12x18)) (Intuos2 12x18 / A3 Tablet) (I-1820Serial)

[293] (Intuos2 Grip Pen)

[294] (Intuos (4x5)) (Intuos 4x5 Tablet) (I-400USB)

[295] (Intuos Pen)

[296] (Intuos (4x5)) (Intuos 4x5 Tablet) (I-400Serial)

[297] (Intuos Pen)

[298] (Intuos (4x5)) (Intuos 4x5 Tablet) (I-400ADB)

[299] (Intuos Pen)

[300] (Intuos (6x8)) (Intuos 6x8 Tablet) (I-600USB)

[301] (Intuos Pen)

[302] (Intuos (6x8)) (Intuos 6x8 Tablet) (I-600Serial)

[303] (Intuos Pen)

[304] (Intuos (6x8)) (Intuos 6x8 Tablet) (I-600ADB)

[305] (Intuos Pen)

[306] (Intuos (9x12)) (Intuos 9x12 Tablet) (I-900USB)

[307] (Intuos Pen)

[308] (Intuos (9x12)) (Intuos 9x12 Tablet) (I-900Serial)

[309] (Intuos Pen)

[310] (Intuos (9x12)) (Intuos 9x12 Tablet) (I-900ADB)

[311] (Intuos Pen)

[312] (Intuos (12x12)) (Intuos 12x12 Tablet) (I-1200USB)

[313] (Intuos Pen)

[314] (Intuos (12x12)) (Intuos 12x12 Tablet) (I-1200Serial)

[315] (Intuos Pen)

[316] (Intuos (12x18)) (Intuos 12x18 Tablet) (I-1800USB)

[317] (Intuos Pen)

[318] (Intuos (12x18)) (Intuos 12x18 Tablet) (I-1800Serial)

[319] (Intuos Pen)

[320] (ART Z II)

[321] (UltraPen Eraser) (Erasing UltraPen)

[322] (ART Z II)

[323] (UltraPen Eraser) (Erasing UltraPen)

[324] (ART Z II)

[325] (UltraPen Eraser) (Erasing UltraPen)

[326] (ART Z II)

[327] (UltraPen Eraser) (Erasing UltraPen)

[328] (ART Z II)

[329] (UltraPen Eraser) (Erasing UltraPen)

[330] (ART Z II)

[331] (UltraPen Eraser) (Erasing UltraPen)

[332] (Artpad II Pro Serial) (UltraPad A5 Serial)

[333] (UltraPen Eraser) (Erasing UltraPen)

[334] (Artpad II Pro ADB) (UltraPad A5 ADB)

[335] (UltraPen Eraser) (Erasing UltraPen)

[336] (UD-1212 II) (ULTRAPAD II) (UltraPad A4) (UD-1212-RSR) (UD-1212-RSB)

[337] (UltraPen Eraser) (Erasing UltraPen)

[338] (UD-1218 II / E) (UD-1218 II / S) (ULTRAPAD II) (UltraPad A3) (UD-1218-RER) (UD-1218-RSR)

[339] (UltraPen Eraser) (Erasing UltraPen)

[340] (UD-1825 II) (ULTRAPAD II) (UltraPad A2) (UD-1825-RSR)

[341] (UltraPen Eraser) (Erasing UltraPen)

[342] (Standard 6 x 9)

[343] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[344] (Standard 12 x 12)

[345] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[346] (Electrostatic 12 x 12)

[347] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[348] (Menu Panel 12 x 12)

[349] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[350] (Standard 15 x 15)

[351] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[352] (Electrostatic 15 x 15)

[353] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[354] (Menu Panel 15 x 15)

[355] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[356] (Standard 12 x 18)

[357] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[358] (Electrostatic 12 x 18)

[359] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[360] (Menu Panel 12 x 18)

[361] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[362] (Standard 18 x 25)

[363] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[364] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)

[365] (Standard Stylus), (Standard Stylus), (Slim Stylus), (Slim Stylus), (Pressure Stylus), (Pressure Stylus)