 


PELCAS

 
Fishtail Beauty Neck Instrument

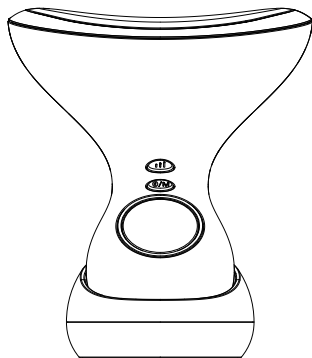

INSTRUCTIONS FOR USE

If you have any questions about the product, please feel free to contact us via service@pelcas.com

PRODUCT STRUCTURE

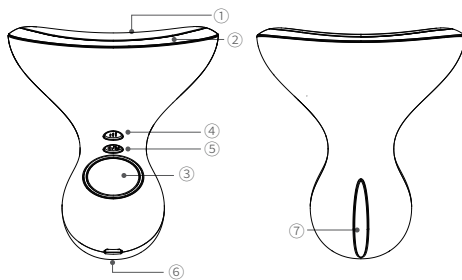

- ① Massage Head
- ② Blue/red/violet light
- ③ Display
- ④ Stall key
- ⑤ On/off key/function mode key
- ⑥ USB charging port
- ⑦ Conductive strip

 
PRODUCT PARAMETERS

Product name: Fishtail neck beauty instrument
Charging voltage: 5V \equiv
Working current: 0.4A
Rated power: 1.6W

Product model: 2248
Product material: ABS
Charging time: \leq 3.5 hours
Battery capacity: 400mAh

-1-

MODE FUNCTION DESCRIPTION

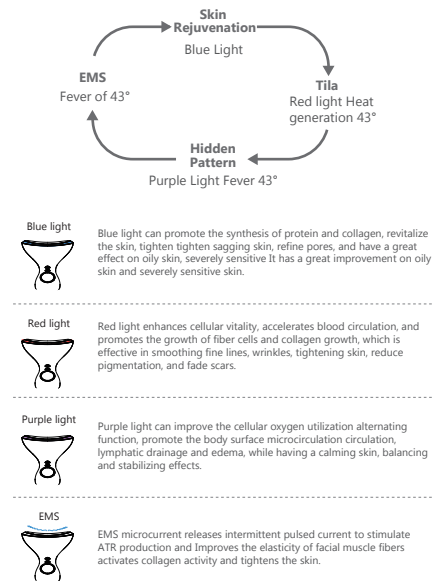

-2-

PRODUCT USE



First, simply wash your face once. Cleanly remove makeup and keep face and neck dry.



According to their own choice of function / or gear size

-3-



According to the selected function, the corresponding parts of the operation, cheeks The cheeks and the neck, in accordance with the outward arcing technique, massage -Group action, the massage head along the contour of the face from the bottom to the top to lift.(Tips: When using, please keep touching the conductive strip,otherwise it won't work.)



Frequency of use: 1 time a day in the morning and evening, sensitive skin can be appropriate Reduce the frequency of use. Length of use: with the medium (gel, essence or milk liquid) no more than 9 minutes / time sensitive skin 3-4 minutes / time skin care products absorbed that is can stop using.

-4-





FUNCTION DESCRIPTION

- Each function has three gears, each function has vibration
- Low voltage tips, flashing 5 times after the shutdown
- Skin rejuvenation: bright blue light, the symbol dot long light, the small bracket from the inside out running horse
- lifting: light red and heat 43 degrees, the symbol dot a flash a stop, the small bracket light does not light
- hidden pattern: light purple and heat 43 degrees, the symbol dot does not light, the small bracket a flashing stop
- EMS: no light and heat 43 degrees, symbol dot long light, small bracket from outside to inside running horse
- Battery display in three cells, different cells represent the battery power how much
- Massage head and the back of the conductive strip in contact with the skin in order to vibration and EMS
- long press the key / function mode key on / off, tap the key / function mode key, the switch function mode.
- The product has a memory mode function, restart, automatically enter the last time the power off When restarting, it will automatically enter the mode it was in the last time it was turned off.
- Can not work when charging
- 5 minutes of work automatically shutdown (cumulative time)

CAUTIONS

- the product has a heating function, about 43 ° C, each person's skin perception of temperature there are a little difference, may feel hot.
- If you feel uncomfortable during use, or if your skin appears abnormal, please stop using it immediately and consult a doctor.
- The product is not waterproof, please do not place in water to wash.
- Please place the product in a dry and ventilated place, avoid direct sunlight and no corrosive chemicals around.
- When taking care, please take an appropriate amount of skin care products can be. If you use too much skin care products, your skin will not be able to absorb all of it, resulting in waste, and there is a possibility of residual liquid penetrating into the product, damaging the product life. After use, please wipe clean with a clean cloth in time.
- Do not let children touch this product to avoid danger.

-5-

<div><div>DISPOSAL AND RECYCLING</div><p>You must dispose of fishtail neck beauty instrument properly according to the local laws and regulations. Because this machine contains electronic components, it should be discarded separately from household waste. When it reaches the end of its useful life, contact with local authorities to learn about disposal and recycling options. You can help protect the environment! Please remember to respect the local regulations, and dispose of the non-working electrical equipment to an appropriate waste disposal center.</p></div>		
<div><div>ENTSORGUNG UND RECYCLING</div><p>Sie müssen das Gesichts massagegerät gemäß den örtlichen Gesetzen und Vorschriften ordnungsgemäß entsorgen. Da dieses Gerät elektronische Komponenten enthält, sollte es getrennt vom Hausmüll entsorgt werden. Wenn es sein Lebensende erreicht hat, wenden Sie sich an die örtlichen Behörden, um sich über Entsorgungs- und Recyclingmöglichkeiten zu informieren. Bitte beachten Sie die örtlichen Vorschriften und entsorgen Sie das nicht mehr funktionierende Elektrogerät bei einer geeigneten Entsorgungsstelle.</p></div>		
<div><div>ÉLIMINATION ET RECYCLAGE</div><p>Vous devez vous débarrasser correctement du appareil de massage conformément aux lois et réglementations locales. Étant donné que cet appareil contient des composants électroniques, il doit être éliminé et séparé des déchets ménagers. Lorsqu'il arrive en fin de vie, veuillez contacter les autorités locales pour vous renseigner sur les options d'élimination et de recyclage. Vous pouvez contribuer à la protection de l'environnement ! N'oubliez pas de respecter les réglementations locales et d'éliminer les équipements électriques défectueux dans un centre d'élimination des déchets approprié.</p></div>		
<div><div>ELIMINACIÓN Y RECICLAJE</div><p>Debe desechar el masajeador facial eléctrico correctamente de acuerdo con las leyes y regulaciones locales. Debido a que esta máquina contiene componentes electrónicos, debe desecharse separadamente de la basura doméstica. Cuando llegue al final de su vida útil, comuníquese con las autoridades locales para conocer las opciones de eliminación y reciclaje. ¡Usted puede ayudar a proteger el medio ambiente! Recuerde respetar las normativas locales y desheche el equipo eléctrico que no funcione en un centro de eliminación de residuos adecuado.</p></div>		

--	--	--