



ELECTRIC SCRUBBER - MINI

A scrubber that comes with all the attachments offers you an one-stop cleaning solution for your house.

User Manual

Model

KS-2626



If you have any questions about the product, please
feel free to contact us via contact@lifebasis.com

Thank you for purchasing the LifeBasis Mini Electric Cleaning Brush! To ensure safety and avoid any property damage, please read this manual carefully and only use it as indicated. Failure to comply with these instructions and precautions may result in serious damage or injury.

Important Safety Instructions

When using an electrical product, basic precautions should always be followed, including the following: Read all instructions before using (this product).

1. The product is for household use only and is not intended for commercial purposes.
2. This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or cognitive capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
3. Close supervision is necessary when the product is used by or near children. Children shall not play with the product. Cleaning and user maintenance shall not be conducted by children.
4. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Check all parts carefully before use. Do not use the product if it is damaged or malfunctioning.
6. When using the product, be careful not to get detergent splashed into your eyes or in contact with your skin.
7. Do not incinerate the battery to avoid an explosion.
8. Ensure that the product is turned off while switching brush heads.
9. Do not operate near explosives and/or other flammable fumes. Sparks may be generated, possibly causing a fire.
10. Stop using the product immediately if abnormal noise, smell, smoke, or any other failure or breakage occurs during the operation.

SAVE THESE INSTRUCTIONS

About the Product

 
1. What's in the Box

- + Main Handle
 - + AA Battery
 - + Brush Head
 - + Lanyard
 - + User Manual
- Optional Accessories:
- + Sponger
 - + Cleaning Cloth

2. Specifications


Product Name: Mini Electric-Cleaning Brush
Model: KS-2626
Power Supply: 4*1.5V AA Battery
Battery Voltage: DC 6V
Waterproof Grade: IPX7
Main Material: TPU

3. Overview

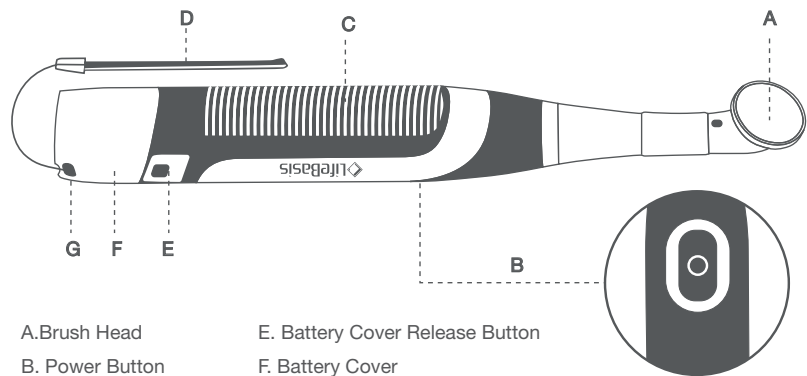


- A.Brush Head
- B. Power Button
- C. Anti-slip Handle
- D. Lanyard
- E. Battery Cover Release Button
- F. Battery Cover
- G. Eyelet

 Fixed brushes

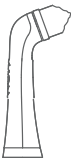

 Grout Brush
For tile grout, edges, corners and hard-to-reach places.

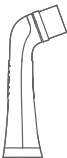

Medium Brush
For most surfaces and places.

 
Optional brushes



Velcro Head
For tableware, gas ranges, sinks, bathtub, ceramic, etc.




Large Brush
For large flat surface areas such as hard floor, wall, door, window, counter, patio furniture, pool, soap scum, stove, carpet, etc.

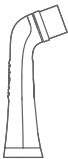


Soft Bristle Brush
For delicate, fragile surfaces such as glass, shoes.

Using the Product



 
1. Before Use Install the Batteries

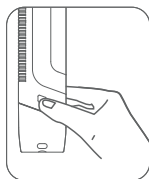

 Press the battery cover release button on both sides, the battery cover will pop up a little. Then pull it out.

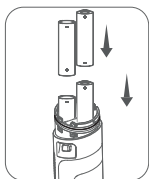

Insert AA batteries as indicated by the polarity symbols (+ and -) marked on the battery compartment.

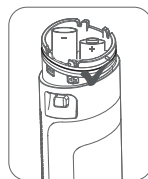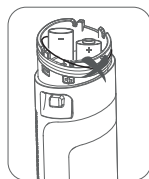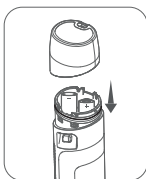

Put the cover on and press it down until you hear a click.


Note: Ensure both of the corresponding polarity symbols on the battery face up.

Note: when replacing batteries, the sealing ring may accidentally fall off or be displaced. Please place it back properly. Otherwise it's no longer waterproof.

Install the Brush Head

1. Select a brush head and insert it into the handle by aiming at the Snap-Fit Joint.
2. Grip the head and rotate it clockwise, the vertical line engraved on the brush head and the handle should be in the same line.


* To remove the brush, rotate it counterclockwise and pull it out.

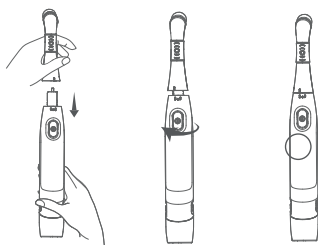

2. Power On

Press the Power Button to turn on the brush and start cleaning.

Note: We recommend limiting usage time to 30 minutes per session to prolong its service life.

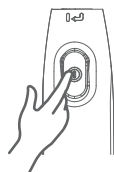

Cleaning Tips

1. For better cleaning effect, it is recommended to use the brush with detergent (such as mold & mildew removers, water stain removers, oven cleaners or all-purpose cleaner).
2. For stubborn stains, please soak stains in mixed solution of water and detergent for a while before cleaning.
3. Always wear rubber gloves and use appropriate eye protection to avoid getting in contact with splashing, soaps, or detergents on skin and/or eyes while the brush head is spinning, or being removed.

3. Power Off

Press the Power Button again to turn off the brush.

Cleaning the Product

Clean handle and brush head separately. Use a neutral detergent if it is difficult to clean. Keep away from all solvents and harsh detergents.

- a. Clean the brush head after use by rinsing your brush head under running water with the handle switched on.
- b. Use clean water to wash the surface of the handle and wipe it with soft cloth and allow it to dry.

DO NOT press the rubber sealing ring with sharp item or metal object, otherwise it will be damaged.

* DO NOT submerge the handle in water.



Troubleshooting Guide

Problem	Possible Cause	Solution
The brush cannot be turned on.	1. Incorrect installation of batteries. 2. Battery runs out.	1. Insert batteries under the correct polarity as marked on the battery compartment. 2. Replace the batteries.
The vibration strength becomes weak.	1. The brush is pressed too hard against the cleaning object. 2. The brush head is not installed properly. 3. Low battery.	1. Gently press the brush head while cleaning. 2. Reinstall the brush head. 3. Replace the batteries.
The brush stops working suddenly.	1. Too much pressure applied on the brush. 2. Battery runs out.	1. Gently press the brush head while cleaning. 2. Replace the batteries.

DISPOSAL AND RECYCLING:



You must dispose of the electric scrubber properly in accordance with local laws and regulations. As this device contains electronic components, it must be disposed of separately from household waste. When it has reached the end of its useful life, contact your local authorities for information on disposal and recycling options. Observe local regulations and dispose of the electrical device that is no longer working at a suitable disposal point.