


Binocular vision connection

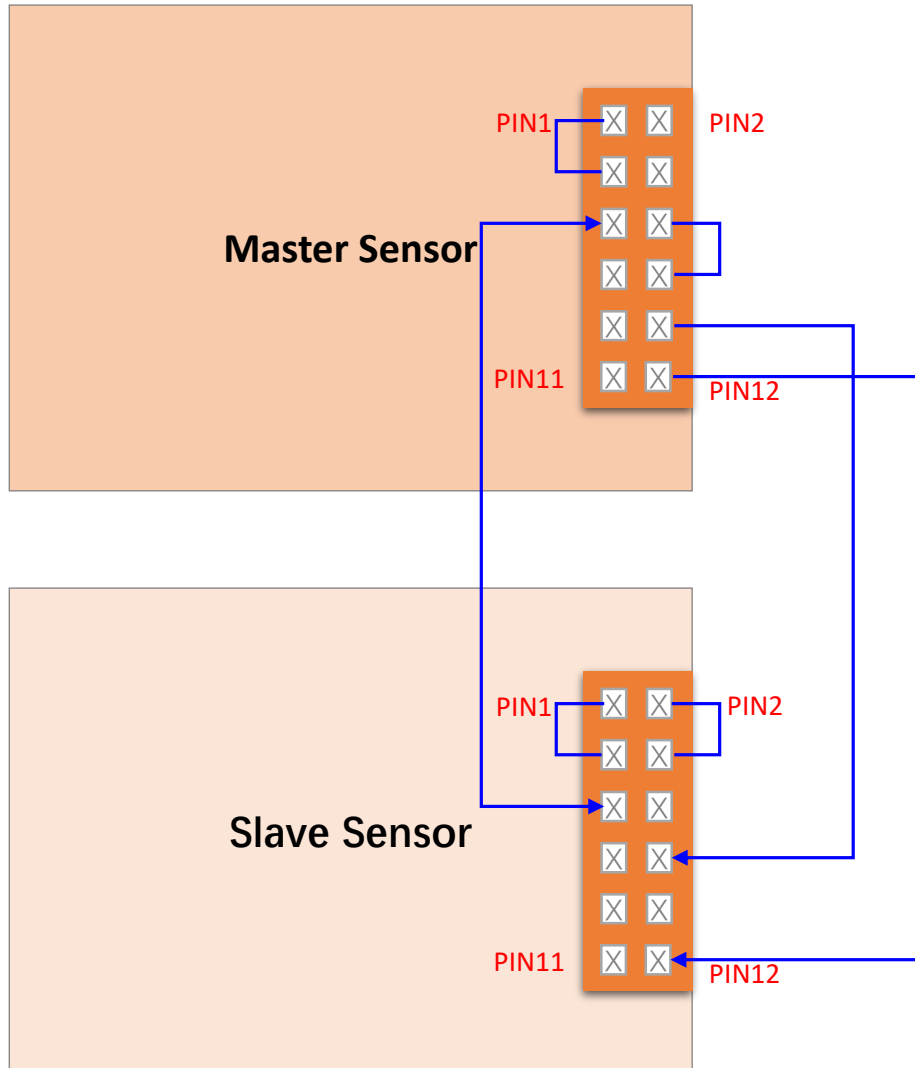

When in Binocular vision mode:

- Master PIN1 and PIN3 are shorted.
- Master PIN6 and PIN8 are shorted.
- Slave PIN1 and PIN3 are shorted.
- Slave PIN2 and PIN4 are shorted.
- Master PIN5 and Slave PIN5 are shorted.
- Master PIN12 and Slave PIN12 are shorted.
- Master PIN10 and Slave PIN8 are shorted.