



University of Moratuwa, Sri Lanka

Faculty of Engineering

Department of Electronics and Telecommunication Engineering
Semester 5 (Intake 2021)

EN3251 - Internet of Things

Laboratory Exercise 4: Hardware Implementation of IoT System Components

Gunawardana W.N.M.	210199D
Dilshan N.L.	210129P
Sehara G.M.M.	210583B

This report is submitted as a partial fulfillment for the module EN3251 - Internet of Things, Department of Electronic and Telecommunication Engineering, University of Moratuwa.

1 Implementing a CoAP server on Raspberry Pi

Starting CoAP Server

A terminal window on a Raspberry Pi showing the execution of a Java program. The prompt is 'quanta@raspberrypi:~/Desktop \$'. The command entered is 'java -jar CoAP_Server.jar'. The output consists of several INFO messages from the Eclipse Californium framework. It shows the server starting, writing properties to a file, and configuring various network and message handling parameters. The final message indicates that the server has started listening on port 5683.

```
quanta@raspberrypi:~/Desktop $ java -jar CoAP_Server.jar
[main] INFO org.eclipse.californium.core.network.config.NetworkConfig - writing properties to file /home/quanta/Desktop/Californium.properties
[main] INFO org.eclipse.californium.core.CoapServer - Starting server
[main] INFO org.eclipse.californium.core.CoapServer - no endpoints have been defined for server, setting up server endpoint on default port 5683
[main] INFO org.eclipse.californium.core.network.stack.RandomTokenGenerator - using tokens of 8 bytes in length
[main] INFO org.eclipse.californium.core.network.CoapEndpoint - coap CoapEndpoint uses udp plain
[main] INFO org.eclipse.californium.core.network.stack.BlockwiseLayer - BlockwiseLayer uses MAX_MESSAGE_SIZE=1024, REFERRED_BLOCK_SIZE=512, BLOCKWISE_STATUS_LIFETIME=300000, MAX_RESOURCE_BODY_SIZE=8192, BLOCKWISE_STRICT_BLOCK2_OPTION=false
[main] INFO org.eclipse.californium.core.network.stack.ReliabilityLayer - ReliabilityLayer uses ACK_TIMEOUT=2000, ACK_RANDOM_FACTOR=1.5, and ACK_TIMEOUT_SCALE=2.0 as default
[main] INFO org.eclipse.californium.elements.UDPCConnector - UDPCConnector starts up 1 sender threads and 1 receiver threads
[main] INFO org.eclipse.californium.elements.UDPCConnector - UDPCConnector listening on [/0:0:0:0:0:0:0:0]:5683, recv buf = 106496, send buf = 106496, recv packet size = 2048
[main] INFO org.eclipse.californium.core.network.CoapEndpoint - coap Started endpoint at coap://[0:0:0:0:0:0:0:0]:5683
```

Figure 1: Running the CoAP server in Raspberry Pi


The terminal on the Raspberry Pi shows that the CoAP server has started successfully using the Californium framework. The server is set up with important network and configuration settings, such as message size limits and timeout settings. It is listening for CoAP requests on port 5683, the standard port for CoAP communication. The logs also show that the server is ready to handle data transfers, including options for efficient message handling. This confirms that the CoAP server is working correctly and can now receive and respond to client requests.

2 Implement a CoAP client on the NODE MCU

Uploading the code

```
void sendMessage(){
    //Make a post
    coapClient.Get("hello-world", "", [](Thing::CoAP::Response response){
        std::vector<uint8_t> payload = response.GetPayload();
        std::string received(payload.begin(), payload.end());
        Serial.println("Server sent the following message:");
        Serial.println(received.c_str());
        delay(5000);
        sendMessage();
    });
}
```

Figure 2: Send message function for the node MCU.

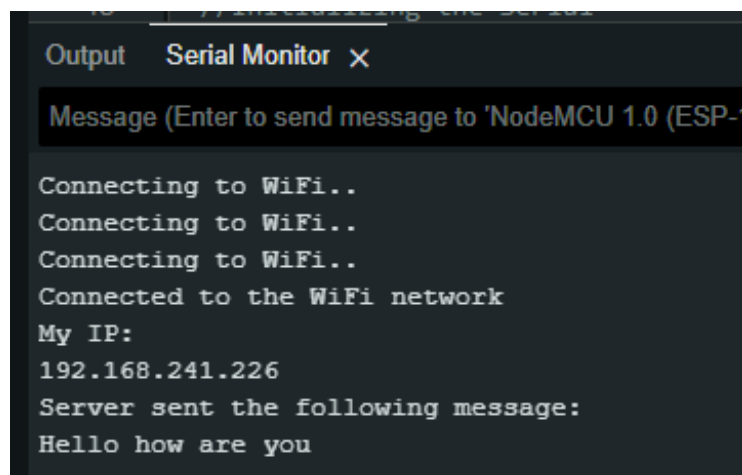

The screenshot shows a 'Serial Monitor' window with a title bar that includes 'Output' and a close button. The text area contains the following output: 'Message (Enter to send message to 'NodeMCU 1.0 (ESP-1...'', 'Connecting to WiFi..', 'Connecting to WiFi..', 'Connecting to WiFi..', 'Connected to the WiFi network', 'My IP:', '192.168.241.226', 'Server sent the following message:', and 'Hello how are you'.

```
Message (Enter to send message to 'NodeMCU 1.0 (ESP-1...
Connecting to WiFi..
Connecting to WiFi..
Connecting to WiFi..
Connected to the WiFi network
My IP:
192.168.241.226
Server sent the following message:
Hello how are you
```

Figure 3: Node MCU startup

3 Implementing an MQTT Broker on Raspberry Pi

Running the mosquitto.conf

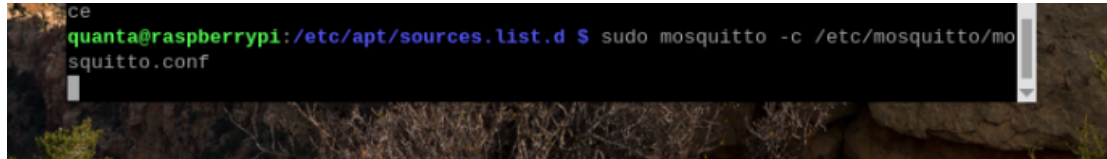
A terminal window screenshot showing a command being executed on a Raspberry Pi. The prompt is 'quanta@raspberrypi:~\$'. The command entered is 'sudo mosquitto -c /etc/mosquitto/mosquitto.conf'. The output of the command is not visible, suggesting it has completed successfully. The terminal background is dark, and the text is in a light color. The window title bar is visible at the top, showing 'ce'.

Figure 4: Running mosquitto broker

This shows the steps to start the MQTT broker on a Raspberry Pi. The `mosquitto` command is used to start the broker, and the configuration file `mosquitto.conf` specifies the settings for the broker.

4 Implementation of GET and PUT Methods with CoAP in NODE MCU

4.1 GET Method for Receiving Data

The NODE MCU is configured to send a GET request to the CoAP server to retrieve data from the resource "hello-world". Upon receiving the response, the data payload from the server is printed to the Serial Monitor, displaying the message sent by the server. This GET request is set to loop with a delay to continually check for updates from the server.

4.2 PUT Method for Sending Data

The NODE MCU is also programmed to send a PUT request with a payload message, "NodeMCU to Computer", to the "hello-world" resource on the CoAP server. The server's response to this PUT request is printed to the Serial Monitor, allowing verification that the message has been successfully received and acknowledged by the server.

```
void sendMessage_put() {
    // Prepare the payload for the PUT request
    std::string payload = "NodeMCU to Computer";

    // Make a PUT request
    coapClient.Put("hello-world", payload, [](Thing::CoAP::Response response) {
        std::vector<uint8_t> payload = response.GetPayload();
        std::string received(payload.begin(), payload.end());
        Serial.println("Server responded with the following message:");
        Serial.println(received.c_str());

        // Optionally, you can resend the message after a delay
        delay(5000);
        sendMessage();
    });
}
```

Figure 5: Code for the put method

4.3 Raspberry Pi to node MCU communication (GET)

The GET request confirms the reverse communication, where the CoAP server responds to the NODE MCU with data. The retrieved messages demonstrate successful message reception and data retrieval by the NODE MCU.

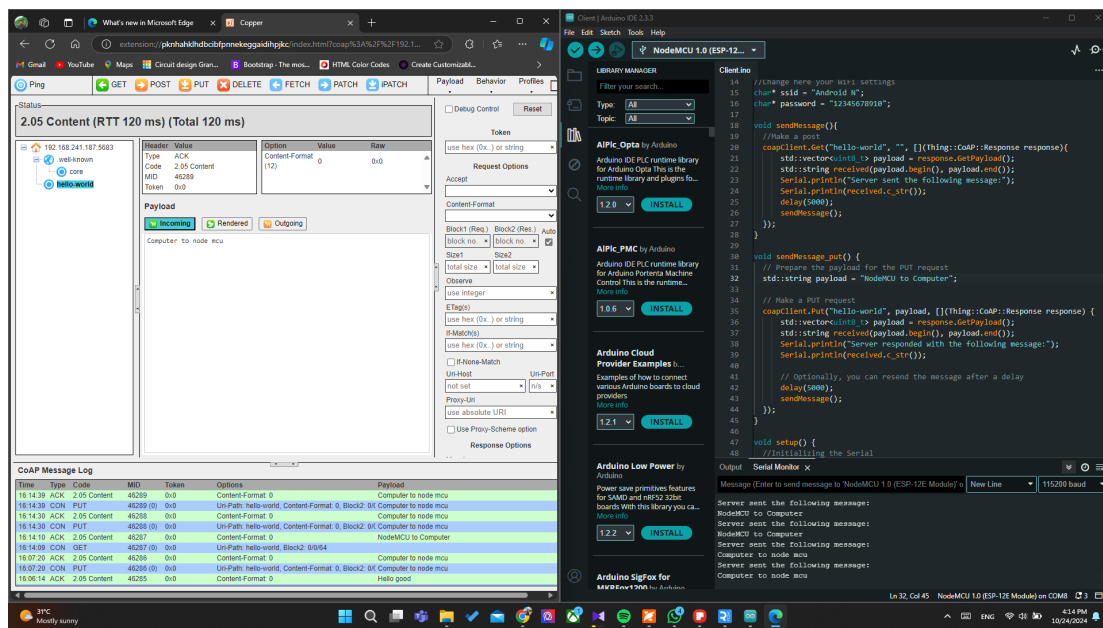 


Figure 6: Data transmission between Node MCU to Computer

4.4 Node MCU to Raspberry Pi communication (PUT)

5 Observations

In this lab, we used different methods to exchange data between the NODE MCU client and the Raspberry Pi CoAP server. Here, we summarize the observations for each method:

GET Method

- The GET method was used by the NODE MCU client to retrieve data from the CoAP server.
- The server responded with the requested data, confirming reliable data retrieval.

PUT Method

- The PUT method enabled the NODE MCU client to update specific resources on the server.
- The CoAP server accepted the updates, confirming successful data modification.

Network Stability and Performance

- Data transmission was stable with minimal latency.
- The Wi-Fi connection was configured correctly, ensuring reliable communication.

6 Arduino CoAP Client

```
1 #include <ESP8266WiFi.h>
2
3 //Include Thing.CoAP
4 #include "Thing.CoAP.h"
5
6 // [RECOMMENDED] Alternatively, if you are NOT using Arduino IDE you can
7 // include each file you need as bellow:
8 // #include "Thing.CoAP/Client.h"
9 // #include "Thing.CoAP/ESP/UDPPacketProvider.h"
10
11 // Declare our CoAP client and the packet handler
12 Thing::CoAP::Client coapClient;
13 Thing::CoAP::ESP::UDPPacketProvider udpProvider;
14
15 // Change here your WiFi settings
16 char* ssid = "Android_N";
17 char* password = "12345678910";
18
19 void sendMessage(){
20     // Make a post
21     coapClient.Get("hello-world", "", [](Thing::CoAP::Response response){
22         std::vector<uint8_t> payload = response.GetPayload();
23         std::string received(payload.begin(), payload.end());
24         Serial.println("Server sent the following message:");
25         Serial.println(received.c_str());
26         delay(5000);
27         sendMessage();
28     });
29 }
30
31 void sendMessage_put() {
32     // Prepare the payload for the PUT request
33     std::string payload = "NodeMCU_to_Computer";
34
35     // Make a PUT request
36     coapClient.Put("hello-world", payload, [](Thing::CoAP::Response response) {
37         std::vector<uint8_t> payload = response.GetPayload();
38         std::string received(payload.begin(), payload.end());
39         Serial.println("Server responded with the following message:");
40         Serial.println(received.c_str());
41
42         // Optionally, you can resend the message after a delay
43         delay(5000);
44         sendMessage();
45     });
46 }
47
48 void setup() {
49     // Initializing the Serial
50     Serial.begin(115200);
51     Serial.println("Initializing");
52 }
```



```

51
52 //Try and wait until a connection to WiFi was made
53 WiFi.begin(ssid, password);
54 while (WiFi.status() != WL_CONNECTED) {
55     delay(1000);
56     Serial.println("Connecting to WiFi..");
57 }
58 Serial.println("Connected to the WiFi network");
59 Serial.println("My IP:");
60 Serial.println(WiFi.localIP());
61
62 //Configure our server to use our packet handler (It will use UDP)
63 coapClient.SetPacketProvider(udpProvider);
64 IPAddress ip(192, 168, 241, 187);
65
66 //Connect CoAP client to a server
67 coapClient.Start(ip, 5683);
68
69 //Send A Message
70 sendMessage();
71 sendMessage_put();
72 }
73
74 void loop() {
75     coapClient.Process();
76 }

```

Listing 1: Arduino Code for CoAP Communication